



JavaScript API Reference

Table of contents

1. Introduction	1
2. Using Yocto-Demo with Javascript	3
2.1. Getting ready	3
2.2. Control of the Led function	3
2.3. Control of the module part	5
2.4. Error handling	8
Blueprint	12
3. Reference	12
3.1. General functions	13
3.2. Accelerometer function interface	32
3.3. AnButton function interface	78
3.4. CarbonDioxide function interface	120
3.5. ColorLed function interface	163
3.6. Compass function interface	196
3.7. Current function interface	240
3.8. DataLogger function interface	283
3.9. Formatted data sequence	318
3.10. Recorded data sequence	328
3.11. Unformatted data sequence	341
3.12. Digital IO function interface	356
3.13. Display function interface	404
3.14. DisplayLayer object interface	455
3.15. External power supply control interface	487
3.16. Files function interface	516
3.17. GenericSensor function interface	549
3.18. Gyroscope function interface	599
3.19. Yocto-hub port interface	654
3.20. Humidity function interface	683
3.21. Led function interface	726
3.22. LightSensor function interface	757
3.23. Magnetometer function interface	801
3.24. Measured value	847
3.25. Module control interface	853

3.26. Network function interface	898
3.27. OS control	959
3.28. Power function interface	986
3.29. Pressure function interface	1033
3.30. Pwm function interface	1076
3.31. PwmPowerSource function interface	1118
3.32. Quaternion interface	1145
3.33. Real Time Clock function interface	1188
3.34. Reference frame configuration	1219
3.35. Relay function interface	1259
3.36. Sensor function interface	1299
3.37. Servo function interface	1342
3.38. Temperature function interface	1381
3.39. Tilt function interface	1426
3.40. Voc function interface	1469
3.41. Voltage function interface	1512
3.42. Voltage source function interface	1555
3.43. WakeUpMonitor function interface	1591
3.44. WakeUpSchedule function interface	1630
3.45. Watchdog function interface	1671
3.46. Wireless function interface	1720
Index	1753

1. Introduction

This manual is intended to be used as a reference for Yoctopuce JavaScript library, in order to interface your code with USB sensors and controllers.

The next chapter is taken from the free USB device Yocto-Demo, in order to provide a concrete examples of how the library is used within a program.

The remaining part of the manual is a function-by-function, class-by-class documentation of the API. The first section describes all general-purpose global function, while the forthcoming sections describe the various classes that you may have to use depending on the Yoctopuce device being used. For more informations regarding the purpose and the usage of a given device attribute, please refer to the extended discussion provided in the device-specific user manual.

2. Using Yocto-Demo with Javascript

Javascript is probably not the first language that comes to mind to control hardware, but its ease of use is a great advantage: with Javascript, you only need a text editor and a web browser to realize your first tests.

At the time of writing, the Javascript library functions with any recent browser ... except Opera. It is likely that Opera will end up working with the Yoctopuce library one of these days¹, but it is not the case right now.

Javascript is one of those languages which do not allow you to directly access the hardware layers of your computer. Therefore you need to run the Yoctopuce TCP/IP to USB gateway, named *VirtualHub*, on the machine on which your modules are connected.

2.1. Getting ready

Go to the Yoctopuce web site and download the following items:

- The Javascript programming library²
- The VirtualHub software³ for Windows, Mac OS X or Linux, depending on your OS

Decompress the library files in a folder of your choice, connect your modules, run the VirtualHub software, and you are ready to start your first tests. You do not need to install any driver.

2.2. Control of the Led function

A few lines of code are enough to use a Yocto-Demo. Here is the skeleton of a JavaScript code snippet to use the Led function.

```
<SCRIPT type="text/javascript" src="yocto_api.js"></SCRIPT>
<SCRIPT type="text/javascript" src="yocto_led.js"></SCRIPT>

// Get access to your device, through the VirtualHub running locally
yRegisterHub('http://127.0.0.1:4444/');
var led = yFindLed("YCTOPOC1-123456.led");

// Check that the module is online to handle hot-plug
if(led.isOnline())
```

¹ Actually, as soon as Opera implements support for the HTTP Access-Control-Allow-Origin header.

² www.yoctopuce.com/EN/libraries.php

³ www.yoctopuce.com/EN/virtualhub.php

```
{  
  // Use led.set_power(), ...  
}
```

Let us look at these lines in more details.

yocto_api.js and yocto_led.js

These two Javascript includes provide access to functions allowing you to manage Yoctopuce modules. `yocto_api.js` must always be included, `yocto_led.js` is necessary to manage modules containing a led, such as Yocto-Demo.

yRegisterHub

The `yRegisterHub` function allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port `4444` (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running.

yFindLed

The `yFindLed` function allows you to find a led from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-Demo module with serial number `YCTOPOC1-123456` which you have named `"MyModule"`, and for which you have given the `led` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
var led = yFindLed("YCTOPOC1-123456.led");  
var led = yFindLed("YCTOPOC1-123456.MyFunction");  
var led = yFindLed("MyModule.led");  
var led = yFindLed("MyModule.MyFunction");  
var led = yFindLed("MyFunction");
```

`yFindLed` returns an object which you can then use at will to control the led.

isOnline

The `isOnline()` method of the object returned by `yFindLed` allows you to know if the corresponding module is present and in working order.

set_power

The `set_power()` function of the object returned by `yFindLed` allows you to turn on and off the led. The argument is `Y_POWER_ON` or `Y_POWER_OFF`. In the reference on the programming interface, you will find more methods to precisely control the luminosity and make the led blink automatically.

A real example

Open your preferred text editor⁴, copy the code sample below, save it in the same directory as the Yoctopuce library files and then use your preferred web browser to access this page. The code is also provided in the directory **Examples/Doc-GettingStarted-Yocto-Demo** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

The example is coded to be used either from a web server, or directly by opening the file on the local machine. Note that this latest solution does not work with some versions of Internet Explorer, in particular IE 9 on Windows 7, which is not able to open network connections when working on a local file. In order to use Internet Explorer, you should load the example from a web server. No such problem exists with Chrome, Firefox or Safari.

⁴ If you do not have a text editor, use Notepad rather than Microsoft Word.

If your Yocto-Demo is not connected on the host running the browser, replace in the example the address 127.0.0.1 by the IP address of the host on which the Yocto-Demo is connected and where you run the VirtualHub.

```
<HTML>
<HEAD>
  <TITLE>Hello World</TITLE>
  <SCRIPT type="text/javascript" src="yocto_api.js"></SCRIPT>
  <SCRIPT type="text/javascript" src="yocto_led.js"></SCRIPT>
  <SCRIPT language='javascript1.5' type='text/JavaScript'>
  <!--
  // Use explicit error handling rather than exceptions
  yDisableExceptions();

  // Setup the API to use the VirtualHub on local machine
  if(yRegisterHub('http://127.0.0.1:4444/') != YAPI_SUCCESS) {
    alert("Cannot contact VirtualHub on 127.0.0.1");
  }

  var led;

  function refresh()
  {
    var serial = document.getElementById('serial').value;
    if(serial == '') {
      // Detect any connected module suitable for the demo
      led = yFirstLed();
      if(led) {
        serial = led.module().get_serialNumber();
        document.getElementById('serial').value = serial;
      }
    }

    led = yFindLed(serial+".led");
    if(led.isOnline()) {
      document.getElementById('msg').value = '';
    } else {
      document.getElementById('msg').value = 'Module not connected';
    }
    setTimeout('refresh()',500);
  }

  function switchIt(state)
  {
    if (state) led.set_power(Y_POWER_ON);
    else led.set_power(Y_POWER_OFF);
  }
  -->
</SCRIPT>
</HEAD>
<BODY onload='refresh();'>
Module to use: <input id='serial'>
<input id='msg' style='color:red;border:none;' readonly><br>
<a href='javascript:switchIt(true);'>ON</a><br>
<a href='javascript:switchIt(false);'>OFF</a>
</BODY>
</HTML>
```

2.3. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
<HTML>
<HEAD>
  <TITLE>Module Control</TITLE>
  <SCRIPT type="text/javascript" src="yocto_api.js"></SCRIPT>
  <SCRIPT language='javascript1.5' type='text/JavaScript'>
  <!--
  // Use explicit error handling rather than exceptions
  yDisableExceptions();
```

```

// Setup the API to use the VirtualHub on local machine
if(yRegisterHub('http://127.0.0.1:4444/') != YAPI_SUCCESS) {
    alert("Cannot contact VirtualHub on 127.0.0.1");
}

var module;

function refresh()
{
    var serial = document.getElementById('serial').value;
    if(serial == '') {
        // Detect any connected module suitable for the demo
        module = yFirstModule().nextModule();
        if(module) {
            serial = module.get_serialNumber();
            document.getElementById('serial').value = serial;
        }
    }

    module = yFindModule(serial);
    if(module.isOnline()) {
        document.getElementById('msg').value = '';
        var html = 'serial: '+module.get_serialNumber()+'<br>';
        html += 'logical name: '+module.get_logicalName()+'<br>';
        html += 'luminosity: '+module.get_luminosity()+'%<br>';
        html += 'beacon: ';
        if (module.get_beacon() == Y_BEACON_ON)
            html += "ON <a href='javascript:beacon(Y_BEACON_OFF) '>switch off</a><br>";
        else
            html += "OFF <a href='javascript:beacon(Y_BEACON_ON) '>switch on</a><br>";

        html += 'upTime: '+parseInt(module.get_upTime()/1000)+' sec<br>';
        html += 'USB current: '+module.get_usbCurrent()+' mA<br>';
        html += 'logs:<br><pre>'+module.get_lastLogs()+'</pre><br>';
        document.getElementById('data').innerHTML = html;
    } else {
        document.getElementById('msg').value = 'Module not connected';
    }
    setTimeout('refresh()', 1000);
}

function beacon(state)
{
    module.set_beacon(state);
    refresh();
}
-->
</SCRIPT>
</HEAD>
<BODY onload='refresh();'>
Module to use: <input id='serial'>
<input id='msg' style='color:red;border:none;' readonly><br>
<span id='data'></span>
</BODY>
</HTML>

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

<HTML>
<HEAD>
<TITLE>Change module settings</TITLE>
<SCRIPT type="text/javascript" src="yocto_api.js"></SCRIPT>

```

```

<SCRIPT language='javascript1.5' type='text/JavaScript'>
<!--
// Use explicit error handling rather than exceptions
yDisableExceptions();

// Setup the API to use the VirtualHub on local machine
if(yRegisterHub('http://127.0.0.1:4444/') != YAPI_SUCCESS) {
    alert("Cannot contact VirtualHub on 127.0.0.1");
}

var module;

function refresh()
{
    var serial = document.getElementById('serial').value;
    if(serial == '') {
        // Detect any connected module suitable for the demo
        module = yFirstModule().nextModule();
        if(module) {
            serial = module.get_serialNumber();
            document.getElementById('serial').value = serial;
        }
    }

    module = yFindModule(serial);
    if(module.isOnline()) {
        document.getElementById('msg').value = '';
        document.getElementById('curName').value = module.get_logicalName();
    } else {
        document.getElementById('msg').value = 'Module not connected';
    }
    setTimeout('refresh()',1000);
}

function save()
{
    var newname = document.getElementById('newName').value;
    if (!yCheckLogicalName(newname)) {
        alert('invalid logical name');
        return;
    }
    module.set_logicalName(newname);
    module.saveToFlash();
}
-->
</SCRIPT>
</HEAD>
<BODY onload='refresh();'>
Module to use: <input id='serial'>
<input id='msg' style='color:red;border:none;' readonly><br>
Current name: <input id='curName' readonly><br>
New logical name: <input id='newName'>
<a href='javascript:save();'>Save</a>
</BODY>
</HTML>

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.

```

<HTML>
<HEAD>
<TITLE>Modules inventory</TITLE>
<SCRIPT type="text/javascript" src="yocto_api.js"></SCRIPT>
<SCRIPT language='javascript1.5' type='text/JavaScript'>

```

```

<!--
// Use explicit error handling rather than exceptions
yDisableExceptions();

// Setup the API to use the VirtualHub on local machine
if(yRegisterHub('http://127.0.0.1:4444/') != YAPI_SUCCESS) {
    alert("Cannot contact VirtualHub on 127.0.0.1");
}

function refresh()
{
    yUpdateDeviceList();

    var htmlcode = '';
    var module = yFirstModule();
    while(module) {
        htmlcode += module.get_serialNumber()
            + '('+module.get_productName()+')<br>';
        module = module.nextModule();
    }
    document.getElementById('list').innerHTML=htmlcode;
    setTimeout('refresh()',500);
}
-->
</SCRIPT>
</HEAD>
<BODY onload='refresh();'>
<H1>Device list</H1>
<tt><span id='list'></span></tt>
</BODY>
</HTML>

```

2.4. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `yDisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `Y_STATE_INVALID` value, a `get_currentValue` method returns a `Y_CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing

your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

3. Reference

3.1. General functions

These general functions should be used to initialize and configure the Yoctopuce library. In most cases, a simple call to function `yRegisterHub()` should be enough. The module-specific functions `yFind...()` or `yFirst...()` should then be used to retrieve an object that provides interaction with the module.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_api.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YAPI = yoctolib.YAPI; var YModule = yoctolib.YModule;</code>
php	<code>require_once('yocto_api.php');</code>
cpp	<code>#include "yocto_api.h"</code>
m	<code>#import "yocto_api.h"</code>
pas	<code>uses yocto_api;</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>

Global functions

yCheckLogicalName(name)

Checks if a given string is valid as logical name for a module or a function.

yDisableExceptions()

Disables the use of exceptions to report runtime errors.

yEnableExceptions()

Re-enables the use of exceptions for runtime error handling.

yEnableUSBHost(osContext)

This function is used only on Android.

yFreeAPI()

Frees dynamically allocated memory blocks used by the Yoctopuce library.

yGetAPIVersion()

Returns the version identifier for the Yoctopuce library in use.

yGetTickCount()

Returns the current value of a monotone millisecond-based time counter.

yHandleEvents(errmsg)

Maintains the device-to-library communication channel.

yInitAPI(mode, errmsg)

Initializes the Yoctopuce programming library explicitly.

yPreregisterHub(url, errmsg)

Fault-tolerant alternative to `RegisterHub()`.

yRegisterDeviceArrivalCallback(arrivalCallback)

Register a callback function, to be called each time a device is plugged.

yRegisterDeviceRemovalCallback(removalCallback)

Register a callback function, to be called each time a device is unplugged.

yRegisterHub(url, errmsg)

Setup the Yoctopuce library to use modules connected on a given machine.

yRegisterHubDiscoveryCallback(hubDiscoveryCallback)

3. Reference

Register a callback function, to be called each time an Network Hub send an SSDP message.

yRegisterLogFunction(logfun)

Registers a log callback function.

ySelectArchitecture(arch)

Select the architecture or the library to be loaded to access to USB.

ySetDelegate(object)

(Objective-C only) Register an object that must follow the protocol YDeviceHotPlug.

ySetTimeout(callback, ms_timeout, arguments)

Invoke the specified callback function after a given timeout.

ySleep(ms_duration, errmsg)

Pauses the execution flow for a specified duration.

yTriggerHubDiscovery(errmsg)

Force a hub discovery, if a callback as been registered with yRegisterDeviceRemovalCallback it will be called for each net work hub that will respond to the discovery.

yUnregisterHub(url)

Setup the Yoctopuce library to no more use modules connected on a previously registered machine with RegisterHub.

yUpdateDeviceList(errmsg)

Triggers a (re)detection of connected Yoctopuce modules.

yUpdateDeviceList_async(callback, context)

Triggers a (re)detection of connected Yoctopuce modules.

YAPI.CheckLogicalName()
yCheckLogicalName()yCheckLogicalName()

YAPI

Checks if a given string is valid as logical name for a module or a function.

```
function yCheckLogicalName( name)
```

A valid logical name has a maximum of 19 characters, all among A . . Z, a . . z, 0 . . 9, `_`, and `-`. If you try to configure a logical name with an incorrect string, the invalid characters are ignored.

Parameters :

name a string containing the name to check.

Returns :

`true` if the name is valid, `false` otherwise.

YAPI.DisableExceptions()

YAPI

yDisableExceptions()yDisableExceptions()

Disables the use of exceptions to report runtime errors.

```
function yDisableExceptions( )
```

When exceptions are disabled, every function returns a specific error value which depends on its type and which is documented in this reference manual.

YAPI.EnableExceptions()
yEnableExceptions()

YAPI

Re-enables the use of exceptions for runtime error handling.

```
function yEnableExceptions( )
```

Be aware than when exceptions are enabled, every function that fails triggers an exception. If the exception is not caught by the user code, it either fires the debugger or aborts (i.e. crash) the program. On failure, throws an exception or returns a negative error code.

**YAPI.FreeAPI()
yFreeAPI(yFreeAPI())**

YAPI

Frees dynamically allocated memory blocks used by the Yoctopuce library.

```
function yFreeAPI( )
```

It is generally not required to call this function, unless you want to free all dynamically allocated memory blocks in order to track a memory leak for instance. You should not call any other library function after calling `yFreeAPI()`, or your program will crash.

**YAPI.GetAPIVersion()
yGetAPIVersion()yGetAPIVersion()**

YAPI

Returns the version identifier for the Yoctopuce library in use.

```
function yGetAPIVersion( )
```

The version is a string in the form "Major.Minor.Build", for instance "1.01.5535". For languages using an external DLL (for instance C#, VisualBasic or Delphi), the character string includes as well the DLL version, for instance "1.01.5535 (1.01.5439)".

If you want to verify in your code that the library version is compatible with the version that you have used during development, verify that the major number is strictly equal and that the minor number is greater or equal. The build number is not relevant with respect to the library compatibility.

Returns :

a character string describing the library version.

YAPI.GetTickCount()

YAPI

yGetTickCount()yGetTickCount()

Returns the current value of a monotone millisecond-based time counter.

```
function yGetTickCount( )
```

This counter can be used to compute delays in relation with Yoctopuce devices, which also uses the millisecond as timebase.

Returns :

a long integer corresponding to the millisecond counter.

YAPI.HandleEvents() yHandleEvents()yHandleEvents()

YAPI

Maintains the device-to-library communication channel.

```
function yHandleEvents( errmsg)
```

If your program includes significant loops, you may want to include a call to this function to make sure that the library takes care of the information pushed by the modules on the communication channels. This is not strictly necessary, but it may improve the reactivity of the library for the following commands.

This function may signal an error in case there is a communication problem while contacting a module.

Parameters :

errmsg a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

YAPI.InitAPI() yInitAPI()yInitAPI()

YAPI

Initializes the Yoctopuce programming library explicitly.

```
function yInitAPI( mode, errmsg)
```

It is not strictly needed to call `yInitAPI()`, as the library is automatically initialized when calling `yRegisterHub()` for the first time.

When `Y_DETECT_NONE` is used as detection mode, you must explicitly use `yRegisterHub()` to point the API to the VirtualHub on which your devices are connected before trying to access them.

Parameters :

mode an integer corresponding to the type of automatic device detection to use. Possible values are `Y_DETECT_NONE`, `Y_DETECT_USB`, `Y_DETECT_NET`, and `Y_DETECT_ALL`.

errmsg a string passed by reference to receive any error message.

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

YAPI.PreregisterHub() yPreregisterHub(yPreregisterHub())

YAPI

Fault-tolerant alternative to RegisterHub().

```
function yPreregisterHub( url, errmsg)
```

This function has the same purpose and same arguments as RegisterHub(), but does not trigger an error when the selected hub is not available at the time of the function call. This makes it possible to register a network hub independently of the current connectivity, and to try to contact it only when a device is actively needed.

Parameters :

- url** a string containing either "usb", "callback" or the root URL of the hub to monitor
- errmsg** a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds.

On failure, throws an exception or returns a negative error code.

YAPI.RegisterDeviceArrivalCallback()
yRegisterDeviceArrivalCallback()
yRegisterDeviceArrivalCallback()

YAPI

Register a callback function, to be called each time a device is plugged.

```
function yRegisterDeviceArrivalCallback( arrivalCallback)
```

This callback will be invoked while `yUpdateDeviceList` is running. You will have to call this function on a regular basis.

Parameters :

arrivalCallback a procedure taking a `YModule` parameter, or null

YAPI.RegisterDeviceRemovalCallback()
yRegisterDeviceRemovalCallback()
yRegisterDeviceRemovalCallback()

YAPI

Register a callback function, to be called each time a device is unplugged.

```
function yRegisterDeviceRemovalCallback( removalCallback)
```

This callback will be invoked while `yUpdateDeviceList` is running. You will have to call this function on a regular basis.

Parameters :

removalCallback a procedure taking a `YModule` parameter, or `null`

YAPI.RegisterHub() yRegisterHub()yRegisterHub()

YAPI

Setup the Yoctopuce library to use modules connected on a given machine.

```
function yRegisterHub( url, errmsg)
```

The parameter will determine how the API will work. Use the following values:

usb: When the **usb** keyword is used, the API will work with devices connected directly to the USB bus. Some programming languages such as Javascript, PHP, and Java don't provide direct access to USB hardware, so **usb** will not work with these. In this case, use a VirtualHub or a networked YoctoHub (see below).

x.x.x.x or **hostname**: The API will use the devices connected to the host with the given IP address or hostname. That host can be a regular computer running a VirtualHub, or a networked YoctoHub such as YoctoHub-Ethernet or YoctoHub-Wireless. If you want to use the VirtualHub running on your local computer, use the IP address 127.0.0.1.

callback: that keyword makes the API run in "*HTTP Callback*" mode. This is a special mode allowing to take control of Yoctopuce devices through a NAT filter when using a VirtualHub or a networked YoctoHub. You only need to configure your hub to call your server script on a regular basis. This mode is currently available for PHP and Node.JS only.

Be aware that only one application can use direct USB access at a given time on a machine. Multiple access would cause conflicts while trying to access the USB modules. In particular, this means that you must stop the VirtualHub software before starting an application that uses direct USB access. The workaround for this limitation is to setup the library to use the VirtualHub rather than direct USB access.

If access control has been activated on the hub, virtual or not, you want to reach, the URL parameter should look like:

```
http://username:password@adresse:port
```

You can call *RegisterHub* several times to connect to several machines.

Parameters :

- url** a string containing either "**usb**", "**callback**" or the root URL of the hub to monitor
- errmsg** a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds.

On failure, throws an exception or returns a negative error code.

YAPI.SetTimeout() ySetTimeout()ySetTimeout()

YAPI

Invoke the specified callback function after a given timeout.

```
function ySetTimeout( callback, ms_timeout, arguments)
```

This function behaves more or less like Javascript `setTimeout`, but during the waiting time, it will call `yHandleEvents` and `yUpdateDeviceList` periodically, in order to keep the API up-to-date with current devices.

Parameters :

- callback** the function to call after the timeout occurs. On Microsoft Internet Explorer, the callback must be provided as a string to be evaluated.
- ms_timeout** an integer corresponding to the duration of the timeout, in milliseconds.
- arguments** additional arguments to be passed to the callback function can be provided, if needed (not supported on Microsoft Internet Explorer).

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

YAPI.Sleep() ySleep()ySleep()

YAPI

Pauses the execution flow for a specified duration.

```
function ySleep( ms_duration, errmsg)
```

This function implements a passive waiting loop, meaning that it does not consume CPU cycles significantly. The processor is left available for other threads and processes. During the pause, the library nevertheless reads from time to time information from the Yoctopuce modules by calling `yHandleEvents()`, in order to stay up-to-date.

This function may signal an error in case there is a communication problem while contacting a module.

Parameters :

- ms_duration** an integer corresponding to the duration of the pause, in milliseconds.
- errmsg** a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**YAPI.UnregisterHub()
yUnregisterHub()yUnregisterHub()**

YAPI

Setup the Yoctopuce library to no more use modules connected on a previously registered machine with RegisterHub.

```
function yUnregisterHub( url)
```

Parameters :

url a string containing either "usb" or the

YAPI.UpdateDeviceList() yUpdateDeviceList(yUpdateDeviceList())

YAPI

Triggers a (re)detection of connected Yoctopuce modules.

```
function yUpdateDeviceList( errmsg)
```

The library searches the machines or USB ports previously registered using `yRegisterHub()`, and invokes any user-defined callback function in case a change in the list of connected devices is detected.

This function can be called as frequently as desired to refresh the device list and to make the application aware of hot-plug events.

Parameters :

errmsg a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**YAPI.UpdateDeviceList_async()
yUpdateDeviceList_async()
yUpdateDeviceList_async()**

YAPI

Triggers a (re)detection of connected Yoctopuce modules.

```
function yUpdateDeviceList_async( callback, context)
```

The library searches the machines or USB ports previously registered using `yRegisterHub()`, and invokes any user-defined callback function in case a change in the list of connected devices is detected.

This function can be called as frequently as desired to refresh the device list and to make the application aware of hot-plug events.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the result code (`YAPI_SUCCESS` if the operation completes successfully) and the error message.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

3.2. Accelerometer function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_accelerometer.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YAccelerometer = yoctolib.YAccelerometer;
php	require_once('yocto_accelerometer.php');
c++	#include "yocto_accelerometer.h"
m	#import "yocto_accelerometer.h"
pas	uses yocto_accelerometer;
vb	yocto_accelerometer.vb
cs	yocto_accelerometer.cs
java	import com.yoctopuce.YoctoAPI.YAccelerometer;
py	from yocto_accelerometer import *

Global functions

yFindAccelerometer(func)

Retrieves an accelerometer for a given identifier.

yFirstAccelerometer()

Starts the enumeration of accelerometers currently accessible.

YAccelerometer methods

accelerometer→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

accelerometer→describe()

Returns a short text that describes unambiguously the instance of the accelerometer in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

accelerometer→get_advertisedValue()

Returns the current value of the accelerometer (no more than 6 characters).

accelerometer→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

accelerometer→get_currentValue()

Returns the current value of the acceleration.

accelerometer→get_errorMessage()

Returns the error message of the latest error with the accelerometer.

accelerometer→get_errorType()

Returns the numerical error code of the latest error with the accelerometer.

accelerometer→get_friendlyName()

Returns a global identifier of the accelerometer in the format `MODULE_NAME . FUNCTION_NAME`.

accelerometer→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

accelerometer→get_functionId()

Returns the hardware identifier of the accelerometer, without reference to the module.

accelerometer→get_hardwareId()

Returns the unique hardware identifier of the accelerometer in the form `SERIAL . FUNCTIONID`.

accelerometer→get_highestValue()

Returns the maximal value observed for the acceleration since the device was started.

accelerometer→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

accelerometer→get_logicalName()

Returns the logical name of the accelerometer.

accelerometer→get_lowestValue()

Returns the minimal value observed for the acceleration since the device was started.

accelerometer→get_module()

Gets the `YModule` object for the device on which the function is located.

accelerometer→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

accelerometer→get_recordedData(startTime, endTime)

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

accelerometer→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

accelerometer→get_resolution()

Returns the resolution of the measured values.

accelerometer→get_unit()

Returns the measuring unit for the acceleration.

accelerometer→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

accelerometer→get_xValue()

Returns the X component of the acceleration, as a floating point number.

accelerometer→get_yValue()

Returns the Y component of the acceleration, as a floating point number.

accelerometer→get_zValue()

Returns the Z component of the acceleration, as a floating point number.

accelerometer→isOnline()

Checks if the accelerometer is currently reachable, without raising any error.

accelerometer→isOnline_async(callback, context)

Checks if the accelerometer is currently reachable, without raising any error (asynchronous version).

accelerometer→load(msValidity)

Preloads the accelerometer cache with a specified validity duration.

accelerometer→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

accelerometer→load_async(msValidity, callback, context)

Preloads the accelerometer cache with a specified validity duration (asynchronous version).

accelerometer→nextAccelerometer()

Continues the enumeration of accelerometers started using `yFirstAccelerometer()`.

accelerometer→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

accelerometer→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

3. Reference

accelerometer→**set_highestValue(newval)**

Changes the recorded maximal value observed.

accelerometer→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

accelerometer→**set_logicalName(newval)**

Changes the logical name of the accelerometer.

accelerometer→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

accelerometer→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

accelerometer→**set_resolution(newval)**

Changes the resolution of the measured physical values.

accelerometer→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

accelerometer→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YAccelerometer.FindAccelerometer() yFindAccelerometer()yFindAccelerometer()

YAccelerometer

Retrieves an accelerometer for a given identifier.

```
function yFindAccelerometer( func )
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the accelerometer is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YAccelerometer.isOnline()` to test if the accelerometer is indeed online at a given time. In case of ambiguity when looking for an accelerometer by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the accelerometer

Returns :

a `YAccelerometer` object allowing you to drive the accelerometer.

YAccelerometer.FirstAccelerometer() yFirstAccelerometer(yFirstAccelerometer())

YAccelerometer

Starts the enumeration of accelerometers currently accessible.

```
function yFirstAccelerometer( )
```

Use the method `YAccelerometer.nextAccelerometer()` to iterate on next accelerometers.

Returns :

a pointer to a `YAccelerometer` object, corresponding to the first accelerometer currently online, or a `null` pointer if there are none.

accelerometer→**calibrateFromPoints()**
accelerometer.calibrateFromPoints()

YAccelerometer

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**describe()****accelerometer.describe()****YAccelerometer**

Returns a short text that describes unambiguously the instance of the accelerometer in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the accelerometer (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

accelerometer→**get_advertisedValue()****YAccelerometer****accelerometer**→**advertisedValue()****accelerometer.get_advertisedValue()**

Returns the current value of the accelerometer (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the accelerometer (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

accelerometer→**get_currentRawValue()**

YAccelerometer

accelerometer→**currentRawValue()**

accelerometer.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

accelerometer→**get_currentValue()****YAccelerometer****accelerometer**→**currentValue()****accelerometer.get_currentValue()**

Returns the current value of the acceleration.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the acceleration

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

accelerometer→get_errorMessage()
accelerometer→errorMessage()
accelerometer.get_errorMessage()

YAccelerometer

Returns the error message of the latest error with the accelerometer.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the accelerometer object

accelerometer→**get_errorType()****YAccelerometer****accelerometer**→**errorType()****accelerometer.get_errorType()**

Returns the numerical error code of the latest error with the accelerometer.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the accelerometer object

accelerometer→**get_friendlyName()**

YAccelerometer

accelerometer→**friendlyName()**

accelerometer.get_friendlyName()

Returns a global identifier of the accelerometer in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the accelerometer if they are defined, otherwise the serial number of the module and the hardware identifier of the accelerometer (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the accelerometer using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

accelerometer→**get_functionDescriptor()****YAccelerometer****accelerometer**→**functionDescriptor()****accelerometer.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

accelerometer→get_functionId()

YAccelerometer

accelerometer→functionId()

accelerometer.get_functionId()

Returns the hardware identifier of the accelerometer, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the accelerometer (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

accelerometer→**get_hardwareId()****YAccelerometer****accelerometer**→**hardwareId()****accelerometer.get_hardwareId()**

Returns the unique hardware identifier of the accelerometer in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the accelerometer. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the accelerometer (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

accelerometer→**get_highestValue()**
accelerometer→**highestValue()**
accelerometer.get_highestValue()

YAccelerometer

Returns the maximal value observed for the acceleration since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the acceleration since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

accelerometer→**get_logFrequency()****YAccelerometer****accelerometer**→**logFrequency()****accelerometer.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

accelerometer→**get_logicalName()**

YAccelerometer

accelerometer→**logicalName()**

accelerometer.get_logicalName()

Returns the logical name of the accelerometer.

function **get_logicalName()** ()

Returns :

a string corresponding to the logical name of the accelerometer. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

accelerometer→**get_lowestValue()****YAccelerometer****accelerometer**→**lowestValue()****accelerometer.get_lowestValue()**

Returns the minimal value observed for the acceleration since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the acceleration since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

accelerometer→**get_module()**

YAccelerometer

accelerometer→**module()****accelerometer.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

accelerometer→**get_module_async()****YAccelerometer****accelerometer**→**module_async()****accelerometer.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

accelerometer→**get_recordedData()**

YAccelerometer

accelerometer→**recordedData()**

accelerometer.get_recordedData()

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

accelerometer→**get_reportFrequency()****YAccelerometer****accelerometer**→**reportFrequency()****accelerometer.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

accelerometer→**get_resolution()**

YAccelerometer

accelerometer→**resolution()**

accelerometer.get_resolution()

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns Y_RESOLUTION_INVALID.

accelerometer→**get_unit()****YAccelerometer****accelerometer**→**unit()****accelerometer.get_unit()**

Returns the measuring unit for the acceleration.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the acceleration

On failure, throws an exception or returns `Y_UNIT_INVALID`.

accelerometer→**get_userData()**
accelerometer→**userData()**
accelerometer.get_userData()

YAccelerometer

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

accelerometer→**get_xValue()****YAccelerometer****accelerometer**→**xValue()****accelerometer.get_xValue()**

Returns the X component of the acceleration, as a floating point number.

function **get_xValue()**

Returns :

a floating point number corresponding to the X component of the acceleration, as a floating point number

On failure, throws an exception or returns `Y_XVALUE_INVALID`.

accelerometer→**get_yValue()**

YAccelerometer

accelerometer→**yValue()****accelerometer.get_yValue()**

Returns the Y component of the acceleration, as a floating point number.

```
function get_yValue( )
```

Returns :

a floating point number corresponding to the Y component of the acceleration, as a floating point number

On failure, throws an exception or returns `Y_YVALUE_INVALID`.

accelerometer→**get_zValue()****YAccelerometer****accelerometer**→**zValue()****accelerometer.get_zValue()**

Returns the Z component of the acceleration, as a floating point number.

```
function get_zValue( )
```

Returns :

a floating point number corresponding to the Z component of the acceleration, as a floating point number

On failure, throws an exception or returns `Y_ZVALUE_INVALID`.

accelerometer→**isOnline()****accelerometer.isOnline()**

YAccelerometer

Checks if the accelerometer is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the accelerometer in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the accelerometer.

Returns :

`true` if the accelerometer can be reached, and `false` otherwise

accelerometer→**isOnline_async()**
accelerometer.isOnline_async()**YAccelerometer**

Checks if the accelerometer is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the accelerometer in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

accelerometer→**load()****accelerometer.load()****YAccelerometer**

Preloads the accelerometer cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

accelerometer→**loadCalibrationPoints()**
accelerometer.loadCalibrationPoints()**YAccelerometer**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**load_async()**
accelerometer.load_async()**YAccelerometer**

Preloads the accelerometer cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

accelerometer→**nextAccelerometer()**
accelerometer.nextAccelerometer()

YAccelerometer

Continues the enumeration of accelerometers started using `yFirstAccelerometer()`.

```
function nextAccelerometer( )
```

Returns :

a pointer to a `YAccelerometer` object, corresponding to an accelerometer currently online, or a `null` pointer if there are no more accelerometers to enumerate.

accelerometer→**registerTimedReportCallback()**
accelerometer.registerTimedReportCallback()

YAccelerometer

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

accelerometer→**registerValueCallback()**
accelerometer.registerValueCallback()

YAccelerometer

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

`accelerometer→set_highestValue()`

YAccelerometer

`accelerometer→setHighestValue()`

`accelerometer.set_highestValue()`

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**set_logFrequency()****YAccelerometer****accelerometer**→**setLogFrequency()****accelerometer.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**set_logicalName()**

YAccelerometer

accelerometer→**setLogicalName()**

accelerometer.set_logicalName()

Changes the logical name of the accelerometer.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the accelerometer.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

accelerometer→set_lowestValue()
accelerometer→setLowestValue()
accelerometer.set_lowestValue()

YAccelerometer

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**set_reportFrequency()**

YAccelerometer

accelerometer→**setReportFrequency()**

accelerometer.set_reportFrequency()

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**set_resolution()**
accelerometer→**setResolution()**
accelerometer.set_resolution()

YAccelerometer

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

accelerometer→**set_userData()**

YAccelerometer

accelerometer→**setUserData()**

accelerometer.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

accelerometer→**wait_async()**
accelerometer.wait_async()

YAccelerometer

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.3. AnButton function interface

Yoctopuce application programming interface allows you to measure the state of a simple button as well as to read an analog potentiometer (variable resistance). This can be use for instance with a continuous rotating knob, a throttle grip or a joystick. The module is capable to calibrate itself on min and max values, in order to compute a calibrated value that varies proportionally with the potentiometer position, regardless of its total resistance.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_anbutton.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YAnButton = yoctolib.YAnButton;</code>
php	<code>require_once('yocto_anbutton.php');</code>
cpp	<code>#include "yocto_anbutton.h"</code>
m	<code>#import "yocto_anbutton.h"</code>
pas	<code>uses yocto_anbutton;</code>
vb	<code>yocto_anbutton.vb</code>
cs	<code>yocto_anbutton.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YAnButton;</code>
py	<code>from yocto_anbutton import *</code>

Global functions

yFindAnButton(func)

Retrieves an analog input for a given identifier.

yFirstAnButton()

Starts the enumeration of analog inputs currently accessible.

YAnButton methods

anbutton→describe()

Returns a short text that describes unambiguously the instance of the analog input in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

anbutton→get_advertisedValue()

Returns the current value of the analog input (no more than 6 characters).

anbutton→get_analogCalibration()

Tells if a calibration process is currently ongoing.

anbutton→get_calibratedValue()

Returns the current calibrated input value (between 0 and 1000, included).

anbutton→get_calibrationMax()

Returns the maximal value measured during the calibration (between 0 and 4095, included).

anbutton→get_calibrationMin()

Returns the minimal value measured during the calibration (between 0 and 4095, included).

anbutton→get_errorMessage()

Returns the error message of the latest error with the analog input.

anbutton→get_errorType()

Returns the numerical error code of the latest error with the analog input.

anbutton→get_friendlyName()

Returns a global identifier of the analog input in the format `MODULE_NAME . FUNCTION_NAME`.

anbutton→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

anbutton→**get_functionId()**

Returns the hardware identifier of the analog input, without reference to the module.

anbutton→**get_hardwareId()**

Returns the unique hardware identifier of the analog input in the form `SERIAL.FUNCTIONID`.

anbutton→**get_isPressed()**

Returns true if the input (considered as binary) is active (closed contact), and false otherwise.

anbutton→**get_lastTimePressed()**

Returns the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitionned from open to closed).

anbutton→**get_lastTimeReleased()**

Returns the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open).

anbutton→**get_logicalName()**

Returns the logical name of the analog input.

anbutton→**get_module()**

Gets the `YModule` object for the device on which the function is located.

anbutton→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

anbutton→**get_pulseCounter()**

Returns the pulse counter value

anbutton→**get_pulseTimer()**

Returns the timer of the pulses counter (ms)

anbutton→**get_rawValue()**

Returns the current measured input value as-is (between 0 and 4095, included).

anbutton→**get_sensitivity()**

Returns the sensibility for the input (between 1 and 1000) for triggering user callbacks.

anbutton→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

anbutton→**isOnline()**

Checks if the analog input is currently reachable, without raising any error.

anbutton→**isOnline_async(callback, context)**

Checks if the analog input is currently reachable, without raising any error (asynchronous version).

anbutton→**load(msValidity)**

Preloads the analog input cache with a specified validity duration.

anbutton→**load_async(msValidity, callback, context)**

Preloads the analog input cache with a specified validity duration (asynchronous version).

anbutton→**nextAnButton()**

Continues the enumeration of analog inputs started using `yFirstAnButton()`.

anbutton→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

anbutton→**resetCounter()**

Returns the pulse counter value as well as his timer

anbutton→**set_analogCalibration(newval)**

Starts or stops the calibration process.

anbutton→**set_calibrationMax(newval)**

3. Reference

Changes the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

anbutton→**set_calibrationMin(newval)**

Changes the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

anbutton→**set_logicalName(newval)**

Changes the logical name of the analog input.

anbutton→**set_sensitivity(newval)**

Changes the sensibility for the input (between 1 and 1000) for triggering user callbacks.

anbutton→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

anbutton→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YAnButton.FindAnButton() yFindAnButton()yFindAnButton()

YAnButton

Retrieves an analog input for a given identifier.

```
function yFindAnButton( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the analog input is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YAnButton.isOnline()` to test if the analog input is indeed online at a given time. In case of ambiguity when looking for an analog input by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the analog input

Returns :

a `YAnButton` object allowing you to drive the analog input.

YAnButton.FirstAnButton() yFirstAnButton()yFirstAnButton()

YAnButton

Starts the enumeration of analog inputs currently accessible.

```
function yFirstAnButton( )
```

Use the method `YAnButton.nextAnButton()` to iterate on next analog inputs.

Returns :

a pointer to a `YAnButton` object, corresponding to the first analog input currently online, or a `null` pointer if there are none.

anbutton→**describe()****anbutton.describe()****YAnButton**

Returns a short text that describes unambiguously the instance of the analog input in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the analog input (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

anbutton→**get_advertisedValue()**

YAnButton

anbutton→**advertisedValue()**

anbutton.get_advertisedValue()

Returns the current value of the analog input (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the analog input (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

anbutton→**get_analogCalibration()****YAnButton****anbutton**→**analogCalibration()****anbutton.get_analogCalibration()**

Tells if a calibration process is currently ongoing.

```
function get_analogCalibration( )
```

Returns :

either `Y_ANALOGCALIBRATION_OFF` or `Y_ANALOGCALIBRATION_ON`

On failure, throws an exception or returns `Y_ANALOGCALIBRATION_INVALID`.

anbutton→**get_calibratedValue()**

YAnButton

anbutton→**calibratedValue()**

anbutton.get_calibratedValue()

Returns the current calibrated input value (between 0 and 1000, included).

```
function get_calibratedValue( )
```

Returns :

an integer corresponding to the current calibrated input value (between 0 and 1000, included)

On failure, throws an exception or returns `Y_CALIBRATEDVALUE_INVALID`.

anbutton→**get_calibrationMax()****YAnButton****anbutton**→**calibrationMax()****anbutton.get_calibrationMax()**

Returns the maximal value measured during the calibration (between 0 and 4095, included).

```
function get_calibrationMax( )
```

Returns :

an integer corresponding to the maximal value measured during the calibration (between 0 and 4095, included)

On failure, throws an exception or returns `Y_CALIBRATIONMAX_INVALID`.

anbutton→**get_calibrationMin()**
anbutton→**calibrationMin()**
anbutton.get_calibrationMin()

YAnButton

Returns the minimal value measured during the calibration (between 0 and 4095, included).

```
function get_calibrationMin( )
```

Returns :

an integer corresponding to the minimal value measured during the calibration (between 0 and 4095, included)

On failure, throws an exception or returns `Y_CALIBRATIONMIN_INVALID`.

anbutton→**get_errorMessage()**
anbutton→**errorMessage()**
anbutton.get_errorMessage()

YAnButton

Returns the error message of the latest error with the analog input.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the analog input object

anbutton→**get_errorType()**

YAnButton

anbutton→**errorType()****anbutton.get_errorType()**

Returns the numerical error code of the latest error with the analog input.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the analog input object

anbutton→**get_friendlyName()****YAnButton****anbutton**→**friendlyName()****anbutton.get_friendlyName()**

Returns a global identifier of the analog input in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the analog input if they are defined, otherwise the serial number of the module and the hardware identifier of the analog input (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the analog input using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

anbutton→**get_functionDescriptor()**
anbutton→**functionDescriptor()**
anbutton.get_functionDescriptor()

YAnButton

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

anbutton→**get_functionId()****YAnButton****anbutton**→**functionId()****anbutton.get_functionId()**

Returns the hardware identifier of the analog input, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the analog input (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

anbutton→**get_hardwareId()**

YAnButton

anbutton→**hardwareId()****anbutton.get_hardwareId()**

Returns the unique hardware identifier of the analog input in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the analog input. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the analog input (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

anbutton→**get_isPressed()****YAnButton****anbutton**→**isPressed()****anbutton.get_isPressed()**

Returns true if the input (considered as binary) is active (closed contact), and false otherwise.

```
function get_isPressed( )
```

Returns :

either `Y_ISPRESSED_FALSE` or `Y_ISPRESSED_TRUE`, according to true if the input (considered as binary) is active (closed contact), and false otherwise

On failure, throws an exception or returns `Y_ISPRESSED_INVALID`.

anbutton→**get_lastTimePressed()**

YAnButton

anbutton→**lastTimePressed()**

anbutton.get_lastTimePressed()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitionned from open to closed).

```
function get_lastTimePressed( )
```

Returns :

an integer corresponding to the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitionned from open to closed)

On failure, throws an exception or returns `Y_LASTTIMEPRESSED_INVALID`.

anbutton→**get_lastTimeReleased()****YAnButton****anbutton**→**lastTimeReleased()****anbutton.get_lastTimeReleased()**

Returns the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open).

```
function get_lastTimeReleased( )
```

Returns :

an integer corresponding to the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open)

On failure, throws an exception or returns `Y_LASTTIMERELASED_INVALID`.

anbutton→**get_logicalName()**

YAnButton

anbutton→**logicalName()****anbutton.get_logicalName()**

Returns the logical name of the analog input.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the analog input. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

anbutton→**get_module()****YAnButton****anbutton**→**module()****anbutton.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

anbutton→**get_module_async()****YAnButton****anbutton**→**module_async()****anbutton.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton→**get_pulseCounter()**
anbutton→**pulseCounter()**
anbutton.get_pulseCounter()

YAnButton

Returns the pulse counter value

```
function get_pulseCounter( )
```

Returns :

an integer corresponding to the pulse counter value

On failure, throws an exception or returns `Y_PULSECOUNTER_INVALID`.

anbutton→**get_pulseTimer()**

YAnButton

anbutton→**pulseTimer()****anbutton.get_pulseTimer()**

Returns the timer of the pulses counter (ms)

```
function get_pulseTimer( )
```

Returns :

an integer corresponding to the timer of the pulses counter (ms)

On failure, throws an exception or returns `Y_PULSETIMER_INVALID`.

anbutton→**get_rawValue()****YAnButton****anbutton**→**rawValue()****anbutton.get_rawValue()**

Returns the current measured input value as-is (between 0 and 4095, included).

```
function get_rawValue( )
```

Returns :

an integer corresponding to the current measured input value as-is (between 0 and 4095, included)

On failure, throws an exception or returns `Y_RAWVALUE_INVALID`.

anbutton→**get_sensitivity()**

YAnButton

anbutton→**sensitivity()****anbutton.get_sensitivity()**

Returns the sensibility for the input (between 1 and 1000) for triggering user callbacks.

```
function get_sensitivity( )
```

Returns :

an integer corresponding to the sensibility for the input (between 1 and 1000) for triggering user callbacks

On failure, throws an exception or returns `Y_SENSITIVITY_INVALID`.

anbutton→**get_userData()****YAnButton****anbutton**→**userData()****anbutton.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

anbutton→**isOnline()****anbutton.isOnline()**

YAnButton

Checks if the analog input is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the analog input in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the analog input.

Returns :

`true` if the analog input can be reached, and `false` otherwise

anbutton→**isOnline_async()**
anbutton.isOnline_async()**YAnButton**

Checks if the analog input is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the analog input in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton→**load()****anbutton.load()**

YAnButton

Preloads the analog input cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

anbutton→**load_async()****anbutton.load_async()****YAnButton**

Preloads the analog input cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton→**nextAnButton()****anbutton.nextAnButton()**

YAnButton

Continues the enumeration of analog inputs started using `yFirstAnButton()`.

```
function nextAnButton( )
```

Returns :

a pointer to a `YAnButton` object, corresponding to an analog input currently online, or a `null` pointer if there are no more analog inputs to enumerate.

anbutton→**registerValueCallback()**
anbutton.registerValueCallback()

YAnButton

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

anbutton→**resetCounter()****anbutton.resetCounter()**

YAnButton

Returns the pulse counter value as well as his timer

```
function resetCounter( )
```

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton→**set_analogCalibration()**
anbutton→**setAnalogCalibration()**
anbutton.set_analogCalibration()

YAnButton

Starts or stops the calibration process.

```
function set_analogCalibration( newval)
```

Remember to call the `saveToFlash()` method of the module at the end of the calibration if the modification must be kept.

Parameters :

newval either `Y_ANALOGCALIBRATION_OFF` or `Y_ANALOGCALIBRATION_ON`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton→**set_calibrationMax()**

YAnButton

anbutton→**setCalibrationMax()**

anbutton.set_calibrationMax()

Changes the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

```
function set_calibrationMax( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton→**set_calibrationMin()**
anbutton→**setCalibrationMin()**
anbutton.set_calibrationMin()

YAnButton

Changes the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

```
function set_calibrationMin( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton→**set_logicalName()**
anbutton→**setLogicalName()**
anbutton.set_logicalName()

YAnButton

Changes the logical name of the analog input.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the analog input.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

anbutton→**set_sensitivity()****YAnButton****anbutton**→**setSensitivity()****anbutton.set_sensitivity()**

Changes the sensibility for the input (between 1 and 1000) for triggering user callbacks.

```
function set_sensitivity( newval)
```

The sensibility is used to filter variations around a fixed value, but does not preclude the transmission of events when the input value evolves constantly in the same direction. Special case: when the value 1000 is used, the callback will only be thrown when the logical state of the input switches from pressed to released and back. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the sensibility for the input (between 1 and 1000) for triggering user callbacks

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton→**set_userData()**

YAnButton

anbutton→**setUserData()****anbutton.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

anbutton→**wait_async()****anbutton.wait_async()****YAnButton**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.4. CarbonDioxide function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_carbondioxide.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YCarbonDioxide = yoctolib.YCarbonDioxide;
php	require_once('yocto_carbondioxide.php');
c++	#include "yocto_carbondioxide.h"
m	#import "yocto_carbondioxide.h"
pas	uses yocto_carbondioxide;
vb	yocto_carbondioxide.vb
cs	yocto_carbondioxide.cs
java	import com.yoctopuce.YoctoAPI.YCarbonDioxide;
py	from yocto_carbondioxide import *

Global functions

yFindCarbonDioxide(func)

Retrieves a CO2 sensor for a given identifier.

yFirstCarbonDioxide()

Starts the enumeration of CO2 sensors currently accessible.

YCarbonDioxide methods

carbondioxide→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

carbondioxide→describe()

Returns a short text that describes unambiguously the instance of the CO2 sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

carbondioxide→get_advertisedValue()

Returns the current value of the CO2 sensor (no more than 6 characters).

carbondioxide→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

carbondioxide→get_currentValue()

Returns the current value of the CO2 concentration.

carbondioxide→get_errorMessage()

Returns the error message of the latest error with the CO2 sensor.

carbondioxide→get_errorType()

Returns the numerical error code of the latest error with the CO2 sensor.

carbondioxide→get_friendlyName()

Returns a global identifier of the CO2 sensor in the format `MODULE_NAME . FUNCTION_NAME`.

carbondioxide→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

carbondioxide→get_functionId()

Returns the hardware identifier of the CO2 sensor, without reference to the module.

carbondioxide→get_hardwareId()

Returns the unique hardware identifier of the CO2 sensor in the form `SERIAL . FUNCTIONID`.

carbondioxide→get_highestValue()

Returns the maximal value observed for the CO2 concentration since the device was started.

carbondioxide→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

carbondioxide→get_logicalName()

Returns the logical name of the CO2 sensor.

carbondioxide→get_lowestValue()

Returns the minimal value observed for the CO2 concentration since the device was started.

carbondioxide→get_module()

Gets the YModule object for the device on which the function is located.

carbondioxide→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

carbondioxide→get_recordedData(startTime, endTime)

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

carbondioxide→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

carbondioxide→get_resolution()

Returns the resolution of the measured values.

carbondioxide→get_unit()

Returns the measuring unit for the CO2 concentration.

carbondioxide→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

carbondioxide→isOnline()

Checks if the CO2 sensor is currently reachable, without raising any error.

carbondioxide→isOnline_async(callback, context)

Checks if the CO2 sensor is currently reachable, without raising any error (asynchronous version).

carbondioxide→load(msValidity)

Preloads the CO2 sensor cache with a specified validity duration.

carbondioxide→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method calibrateFromPoints.

carbondioxide→load_async(msValidity, callback, context)

Preloads the CO2 sensor cache with a specified validity duration (asynchronous version).

carbondioxide→nextCarbonDioxide()

Continues the enumeration of CO2 sensors started using yFirstCarbonDioxide().

carbondioxide→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

carbondioxide→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

carbondioxide→set_highestValue(newval)

Changes the recorded maximal value observed.

carbondioxide→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

carbondioxide→set_logicalName(newval)

Changes the logical name of the CO2 sensor.

3. Reference

carbondioxide→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

carbondioxide→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

carbondioxide→**set_resolution(newval)**

Changes the resolution of the measured physical values.

carbondioxide→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

carbondioxide→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YCarbonDioxide.FindCarbonDioxide() yFindCarbonDioxide()yFindCarbonDioxide()

YCarbonDioxide

Retrieves a CO2 sensor for a given identifier.

```
function yFindCarbonDioxide( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the CO2 sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YCarbonDioxide.isOnline()` to test if the CO2 sensor is indeed online at a given time. In case of ambiguity when looking for a CO2 sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the CO2 sensor

Returns :

a `YCarbonDioxide` object allowing you to drive the CO2 sensor.

YCarbonDioxide.FirstCarbonDioxide() yFirstCarbonDioxide()yFirstCarbonDioxide()

YCarbonDioxide

Starts the enumeration of CO2 sensors currently accessible.

```
function yFirstCarbonDioxide( )
```

Use the method `YCarbonDioxide.nextCarbonDioxide()` to iterate on next CO2 sensors.

Returns :

a pointer to a `YCarbonDioxide` object, corresponding to the first CO2 sensor currently online, or a `null` pointer if there are none.

carbondioxide→**calibrateFromPoints()**
carbondioxide.calibrateFromPoints()**YCarbonDioxide**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide→describe()carbondioxide.describe()**YCarbonDioxide**

Returns a short text that describes unambiguously the instance of the CO2 sensor in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the CO2 sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

carbondioxide→**get_advertisedValue()****YCarbonDioxide****carbondioxide**→**advertisedValue()****carbondioxide.get_advertisedValue()**

Returns the current value of the CO2 sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the CO2 sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

carbondioxide→**get_currentRawValue()**
carbondioxide→**currentRawValue()**
carbondioxide.get_currentRawValue()

YCarbonDioxide

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

carbondioxide→**get_currentValue()**
carbondioxide→**currentValue()**
carbondioxide.get_currentValue()

YCarbonDioxide

Returns the current value of the CO2 concentration.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the CO2 concentration

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

**carbondioxide→get_errorMessage()
carbondioxide→errorMessage()
carbondioxide.get_errorMessage()**

YCarbonDioxide

Returns the error message of the latest error with the CO2 sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the CO2 sensor object

carbondioxide→get_errorType()
carbondioxide→errorType()
carbondioxide.get_errorType()

YCarbonDioxide

Returns the numerical error code of the latest error with the CO2 sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the CO2 sensor object

carbondioxide→get_friendlyName()
carbondioxide→friendlyName()
carbondioxide.get_friendlyName()

YCarbonDioxide

Returns a global identifier of the CO2 sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the CO2 sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the CO2 sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the CO2 sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

carbondioxide→**get_functionDescriptor()**
carbondioxide→**functionDescriptor()**
carbondioxide.get_functionDescriptor()

YCarbonDioxide

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

carbondioxide→**get_functionId()**
carbondioxide→**functionId()**
carbondioxide.get_functionId()

YCarbonDioxide

Returns the hardware identifier of the CO2 sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the CO2 sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

carbondioxide→**get_hardwareId()**
carbondioxide→**hardwareId()**
carbondioxide.get_hardwareId()

YCarbonDioxide

Returns the unique hardware identifier of the CO2 sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the CO2 sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the CO2 sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

`carbondioxide→get_highestValue()`
`carbondioxide→highestValue()`
`carbondioxide.get_highestValue()`

YCarbonDioxide

Returns the maximal value observed for the CO2 concentration since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the CO2 concentration since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

carbondioxide→get_logFrequency()**YCarbonDioxide****carbondioxide→logFrequency()****carbondioxide.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

carbondioxide→**get_logicalName()**
carbondioxide→**logicalName()**
carbondioxide.get_logicalName()

YCarbonDioxide

Returns the logical name of the CO2 sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the CO2 sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

carbondioxide→**get_lowestValue()****YCarbonDioxide****carbondioxide**→**lowestValue()****carbondioxide.get_lowestValue()**

Returns the minimal value observed for the CO2 concentration since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the CO2 concentration since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

carbondioxide→get_module()
carbondioxide→module()
carbondioxide.get_module()

YCarbonDioxide

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

carbondioxide→**get_module_async()****YCarbonDioxide****carbondioxide**→**module_async()****carbondioxide.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide→get_recordedData()
carbondioxide→recordedData()
carbondioxide.get_recordedData()

YCarbonDioxide

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

carbondioxide→**get_reportFrequency()****YCarbonDioxide****carbondioxide**→**reportFrequency()****carbondioxide.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

carbondioxide→**get_resolution()**
carbondioxide→**resolution()**
carbondioxide.get_resolution()

YCarbonDioxide

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

carbondioxide→**get_unit()****YCarbonDioxide****carbondioxide**→**unit()****carbondioxide.get_unit()**

Returns the measuring unit for the CO2 concentration.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the CO2 concentration

On failure, throws an exception or returns `Y_UNIT_INVALID`.

carbondioxide→**get_userData()**
carbondioxide→**userData()**
carbondioxide.get_userData()

YCarbonDioxide

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

carbondioxide→**isOnline()****carbondioxide.isOnline()****YCarbonDioxide**

Checks if the CO2 sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the CO2 sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the CO2 sensor.

Returns :

`true` if the CO2 sensor can be reached, and `false` otherwise

**carbondioxide→isOnline_async()
carbondioxide.isOnline_async()**

YCarbonDioxide

Checks if the CO2 sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the CO2 sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide→load()carbondioxide.load()**YCarbonDioxide**

Preloads the CO2 sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**carbondioxide→loadCalibrationPoints()
carbondioxide.loadCalibrationPoints()**

YCarbonDioxide

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

**carbondioxide→load_async()
carbondioxide.load_async()****YCarbonDioxide**

Preloads the CO2 sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide→**nextCarbonDioxide()**
carbondioxide.nextCarbonDioxide()

YCarbonDioxide

Continues the enumeration of CO2 sensors started using `yFirstCarbonDioxide()`.

```
function nextCarbonDioxide()
```

Returns :

a pointer to a `YCarbonDioxide` object, corresponding to a CO2 sensor currently online, or a `null` pointer if there are no more CO2 sensors to enumerate.

carbondioxide→**registerTimedReportCallback()**
carbondioxide.registerTimedReportCallback()

YCarbonDioxide

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

**carbondioxide→registerValueCallback()
carbondioxide.registerValueCallback()**

YCarbonDioxide

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

carbondioxide→set_highestValue()
carbondioxide→setHighestValue()
carbondioxide.set_highestValue()

YCarbonDioxide

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

`carbondioxide`→`set_logFrequency()`
`carbondioxide`→`setLogFrequency()`
`carbondioxide.set_logFrequency()`

YCarbonDioxide

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide→**set_logicalName()****YCarbonDioxide****carbondioxide**→**setLogicalName()****carbondioxide.set_logicalName()**

Changes the logical name of the CO2 sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the CO2 sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

`carbondioxide→set_lowestValue()`
`carbondioxide→setLowestValue()`
`carbondioxide.set_lowestValue()`

YCarbonDioxide

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

`carbondioxide→set_reportFrequency()`
`carbondioxide→setReportFrequency()`
`carbondioxide.set_reportFrequency()`

YCarbonDioxide

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide→set_resolution()
carbondioxide→setResolution()
carbondioxide.set_resolution()

YCarbonDioxide

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide→**set_userData()**
carbondioxide→**setUserData()**
carbondioxide.set_userData()

YCarbonDioxide

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

**carbondioxide→wait_async()
carbondioxide.wait_async()**

YCarbonDioxide

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.5. ColorLed function interface

Yoctopuce application programming interface allows you to drive a color led using RGB coordinates as well as HSL coordinates. The module performs all conversions from RGB to HSL automatically. It is then self-evident to turn on a led with a given hue and to progressively vary its saturation or lightness. If needed, you can find more information on the difference between RGB and HSL in the section following this one.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_colorled.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YColorLed = yoctolib.YColorLed;</code>
php	<code>require_once('yocto_colorled.php');</code>
c++	<code>#include "yocto_colorled.h"</code>
m	<code>#import "yocto_colorled.h"</code>
pas	<code>uses yocto_colorled;</code>
vb	<code>yocto_colorled.vb</code>
cs	<code>yocto_colorled.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YColorLed;</code>
py	<code>from yocto_colorled import *</code>

Global functions

yFindColorLed(func)

Retrieves an RGB led for a given identifier.

yFirstColorLed()

Starts the enumeration of RGB leds currently accessible.

YColorLed methods

colorled→describe()

Returns a short text that describes unambiguously the instance of the RGB led in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

colorled→get_advertisedValue()

Returns the current value of the RGB led (no more than 6 characters).

colorled→get_errorMessage()

Returns the error message of the latest error with the RGB led.

colorled→get_errorType()

Returns the numerical error code of the latest error with the RGB led.

colorled→get_friendlyName()

Returns a global identifier of the RGB led in the format `MODULE_NAME . FUNCTION_NAME`.

colorled→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

colorled→get_functionId()

Returns the hardware identifier of the RGB led, without reference to the module.

colorled→get_hardwareId()

Returns the unique hardware identifier of the RGB led in the form `SERIAL . FUNCTIONID`.

colorled→get_hslColor()

Returns the current HSL color of the led.

colorled→get_logicalName()

Returns the logical name of the RGB led.

colorled→**get_module()**

Gets the YModule object for the device on which the function is located.

colorled→**get_module_async(callback, context)**

Gets the YModule object for the device on which the function is located (asynchronous version).

colorled→**get_rgbColor()**

Returns the current RGB color of the led.

colorled→**get_rgbColorAtPowerOn()**

Returns the configured color to be displayed when the module is turned on.

colorled→**get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

colorled→**hslMove(hsl_target, ms_duration)**

Performs a smooth transition in the HSL color space between the current color and a target color.

colorled→**isOnline()**

Checks if the RGB led is currently reachable, without raising any error.

colorled→**isOnline_async(callback, context)**

Checks if the RGB led is currently reachable, without raising any error (asynchronous version).

colorled→**load(msValidity)**

Preloads the RGB led cache with a specified validity duration.

colorled→**load_async(msValidity, callback, context)**

Preloads the RGB led cache with a specified validity duration (asynchronous version).

colorled→**nextColorLed()**

Continues the enumeration of RGB leds started using `yFirstColorLed()`.

colorled→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

colorled→**rgbMove(rgb_target, ms_duration)**

Performs a smooth transition in the RGB color space between the current color and a target color.

colorled→**set_hslColor(newval)**

Changes the current color of the led, using a color HSL.

colorled→**set_logicalName(newval)**

Changes the logical name of the RGB led.

colorled→**set_rgbColor(newval)**

Changes the current color of the led, using a RGB color.

colorled→**set_rgbColorAtPowerOn(newval)**

Changes the color that the led will display by default when the module is turned on.

colorled→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

colorled→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

**YColorLed.FindColorLed()
yFindColorLed()yFindColorLed()**

YColorLed

Retrieves an RGB led for a given identifier.

```
function yFindColorLed( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the RGB led is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YColorLed.isOnline()` to test if the RGB led is indeed online at a given time. In case of ambiguity when looking for an RGB led by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the RGB led

Returns :

a `YColorLed` object allowing you to drive the RGB led.

YColorLed.FirstColorLed() yFirstColorLed()yFirstColorLed()

YColorLed

Starts the enumeration of RGB leds currently accessible.

```
function yFirstColorLed( )
```

Use the method `YColorLed.nextColorLed()` to iterate on next RGB leds.

Returns :

a pointer to a `YColorLed` object, corresponding to the first RGB led currently online, or a `null` pointer if there are none.

colorled→describe()colorled.describe()**YColorLed**

Returns a short text that describes unambiguously the instance of the RGB led in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the RGB led (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

colorled→**get_advertisedValue()**

YColorLed

colorled→**advertisedValue()**

colorled.get_advertisedValue()

Returns the current value of the RGB led (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the RGB led (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

colorled→**get_errorMessage()****YColorLed****colorled**→**errorMessage()****colorled.get_errorMessage()**

Returns the error message of the latest error with the RGB led.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the RGB led object

colorled→**get_errorType()**

YColorLed

colorled→**errorType()****colorled.get_errorType()**

Returns the numerical error code of the latest error with the RGB led.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the RGB led object

colorled→**get_friendlyName()****YColorLed****colorled**→**friendlyName()****colorled.get_friendlyName()**

Returns a global identifier of the RGB led in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the RGB led if they are defined, otherwise the serial number of the module and the hardware identifier of the RGB led (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the RGB led using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

colorled→**get_functionDescriptor()**

YColorLed

colorled→**functionDescriptor()**

colorled.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

colorled→**get_functionId()****YColorLed****colorled**→**functionId()****colorled.get_functionId()**

Returns the hardware identifier of the RGB led, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the RGB led (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`colorled`→`get_hardwareId()`

YColorLed

`colorled`→`hardwareId()``colorled.get_hardwareId()`

Returns the unique hardware identifier of the RGB led in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the RGB led. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the RGB led (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

colorled→**get_hslColor()****YColorLed****colorled**→**hslColor()****colorled.get_hslColor()**

Returns the current HSL color of the led.

```
function get_hslColor( )
```

Returns :

an integer corresponding to the current HSL color of the led

On failure, throws an exception or returns `Y_HSLCOLOR_INVALID`.

colorled→**get_logicalName()**

YColorLed

colorled→**logicalName()****colorled.get_logicalName()**

Returns the logical name of the RGB led.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the RGB led. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

colorled→**get_module()****YColorLed****colorled**→**module()****colorled.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

colorled→**get_module_async()**
colorled→**module_async()**
colorled.get_module_async()

YColorLed

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled→**get_rgbColor()****YColorLed****colorled**→**rgbColor()****colorled.get_rgbColor()**

Returns the current RGB color of the led.

```
function get_rgbColor( )
```

Returns :

an integer corresponding to the current RGB color of the led

On failure, throws an exception or returns `Y_RGBCOLOR_INVALID`.

`colorled`→`get_rgbColorAtPowerOn()`

`YColorLed`

`colorled`→`rgbColorAtPowerOn()`

`colorled.get_rgbColorAtPowerOn()`

Returns the configured color to be displayed when the module is turned on.

```
function get_rgbColorAtPowerOn() ( )
```

Returns :

an integer corresponding to the configured color to be displayed when the module is turned on

On failure, throws an exception or returns `Y_RGBCOLORATPOWERON_INVALID`.

colorled→**get_userData()****YColorLed****colorled**→**userData()****colorled.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

colorled→hsIMove()colorled.hsIMove()

YColorLed

Performs a smooth transition in the HSL color space between the current color and a target color.

```
function hsIMove( hsl_target, ms_duration)
```

Parameters :

hsl_target desired HSL color at the end of the transition

ms_duration duration of the transition, in millisecond

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled→**isOnline()****colorled.isOnline()****YColorLed**

Checks if the RGB led is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the RGB led in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the RGB led.

Returns :

`true` if the RGB led can be reached, and `false` otherwise

colorled→**isOnline_async()****colorled.isOnline_async()**

YColorLed

Checks if the RGB led is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the RGB led in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled→**load()****colorled.load()****YColorLed**

Preloads the RGB led cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

colored→**load_async()****colored.load_async()****YColorLed**

Preloads the RGB led cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled→**nextColorLed()****colorled.nextColorLed()****YColorLed**

Continues the enumeration of RGB leds started using `yFirstColorLed()`.

```
function nextColorLed( )
```

Returns :

a pointer to a `YColorLed` object, corresponding to an RGB led currently online, or a null pointer if there are no more RGB leds to enumerate.

colored→**registerValueCallback()**
colored.registerValueCallback()**YColorLed**

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

colorled→**rgbMove()****colorled.rgbMove()****YColorLed**

Performs a smooth transition in the RGB color space between the current color and a target color.

```
function rgbMove( rgb_target, ms_duration)
```

Parameters :

rgb_target desired RGB color at the end of the transition

ms_duration duration of the transition, in millisecond

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled→**set_hslColor()**

YColorLed

colorled→**setHslColor()****colorled.set_hslColor()**

Changes the current color of the led, using a color HSL.

```
function set_hslColor( newval)
```

Encoding is done as follows: 0xHHSSLL.

Parameters :

newval an integer corresponding to the current color of the led, using a color HSL

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled→**set_logicalName()**
colorled→**setLogicalName()**
colorled.set_logicalName()

YColorLed

Changes the logical name of the RGB led.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the RGB led.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

colorled→**set_rgbColor()**

YColorLed

colorled→**setRgbColor()****colorled.set_rgbColor()**

Changes the current color of the led, using a RGB color.

```
function set_rgbColor( newval)
```

Encoding is done as follows: 0xRRGGBB.

Parameters :

newval an integer corresponding to the current color of the led, using a RGB color

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled→**set_rgbColorAtPowerOn()****YColorLed****colorled**→**setRgbColorAtPowerOn()****colorled.set_rgbColorAtPowerOn()**

Changes the color that the led will display by default when the module is turned on.

```
function set_rgbColorAtPowerOn( newval)
```

This color will be displayed as soon as the module is powered on. Remember to call the `saveToFlash()` method of the module if the change should be kept.

Parameters :

newval an integer corresponding to the color that the led will display by default when the module is turned on

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled→**set_userdata()**

YColorLed

colorled→**setUserData()****colorled.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

colorled→**wait_async()****colorled.wait_async()****YColorLed**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.6. Compass function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_compass.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YCompass = yoctolib.YCompass;</code>
php	<code>require_once('yocto_compass.php');</code>
c++	<code>#include "yocto_compass.h"</code>
m	<code>#import "yocto_compass.h"</code>
pas	<code>uses yocto_compass;</code>
vb	<code>yocto_compass.vb</code>
cs	<code>yocto_compass.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YCompass;</code>
py	<code>from yocto_compass import *</code>

Global functions

yFindCompass(func)

Retrieves a compass for a given identifier.

yFirstCompass()

Starts the enumeration of compasses currently accessible.

YCompass methods

compass→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

compass→describe()

Returns a short text that describes unambiguously the instance of the compass in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

compass→get_advertisedValue()

Returns the current value of the compass (no more than 6 characters).

compass→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

compass→get_currentValue()

Returns the current value of the relative bearing.

compass→get_errorMessage()

Returns the error message of the latest error with the compass.

compass→get_errorType()

Returns the numerical error code of the latest error with the compass.

compass→get_friendlyName()

Returns a global identifier of the compass in the format `MODULE_NAME . FUNCTION_NAME`.

compass→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

compass→get_functionId()

Returns the hardware identifier of the compass, without reference to the module.

compass→get_hardwareId()

Returns the unique hardware identifier of the compass in the form `SERIAL . FUNCTIONID`.

compass→get_highestValue()

Returns the maximal value observed for the relative bearing since the device was started.

compass→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

compass→get_logicalName()

Returns the logical name of the compass.

compass→get_lowestValue()

Returns the minimal value observed for the relative bearing since the device was started.

compass→get_magneticHeading()

Returns the magnetic heading, regardless of the configured bearing.

compass→get_module()

Gets the `YModule` object for the device on which the function is located.

compass→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

compass→get_recordedData(startTime, endTime)

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

compass→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

compass→get_resolution()

Returns the resolution of the measured values.

compass→get_unit()

Returns the measuring unit for the relative bearing.

compass→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

compass→isOnline()

Checks if the compass is currently reachable, without raising any error.

compass→isOnline_async(callback, context)

Checks if the compass is currently reachable, without raising any error (asynchronous version).

compass→load(msValidity)

Preloads the compass cache with a specified validity duration.

compass→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

compass→load_async(msValidity, callback, context)

Preloads the compass cache with a specified validity duration (asynchronous version).

compass→nextCompass()

Continues the enumeration of compasses started using `yFirstCompass()`.

compass→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

compass→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

compass→set_highestValue(newval)

Changes the recorded maximal value observed.

compass→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

3. Reference

compass→**set_logicalName(newval)**

Changes the logical name of the compass.

compass→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

compass→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

compass→**set_resolution(newval)**

Changes the resolution of the measured physical values.

compass→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

compass→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YCompass.FindCompass() yFindCompass()yFindCompass()

YCompass

Retrieves a compass for a given identifier.

```
function yFindCompass( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the compass is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YCompass.isOnline()` to test if the compass is indeed online at a given time. In case of ambiguity when looking for a compass by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the compass

Returns :

a `YCompass` object allowing you to drive the compass.

YCompass.FirstCompass() yFirstCompass()yFirstCompass()

YCompass

Starts the enumeration of compasses currently accessible.

```
function yFirstCompass( )
```

Use the method `YCompass.nextCompass()` to iterate on next compasses.

Returns :

a pointer to a `YCompass` object, corresponding to the first compass currently online, or a `null` pointer if there are none.

compass→**calibrateFromPoints()**
compass.calibrateFromPoints()**YCompass**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**describe()****compass.describe()****YCompass**

Returns a short text that describes unambiguously the instance of the compass in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the compass (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

compass→**get_advertisedValue()****YCompass****compass**→**advertisedValue()****compass.get_advertisedValue()**

Returns the current value of the compass (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the compass (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

compass→**get_currentRawValue()**

YCompass

compass→**currentRawValue()**

compass.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

compass→**get_currentValue()****YCompass****compass**→**currentValue()****compass.get_currentValue()**

Returns the current value of the relative bearing.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the relative bearing

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

compass→**get_errorMessage()**

YCompass

compass→**errorMessage()**

compass.get_errorMessage()

Returns the error message of the latest error with the compass.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the compass object

compass→**get_errorType()****YCompass****compass**→**errorType()****compass.get_errorType()**

Returns the numerical error code of the latest error with the compass.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the compass object

compass→**get_friendlyName()**

YCompass

compass→**friendlyName()**

compass.get_friendlyName()

Returns a global identifier of the compass in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the compass if they are defined, otherwise the serial number of the module and the hardware identifier of the compass (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the compass using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

compass→**get_functionDescriptor()****YCompass****compass**→**functionDescriptor()****compass.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

compass→**get_functionId()**

YCompass

compass→**functionId()****compass.get_functionId()**

Returns the hardware identifier of the compass, without reference to the module.

function **get_functionId()**

For example `relay1`

Returns :

a string that identifies the compass (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

compass→**get_hardwareId()****YCompass****compass**→**hardwareId()****compass.get_hardwareId()**

Returns the unique hardware identifier of the compass in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the compass. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the compass (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

compass→**get_highestValue()**

YCompass

compass→**highestValue()**

compass.get_highestValue()

Returns the maximal value observed for the relative bearing since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the relative bearing since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

compass→**get_logFrequency()****YCompass****compass**→**logFrequency()****compass.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

compass→**get_logicalName()**

YCompass

compass→**logicalName()****compass.get_logicalName()**

Returns the logical name of the compass.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the compass. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

compass→**get_lowestValue()****YCompass****compass**→**lowestValue()****compass.get_lowestValue()**

Returns the minimal value observed for the relative bearing since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the relative bearing since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

compass→**get_magneticHeading()**

YCompass

compass→**magneticHeading()**

compass.get_magneticHeading()

Returns the magnetic heading, regardless of the configured bearing.

function **get_magneticHeading()**

Returns :

a floating point number corresponding to the magnetic heading, regardless of the configured bearing

On failure, throws an exception or returns `Y_MAGNETICHEADING_INVALID`.

compass→**get_module()****YCompass****compass**→**module()****compass.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

compass→**get_module_async()****YCompass****compass**→**module_async()****compass.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

compass→**get_recordedData()****YCompass****compass**→**recordedData()****compass.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

compass→**get_reportFrequency()**

YCompass

compass→**reportFrequency()**

compass.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency() ( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

compass→**get_resolution()****YCompass****compass**→**resolution()****compass.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

compass→**get_unit()**

YCompass

compass→**unit()****compass.get_unit()**

Returns the measuring unit for the relative bearing.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the relative bearing

On failure, throws an exception or returns `Y_UNIT_INVALID`.

compass→**get_userData()****YCompass****compass**→**userData()****compass.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

compass→**isOnline()****compass.isOnline()**

YCompass

Checks if the compass is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the compass in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the compass.

Returns :

`true` if the compass can be reached, and `false` otherwise

compass→**isOnline_async()**
compass.isOnline_async()

YCompass

Checks if the compass is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the compass in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

compass→**load()****compass.load()****YCompass**

Preloads the compass cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

compass→**loadCalibrationPoints()**
compass.loadCalibrationPoints()**YCompass**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**load_async()****compass.load_async()****YCompass**

Preloads the compass cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

compass→**nextCompass()****compass.nextCompass()****YCompass**

Continues the enumeration of compasses started using `yFirstCompass()`.

```
function nextCompass( )
```

Returns :

a pointer to a `YCompass` object, corresponding to a compass currently online, or a `null` pointer if there are no more compasses to enumerate.

compass→**registerTimedReportCallback()**
compass.registerTimedReportCallback()

YCompass

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

compass→**registerValueCallback()**
compass.registerValueCallback()

YCompass

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

compass→**set_highestValue()**
compass→**setHighestValue()**
compass.set_highestValue()

YCompass

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**set_logFrequency()****YCompass****compass**→**setLogFrequency()****compass.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**set_logicalName()**

YCompass

compass→**setLogicalName()**

compass.set_logicalName()

Changes the logical name of the compass.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the compass.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

compass→**set_lowestValue()**
compass→**setLowestValue()**
compass.set_lowestValue()

YCompass

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**set_reportFrequency()**
compass→**setReportFrequency()**
compass.set_reportFrequency()

YCompass

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**set_resolution()****YCompass****compass**→**setResolution()****compass.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

compass→**set_userData()**

YCompass

compass→**setUserData()****compass.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

compass→**wait_async()****compass.wait_async()****YCompass**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.7. Current function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_current.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YCurrent = yoctolib.YCurrent;
php	require_once('yocto_current.php');
c++	#include "yocto_current.h"
m	#import "yocto_current.h"
pas	uses yocto_current;
vb	yocto_current.vb
cs	yocto_current.cs
java	import com.yoctopuce.YoctoAPI.YCurrent;
py	from yocto_current import *

Global functions

yFindCurrent(func)

Retrieves a current sensor for a given identifier.

yFirstCurrent()

Starts the enumeration of current sensors currently accessible.

YCurrent methods

current→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

current→describe()

Returns a short text that describes unambiguously the instance of the current sensor in the form TYPE (NAME) = SERIAL . FUNCTIONID.

current→get_advertisedValue()

Returns the current value of the current sensor (no more than 6 characters).

current→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

current→get_currentValue()

Returns the current measure for the current.

current→get_errorMessage()

Returns the error message of the latest error with the current sensor.

current→get_errorType()

Returns the numerical error code of the latest error with the current sensor.

current→get_friendlyName()

Returns a global identifier of the current sensor in the format MODULE_NAME . FUNCTION_NAME.

current→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

current→get_functionId()

Returns the hardware identifier of the current sensor, without reference to the module.

current→get_hardwareId()

Returns the unique hardware identifier of the current sensor in the form SERIAL . FUNCTIONID.

current→**get_highestValue()**

Returns the maximal value observed for the current.

current→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

current→**get_logicalName()**

Returns the logical name of the current sensor.

current→**get_lowestValue()**

Returns the minimal value observed for the current.

current→**get_module()**

Gets the `YModule` object for the device on which the function is located.

current→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

current→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

current→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

current→**get_resolution()**

Returns the resolution of the measured values.

current→**get_unit()**

Returns the measuring unit for the current.

current→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

current→**isOnline()**

Checks if the current sensor is currently reachable, without raising any error.

current→**isOnline_async(callback, context)**

Checks if the current sensor is currently reachable, without raising any error (asynchronous version).

current→**load(msValidity)**

Preloads the current sensor cache with a specified validity duration.

current→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

current→**load_async(msValidity, callback, context)**

Preloads the current sensor cache with a specified validity duration (asynchronous version).

current→**nextCurrent()**

Continues the enumeration of current sensors started using `yFirstCurrent()`.

current→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

current→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

current→**set_highestValue(newval)**

Changes the recorded maximal value observed pour the current.

current→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

current→**set_logicalName(newval)**

Changes the logical name of the current sensor.

3. Reference

current→**set_lowestValue(newval)**

Changes the recorded minimal value observed pour the current.

current→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

current→**set_resolution(newval)**

Changes the resolution of the measured values.

current→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

current→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YCurrent.FindCurrent() yFindCurrent()yFindCurrent()

YCurrent

Retrieves a current sensor for a given identifier.

```
function yFindCurrent( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the current sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YCurrent.isOnline()` to test if the current sensor is indeed online at a given time. In case of ambiguity when looking for a current sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the current sensor

Returns :

a `YCurrent` object allowing you to drive the current sensor.

YCurrent.FirstCurrent()
yFirstCurrent()**yFirstCurrent()**

YCurrent

Starts the enumeration of current sensors currently accessible.

```
function yFirstCurrent( )
```

Use the method `YCurrent.nextCurrent()` to iterate on next current sensors.

Returns :

a pointer to a `YCurrent` object, corresponding to the first current sensor currently online, or a `null` pointer if there are none.

current→**calibrateFromPoints()**
current.calibrateFromPoints()

YCurrent

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**describe()****current.describe()****YCurrent**

Returns a short text that describes unambiguously the instance of the current sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the current sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

current→**get_advertisedValue()****YCurrent****current**→**advertisedValue()****current.get_advertisedValue()**

Returns the current value of the current sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the current sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

current→**get_currentRawValue()**

YCurrent

current→**currentRawValue()**

current.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

current→**get_currentValue()****YCurrent****current**→**currentValue()****current.get_currentValue()**

Returns the current measure for the current.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the current

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

current→**get_errorMessage()**

YCurrent

current→**errorMessage()****current.get_errorMessage()**

Returns the error message of the latest error with the current sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the current sensor object

current→**get_errorType()****YCurrent****current**→**errorType()****current.get_errorType()**

Returns the numerical error code of the latest error with the current sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the current sensor object

current→**get_friendlyName()**

YCurrent

current→**friendlyName()****current.get_friendlyName()**

Returns a global identifier of the current sensor in the format `MODULE_NAME.FUNCTION_NAME`.

function **get_friendlyName()**

The returned string uses the logical names of the module and of the current sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the current sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the current sensor using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

current→**get_functionDescriptor()****YCurrent****current**→**functionDescriptor()****current.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

current→**get_functionId()**

YCurrent

current→**functionId()****current.get_functionId()**

Returns the hardware identifier of the current sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the current sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

current→**get_hardwareId()****YCurrent****current**→**hardwareId()****current.get_hardwareId()**

Returns the unique hardware identifier of the current sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the current sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the current sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

current→**get_highestValue()**

YCurrent

current→**highestValue()****current.get_highestValue()**

Returns the maximal value observed for the current.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the current

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

current→**get_logFrequency()****YCurrent****current**→**logFrequency()****current.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

current→**get_logicalName()**

YCurrent

current→**logicalName()****current.get_logicalName()**

Returns the logical name of the current sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the current sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

current→**get_lowestValue()****YCurrent****current**→**lowestValue()****current.get_lowestValue()**

Returns the minimal value observed for the current.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the current

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

current→**get_module()**

YCurrent

current→**module()****current.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

current→**get_module_async()****YCurrent****current**→**module_async()****current.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

current→**get_recordedData()****YCurrent****current**→**recordedData()****current.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

current→**get_reportFrequency()****YCurrent****current**→**reportFrequency()****current.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

current→**get_resolution()**

YCurrent

current→**resolution()****current.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

current→**get_unit()****YCurrent****current**→**unit()****current.get_unit()**

Returns the measuring unit for the current.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the current

On failure, throws an exception or returns `Y_UNIT_INVALID`.

current→**get_userData()**

YCurrent

current→**userData()****current.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

current→**isOnline()****current.isOnline()****YCurrent**

Checks if the current sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the current sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the current sensor.

Returns :

`true` if the current sensor can be reached, and `false` otherwise

current→**isOnline_async()****current.isOnline_async()**

YCurrent

Checks if the current sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the current sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

current→**load()****current.load()****YCurrent**

Preloads the current sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**current→loadCalibrationPoints()
current.loadCalibrationPoints()**

YCurrent

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**load_async()****current.load_async()****YCurrent**

Preloads the current sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

current→**nextCurrent()**current.nextCurrent()

YCurrent

Continues the enumeration of current sensors started using `yFirstCurrent()`.

```
function nextCurrent( )
```

Returns :

a pointer to a `YCurrent` object, corresponding to a current sensor currently online, or a `null` pointer if there are no more current sensors to enumerate.

current→**registerTimedReportCallback()**
current.registerTimedReportCallback()

YCurrent

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

current→**registerValueCallback()**
current.registerValueCallback()**YCurrent**

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

current→**set_highestValue()**
current→**setHighestValue()**
current.set_highestValue()

YCurrent

Changes the recorded maximal value observed pour the current.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed pour the current

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**set_logFrequency()**

YCurrent

current→**setLogFrequency()**

current.set_logFrequency()

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**set_logicalName()****YCurrent****current**→**setLogicalName()****current.set_logicalName()**

Changes the logical name of the current sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the current sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

current→**set_lowestValue()**

YCurrent

current→**setLowestValue()****current.set_lowestValue()**

Changes the recorded minimal value observed pour the current.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed pour the current

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**set_reportFrequency()****YCurrent****current**→**setReportFrequency()****current.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**set_resolution()**

YCurrent

current→**setResolution()****current.set_resolution()**

Changes the resolution of the measured values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current→**set_userData()****YCurrent****current**→**setUserData()****current.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

current→**wait_async()****current.wait_async()**

YCurrent

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.8. DataLogger function interface

Yoctopuce sensors include a non-volatile memory capable of storing ongoing measured data automatically, without requiring a permanent connection to a computer. The DataLogger function controls the global parameters of the internal data logger.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_datalogger.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YDataLogger = yoctolib.YDataLogger;
php	require_once('yocto_datalogger.php');
cpp	#include "yocto_datalogger.h"
m	#import "yocto_datalogger.h"
pas	uses yocto_datalogger;
vb	yocto_datalogger.vb
cs	yocto_datalogger.cs
java	import com.yoctopuce.YoctoAPI.YDataLogger;
py	from yocto_datalogger import *

Global functions	
yFindDataLogger(func)	Retrieves a data logger for a given identifier.
yFirstDataLogger()	Starts the enumeration of data loggers currently accessible.
YDataLogger methods	
datalogger→describe()	Returns a short text that describes unambiguously the instance of the data logger in the form <code>TYPE (NAME) = SERIAL . FUNCTIONID</code> .
datalogger→forgetAllDataStreams()	Clears the data logger memory and discards all recorded data streams.
datalogger→get_advertisedValue()	Returns the current value of the data logger (no more than 6 characters).
datalogger→get_autoStart()	Returns the default activation state of the data logger on power up.
datalogger→get_currentRunIndex()	Returns the current run number, corresponding to the number of times the module was powered on with the dataLogger enabled at some point.
datalogger→get_dataSets()	Returns a list of YDataSet objects that can be used to retrieve all measures stored by the data logger.
datalogger→get_dataStreams(v)	Builds a list of all data streams hold by the data logger (legacy method).
datalogger→get_errorMessage()	Returns the error message of the latest error with the data logger.
datalogger→get_errorType()	Returns the numerical error code of the latest error with the data logger.
datalogger→get_friendlyName()	Returns a global identifier of the data logger in the format <code>MODULE_NAME . FUNCTION_NAME</code> .
datalogger→get_functionDescriptor()	

3. Reference

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

`datalogger`→`get_functionId()`

Returns the hardware identifier of the data logger, without reference to the module.

`datalogger`→`get_hardwareId()`

Returns the unique hardware identifier of the data logger in the form `SERIAL . FUNCTIONID`.

`datalogger`→`get_logicalName()`

Returns the logical name of the data logger.

`datalogger`→`get_module()`

Gets the `YModule` object for the device on which the function is located.

`datalogger`→`get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`datalogger`→`get_recording()`

Returns the current activation state of the data logger.

`datalogger`→`get_timeUTC()`

Returns the Unix timestamp for current UTC time, if known.

`datalogger`→`get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`datalogger`→`isOnline()`

Checks if the data logger is currently reachable, without raising any error.

`datalogger`→`isOnline_async(callback, context)`

Checks if the data logger is currently reachable, without raising any error (asynchronous version).

`datalogger`→`load(msValidity)`

Preloads the data logger cache with a specified validity duration.

`datalogger`→`load_async(msValidity, callback, context)`

Preloads the data logger cache with a specified validity duration (asynchronous version).

`datalogger`→`nextDataLogger()`

Continues the enumeration of data loggers started using `yFirstDataLogger()`.

`datalogger`→`registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`datalogger`→`set_autoStart(newval)`

Changes the default activation state of the data logger on power up.

`datalogger`→`set_logicalName(newval)`

Changes the logical name of the data logger.

`datalogger`→`set_recording(newval)`

Changes the activation state of the data logger to start/stop recording data.

`datalogger`→`set_timeUTC(newval)`

Changes the current UTC time reference used for recorded data.

`datalogger`→`set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

`datalogger`→`wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YDataLogger.FindDataLogger() yFindDataLogger()yFindDataLogger()

YDataLogger

Retrieves a data logger for a given identifier.

```
function yFindDataLogger( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the data logger is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDataLogger.isOnline()` to test if the data logger is indeed online at a given time. In case of ambiguity when looking for a data logger by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the data logger

Returns :

a `YDataLogger` object allowing you to drive the data logger.

YDataLogger.FirstDataLogger() yFirstDataLogger()yFirstDataLogger()

YDataLogger

Starts the enumeration of data loggers currently accessible.

```
function yFirstDataLogger( )
```

Use the method `YDataLogger.nextDataLogger()` to iterate on next data loggers.

Returns :

a pointer to a `YDataLogger` object, corresponding to the first data logger currently online, or a `null` pointer if there are none.

datalogger→**describe()**(**datalogger.describe()**)**YDataLogger**

Returns a short text that describes unambiguously the instance of the data logger in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the data logger (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

datalogger→**forgetAllDataStreams()**
datalogger.forgetAllDataStreams()

YDataLogger

Clears the data logger memory and discards all recorded data streams.

```
function forgetAllDataStreams( )
```

This method also resets the current run index to zero.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger→**get_advertisedValue()****YDataLogger****datalogger**→**advertisedValue()****datalogger.get_advertisedValue()**

Returns the current value of the data logger (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the data logger (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

datalogger→**get_autoStart()**

YDataLogger

datalogger→**autoStart()****datalogger.get_autoStart()**

Returns the default activation state of the data logger on power up.

```
function get_autoStart( )
```

Returns :

either `Y_AUTOSTART_OFF` or `Y_AUTOSTART_ON`, according to the default activation state of the data logger on power up

On failure, throws an exception or returns `Y_AUTOSTART_INVALID`.

datalogger→**get_currentRunIndex()****YDataLogger****datalogger**→**currentRunIndex()****datalogger.get_currentRunIndex()**

Returns the current run number, corresponding to the number of times the module was powered on with the dataLogger enabled at some point.

```
function get_currentRunIndex( )
```

Returns :

an integer corresponding to the current run number, corresponding to the number of times the module was powered on with the dataLogger enabled at some point

On failure, throws an exception or returns `Y_CURRENTRUNINDEX_INVALID`.

datalogger→**get_dataSets()**

YDataLogger

datalogger→**dataSets()****datalogger.get_dataSets()**

Returns a list of YDataSet objects that can be used to retrieve all measures stored by the data logger.

```
function get_dataSets( )
```

This function only works if the device uses a recent firmware, as YDataSet objects are not supported by firmwares older than version 13000.

Returns :

a list of YDataSet object.

On failure, throws an exception or returns an empty list.

datalogger→**get_dataStreams()**
datalogger→**dataStreams()**
datalogger.get_dataStreams()

YDataLogger

Builds a list of all data streams hold by the data logger (legacy method).

```
function get_dataStreams( v )
```

The caller must pass by reference an empty array to hold YDataStream objects, and the function fills it with objects describing available data sequences.

This is the old way to retrieve data from the DataLogger. For new applications, you should rather use `get_dataSets ()` method, or call directly `get_recordedData ()` on the sensor object.

Parameters :

v an array of YDataStream objects to be filled in

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger→**get_errorMessage()**

YDataLogger

datalogger→**errorMessage()**

datalogger.get_errorMessage()

Returns the error message of the latest error with the data logger.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the data logger object

datalogger→**get_errorType()****YDataLogger****datalogger**→**errorType()****datalogger.get_errorType()**

Returns the numerical error code of the latest error with the data logger.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the data logger object

datalogger→**get_friendlyName()**

YDataLogger

datalogger→**friendlyName()**

datalogger.get_friendlyName()

Returns a global identifier of the data logger in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the data logger if they are defined, otherwise the serial number of the module and the hardware identifier of the data logger (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the data logger using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

datalogger→**get_functionDescriptor()**
datalogger→**functionDescriptor()**
datalogger.get_functionDescriptor()

YDataLogger

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

datalogger→**get_functionId()**

YDataLogger

datalogger→**functionId()****datalogger.get_functionId()**

Returns the hardware identifier of the data logger, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the data logger (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`datalogger`→`get_hardwareId()`
`datalogger`→`hardwareId()`
`datalogger.get_hardwareId()`

YDataLogger

Returns the unique hardware identifier of the data logger in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the data logger. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the data logger (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

datalogger→**get_logicalName()**

YDataLogger

datalogger→**logicalName()**

datalogger.get_logicalName()

Returns the logical name of the data logger.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the data logger. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

datalogger→**get_module()****YDataLogger****datalogger**→**module()****datalogger.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

datalogger→**get_module_async()****YDataLogger****datalogger**→**module_async()****datalogger.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger→**get_recording()****YDataLogger****datalogger**→**recording()****datalogger.get_recording()**

Returns the current activation state of the data logger.

```
function get_recording( )
```

Returns :

either `Y_RECORDING_OFF` or `Y_RECORDING_ON`, according to the current activation state of the data logger

On failure, throws an exception or returns `Y_RECORDING_INVALID`.

datalogger→**get_timeUTC()**

YDataLogger

datalogger→**timeUTC()****datalogger.get_timeUTC()**

Returns the Unix timestamp for current UTC time, if known.

```
function get_timeUTC( )
```

Returns :

an integer corresponding to the Unix timestamp for current UTC time, if known

On failure, throws an exception or returns `Y_TIMEUTC_INVALID`.

datalogger→**get_userData()****YDataLogger****datalogger**→**userData()****datalogger.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

datalogger→**isOnline()****datalogger.isOnline()**

YDataLogger

Checks if the data logger is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the data logger in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the data logger.

Returns :

`true` if the data logger can be reached, and `false` otherwise

datalogger→isOnline_async()
datalogger.isOnline_async()

YDataLogger

Checks if the data logger is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the data logger in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger→**load()****datalogger.load()****YDataLogger**

Preloads the data logger cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

datalogger→**load_async()****datalogger.load_async()****YDataLogger**

Preloads the data logger cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context )
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger→**nextDataLogger()**
datalogger.nextDataLogger()

YDataLogger

Continues the enumeration of data loggers started using `yFirstDataLogger()`.

```
function nextDataLogger( )
```

Returns :

a pointer to a `YDataLogger` object, corresponding to a data logger currently online, or a `null` pointer if there are no more data loggers to enumerate.

**datalogger→registerValueCallback()
datalogger.registerValueCallback()**

YDataLogger

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

datalogger→**set_autoStart()**

YDataLogger

datalogger→**setAutoStart()****datalogger.set_autoStart()**

Changes the default activation state of the data logger on power up.

```
function set_autoStart( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval either `Y_AUTOSTART_OFF` or `Y_AUTOSTART_ON`, according to the default activation state of the data logger on power up

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger→**set_logicalName()****YDataLogger****datalogger**→**setLogicalName()****datalogger.set_logicalName()**

Changes the logical name of the data logger.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the data logger.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

datalogger→**set_recording()****YDataLogger****datalogger**→**setRecording()****datalogger.set_recording()**

Changes the activation state of the data logger to start/stop recording data.

```
function set_recording( newval)
```

Parameters :

newval either Y_RECORDING_OFF or Y_RECORDING_ON, according to the activation state of the data logger to start/stop recording data

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger→**set_timeUTC()****YDataLogger****datalogger**→**setTimeUTC()****datalogger.set_timeUTC()**

Changes the current UTC time reference used for recorded data.

```
function set_timeUTC( newval)
```

Parameters :

newval an integer corresponding to the current UTC time reference used for recorded data

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger→**set_userData()**

YDataLogger

datalogger→**setUserData()****datalogger.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

datalogger→**wait_async()****datalogger.wait_async()****YDataLogger**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.9. Formatted data sequence

A run is a continuous interval of time during which a module was powered on. A data run provides easy access to all data collected during a given run, providing on-the-fly resampling at the desired reporting rate.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_datalogger.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YDataLogger = yoctolib.YDataLogger;
php	require_once('yocto_datalogger.php');
c++	#include "yocto_datalogger.h"
m	#import "yocto_datalogger.h"
pas	uses yocto_datalogger;
vb	yocto_datalogger.vb
cs	yocto_datalogger.cs
java	import com.yoctopuce.YoctoAPI.YDataLogger;
py	from yocto_datalogger import *

YDataRun methods	
datarun→get_averageValue(measureName, pos)	Returns the average value of the measure observed at the specified time period.
datarun→get_duration()	Returns the duration (in seconds) of the data run.
datarun→get_maxValue(measureName, pos)	Returns the maximal value of the measure observed at the specified time period.
datarun→get_measureNames()	Returns the names of the measures recorded by the data logger.
datarun→get_minValue(measureName, pos)	Returns the minimal value of the measure observed at the specified time period.
datarun→get_startTimeUTC()	Returns the start time of the data run, relative to the Jan 1, 1970.
datarun→get_valueCount()	Returns the number of values accessible in this run, given the selected data samples interval.
datarun→get_valueInterval()	Returns the number of seconds covered by each value in this run.
datarun→set_valueInterval(valueInterval)	Changes the number of seconds covered by each value in this run.

datarun→**get_averageValue()****YDataRun****datarun**→**averageValue()****datarun.get_averageValue()**

Returns the average value of the measure observed at the specified time period.

```
function get_averageValue( measureName, pos)
```

datarun→**get_averageValue()****datarun**→**averageValue()****datarun.get_averageValue()**

Returns the average value of the measure observed at the specified time period.

```
js function get_averageValue( measureName, pos)
```

```
nodejs function get_averageValue( measureName, pos)
```

```
php function get_averageValue( $measureName, $pos)
```

```
java double get_averageValue( String measureName, int pos)
```

```
py def get_averageValue( measureName, pos)
```

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the average value)

On failure, throws an exception or returns `Y_AVERAGEVALUE_INVALID`.

datarun→**get_duration()**

YDataRun

datarun→**duration()****datarun.get_duration()**

Returns the duration (in seconds) of the data run.

```
function get_duration( )
```

datarun→**get_duration()**

datarun→**duration()****datarun.get_duration()**

Returns the duration (in seconds) of the data run.

```
js function get_duration( )
```

```
nodejs function get_duration( )
```

```
php function get_duration( )
```

```
java long get_duration( )
```

```
py def get_duration( )
```

When the datalogger is actively recording and the specified run is the current run, calling this method reloads last sequence(s) from device to make sure it includes the latest recorded data.

Returns :

an unsigned number corresponding to the number of seconds between the beginning of the run (when the module was powered up) and the last recorded measure.

datarun→**get_maxValue()****YDataRun****datarun**→**maxValue()****datarun.get_maxValue()**

Returns the maximal value of the measure observed at the specified time period.

```
function get_maxValue( measureName, pos)
```

datarun→**get_maxValue()****datarun**→**maxValue()****datarun.get_maxValue()**

Returns the maximal value of the measure observed at the specified time period.

```
js function get_maxValue( measureName, pos)
```

```
nodejs function get_maxValue( measureName, pos)
```

```
php function get_maxValue( $measureName, $pos)
```

```
java double get_maxValue( String measureName, int pos)
```

```
py def get_maxValue( measureName, pos)
```

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the maximal value)

On failure, throws an exception or returns `Y_MAXVALUE_INVALID`.

datarun→**get_measureNames()**

YDataRun

datarun→**measureNames()****datarun.get_measureNames()**

Returns the names of the measures recorded by the data logger.

```
function get_measureNames( )
```

datarun→**get_measureNames()****datarun**→**measureNames()****datarun.get_measureNames()**

Returns the names of the measures recorded by the data logger.

```
js function get_measureNames( )
```

```
nodejs function get_measureNames( )
```

```
php function get_measureNames( )
```

```
java ArrayList<String> get_measureNames( )
```

```
py def get_measureNames( )
```

In most case, the measure names match the hardware identifier of the sensor that produced the data.

Returns :

a list of strings (the measure names) On failure, throws an exception or returns an empty array.

datarun→**get_minValue()****YDataRun****datarun**→**minValue()****datarun.get_minValue()**

Returns the minimal value of the measure observed at the specified time period.

```
function get_minValue( measureName, pos)
```

datarun→**get_minValue()****datarun**→**minValue()****datarun.get_minValue()**

Returns the minimal value of the measure observed at the specified time period.

```
js function get_minValue( measureName, pos)
```

```
nodejs function get_minValue( measureName, pos)
```

```
php function get_minValue( $measureName, $pos)
```

```
java double get_minValue( String measureName, int pos)
```

```
py def get_minValue( measureName, pos)
```

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the minimal value)

On failure, throws an exception or returns `Y_MINVALUE_INVALID`.

datarun→get_startTimeUTC()

YDataRun

datarun→startTimeUTC()

Returns the start time of the data run, relative to the Jan 1, 1970.

If the UTC time was not set in the datalogger at any time during the recording of this data run, and if this is not the current run, this method returns 0.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the beginning of this data run (i.e. Unix time representation of the absolute time).

datarun→**get_valueCount()****YDataRun****datarun**→**valueCount()****datarun.get_valueCount()**

Returns the number of values accessible in this run, given the selected data samples interval.

```
function get_valueCount( )
```

datarun→**get_valueCount()****datarun**→**valueCount()****datarun.get_valueCount()**

Returns the number of values accessible in this run, given the selected data samples interval.

```
js function get_valueCount( )
```

```
nodejs function get_valueCount( )
```

```
php function get_valueCount( )
```

```
java int get_valueCount( )
```

```
py def get_valueCount( )
```

When the datalogger is actively recording and the specified run is the current run, calling this method reloads last sequence(s) from device to make sure it includes the latest recorded data.

Returns :

an unsigned number corresponding to the run duration divided by the samples interval.

datarun→**get_valueInterval()**

YDataRun

datarun→**valueInterval()****datarun.get_valueInterval()**

Returns the number of seconds covered by each value in this run.

```
function get_valueInterval( )
```

datarun→**get_valueInterval()****datarun**→**valueInterval()****datarun.get_valueInterval()**

Returns the number of seconds covered by each value in this run.

```
js function get_valueInterval( )
```

```
nodejs function get_valueInterval( )
```

```
php function get_valueInterval( )
```

```
java int get_valueInterval( )
```

```
py def get_valueInterval( )
```

By default, the value interval is set to the coarsest data rate archived in the data logger flash for this run. The value interval can however be configured at will to a different rate when desired.

Returns :

an unsigned number corresponding to a number of seconds covered by each data sample in the Run.

datarun→**set_valueInterval()**

YDataRun

datarun→**setValueInterval()****datarun.set_valueInterval()**

Changes the number of seconds covered by each value in this run.

```
function set_valueInterval( valueInterval)
```

datarun→**set_valueInterval()****datarun**→**setValueInterval()****datarun.set_valueInterval()**

Changes the number of seconds covered by each value in this run.

```
js function set_valueInterval( valueInterval)
```

```
nodejs function set_valueInterval( valueInterval)
```

```
php function set_valueInterval( $valueInterval)
```

```
java void set_valueInterval( int valueInterval)
```

```
py def set_valueInterval( valueInterval)
```

By default, the value interval is set to the coarsest data rate archived in the data logger flash for this run. The value interval can however be configured at will to a different rate when desired.

Parameters :

valueInterval an integer number of seconds.

Returns :

nothing

3.10. Recorded data sequence

YDataSet objects make it possible to retrieve a set of recorded measures for a given sensor and a specified time interval. They can be used to load data points with a progress report. When the YDataSet object is instantiated by the `get_recordedData()` function, no data is yet loaded from the module. It is only when the `loadMore()` method is called over and over than data will be effectively loaded from the dataLogger.

A preview of available measures is available using the function `get_preview()` as soon as `loadMore()` has been called once. Measures themselves are available using function `get_measures()` when loaded by subsequent calls to `loadMore()`.

This class can only be used on devices that use a recent firmware, as YDataSet objects are not supported by firmwares older than version 13000.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_api.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib');</code> <code>var YAPI = yoctolib.YAPI;</code> <code>var YModule = yoctolib.YModule;</code>
php	<code>require_once('yocto_api.php');</code>
cpp	<code>#include "yocto_api.h"</code>
m	<code>#import "yocto_api.h"</code>
pas	<code>uses yocto_api;</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>

YDataSet methods

dataset→`get_endTimeUTC()`

Returns the end time of the dataset, relative to the Jan 1, 1970.

dataset→`get_functionId()`

Returns the hardware identifier of the function that performed the measure, without reference to the module.

dataset→`get_hardwareId()`

Returns the unique hardware identifier of the function who performed the measures, in the form `SERIAL.FUNCTIONID`.

dataset→`get_measures()`

Returns all measured values currently available for this DataSet, as a list of YMeasure objects.

dataset→`get_preview()`

Returns a condensed version of the measures that can be retrieved in this YDataSet, as a list of YMeasure objects.

dataset→`get_progress()`

Returns the progress of the downloads of the measures from the data logger, on a scale from 0 to 100.

dataset→`get_startTimeUTC()`

Returns the start time of the dataset, relative to the Jan 1, 1970.

dataset→`get_summary()`

Returns an YMeasure object which summarizes the whole DataSet.

dataset→`get_unit()`

Returns the measuring unit for the measured value.

dataset→loadMore()

Loads the the next block of measures from the dataLogger, and updates the progress indicator.

dataset→loadMore_async(callback, context)

Loads the the next block of measures from the dataLogger asynchronously.

dataset→**get_endTimeUTC()**

YDataSet

dataset→**endTimeUTC()****dataset.get_endTimeUTC()**

Returns the end time of the dataset, relative to the Jan 1, 1970.

```
function get_endTimeUTC( )
```

When the YDataSet is created, the end time is the value passed in parameter to the `get_dataSet()` function. After the very first call to `loadMore()`, the end time is updated to reflect the timestamp of the last measure actually found in the `dataLogger` within the specified range.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the end of this data set (i.e. Unix time representation of the absolute time).

dataset→**get_functionId()****YDataSet****dataset**→**functionId()****dataset.get_functionId()**

Returns the hardware identifier of the function that performed the measure, without reference to the module.

```
function get_functionId( )
```

For example `temperature1`.

Returns :

a string that identifies the function (ex: `temperature1`)

dataset→**get_hardwareId()**

YDataSet

dataset→**hardwareId()****dataset.get_hardwareId()**

Returns the unique hardware identifier of the function who performed the measures, in the form `SERIAL.FUNCTIONID`.

function **get_hardwareId()**

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the function (for example `THRMCP11-123456.temperature1`)

Returns :

a string that uniquely identifies the function (ex: `THRMCP11-123456.temperature1`)

On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

dataset→**get_measures()****YDataSet****dataset**→**measures()****dataset.get_measures()**

Returns all measured values currently available for this DataSet, as a list of YMeasure objects.

```
function get_measures( )
```

Each item includes: - the start of the measure time interval - the end of the measure time interval - the minimal value observed during the time interval - the average value observed during the time interval - the maximal value observed during the time interval

Before calling this method, you should call `loadMore()` to load data from the device. You may have to call `loadMore()` several time until all rows are loaded, but you can start looking at available data rows before the load is complete.

The oldest measures are always loaded first, and the most recent measures will be loaded last. As a result, timestamps are normally sorted in ascending order within the measure table, unless there was an unexpected adjustment of the datalogger UTC clock.

Returns :

a table of records, where each record depicts the measured value for a given time interval

On failure, throws an exception or returns an empty array.

dataset→**get_preview()**

YDataSet

dataset→**preview()****dataset.get_preview()**

Returns a condensed version of the measures that can be retrieved in this YDataSet, as a list of YMeasure objects.

```
function get_preview( )
```

Each item includes: - the start of a time interval - the end of a time interval - the minimal value observed during the time interval - the average value observed during the time interval - the maximal value observed during the time interval

This preview is available as soon as `loadMore()` has been called for the first time.

Returns :

a table of records, where each record depicts the measured values during a time interval

On failure, throws an exception or returns an empty array.

dataset→**get_progress()****YDataSet****dataset**→**progress()****dataset.get_progress()**

Returns the progress of the downloads of the measures from the data logger, on a scale from 0 to 100.

```
function get_progress( )
```

When the object is instanciated by `get_dataSet`, the progress is zero. Each time `loadMore()` is invoked, the progress is updated, to reach the value 100 only once all measures have been loaded.

Returns :

an integer in the range 0 to 100 (percentage of completion).

dataset→**get_startTimeUTC()**

YDataSet

dataset→**startTimeUTC(dataset.get_startTimeUTC())**

Returns the start time of the dataset, relative to the Jan 1, 1970.

```
function get_startTimeUTC()
```

When the YDataSet is created, the start time is the value passed in parameter to the `get_dataSet()` function. After the very first call to `loadMore()`, the start time is updated to reflect the timestamp of the first measure actually found in the dataLogger within the specified range.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the beginning of this data set (i.e. Unix time representation of the absolute time).

dataset→**get_summary()****YDataSet****dataset**→**summary()****dataset.get_summary()**

Returns an YMeasure object which summarizes the whole DataSet.

```
function get_summary( )
```

It includes the following information: - the start of a time interval - the end of a time interval - the minimal value observed during the time interval - the average value observed during the time interval - the maximal value observed during the time interval

This summary is available as soon as `loadMore()` has been called for the first time.

Returns :

an YMeasure object

dataset→**get_unit()**

YDataSet

dataset→**unit()****dataset.get_unit()**

Returns the measuring unit for the measured value.

```
function get_unit( )
```

Returns :

a string that represents a physical unit.

On failure, throws an exception or returns `Y_UNIT_INVALID`.

dataset→**loadMore()****dataset.loadMore()****YDataSet**

Loads the the next block of measures from the dataLogger, and updates the progress indicator.

```
function loadMore( )
```

Returns :

an integer in the range 0 to 100 (percentage of completion), or a negative error code in case of failure.

On failure, throws an exception or returns a negative error code.

dataset→**loadMore_async()****dataset.loadMore_async()**

YDataSet

Loads the the next block of measures from the dataLogger asynchronously.

```
function loadMore_async( callback, context)
```

Parameters :

callback callback function that is invoked when the w The callback function receives three arguments: - the user-specific context object - the YDataSet object whose loadMore_async was invoked - the load result: either the progress indicator (0...100), or a negative error code in case of failure.

context user-specific object that is passed as-is to the callback function

Returns :

nothing.

3.11. Unformatted data sequence

YDataStream objects represent bare recorded measure sequences, exactly as found within the data logger present on Yoctopuce sensors.

In most cases, it is not necessary to use YDataStream objects directly, as the YDataSet objects (returned by the `get_recordedData()` method from sensors and the `get_dataSets()` method from the data logger) provide a more convenient interface.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_api.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YAPI = yoctolib.YAPI; var YModule = yoctolib.YModule;</code>
php	<code>require_once('yocto_api.php');</code>
cpp	<code>#include "yocto_api.h"</code>
m	<code>#import "yocto_api.h"</code>
pas	<code>uses yocto_api;</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>

YDataStream methods	
datastream → get_averageValue()	Returns the average of all measures observed within this stream.
datastream → get_columnCount()	Returns the number of data columns present in this stream.
datastream → get_columnNames()	Returns the title (or meaning) of each data column present in this stream.
datastream → get_data(row, col)	Returns a single measure from the data stream, specified by its row and column index.
datastream → get_dataRows()	Returns the whole data set contained in the stream, as a bidimensional table of numbers.
datastream → get_dataSamplesIntervalMs()	Returns the number of milliseconds between two consecutive rows of this data stream.
datastream → get_duration()	Returns the approximate duration of this stream, in seconds.
datastream → get_maxValue()	Returns the largest measure observed within this stream.
datastream → get_minValue()	Returns the smallest measure observed within this stream.
datastream → get_rowCount()	Returns the number of data rows present in this stream.
datastream → get_runIndex()	Returns the run index of the data stream.
datastream → get_startTime()	Returns the relative start time of the data stream, measured in seconds.
datastream → get_startTimeUTC()	

3. Reference

Returns the start time of the data stream, relative to the Jan 1, 1970.

datastream→**get_averageValue()****YDataStream****datastream**→**averageValue()****datastream.get_averageValue()**

Returns the average of all measures observed within this stream.

```
function get_averageValue( )
```

If the device uses a firmware older than version 13000, this method will always return Y_DATA_INVALID.

Returns :

a floating-point number corresponding to the average value, or Y_DATA_INVALID if the stream is not yet complete (still recording).

On failure, throws an exception or returns Y_DATA_INVALID.

datastream→get_columnCount()

YDataStream

datastream→columnCount()

datastream.get_columnCount()

Returns the number of data columns present in this stream.

```
function get_columnCount( )
```

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

If the device uses a firmware older than version 13000, this method fetches the whole data stream from the device if not yet done, which can cause a little delay.

Returns :

an unsigned number corresponding to the number of columns.

On failure, throws an exception or returns zero.

datastream→**get_columnNames()****YDataStream****datastream**→**columnNames()****datastream.get_columnNames()**

Returns the title (or meaning) of each data column present in this stream.

```
function get_columnNames( )
```

In most case, the title of the data column is the hardware identifier of the sensor that produced the data. For streams recorded at a lower recording rate, the dataLogger stores the min, average and max value during each measure interval into three columns with suffixes `_min`, `_avg` and `_max` respectively.

If the device uses a firmware older than version 13000, this method fetches the whole data stream from the device if not yet done, which can cause a little delay.

Returns :

a list containing as many strings as there are columns in the data stream.

On failure, throws an exception or returns an empty array.

datastream→**get_data()**

YDataStream

datastream→**data()****datastream.get_data()**

Returns a single measure from the data stream, specified by its row and column index.

```
function get_data( row, col)
```

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

This method fetches the whole data stream from the device, if not yet done.

Parameters :

row row index

col column index

Returns :

a floating-point number

On failure, throws an exception or returns `Y_DATA_INVALID`.

datastream→**get_dataRows()****YDataStream****datastream**→**dataRows()****datastream.get_dataRows()**

Returns the whole data set contained in the stream, as a bidimensional table of numbers.

```
function get_dataRows( )
```

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

This method fetches the whole data stream from the device, if not yet done.

Returns :

a list containing as many elements as there are rows in the data stream. Each row itself is a list of floating-point numbers.

On failure, throws an exception or returns an empty array.

datastream→**get_dataSamplesIntervalMs()**

YDataStream

datastream→**dataSamplesIntervalMs()**

datastream.get_dataSamplesIntervalMs()

Returns the number of milliseconds between two consecutive rows of this data stream.

```
function get_dataSamplesIntervalMs( )
```

By default, the data logger records one row per second, but the recording frequency can be changed for each device function

Returns :

an unsigned number corresponding to a number of milliseconds.

datastream→**get_duration()****YDataStream****datastream**→**duration()****datastream.get_duration()**

Returns the approximate duration of this stream, in seconds.

```
function get_duration( )
```

Returns :

the number of seconds covered by this stream.

On failure, throws an exception or returns Y_DURATION_INVALID.

datastream→**get_maxValue()**

YDataStream

datastream→**maxValue()****datastream.get_maxValue()**

Returns the largest measure observed within this stream.

```
function get_maxValue( )
```

If the device uses a firmware older than version 13000, this method will always return Y_DATA_INVALID.

Returns :

a floating-point number corresponding to the largest value, or Y_DATA_INVALID if the stream is not yet complete (still recording).

On failure, throws an exception or returns Y_DATA_INVALID.

datastream→**get_minValue()****YDataStream****datastream**→**minValue()****datastream.get_minValue()**

Returns the smallest measure observed within this stream.

```
function get_minValue( )
```

If the device uses a firmware older than version 13000, this method will always return Y_DATA_INVALID.

Returns :

a floating-point number corresponding to the smallest value, or Y_DATA_INVALID if the stream is not yet complete (still recording).

On failure, throws an exception or returns Y_DATA_INVALID.

datastream→**get_rowCount()**

YDataStream

datastream→**rowCount()****datastream.get_rowCount()**

Returns the number of data rows present in this stream.

```
function get_rowCount( )
```

If the device uses a firmware older than version 13000, this method fetches the whole data stream from the device if not yet done, which can cause a little delay.

Returns :

an unsigned number corresponding to the number of rows.

On failure, throws an exception or returns zero.

datastream→**get_runIndex()****YDataStream****datastream**→**runIndex()****datastream.get_runIndex()**

Returns the run index of the data stream.

```
function get_runIndex( )
```

A run can be made of multiple datastreams, for different time intervals.

Returns :

an unsigned number corresponding to the run index.

datastream→**get_startTime()**

YDataStream

datastream→**startTime()****datastream.get_startTime()**

Returns the relative start time of the data stream, measured in seconds.

```
function get_startTime( )
```

For recent firmwares, the value is relative to the present time, which means the value is always negative. If the device uses a firmware older than version 13000, value is relative to the start of the time the device was powered on, and is always positive. If you need an absolute UTC timestamp, use `get_startTimeUTC()`.

Returns :

an unsigned number corresponding to the number of seconds between the start of the run and the beginning of this data stream.

datastream→**get_startTimeUTC()****YDataStream****datastream**→**startTimeUTC()****datastream.get_startTimeUTC()**

Returns the start time of the data stream, relative to the Jan 1, 1970.

```
function get_startTimeUTC( )
```

If the UTC time was not set in the datalogger at the time of the recording of this data stream, this method returns 0.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the beginning of this data stream (i.e. Unix time representation of the absolute time).

3.12. Digital IO function interface

The Yoctopuce application programming interface allows you to switch the state of each bit of the I/O port. You can switch all bits at once, or one by one. The library can also automatically generate short pulses of a determined duration. Electrical behavior of each I/O can be modified (open drain and reverse polarity).

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_digitalio.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YDigitalIO = yoctolib.YDigitalIO;</code>
php	<code>require_once('yocto_digitalio.php');</code>
cpp	<code>#include "yocto_digitalio.h"</code>
m	<code>#import "yocto_digitalio.h"</code>
pas	<code>uses yocto_digitalio;</code>
vb	<code>yocto_digitalio.vb</code>
cs	<code>yocto_digitalio.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDigitalIO;</code>
py	<code>from yocto_digitalio import *</code>

Global functions

yFindDigitalIO(func)

Retrieves a digital IO port for a given identifier.

yFirstDigitalIO()

Starts the enumeration of digital IO ports currently accessible.

YDigitalIO methods

digitalio→delayedPulse(bitno, ms_delay, ms_duration)

Schedules a pulse on a single bit for a specified duration.

digitalio→describe()

Returns a short text that describes unambiguously the instance of the digital IO port in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

digitalio→get_advertisedValue()

Returns the current value of the digital IO port (no more than 6 characters).

digitalio→get_bitDirection(bitno)

Returns the direction of a single bit from the I/O port (0 means the bit is an input, 1 an output).

digitalio→get_bitOpenDrain(bitno)

Returns the type of electrical interface of a single bit from the I/O port.

digitalio→get_bitPolarity(bitno)

Returns the polarity of a single bit from the I/O port (0 means the I/O works in regular mode, 1 means the I/O works in reverse mode).

digitalio→get_bitState(bitno)

Returns the state of a single bit of the I/O port.

digitalio→get_errorMessage()

Returns the error message of the latest error with the digital IO port.

digitalio→get_errorType()

Returns the numerical error code of the latest error with the digital IO port.

digitalio→get_friendlyName()

Returns a global identifier of the digital IO port in the format `MODULE_NAME . FUNCTION_NAME`.

digitalio→**get_functionDescriptor()**

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

digitalio→**get_functionId()**

Returns the hardware identifier of the digital IO port, without reference to the module.

digitalio→**get_hardwareId()**

Returns the unique hardware identifier of the digital IO port in the form SERIAL.FUNCTIONID.

digitalio→**get_logicalName()**

Returns the logical name of the digital IO port.

digitalio→**get_module()**

Gets the YModule object for the device on which the function is located.

digitalio→**get_module_async(callback, context)**

Gets the YModule object for the device on which the function is located (asynchronous version).

digitalio→**get_outputVoltage()**

Returns the voltage source used to drive output bits.

digitalio→**get_portDirection()**

Returns the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output.

digitalio→**get_portOpenDrain()**

Returns the electrical interface for each bit of the port.

digitalio→**get_portPolarity()**

Returns the polarity of all the bits of the port.

digitalio→**get_portSize()**

Returns the number of bits implemented in the I/O port.

digitalio→**get_portState()**

Returns the digital IO port state: bit 0 represents input 0, and so on.

digitalio→**get_userData()**

Returns the value of the userData attribute, as previously stored using method set_userData.

digitalio→**isOnline()**

Checks if the digital IO port is currently reachable, without raising any error.

digitalio→**isOnline_async(callback, context)**

Checks if the digital IO port is currently reachable, without raising any error (asynchronous version).

digitalio→**load(msValidity)**

Preloads the digital IO port cache with a specified validity duration.

digitalio→**load_async(msValidity, callback, context)**

Preloads the digital IO port cache with a specified validity duration (asynchronous version).

digitalio→**nextDigitalIO()**

Continues the enumeration of digital IO ports started using yFirstDigitalIO().

digitalio→**pulse(bitno, ms_duration)**

Triggers a pulse on a single bit for a specified duration.

digitalio→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

digitalio→**set_bitDirection(bitno, bitdirection)**

Changes the direction of a single bit from the I/O port.

digitalio→**set_bitOpenDrain(bitno, opendrain)**

Changes the electrical interface of a single bit from the I/O port.

digitalio→**set_bitPolarity(bitno, bitpolarity)**

3. Reference

Changes the polarity of a single bit from the I/O port.

digitalio→**set_bitState**(**bitno**, **bitstate**)

Sets a single bit of the I/O port.

digitalio→**set_logicalName**(**newval**)

Changes the logical name of the digital IO port.

digitalio→**set_outputVoltage**(**newval**)

Changes the voltage source used to drive output bits.

digitalio→**set_portDirection**(**newval**)

Changes the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output.

digitalio→**set_portOpenDrain**(**newval**)

Changes the electrical interface for each bit of the port.

digitalio→**set_portPolarity**(**newval**)

Changes the polarity of all the bits of the port: 0 makes a bit an input, 1 makes it an output.

digitalio→**set_portState**(**newval**)

Changes the digital IO port state: bit 0 represents input 0, and so on.

digitalio→**set_userData**(**data**)

Stores a user context provided as argument in the userData attribute of the function.

digitalio→**toggle_bitState**(**bitno**)

Reverts a single bit of the I/O port.

digitalio→**wait_async**(**callback**, **context**)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YDigitalIO.FindDigitalIO() yFindDigitalIO()yFindDigitalIO()

YDigitalIO

Retrieves a digital IO port for a given identifier.

```
function yFindDigitalIO( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the digital IO port is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDigitalIO.isOnline()` to test if the digital IO port is indeed online at a given time. In case of ambiguity when looking for a digital IO port by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the digital IO port

Returns :

a `YDigitalIO` object allowing you to drive the digital IO port.

YDigitalIO.FirstDigitalIO() yFirstDigitalIO()yFirstDigitalIO()

YDigitalIO

Starts the enumeration of digital IO ports currently accessible.

```
function yFirstDigitalIO( )
```

Use the method `YDigitalIO.nextDigitalIO()` to iterate on next digital IO ports.

Returns :

a pointer to a `YDigitalIO` object, corresponding to the first digital IO port currently online, or a `null` pointer if there are none.

digitalio→delayedPulse()digitalio.delayedPulse()**YDigitalIO**

Schedules a pulse on a single bit for a specified duration.

```
function delayedPulse( bitno, ms_delay, ms_duration)
```

The specified bit will be turned to 1, and then back to 0 after the given duration.

Parameters :

- bitno** the bit number; lowest bit has index 0
- ms_delay** waiting time before the pulse, in milliseconds
- ms_duration** desired pulse duration in milliseconds. Be aware that the device time resolution is not guaranteed up to the millisecond.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**describe()****digitalio.describe()****YDigitalIO**

Returns a short text that describes unambiguously the instance of the digital IO port in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the digital IO port (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

digitalio→**get_advertisedValue()****YDigitalIO****digitalio**→**advertisedValue()****digitalio.get_advertisedValue()**

Returns the current value of the digital IO port (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the digital IO port (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

digitalio→**get_bitDirection()**

YDigitalIO

digitalio→**bitDirection()****digitalio.get_bitDirection()**

Returns the direction of a single bit from the I/O port (0 means the bit is an input, 1 an output).

```
function get_bitDirection( bitno)
```

Parameters :

bitno the bit number; lowest bit has index 0

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**get_bitOpenDrain()**

YDigitalIO

digitalio→**bitOpenDrain()****digitalio.get_bitOpenDrain()**

Returns the type of electrical interface of a single bit from the I/O port.

```
function get_bitOpenDrain( bitno)
```

(0 means the bit is an input, 1 an output).

Parameters :

bitno the bit number; lowest bit has index 0

Returns :

0 means the a bit is a regular input/output, 1 means the bit is an open-drain (open-collector) input/output.

On failure, throws an exception or returns a negative error code.

digitalio→**get_bitPolarity()**

YDigitalIO

digitalio→**bitPolarity()****digitalio.get_bitPolarity()**

Returns the polarity of a single bit from the I/O port (0 means the I/O works in regular mode, 1 means the I/O works in reverse mode).

```
function get_bitPolarity( bitno)
```

Parameters :

bitno the bit number; lowest bit has index 0

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**get_bitState()**

YDigitalIO

digitalio→**bitState()****digitalio.get_bitState()**

Returns the state of a single bit of the I/O port.

```
function get_bitState( bitno)
```

Parameters :

bitno the bit number; lowest bit has index 0

Returns :

the bit state (0 or 1)

On failure, throws an exception or returns a negative error code.

digitalio→**get_errorMessage()**
digitalio→**errorMessage()**
digitalio.get_errorMessage()

YDigitalIO

Returns the error message of the latest error with the digital IO port.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the digital IO port object

digitalio→**get_errorType()****YDigitalIO****digitalio**→**errorType()****digitalio.get_errorType()**

Returns the numerical error code of the latest error with the digital IO port.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the digital IO port object

digitalio→**get_friendlyName()**

YDigitalIO

digitalio→**friendlyName()****digitalio.get_friendlyName()**

Returns a global identifier of the digital IO port in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the digital IO port if they are defined, otherwise the serial number of the module and the hardware identifier of the digital IO port (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the digital IO port using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

digitalio→**get_functionDescriptor()****YDigitalIO****digitalio**→**functionDescriptor()****digitalio.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

digitalio→**get_functionId()**

YDigitalIO

digitalio→**functionId()****digitalio.get_functionId()**

Returns the hardware identifier of the digital IO port, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the digital IO port (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

digitalio→**get_hardwareId()****YDigitalIO****digitalio**→**hardwareId()****digitalio.get_hardwareId()**

Returns the unique hardware identifier of the digital IO port in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the digital IO port. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the digital IO port (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

digitalio→**get_logicalName()**

YDigitalIO

digitalio→**logicalName()****digitalio.get_logicalName()**

Returns the logical name of the digital IO port.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the digital IO port. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

digitalio→**get_module()****YDigitalIO****digitalio**→**module()****digitalio.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

digitalio→**get_module_async()****YDigitalIO****digitalio**→**module_async()****digitalio.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

digitalio→**get_outputVoltage()****YDigitalIO****digitalio**→**outputVoltage()****digitalio.get_outputVoltage()**

Returns the voltage source used to drive output bits.

```
function get_outputVoltage( )
```

Returns :

a value among `Y_OUTPUTVOLTAGE_USB_5V`, `Y_OUTPUTVOLTAGE_USB_3V` and `Y_OUTPUTVOLTAGE_EXT_V` corresponding to the voltage source used to drive output bits

On failure, throws an exception or returns `Y_OUTPUTVOLTAGE_INVALID`.

digitalio→**get_portDirection()**

YDigitalIO

digitalio→**portDirection()****digitalio.get_portDirection()**

Returns the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output.

```
function get_portDirection( )
```

Returns :

an integer corresponding to the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output

On failure, throws an exception or returns `Y_PORTDIRECTION_INVALID`.

digitalio→**get_portOpenDrain()****YDigitalIO****digitalio**→**portOpenDrain()****digitalio.get_portOpenDrain()**

Returns the electrical interface for each bit of the port.

```
function get_portOpenDrain( )
```

For each bit set to 0 the matching I/O works in the regular, intuitive way, for each bit set to 1, the I/O works in reverse mode.

Returns :

an integer corresponding to the electrical interface for each bit of the port

On failure, throws an exception or returns `Y_PORTOPENDRAIN_INVALID`.

digitalio→**get_portPolarity()**

YDigitalIO

digitalio→**portPolarity()****digitalio.get_portPolarity()**

Returns the polarity of all the bits of the port.

```
function get_portPolarity( )
```

For each bit set to 0, the matching I/O works the regular, intuitive way; for each bit set to 1, the I/O works in reverse mode.

Returns :

an integer corresponding to the polarity of all the bits of the port

On failure, throws an exception or returns `Y_PORTPOLARITY_INVALID`.

digitalio→**get_portSize()****YDigitalIO****digitalio**→**portSize()****digitalio.get_portSize()**

Returns the number of bits implemented in the I/O port.

```
function get_portSize( )
```

Returns :

an integer corresponding to the number of bits implemented in the I/O port

On failure, throws an exception or returns `Y_PORTSIZE_INVALID`.

digitalio→**get_portState()**

YDigitalIO

digitalio→**portState()****digitalio.get_portState()**

Returns the digital IO port state: bit 0 represents input 0, and so on.

```
function get_portState( )
```

Returns :

an integer corresponding to the digital IO port state: bit 0 represents input 0, and so on

On failure, throws an exception or returns `Y_PORTSTATE_INVALID`.

digitalio→**get_userData()****YDigitalIO****digitalio**→**userData()****digitalio.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

digitalio→**isOnline()****digitalio.isOnline()**

YDigitalIO

Checks if the digital IO port is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the digital IO port in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the digital IO port.

Returns :

`true` if the digital IO port can be reached, and `false` otherwise

digitalio→**isOnline_async()**(digitalio.isOnline_async())**YDigitalIO**

Checks if the digital IO port is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the digital IO port in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

Preloads the digital IO port cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

digitalio→**load_async()****digitalio.load_async()****YDigitalIO**

Preloads the digital IO port cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

digitalio→**nextDigitalIO()****digitalio.nextDigitalIO()**

YDigitalIO

Continues the enumeration of digital IO ports started using `yFirstDigitalIO()`.

```
function nextDigitalIO( )
```

Returns :

a pointer to a `YDigitalIO` object, corresponding to a digital IO port currently online, or a `null` pointer if there are no more digital IO ports to enumerate.

digitalio→**pulse()****digitalio.pulse()**

YDigitalIO

Triggers a pulse on a single bit for a specified duration.

```
function pulse( bitno, ms_duration)
```

The specified bit will be turned to 1, and then back to 0 after the given duration.

Parameters :

bitno the bit number; lowest bit has index 0

ms_duration desired pulse duration in milliseconds. Be aware that the device time resolution is not guaranteed up to the millisecond.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**registerValueCallback()**
digitalio.registerValueCallback()

YDigitalIO

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

digitalio→**set_bitDirection()**

YDigitalIO

digitalio→**setBitDirection()****digitalio.set_bitDirection()**

Changes the direction of a single bit from the I/O port.

```
function set_bitDirection( bitno, bitdirection )
```

Parameters :

bitno the bit number; lowest bit has index 0

bitdirection direction to set, 0 makes the bit an input, 1 makes it an output. Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_bitOpenDrain()**
digitalio→**setBitOpenDrain()**
digitalio.set_bitOpenDrain()

YDigitalIO

Changes the electrical interface of a single bit from the I/O port.

```
function set_bitOpenDrain( bitno, opendrain)
```

Parameters :

bitno the bit number; lowest bit has index 0

opendrain 0 makes a bit a regular input/output, 1 makes it an open-drain (open-collector) input/output. Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_bitPolarity()**

YDigitalIO

digitalio→**setBitPolarity()****digitalio.set_bitPolarity()**

Changes the polarity of a single bit from the I/O port.

```
function set_bitPolarity( bitno, bitpolarity)
```

Parameters :

bitno the bit number; lowest bit has index 0.

bitpolarity polarity to set, 0 makes the I/O work in regular mode, 1 makes the I/O works in reverse mode. Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_bitState()**

YDigitalIO

digitalio→**setBitState()****digitalio.set_bitState()**

Sets a single bit of the I/O port.

```
function set_bitState( bitno, bitstate)
```

Parameters :

bitno the bit number; lowest bit has index 0

bitstate the state of the bit (1 or 0)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_logicalName()****YDigitalIO****digitalio**→**setLogicalName()****digitalio.set_logicalName()**

Changes the logical name of the digital IO port.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the digital IO port.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

digitalio→**set_outputVoltage()**
digitalio→**setOutputVoltage()**
digitalio.set_outputVoltage()

YDigitalIO

Changes the voltage source used to drive output bits.

```
function set_outputVoltage( newval)
```

Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Parameters :

newval a value among `Y_OUTPUTVOLTAGE_USB_5V`, `Y_OUTPUTVOLTAGE_USB_3V` and `Y_OUTPUTVOLTAGE_EXT_V` corresponding to the voltage source used to drive output bits

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_portDirection()**
digitalio→**setPortDirection()**
digitalio.set_portDirection()

YDigitalIO

Changes the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output.

```
function set_portDirection( newval)
```

Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Parameters :

newval an integer corresponding to the IO direction of all bits of the port: 0 makes a bit an input, 1 makes it an output

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_portOpenDrain()****YDigitalIO****digitalio**→**setPortOpenDrain()****digitalio.set_portOpenDrain()**

Changes the electrical interface for each bit of the port.

```
function set_portOpenDrain( newval)
```

0 makes a bit a regular input/output, 1 makes it an open-drain (open-collector) input/output. Remember to call the `saveToFlash()` method to make sure the setting is kept after a reboot.

Parameters :

newval an integer corresponding to the electrical interface for each bit of the port

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_portPolarity()****YDigitalIO****digitalio**→**setPortPolarity()****digitalio.set_portPolarity()**

Changes the polarity of all the bits of the port: 0 makes a bit an input, 1 makes it an output.

```
function set_portPolarity( newval)
```

Remember to call the `saveToFlash()` method to make sure the setting will be kept after a reboot.

Parameters :

newval an integer corresponding to the polarity of all the bits of the port: 0 makes a bit an input, 1 makes it an output

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_portState()**

YDigitalIO

digitalio→**setPortState()****digitalio.set_portState()**

Changes the digital IO port state: bit 0 represents input 0, and so on.

```
function set_portState( newval)
```

This function has no effect on bits configured as input in `portDirection`.

Parameters :

newval an integer corresponding to the digital IO port state: bit 0 represents input 0, and so on

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**set_userData()**

YDigitalIO

digitalio→**setUserData()****digitalio.set_userData()**

Stores a user context provided as argument in the userData attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

Reverts a single bit of the I/O port.

```
function toggle_bitState( bitno)
```

Parameters :

bitno the bit number; lowest bit has index 0

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

digitalio→**wait_async(digitalio.wait_async())****YDigitalIO**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.13. Display function interface

Yoctopuce display interface has been designed to easily show information and images. The device provides built-in multi-layer rendering. Layers can be drawn offline, individually, and freely moved on the display. It can also replay recorded sequences (animations).

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_display.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YDisplay = yoctolib.YDisplay;
php	require_once('yocto_display.php');
c++	#include "yocto_display.h"
m	#import "yocto_display.h"
pas	uses yocto_display;
vb	yocto_display.vb
cs	yocto_display.cs
java	import com.yoctopuce.YoctoAPI.YDisplay;
py	from yocto_display import *

Global functions

yFindDisplay(func)

Retrieves a display for a given identifier.

yFirstDisplay()

Starts the enumeration of displays currently accessible.

YDisplay methods

display→copyLayerContent(srcLayerId, dstLayerId)

Copies the whole content of a layer to another layer.

display→describe()

Returns a short text that describes unambiguously the instance of the display in the form TYPE (NAME) =SERIAL . FUNCTIONID.

display→fade(brightness, duration)

Smoothly changes the brightness of the screen to produce a fade-in or fade-out effect.

display→get_advertisedValue()

Returns the current value of the display (no more than 6 characters).

display→get_brightness()

Returns the luminosity of the module informative leds (from 0 to 100).

display→get_displayHeight()

Returns the display height, in pixels.

display→get_displayLayer(layerId)

Returns a YDisplayLayer object that can be used to draw on the specified layer.

display→get_displayType()

Returns the display type: monochrome, gray levels or full color.

display→get_displayWidth()

Returns the display width, in pixels.

display→get_enabled()

Returns true if the screen is powered, false otherwise.

display→get_errorMessage()

Returns the error message of the latest error with the display.

display→**getErrorType()**

Returns the numerical error code of the latest error with the display.

display→**getFriendlyName()**

Returns a global identifier of the display in the format `MODULE_NAME . FUNCTION_NAME`.

display→**getFunctionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

display→**getFunctionId()**

Returns the hardware identifier of the display, without reference to the module.

display→**getHardwareId()**

Returns the unique hardware identifier of the display in the form `SERIAL . FUNCTIONID`.

display→**getLayerCount()**

Returns the number of available layers to draw on.

display→**getLayerHeight()**

Returns the height of the layers to draw on, in pixels.

display→**getLayerWidth()**

Returns the width of the layers to draw on, in pixels.

display→**getLogicalName()**

Returns the logical name of the display.

display→**getModule()**

Gets the `YModule` object for the device on which the function is located.

display→**getModule_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

display→**getOrientation()**

Returns the currently selected display orientation.

display→**getStartupSeq()**

Returns the name of the sequence to play when the displayed is powered on.

display→**getUserData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

display→**isOnline()**

Checks if the display is currently reachable, without raising any error.

display→**isOnline_async(callback, context)**

Checks if the display is currently reachable, without raising any error (asynchronous version).

display→**load(msValidity)**

Preloads the display cache with a specified validity duration.

display→**load_async(msValidity, callback, context)**

Preloads the display cache with a specified validity duration (asynchronous version).

display→**newSequence()**

Starts to record all display commands into a sequence, for later replay.

display→**nextDisplay()**

Continues the enumeration of displays started using `yFirstDisplay()`.

display→**pauseSequence(delay_ms)**

Waits for a specified delay (in milliseconds) before playing next commands in current sequence.

display→**playSequence(sequenceName)**

Replays a display sequence previously recorded using `newSequence()` and `saveSequence()`.

display→**registerValueCallback(callback)**

3. Reference

Registers the callback function that is invoked on every change of advertised value.

display→resetAll()

Clears the display screen and resets all display layers to their default state.

display→saveSequence(sequenceName)

Stops recording display commands and saves the sequence into the specified file on the display internal memory.

display→set_brightness(newval)

Changes the brightness of the display.

display→set_enabled(newval)

Changes the power state of the display.

display→set_logicalName(newval)

Changes the logical name of the display.

display→set_orientation(newval)

Changes the display orientation.

display→set_startupSeq(newval)

Changes the name of the sequence to play when the displayed is powered on.

display→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

display→stopSequence()

Stops immediately any ongoing sequence replay.

display→swapLayerContent(layerIdA, layerIdB)

Swaps the whole content of two layers.

display→upload(pathname, content)

Uploads an arbitrary file (for instance a GIF file) to the display, to the specified full path name.

display→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YDisplay.FindDisplay() yFindDisplay()yFindDisplay()

YDisplay

Retrieves a display for a given identifier.

```
function yFindDisplay( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the display is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDisplay.isOnline()` to test if the display is indeed online at a given time. In case of ambiguity when looking for a display by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the display

Returns :

a `YDisplay` object allowing you to drive the display.

YDisplay.FirstDisplay() yFirstDisplay()yFirstDisplay()

YDisplay

Starts the enumeration of displays currently accessible.

```
function yFirstDisplay( )
```

Use the method `YDisplay.nextDisplay()` to iterate on next displays.

Returns :

a pointer to a `YDisplay` object, corresponding to the first display currently online, or a `null` pointer if there are none.

display→**copyLayerContent()**
display.copyLayerContent()

YDisplay

Copies the whole content of a layer to another layer.

```
function copyLayerContent( srcLayerId, dstLayerId)
```

The color and transparency of all the pixels from the destination layer are set to match the source pixels. This method only affects the displayed content, but does not change any property of the layer object. Note that layer 0 has no transparency support (it is always completely opaque).

Parameters :

srcLayerId the identifier of the source layer (a number in range 0..layerCount-1)

dstLayerId the identifier of the destination layer (a number in range 0..layerCount-1)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**describe()**(**display.describe()**)**YDisplay**

Returns a short text that describes unambiguously the instance of the display in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the display (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

display→**fade()****display.fade()****YDisplay**

Smoothly changes the brightness of the screen to produce a fade-in or fade-out effect.

```
function fade( brightness, duration)
```

Parameters :

brightness the new screen brightness

duration duration of the brightness transition, in milliseconds.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**get_advertisedValue()**

YDisplay

display→**advertisedValue()**

display.get_advertisedValue()

Returns the current value of the display (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the display (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

display→**get_brightness()****YDisplay****display**→**brightness()****display.get_brightness()**

Returns the luminosity of the module informative leds (from 0 to 100).

```
function get_brightness( )
```

Returns :

an integer corresponding to the luminosity of the module informative leds (from 0 to 100)

On failure, throws an exception or returns `Y_BRIGHTNESS_INVALID`.

display→**get_displayHeight()**

YDisplay

display→**displayHeight()****display.get_displayHeight()**

Returns the display height, in pixels.

```
function get_displayHeight( )
```

Returns :

an integer corresponding to the display height, in pixels

On failure, throws an exception or returns `Y_DISPLAYHEIGHT_INVALID`.

display→**get_displayLayer()****YDisplay****display**→**displayLayer()****display.get_displayLayer()**

Returns a YDisplayLayer object that can be used to draw on the specified layer.

```
function get_displayLayer( layerId)
```

The content is displayed only when the layer is active on the screen (and not masked by other overlapping layers).

Parameters :

layerId the identifier of the layer (a number in range 0..layerCount-1)

Returns :

an YDisplayLayer object

On failure, throws an exception or returns `null`.

display→**get_displayType()**

YDisplay

display→**displayType()****display.get_displayType()**

Returns the display type: monochrome, gray levels or full color.

```
function get_displayType( )
```

Returns :

a value among `Y_DISPLAYTYPE_MONO`, `Y_DISPLAYTYPE_GRAY` and `Y_DISPLAYTYPE_RGB` corresponding to the display type: monochrome, gray levels or full color

On failure, throws an exception or returns `Y_DISPLAYTYPE_INVALID`.

display→**get_displayWidth()****YDisplay****display**→**displayWidth()****display.get_displayWidth()**

Returns the display width, in pixels.

```
function get_displayWidth( )
```

Returns :

an integer corresponding to the display width, in pixels

On failure, throws an exception or returns `Y_DISPLAYWIDTH_INVALID`.

display→**get_enabled()**

YDisplay

display→**enabled()****display.get_enabled()**

Returns true if the screen is powered, false otherwise.

```
function get_enabled( )
```

Returns :

either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to true if the screen is powered, false otherwise

On failure, throws an exception or returns `Y_ENABLED_INVALID`.

display→**get_errorMessage()****YDisplay****display**→**errorMessage()****display.errorMessage()**

Returns the error message of the latest error with the display.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the display object

display→**get_errorType()**

YDisplay

display→**errorType()****display.get_errorType()**

Returns the numerical error code of the latest error with the display.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the display object

display→**get_friendlyName()****YDisplay****display**→**friendlyName()****display.get_friendlyName()**

Returns a global identifier of the display in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the display if they are defined, otherwise the serial number of the module and the hardware identifier of the display (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the display using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

display→**get_functionDescriptor()**
display→**functionDescriptor()**
display.get_functionDescriptor()

YDisplay

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

display→**get_functionId()****YDisplay****display**→**functionId()****display.get_functionId()**

Returns the hardware identifier of the display, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the display (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

display→**get_hardwareId()**

YDisplay

display→**hardwareId()****display.get_hardwareId()**

Returns the unique hardware identifier of the display in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the display. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the display (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

display→**get_layerCount()****YDisplay****display**→**layerCount()****display.get_layerCount()**

Returns the number of available layers to draw on.

```
function get_layerCount( )
```

Returns :

an integer corresponding to the number of available layers to draw on

On failure, throws an exception or returns `Y_LAYERCOUNT_INVALID`.

display→**get_layerHeight()**

YDisplay

display→**layerHeight()****display.get_layerHeight()**

Returns the height of the layers to draw on, in pixels.

```
function get_layerHeight( )
```

Returns :

an integer corresponding to the height of the layers to draw on, in pixels

On failure, throws an exception or returns `Y_LAYERHEIGHT_INVALID`.

display→**get_layerWidth()****YDisplay****display**→**layerWidth()****display.get_layerWidth()**

Returns the width of the layers to draw on, in pixels.

```
function get_layerWidth( )
```

Returns :

an integer corresponding to the width of the layers to draw on, in pixels

On failure, throws an exception or returns `Y_LAYERWIDTH_INVALID`.

display→**get_logicalName()**

YDisplay

display→**logicalName()****display.get_logicalName()**

Returns the logical name of the display.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the display. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

display→**get_module()****YDisplay****display**→**module()****display.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

display→**get_module_async()****YDisplay****display**→**module_async()****display.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

display→**get_orientation()****YDisplay****display**→**orientation()****display.get_orientation()**

Returns the currently selected display orientation.

```
function get_orientation( )
```

Returns :

a value among `Y_ORIENTATION_LEFT`, `Y_ORIENTATION_UP`, `Y_ORIENTATION_RIGHT` and `Y_ORIENTATION_DOWN` corresponding to the currently selected display orientation

On failure, throws an exception or returns `Y_ORIENTATION_INVALID`.

display→**get_startupSeq()**

YDisplay

display→**startupSeq()****display.get_startupSeq()**

Returns the name of the sequence to play when the displayed is powered on.

```
function get_startupSeq( )
```

Returns :

a string corresponding to the name of the sequence to play when the displayed is powered on

On failure, throws an exception or returns `Y_STARTUPSEQ_INVALID`.

display→**get_userData()****YDisplay****display**→**userData()****display.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

display→isOnline()display.isOnline()

YDisplay

Checks if the display is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the display in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the display.

Returns :

`true` if the display can be reached, and `false` otherwise

display→**isOnline_async()****display.isOnline_async()****YDisplay**

Checks if the display is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the display in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

display→**load()****display.load()****YDisplay**

Preloads the display cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

display→**load_async()****display.load_async()****YDisplay**

Preloads the display cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

display→newSequence()display.newSequence()

YDisplay

Starts to record all display commands into a sequence, for later replay.

```
function newSequence( )
```

The name used to store the sequence is specified when calling `saveSequence()`, once the recording is complete.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**nextDisplay()****display.nextDisplay()****YDisplay**

Continues the enumeration of displays started using `yFirstDisplay()`.

```
function nextDisplay( )
```

Returns :

a pointer to a `YDisplay` object, corresponding to a display currently online, or a `null` pointer if there are no more displays to enumerate.

display→pauseSequence()display.pauseSequence()**YDisplay**

Waits for a specified delay (in milliseconds) before playing next commands in current sequence.

```
function pauseSequence( delay_ms)
```

This method can be used while recording a display sequence, to insert a timed wait in the sequence (without any immediate effect). It can also be used dynamically while playing a pre-recorded sequence, to suspend or resume the execution of the sequence. To cancel a delay, call the same method with a zero delay.

Parameters :

delay_ms the duration to wait, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**playSequence()****display.playSequence()****YDisplay**

Replays a display sequence previously recorded using `newSequence()` and `saveSequence()`.

```
function playSequence( sequenceName)
```

Parameters :

sequenceName the name of the newly created sequence

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**registerValueCallback()**
display.registerValueCallback()

YDisplay

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

display→**resetAll()****display.resetAll()****YDisplay**

Clears the display screen and resets all display layers to their default state.

```
function resetAll( )
```

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→saveSequence()display.saveSequence()

YDisplay

Stops recording display commands and saves the sequence into the specified file on the display internal memory.

```
function saveSequence( sequenceName)
```

The sequence can be later replayed using `playSequence ()`.

Parameters :

sequenceName the name of the newly created sequence

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**set_brightness()****YDisplay****display**→**setBrightness()****display.set_brightness()**

Changes the brightness of the display.

```
function set_brightness( newval)
```

The parameter is a value between 0 and 100. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the brightness of the display

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**set_enabled()**

YDisplay

display→**setEnabled()****display.set_enabled()**

Changes the power state of the display.

```
function set_enabled( newval)
```

Parameters :

newval either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to the power state of the display

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**set_logicalName()****YDisplay****display**→**setLogicalName()****display.set_logicalName()**

Changes the logical name of the display.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the display.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

display→**set_orientation()**

YDisplay

display→**setOrientation()****display.set_orientation()**

Changes the display orientation.

```
function set_orientation( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a value among `Y_ORIENTATION_LEFT`, `Y_ORIENTATION_UP`, `Y_ORIENTATION_RIGHT` and `Y_ORIENTATION_DOWN` corresponding to the display orientation

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**set_startupSeq()****YDisplay****display**→**setStartupSeq()****display.set_startupSeq()**

Changes the name of the sequence to play when the displayed is powered on.

```
function set_startupSeq( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the name of the sequence to play when the displayed is powered on

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**set_userData()**

YDisplay

display→**setUserData()****display.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

display→**stopSequence()****display.stopSequence()****YDisplay**

Stops immediately any ongoing sequence replay.

```
function stopSequence( )
```

The display is left as is.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**swapLayerContent()**
display.swapLayerContent()

YDisplay

Swaps the whole content of two layers.

```
function swapLayerContent( layerIdA, layerIdB)
```

The color and transparency of all the pixels from the two layers are swapped. This method only affects the displayed content, but does not change any property of the layer objects. In particular, the visibility of each layer stays unchanged. When used between one hidden layer and a visible layer, this method makes it possible to easily implement double-buffering. Note that layer 0 has no transparency support (it is always completely opaque).

Parameters :

layerIdA the first layer (a number in range 0..layerCount-1)

layerIdB the second layer (a number in range 0..layerCount-1)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→**upload()****display.upload()****YDisplay**

Uploads an arbitrary file (for instance a GIF file) to the display, to the specified full path name.

```
function upload( pathname, content)
```

If a file already exists with the same path name, its content is overwritten.

Parameters :

pathname path and name of the new file to create

content binary buffer with the content to set

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

display→wait_async()display.wait_async()

YDisplay

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.14. DisplayLayer object interface

A DisplayLayer is an image layer containing objects to display (bitmaps, text, etc.). The content is displayed only when the layer is active on the screen (and not masked by other overlapping layers).

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_display.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YDisplay = yoctolib.YDisplay;
php	require_once('yocto_display.php');
cpp	#include "yocto_display.h"
m	#import "yocto_display.h"
pas	uses yocto_display;
vb	yocto_display.vb
cs	yocto_display.cs
java	import com.yoctopuce.YoctoAPI.YDisplay;
py	from yocto_display import *

YDisplayLayer methods

displaylayer→clear()

Erases the whole content of the layer (makes it fully transparent).

displaylayer→clearConsole()

Blanks the console area within console margins, and resets the console pointer to the upper left corner of the console.

displaylayer→consoleOut(text)

Outputs a message in the console area, and advances the console pointer accordingly.

displaylayer→drawBar(x1, y1, x2, y2)

Draws a filled rectangular bar at a specified position.

displaylayer→drawBitmap(x, y, w, bitmap, bgcolor)

Draws a bitmap at the specified position.

displaylayer→drawCircle(x, y, r)

Draws an empty circle at a specified position.

displaylayer→drawDisc(x, y, r)

Draws a filled disc at a given position.

displaylayer→drawImage(x, y, imagename)

Draws a GIF image at the specified position.

displaylayer→drawPixel(x, y)

Draws a single pixel at the specified position.

displaylayer→drawRect(x1, y1, x2, y2)

Draws an empty rectangle at a specified position.

displaylayer→drawText(x, y, anchor, text)

Draws a text string at the specified position.

displaylayer→get_display()

Gets parent YDisplay.

displaylayer→get_displayHeight()

Returns the display height, in pixels.

displaylayer→get_displayWidth()

Returns the display width, in pixels.

displaylayer→**get_layerHeight()**

Returns the height of the layers to draw on, in pixels.

displaylayer→**get_layerWidth()**

Returns the width of the layers to draw on, in pixels.

displaylayer→**hide()**

Hides the layer.

displaylayer→**lineTo(x, y)**

Draws a line from current drawing pointer position to the specified position.

displaylayer→**moveTo(x, y)**

Moves the drawing pointer of this layer to the specified position.

displaylayer→**reset()**

Reverts the layer to its initial state (fully transparent, default settings).

displaylayer→**selectColorPen(color)**

Selects the pen color for all subsequent drawing functions, including text drawing.

displaylayer→**selectEraser()**

Selects an eraser instead of a pen for all subsequent drawing functions, except for text drawing and bitmap copy functions.

displaylayer→**selectFont(fontname)**

Selects a font to use for the next text drawing functions, by providing the name of the font file.

displaylayer→**selectGrayPen(graylevel)**

Selects the pen gray level for all subsequent drawing functions, including text drawing.

displaylayer→**setAntialiasingMode(mode)**

Enables or disables anti-aliasing for drawing oblique lines and circles.

displaylayer→**setConsoleBackground(bgcol)**

Sets up the background color used by the `clearConsole` function and by the console scrolling feature.

displaylayer→**setConsoleMargins(x1, y1, x2, y2)**

Sets up display margins for the `consoleOut` function.

displaylayer→**setConsoleWordWrap(wordwrap)**

Sets up the wrapping behaviour used by the `consoleOut` function.

displaylayer→**setLayerPosition(x, y, scrollTime)**

Sets the position of the layer relative to the display upper left corner.

displaylayer→**unhide()**

Shows the layer.

displaylayer→**clear()****displaylayer.clear()****YDisplayLayer**

Erases the whole content of the layer (makes it fully transparent).

```
function clear( )
```

This method does not change any other attribute of the layer. To reinitialize the layer attributes to defaults settings, use the method `reset()` instead.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→clearConsole()
displaylayer.clearConsole()

YDisplayLayer

Blanks the console area within console margins, and resets the console pointer to the upper left corner of the console.

```
function clearConsole( )
```

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**consoleOut()****displaylayer.consoleOut()****YDisplayLayer**

Outputs a message in the console area, and advances the console pointer accordingly.

```
function consoleOut( text)
```

The console pointer position is automatically moved to the beginning of the next line when a newline character is met, or when the right margin is hit. When the new text to display extends below the lower margin, the console area is automatically scrolled up.

Parameters :

text the message to display

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawBar()****displaylayer.drawBar()****YDisplayLayer**

Draws a filled rectangular bar at a specified position.

```
function drawBar( x1, y1, x2, y2)
```

Parameters :

- x1** the distance from left of layer to the left border of the rectangle, in pixels
- y1** the distance from top of layer to the top border of the rectangle, in pixels
- x2** the distance from left of layer to the right border of the rectangle, in pixels
- y2** the distance from top of layer to the bottom border of the rectangle, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

**displaylayer→drawBitmap()
displaylayer.drawBitmap()****YDisplayLayer**

Draws a bitmap at the specified position.

```
function drawBitmap( x, y, w, bitmap, bgcol)
```

The bitmap is provided as a binary object, where each pixel maps to a bit, from left to right and from top to bottom. The most significant bit of each byte maps to the leftmost pixel, and the least significant bit maps to the rightmost pixel. Bits set to 1 are drawn using the layer selected pen color. Bits set to 0 are drawn using the specified background gray level, unless -1 is specified, in which case they are not drawn at all (as if transparent).

Parameters :

- x** the distance from left of layer to the left of the bitmap, in pixels
- y** the distance from top of layer to the top of the bitmap, in pixels
- w** the width of the bitmap, in pixels
- bitmap** a binary object
- bgcol** the background gray level to use for zero bits (0 = black, 255 = white), or -1 to leave the pixels unchanged

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawCircle()****displaylayer.drawCircle()**

YDisplayLayer

Draws an empty circle at a specified position.

```
function drawCircle( x, y, r)
```

Parameters :

- x** the distance from left of layer to the center of the circle, in pixels
- y** the distance from top of layer to the center of the circle, in pixels
- r** the radius of the circle, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawDisc()****displaylayer.drawDisc()**

YDisplayLayer

Draws a filled disc at a given position.

```
function drawDisc( x, y, r)
```

Parameters :

- x** the distance from left of layer to the center of the disc, in pixels
- y** the distance from top of layer to the center of the disc, in pixels
- r** the radius of the disc, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawImage()****displaylayer.drawImage()****YDisplayLayer**

Draws a GIF image at the specified position.

```
function drawImage( x, y, imagename)
```

The GIF image must have been previously uploaded to the device built-in memory. If you experience problems using an image file, check the device logs for any error message such as missing image file or bad image file format.

Parameters :

- x** the distance from left of layer to the left of the image, in pixels
- y** the distance from top of layer to the top of the image, in pixels
- imagename** the GIF file name

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawPixel()****displaylayer.drawPixel()****YDisplayLayer**

Draws a single pixel at the specified position.

```
function drawPixel( x, y)
```

Parameters :

- x** the distance from left of layer, in pixels
- y** the distance from top of layer, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawRect()****displaylayer.drawRect()****YDisplayLayer**

Draws an empty rectangle at a specified position.

```
function drawRect( x1, y1, x2, y2)
```

Parameters :

- x1** the distance from left of layer to the left border of the rectangle, in pixels
- y1** the distance from top of layer to the top border of the rectangle, in pixels
- x2** the distance from left of layer to the right border of the rectangle, in pixels
- y2** the distance from top of layer to the bottom border of the rectangle, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**drawText()**(displaylayer.drawText())**YDisplayLayer**

Draws a text string at the specified position.

```
function drawText( x, y, anchor, text)
```

The point of the text that is aligned to the specified pixel position is called the anchor point, and can be chosen among several options. Text is rendered from left to right, without implicit wrapping.

Parameters :

- x** the distance from left of layer to the text anchor point, in pixels
- y** the distance from top of layer to the text anchor point, in pixels
- anchor** the text anchor point, chosen among the Y_ALIGN enumeration: Y_ALIGN_TOP_LEFT, Y_ALIGN_CENTER_LEFT, Y_ALIGN_BASELINE_LEFT, Y_ALIGN_BOTTOM_LEFT, Y_ALIGN_TOP_CENTER, Y_ALIGN_CENTER, Y_ALIGN_BASELINE_CENTER, Y_ALIGN_BOTTOM_CENTER, Y_ALIGN_TOP_DECIMAL, Y_ALIGN_CENTER_DECIMAL, Y_ALIGN_BASELINE_DECIMAL, Y_ALIGN_BOTTOM_DECIMAL, Y_ALIGN_TOP_RIGHT, Y_ALIGN_CENTER_RIGHT, Y_ALIGN_BASELINE_RIGHT, Y_ALIGN_BOTTOM_RIGHT.
- text** the text string to draw

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**get_display()**

YDisplayLayer

displaylayer→**display()****displaylayer.get_display()**

Gets parent YDisplay.

```
function get_display( )
```

Returns the parent YDisplay object of the current YDisplayLayer.

Returns :

an YDisplay object

displaylayer→**get_displayHeight()****YDisplayLayer****displaylayer**→**displayHeight()****displaylayer.get_displayHeight()**

Returns the display height, in pixels.

```
function get_displayHeight( )
```

Returns :

an integer corresponding to the display height, in pixels On failure, throws an exception or returns Y_DISPLAYHEIGHT_INVALID.

displaylayer→get_displayWidth()

YDisplayLayer

displaylayer→displayWidth()

displaylayer.get_displayWidth()

Returns the display width, in pixels.

```
function get_displayWidth( )
```

Returns :

an integer corresponding to the display width, in pixels On failure, throws an exception or returns Y_DISPLAYWIDTH_INVALID.

displaylayer→**get_layerHeight()**
displaylayer→**layerHeight()**
displaylayer.get_layerHeight()

YDisplayLayer

Returns the height of the layers to draw on, in pixels.

```
function get_layerHeight( )
```

Returns :

an integer corresponding to the height of the layers to draw on, in pixels

On failure, throws an exception or returns `Y_LAYERHEIGHT_INVALID`.

displaylayer→**get_layerWidth()**

YDisplayLayer

displaylayer→**layerWidth()**

displaylayer.get_layerWidth()

Returns the width of the layers to draw on, in pixels.

```
function get_layerWidth( )
```

Returns :

an integer corresponding to the width of the layers to draw on, in pixels

On failure, throws an exception or returns Y_LAYERWIDTH_INVALID.

displaylayer→hide()displaylayer.hide()

YDisplayLayer

Hides the layer.

```
function hide( )
```

The state of the layer is preserved but the layer is not displayed on the screen until the next call to `unhide()`. Hiding the layer can positively affect the drawing speed, since it postpones the rendering until all operations are completed (double-buffering).

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**lineTo()****displaylayer.lineTo()****YDisplayLayer**

Draws a line from current drawing pointer position to the specified position.

```
function lineTo( x, y )
```

The specified destination pixel is included in the line. The pointer position is then moved to the end point of the line.

Parameters :

- x** the distance from left of layer to the end point of the line, in pixels
- y** the distance from top of layer to the end point of the line, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→moveTo()`displaylayer.moveTo()`**YDisplayLayer**

Moves the drawing pointer of this layer to the specified position.

```
function moveTo( x, y)
```

Parameters :

- x** the distance from left of layer, in pixels
- y** the distance from top of layer, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

`displaylayer`→`reset()``displaylayer.reset()`

YDisplayLayer

Reverts the layer to its initial state (fully transparent, default settings).

```
function reset( )
```

Reinitializes the drawing pointer to the upper left position, and selects the most visible pen color. If you only want to erase the layer content, use the method `clear()` instead.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**selectColorPen()**
displaylayer.selectColorPen()

YDisplayLayer

Selects the pen color for all subsequent drawing functions, including text drawing.

```
function selectColorPen( color)
```

The pen color is provided as an RGB value. For grayscale or monochrome displays, the value is automatically converted to the proper range.

Parameters :

color the desired pen color, as a 24-bit RGB value

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**selectEraser()**
displaylayer.selectEraser()

YDisplayLayer

Selects an eraser instead of a pen for all subsequent drawing functions, except for text drawing and bitmap copy functions.

```
function selectEraser( )
```

Any point drawn using the eraser becomes transparent (as when the layer is empty), showing the other layers beneath it.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**selectFont()****displaylayer.selectFont()****YDisplayLayer**

Selects a font to use for the next text drawing functions, by providing the name of the font file.

```
function selectFont( fontname)
```

You can use a built-in font as well as a font file that you have previously uploaded to the device built-in memory. If you experience problems selecting a font file, check the device logs for any error message such as missing font file or bad font file format.

Parameters :

fontname the font file name

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

**displaylayer→selectGrayPen()
displaylayer.selectGrayPen()**

YDisplayLayer

Selects the pen gray level for all subsequent drawing functions, including text drawing.

```
function selectGrayPen( graylevel)
```

The gray level is provided as a number between 0 (black) and 255 (white, or whichever the lightest color is). For monochrome displays (without gray levels), any value lower than 128 is rendered as black, and any value equal or above to 128 is non-black.

Parameters :

graylevel the desired gray level, from 0 to 255

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**setAntialiasingMode()**
displaylayer.setAntialiasingMode()

YDisplayLayer

Enables or disables anti-aliasing for drawing oblique lines and circles.

```
function setAntialiasingMode( mode)
```

Anti-aliasing provides a smoother aspect when looked from far enough, but it can add fuzzyness when the display is looked from very close. At the end of the day, it is your personal choice. Anti-aliasing is enabled by default on grayscale and color displays, but you can disable it if you prefer. This setting has no effect on monochrome displays.

Parameters :

mode true to enable antialiasing, false to disable it.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

**displaylayer→setConsoleBackground()
displaylayer.setConsoleBackground()**

YDisplayLayer

Sets up the background color used by the `clearConsole` function and by the console scrolling feature.

```
function setConsoleBackground( bgcolor)
```

Parameters :

bgcolor the background gray level to use when scrolling (0 = black, 255 = white), or -1 for transparent

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**setConsoleMargins()**
displaylayer.setConsoleMargins()

YDisplayLayer

Sets up display margins for the `consoleOut` function.

```
function setConsoleMargins( x1, y1, x2, y2)
```

Parameters :

- x1** the distance from left of layer to the left margin, in pixels
- y1** the distance from top of layer to the top margin, in pixels
- x2** the distance from left of layer to the right margin, in pixels
- y2** the distance from top of layer to the bottom margin, in pixels

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**setConsoleWordWrap()**
displaylayer.setConsoleWordWrap()

YDisplayLayer

Sets up the wrapping behaviour used by the `consoleOut` function.

```
function setConsoleWordWrap( wordwrap)
```

Parameters :

wordwrap `true` to wrap only between words, `false` to wrap on the last column anyway.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**setLayerPosition()**
displaylayer.setLayerPosition()

YDisplayLayer

Sets the position of the layer relative to the display upper left corner.

```
function setLayerPosition( x, y, scrollTime)
```

When smooth scrolling is used, the display offset of the layer is automatically updated during the next milliseconds to animate the move of the layer.

Parameters :

- x** the distance from left of display to the upper left corner of the layer
- y** the distance from top of display to the upper left corner of the layer
- scrollTime** number of milliseconds to use for smooth scrolling, or 0 if the scrolling should be immediate.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

displaylayer→**unhide()****displaylayer.unhide()**

YDisplayLayer

Shows the layer.

```
function unhide( )
```

Shows the layer again after a hide command.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

3.15. External power supply control interface

Yoctopuce application programming interface allows you to control the power source to use for module functions that require high current. The module can also automatically disconnect the external power when a voltage drop is observed on the external power source (external battery running out of power).

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_dualpower.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YDualPower = yoctolib.YDualPower;</code>
php	<code>require_once('yocto_dualpower.php');</code>
cpp	<code>#include "yocto_dualpower.h"</code>
m	<code>#import "yocto_dualpower.h"</code>
pas	<code>uses yocto_dualpower;</code>
vb	<code>yocto_dualpower.vb</code>
cs	<code>yocto_dualpower.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDualPower;</code>
py	<code>from yocto_dualpower import *</code>

Global functions

yFindDualPower(func)

Retrieves a dual power control for a given identifier.

yFirstDualPower()

Starts the enumeration of dual power controls currently accessible.

YDualPower methods

dualpower→describe()

Returns a short text that describes unambiguously the instance of the power control in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

dualpower→get_advertisedValue()

Returns the current value of the power control (no more than 6 characters).

dualpower→get_errorMessage()

Returns the error message of the latest error with the power control.

dualpower→get_errorType()

Returns the numerical error code of the latest error with the power control.

dualpower→get_extVoltage()

Returns the measured voltage on the external power source, in millivolts.

dualpower→get_friendlyName()

Returns a global identifier of the power control in the format `MODULE_NAME . FUNCTION_NAME`.

dualpower→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

dualpower→get_functionId()

Returns the hardware identifier of the power control, without reference to the module.

dualpower→get_hardwareId()

Returns the unique hardware identifier of the power control in the form `SERIAL . FUNCTIONID`.

dualpower→get_logicalName()

Returns the logical name of the power control.

dualpower→get_module()

3. Reference

Gets the `YModule` object for the device on which the function is located.

dualpower→**get_module_async**(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

dualpower→**get_powerControl**()

Returns the selected power source for module functions that require lots of current.

dualpower→**get_powerState**()

Returns the current power source for module functions that require lots of current.

dualpower→**get_userData**()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

dualpower→**isOnline**()

Checks if the power control is currently reachable, without raising any error.

dualpower→**isOnline_async**(callback, context)

Checks if the power control is currently reachable, without raising any error (asynchronous version).

dualpower→**load**(msValidity)

Preloads the power control cache with a specified validity duration.

dualpower→**load_async**(msValidity, callback, context)

Preloads the power control cache with a specified validity duration (asynchronous version).

dualpower→**nextDualPower**()

Continues the enumeration of dual power controls started using `yFirstDualPower()`.

dualpower→**registerValueCallback**(callback)

Registers the callback function that is invoked on every change of advertised value.

dualpower→**set_logicalName**(newval)

Changes the logical name of the power control.

dualpower→**set_powerControl**(newval)

Changes the selected power source for module functions that require lots of current.

dualpower→**set_userData**(data)

Stores a user context provided as argument in the `userData` attribute of the function.

dualpower→**wait_async**(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YDualPower.FindDualPower() yFindDualPower()yFindDualPower()

YDualPower

Retrieves a dual power control for a given identifier.

```
function yFindDualPower( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the power control is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDualPower.isOnline()` to test if the power control is indeed online at a given time. In case of ambiguity when looking for a dual power control by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the power control

Returns :

a `YDualPower` object allowing you to drive the power control.

YDualPower.FirstDualPower() yFirstDualPower()yFirstDualPower()

YDualPower

Starts the enumeration of dual power controls currently accessible.

```
function yFirstDualPower( )
```

Use the method `YDualPower.nextDualPower()` to iterate on next dual power controls.

Returns :

a pointer to a `YDualPower` object, corresponding to the first dual power control currently online, or a `null` pointer if there are none.

dualpower→describe()**dualpower.describe()****YDualPower**

Returns a short text that describes unambiguously the instance of the power control in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the power control (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

dualpower→**get_advertisedValue()**

YDualPower

dualpower→**advertisedValue()**

dualpower.get_advertisedValue()

Returns the current value of the power control (no more than 6 characters).

```
function get_advertisedValue()
```

Returns :

a string corresponding to the current value of the power control (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

dualpower→**get_errorMessage()****YDualPower****dualpower**→**errorMessage()****dualpower.get_errorMessage()**

Returns the error message of the latest error with the power control.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the power control object

dualpower→**get_errorType()**

YDualPower

dualpower→**errorType()****dualpower.get_errorType()**

Returns the numerical error code of the latest error with the power control.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the power control object

dualpower→**get_extVoltage()****YDualPower****dualpower**→**extVoltage()****dualpower.get_extVoltage()**

Returns the measured voltage on the external power source, in millivolts.

```
function get_extVoltage( )
```

Returns :

an integer corresponding to the measured voltage on the external power source, in millivolts

On failure, throws an exception or returns `Y_EXTVOLTAGE_INVALID`.

dualpower→**get_friendlyName()**
dualpower→**friendlyName()**
dualpower.get_friendlyName()

YDualPower

Returns a global identifier of the power control in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the power control if they are defined, otherwise the serial number of the module and the hardware identifier of the power control (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the power control using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

dualpower→**get_functionDescriptor()**
dualpower→**functionDescriptor()**
dualpower.get_functionDescriptor()

YDualPower

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**()

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

dualpower→**get_functionId()**

YDualPower

dualpower→**functionId()****dualpower.get_functionId()**

Returns the hardware identifier of the power control, without reference to the module.

function **get_functionId()**

For example `relay1`

Returns :

a string that identifies the power control (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

dualpower→**get_hardwareId()****YDualPower****dualpower**→**hardwareId()****dualpower.get_hardwareId()**

Returns the unique hardware identifier of the power control in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the power control. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the power control (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

dualpower→get_logicalName()

YDualPower

dualpower→logicalName()

dualpower.get_logicalName()

Returns the logical name of the power control.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the power control. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

dualpower→**get_module()****YDualPower****dualpower**→**module()****dualpower.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

dualpower→**get_module_async()****YDualPower****dualpower**→**module_async()****dualpower.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

dualpower→**get_powerControl()****YDualPower****dualpower**→**powerControl()****dualpower.get_powerControl()**

Returns the selected power source for module functions that require lots of current.

```
function get_powerControl( )
```

Returns :

a value among `Y_POWERCONTROL_AUTO`, `Y_POWERCONTROL_FROM_USB`, `Y_POWERCONTROL_FROM_EXT` and `Y_POWERCONTROL_OFF` corresponding to the selected power source for module functions that require lots of current

On failure, throws an exception or returns `Y_POWERCONTROL_INVALID`.

dualpower→**get_powerState()**

YDualPower

dualpower→**powerState()**

dualpower.get_powerState()

Returns the current power source for module functions that require lots of current.

```
function get_powerState( )
```

Returns :

a value among `Y_POWERSTATE_OFF`, `Y_POWERSTATE_FROM_USB` and `Y_POWERSTATE_FROM_EXT` corresponding to the current power source for module functions that require lots of current

On failure, throws an exception or returns `Y_POWERSTATE_INVALID`.

dualpower→**get_userData()****YDualPower****dualpower**→**userData()****dualpower.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

dualpower→**isOnline()****dualpower.isOnline()**

YDualPower

Checks if the power control is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the power control in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the power control.

Returns :

`true` if the power control can be reached, and `false` otherwise

dualpower→**isOnline_async()**
dualpower.isOnline_async()

YDualPower

Checks if the power control is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the power control in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

dualpower→**load()****dualpower.load()****YDualPower**

Preloads the power control cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

dualpower→**load_async()****dualpower.load_async()****YDualPower**

Preloads the power control cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

dualpower→**nextDualPower()**
dualpower.nextDualPower()

YDualPower

Continues the enumeration of dual power controls started using `yFirstDualPower()`.

```
function nextDualPower( )
```

Returns :

a pointer to a `YDualPower` object, corresponding to a dual power control currently online, or a `null` pointer if there are no more dual power controls to enumerate.

dualpower→**registerValueCallback()**
dualpower.registerValueCallback()

YDualPower

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

dualpower→**set_logicalName()**

YDualPower

dualpower→**setLogicalName()**

dualpower.set_logicalName()

Changes the logical name of the power control.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the power control.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

dualpower→**set_powerControl()****YDualPower****dualpower**→**setPowerControl()****dualpower.set_powerControl()**

Changes the selected power source for module functions that require lots of current.

```
function set_powerControl( newval)
```

Parameters :

newval a value among `Y_POWERCONTROL_AUTO`, `Y_POWERCONTROL_FROM_USB`, `Y_POWERCONTROL_FROM_EXT` and `Y_POWERCONTROL_OFF` corresponding to the selected power source for module functions that require lots of current

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

dualpower→**set_userData()**

YDualPower

dualpower→**setUserData()****dualpower.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

dualpower→**wait_async()****dualpower.wait_async()****YDualPower**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.16. Files function interface

The filesystem interface makes it possible to store files on some devices, for instance to design a custom web UI (for networked devices) or to add fonts (on display devices).

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_files.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YFiles = yoctolib.YFiles;
php	require_once('yocto_files.php');
c++	#include "yocto_files.h"
m	#import "yocto_files.h"
pas	uses yocto_files;
vb	yocto_files.vb
cs	yocto_files.cs
java	import com.yoctopuce.YoctoAPI.YFiles;
py	from yocto_files import *

Global functions

yFindFiles(func)

Retrieves a filesystem for a given identifier.

yFirstFiles()

Starts the enumeration of filesystems currently accessible.

YFiles methods

files→describe()

Returns a short text that describes unambiguously the instance of the filesystem in the form TYPE (NAME) =SERIAL . FUNCTIONID.

files→download(pathname)

Downloads the requested file and returns a binary buffer with its content.

files→download_async(pathname, callback, context)

Downloads the requested file and returns a binary buffer with its content.

files→format_fs()

Reinitializes the filesystem to its clean, unfragmented, empty state.

files→get_advertisedValue()

Returns the current value of the filesystem (no more than 6 characters).

files→get_errorMessage()

Returns the error message of the latest error with the filesystem.

files→get_errorType()

Returns the numerical error code of the latest error with the filesystem.

files→get_filesCount()

Returns the number of files currently loaded in the filesystem.

files→get_freeSpace()

Returns the free space for uploading new files to the filesystem, in bytes.

files→get_friendlyName()

Returns a global identifier of the filesystem in the format MODULE_NAME . FUNCTION_NAME.

files→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

files→get_functionId()

Returns the hardware identifier of the filesystem, without reference to the module.

files→**get_hardwareId()**

Returns the unique hardware identifier of the filesystem in the form SERIAL.FUNCTIONID.

files→**get_list(pattern)**

Returns a list of YFileRecord objects that describe files currently loaded in the filesystem.

files→**get_logicalName()**

Returns the logical name of the filesystem.

files→**get_module()**

Gets the YModule object for the device on which the function is located.

files→**get_module_async(callback, context)**

Gets the YModule object for the device on which the function is located (asynchronous version).

files→**get_userData()**

Returns the value of the userData attribute, as previously stored using method set_userData.

files→**isOnline()**

Checks if the filesystem is currently reachable, without raising any error.

files→**isOnline_async(callback, context)**

Checks if the filesystem is currently reachable, without raising any error (asynchronous version).

files→**load(msValidity)**

Preloads the filesystem cache with a specified validity duration.

files→**load_async(msValidity, callback, context)**

Preloads the filesystem cache with a specified validity duration (asynchronous version).

files→**nextFiles()**

Continues the enumeration of filesystems started using yFirstFiles().

files→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

files→**remove(pathname)**

Deletes a file, given by its full path name, from the filesystem.

files→**set_logicalName(newval)**

Changes the logical name of the filesystem.

files→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

files→**upload(pathname, content)**

Uploads a file to the filesystem, to the specified full path name.

files→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YFiles.FindFiles() yFindFiles()yFindFiles()

YFiles

Retrieves a filesystem for a given identifier.

```
function yFindFiles( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the filesystem is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YFiles.isOnline()` to test if the filesystem is indeed online at a given time. In case of ambiguity when looking for a filesystem by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the filesystem

Returns :

a `YFiles` object allowing you to drive the filesystem.

YFiles.FirstFiles()
yFirstFiles()yFirstFiles()

YFiles

Starts the enumeration of filesystems currently accessible.

```
function yFirstFiles( )
```

Use the method `YFiles.nextFiles()` to iterate on next filesystems.

Returns :

a pointer to a `YFiles` object, corresponding to the first filesystem currently online, or a `null` pointer if there are none.

files→**describe()****files.describe()****YFiles**

Returns a short text that describes unambiguously the instance of the filesystem in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the filesystem (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

files→**download()****files.download()****YFiles**

Downloads the requested file and returns a binary buffer with its content.

```
function download( pathname)
```

Parameters :

pathname path and name of the file to download

Returns :

a binary buffer with the file content

On failure, throws an exception or returns an empty content.

files→**download_async(files.download_async())****YFiles**

Downloads the requested file and returns a binary buffer with its content.

```
function download_async( pathname, callback, context)
```

This is the asynchronous version that uses a callback to pass the result when the download is completed.

Parameters :

pathname path and name of the new file to load

callback callback function that is invoked when the w The callback function receives three arguments: - the user-specific context object - the YFiles object whose download_async was invoked - a binary buffer with the file content

context user-specific object that is passed as-is to the callback function

Returns :

nothing.

files→**format_fs()****files.format_fs()****YFiles**

Reinitializes the filesystem to its clean, unfragmented, empty state.

```
function format_fs( )
```

All files previously uploaded are permanently lost.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

files→**get_advertisedValue()**

YFiles

files→**advertisedValue()****files.get_advertisedValue()**

Returns the current value of the filesystem (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the filesystem (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

files→**get_errorMessage()****YFiles****files**→**errorMessage()****files.get_errorMessage()**

Returns the error message of the latest error with the filesystem.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the filesystem object

files→**get_errorType()**

YFiles

files→**errorType()****files.get_errorType()**

Returns the numerical error code of the latest error with the filesystem.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the filesystem object

files→**get_filesCount()****YFiles****files**→**filesCount()****files.get_filesCount()**

Returns the number of files currently loaded in the filesystem.

```
function get_filesCount( )
```

Returns :

an integer corresponding to the number of files currently loaded in the filesystem

On failure, throws an exception or returns `Y_FILESCOUNT_INVALID`.

files→**get_freeSpace()**

YFiles

files→**freeSpace()****files.get_freeSpace()**

Returns the free space for uploading new files to the filesystem, in bytes.

```
function get_freeSpace( )
```

Returns :

an integer corresponding to the free space for uploading new files to the filesystem, in bytes

On failure, throws an exception or returns `Y_FREESPACE_INVALID`.

files→**get_friendlyName()****YFiles****files**→**friendlyName()****files.get_friendlyName()**

Returns a global identifier of the filesystem in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the filesystem if they are defined, otherwise the serial number of the module and the hardware identifier of the filesystem (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the filesystem using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

files→**get_functionDescriptor()**
files→**functionDescriptor()**
files.get_functionDescriptor()

YFiles

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

files→`get_functionId()`

YFiles

files→`functionId()``files.get_functionId()`

Returns the hardware identifier of the filesystem, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the filesystem (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

files→**get_hardwareId()**

YFiles

files→**hardwareId()****files.get_hardwareId()**

Returns the unique hardware identifier of the filesystem in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the filesystem. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the filesystem (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

files→`get_list()`**YFiles****files**→`list()``files.get_list()`

Returns a list of `YFileRecord` objects that describe files currently loaded in the filesystem.

```
function get_list( pattern)
```

Parameters :

pattern an optional filter pattern, using star and question marks as wildcards. When an empty pattern is provided, all file records are returned.

Returns :

a list of `YFileRecord` objects, containing the file path and name, byte size and 32-bit CRC of the file content.

On failure, throws an exception or returns an empty list.

files→**get_logicalName()**

YFiles

files→**logicalName()****files.get_logicalName()**

Returns the logical name of the filesystem.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the filesystem. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

files→**get_module()****YFiles****files**→**module()****files.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

files→**get_module_async()****YFiles****files**→**module_async()****files.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

files→**get_userData()****YFiles****files**→**userData()****files.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

files→isOnline()files.isOnline()

YFiles

Checks if the filesystem is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the filesystem in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the filesystem.

Returns :

`true` if the filesystem can be reached, and `false` otherwise

files→**isOnline_async()****files.isOnline_async()****YFiles**

Checks if the filesystem is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the filesystem in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

files→**load()****files.load()****YFiles**

Preloads the filesystem cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

files→**load_async()****files.load_async()****YFiles**

Preloads the filesystem cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

files→**nextFiles()****files.nextFiles()**

YFiles

Continues the enumeration of filesystems started using `yFirstFiles()`.

```
function nextFiles( )
```

Returns :

a pointer to a `YFiles` object, corresponding to a filesystem currently online, or a `null` pointer if there are no more filesystems to enumerate.

files→registerValueCallback()
files.registerValueCallback()

YFiles

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

files→remove()files.remove()**YFiles**

Deletes a file, given by its full path name, from the filesystem.

```
function remove( pathname)
```

Because of filesystem fragmentation, deleting a file may not always free up the whole space used by the file. However, rewriting a file with the same path name will always reuse any space not freed previously. If you need to ensure that no space is taken by previously deleted files, you can use `format_fs` to fully reinitialize the filesystem.

Parameters :

pathname path and name of the file to remove.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

files→**set_logicalName()****YFiles****files**→**setLogicalName()****files.set_logicalName()**

Changes the logical name of the filesystem.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the filesystem.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

files→**set_userData()**

YFiles

files→**setUserData()****files.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

files→**upload()****files.upload()**

YFiles

Uploads a file to the filesystem, to the specified full path name.

```
function upload( pathname, content)
```

If a file already exists with the same path name, its content is overwritten.

Parameters :

pathname path and name of the new file to create

content binary buffer with the content to set

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

files→**wait_async()****files.wait_async()****YFiles**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.17. GenericSensor function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_genericsensor.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YGenericSensor = yoctolib.YGenericSensor;
php	require_once('yocto_genericsensor.php');
c++	#include "yocto_genericsensor.h"
m	#import "yocto_genericsensor.h"
pas	uses yocto_genericsensor;
vb	yocto_genericsensor.vb
cs	yocto_genericsensor.cs
java	import com.yoctopuce.YoctoAPI.YGenericSensor;
py	from yocto_genericsensor import *

Global functions

yFindGenericSensor(func)

Retrieves a generic sensor for a given identifier.

yFirstGenericSensor()

Starts the enumeration of generic sensors currently accessible.

YGenericSensor methods

genericsensor→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

genericsensor→describe()

Returns a short text that describes unambiguously the instance of the generic sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

genericsensor→get_advertisedValue()

Returns the current value of the generic sensor (no more than 6 characters).

genericsensor→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

genericsensor→get_currentValue()

Returns the current measured value.

genericsensor→get_errorMessage()

Returns the error message of the latest error with the generic sensor.

genericsensor→get_errorType()

Returns the numerical error code of the latest error with the generic sensor.

genericsensor→get_friendlyName()

Returns a global identifier of the generic sensor in the format `MODULE_NAME . FUNCTION_NAME`.

genericsensor→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

genericsensor→get_functionId()

Returns the hardware identifier of the generic sensor, without reference to the module.

genericsensor→get_hardwareId()

Returns the unique hardware identifier of the generic sensor in the form `SERIAL . FUNCTIONID`.

genericsensor→**get_highestValue()**

Returns the maximal value observed for the measure since the device was started.

genericsensor→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

genericsensor→**get_logicalName()**

Returns the logical name of the generic sensor.

genericsensor→**get_lowestValue()**

Returns the minimal value observed for the measure since the device was started.

genericsensor→**get_module()**

Gets the YModule object for the device on which the function is located.

genericsensor→**get_module_async(callback, context)**

Gets the YModule object for the device on which the function is located (asynchronous version).

genericsensor→**get_recordedData(startTime, endTime)**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

genericsensor→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

genericsensor→**get_resolution()**

Returns the resolution of the measured values.

genericsensor→**get_signalRange()**

Returns the electric signal range used by the sensor.

genericsensor→**get_signalUnit()**

Returns the measuring unit of the electrical signal used by the sensor.

genericsensor→**get_signalValue()**

Returns the measured value of the electrical signal used by the sensor.

genericsensor→**get_unit()**

Returns the measuring unit for the measure.

genericsensor→**get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

genericsensor→**get_valueRange()**

Returns the physical value range measured by the sensor.

genericsensor→**isOnline()**

Checks if the generic sensor is currently reachable, without raising any error.

genericsensor→**isOnline_async(callback, context)**

Checks if the generic sensor is currently reachable, without raising any error (asynchronous version).

genericsensor→**load(msValidity)**

Preloads the generic sensor cache with a specified validity duration.

genericsensor→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

genericsensor→**load_async(msValidity, callback, context)**

Preloads the generic sensor cache with a specified validity duration (asynchronous version).

genericsensor→**nextGenericSensor()**

Continues the enumeration of generic sensors started using `yFirstGenericSensor()`.

genericsensor→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

genericsensor→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

genericsensor→**set_highestValue(newval)**

Changes the recorded maximal value observed.

genericsensor→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

genericsensor→**set_logicalName(newval)**

Changes the logical name of the generic sensor.

genericsensor→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

genericsensor→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

genericsensor→**set_resolution(newval)**

Changes the resolution of the measured physical values.

genericsensor→**set_signalRange(newval)**

Changes the electric signal range used by the sensor.

genericsensor→**set_unit(newval)**

Changes the measuring unit for the measured value.

genericsensor→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

genericsensor→**set_valueRange(newval)**

Changes the physical value range measured by the sensor.

genericsensor→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YGenericSensor.FindGenericSensor() yFindGenericSensor()yFindGenericSensor()

YGenericSensor

Retrieves a generic sensor for a given identifier.

```
function yFindGenericSensor( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the generic sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YGenericSensor.isOnline()` to test if the generic sensor is indeed online at a given time. In case of ambiguity when looking for a generic sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the generic sensor

Returns :

a `YGenericSensor` object allowing you to drive the generic sensor.

**YGenericSensor.FirstGenericSensor()
yFirstGenericSensor()yFirstGenericSensor()**

YGenericSensor

Starts the enumeration of generic sensors currently accessible.

```
function yFirstGenericSensor( )
```

Use the method `YGenericSensor.nextGenericSensor()` to iterate on next generic sensors.

Returns :

a pointer to a `YGenericSensor` object, corresponding to the first generic sensor currently online, or a `null` pointer if there are none.

genericsensor→**calibrateFromPoints()**
genericsensor.calibrateFromPoints()**YGenericSensor**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues )
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**describe()****genericsensor.describe()****YGenericSensor**

Returns a short text that describes unambiguously the instance of the generic sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the generic sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

genericsensor→**get_advertisedValue()**

YGenericSensor

genericsensor→**advertisedValue()**

genericsensor.get_advertisedValue()

Returns the current value of the generic sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the generic sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

genericsensor→**get_currentRawValue()****YGenericSensor****genericsensor**→**currentRawValue()****genericsensor.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

genericsensor→**get_currentValue()**
genericsensor→**currentValue()**
genericsensor.get_currentValue()

YGenericSensor

Returns the current measured value.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

genericsensor→get_errorMessage()
genericsensor→errorMessage()
genericsensor.get_errorMessage()

YGenericSensor

Returns the error message of the latest error with the generic sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the generic sensor object

genericsensor→**get_errorType()**
genericsensor→**errorType()**
genericsensor.get_errorType()

YGenericSensor

Returns the numerical error code of the latest error with the generic sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the generic sensor object

genericsensor→**get_friendlyName()****YGenericSensor****genericsensor**→**friendlyName()****genericsensor.get_friendlyName()**

Returns a global identifier of the generic sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the generic sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the generic sensor (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the generic sensor using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

genericsensor→**get_functionDescriptor()**
genericsensor→**functionDescriptor()**
genericsensor.get_functionDescriptor()

YGenericSensor

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

genericsensor→**get_functionId()****YGenericSensor****genericsensor**→**functionId()****genericsensor.get_functionId()**

Returns the hardware identifier of the generic sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the generic sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

genericsensor→**get_hardwareId()**
genericsensor→**hardwareId()**
genericsensor.get_hardwareId()

YGenericSensor

Returns the unique hardware identifier of the generic sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the generic sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the generic sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

genericsensor→**get_highestValue()****YGenericSensor****genericsensor**→**highestValue()****genericsensor.get_highestValue()**

Returns the maximal value observed for the measure since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the measure since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

genericsensor→**get_logFrequency()**

YGenericSensor

genericsensor→**logFrequency()**

genericsensor.get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

genericsensor→**get_logicalName()****YGenericSensor****genericsensor**→**logicalName()****genericsensor.get_logicalName()**

Returns the logical name of the generic sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the generic sensor. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

genericsensor→**get_lowestValue()**
genericsensor→**lowestValue()**
genericsensor.get_lowestValue()

YGenericSensor

Returns the minimal value observed for the measure since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the measure since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

genericsensor→get_module()
genericsensor→module()
genericsensor.get_module()

YGenericSensor

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

genericsensor→**get_module_async()**
genericsensor→**module_async()**
genericsensor.get_module_async()

YGenericSensor

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

genericsensor→**get_recordedData()****YGenericSensor****genericsensor**→**recordedData()****genericsensor.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

genericsensor→get_reportFrequency()

YGenericSensor

genericsensor→reportFrequency()

genericsensor.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

genericsensor→**get_resolution()**
genericsensor→**resolution()**
genericsensor.get_resolution()

YGenericSensor

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

genericsensor→get_signalRange()

YGenericSensor

genericsensor→signalRange()

genericsensor.get_signalRange()

Returns the electric signal range used by the sensor.

```
function get_signalRange( )
```

Returns :

a string corresponding to the electric signal range used by the sensor

On failure, throws an exception or returns Y_SIGNALRANGE_INVALID.

genericsensor→**get_signalUnit()****YGenericSensor****genericsensor**→**signalUnit()****genericsensor.get_signalUnit()**

Returns the measuring unit of the electrical signal used by the sensor.

```
function get_signalUnit( )
```

Returns :

a string corresponding to the measuring unit of the electrical signal used by the sensor

On failure, throws an exception or returns `Y_SIGNALUNIT_INVALID`.

genericsensor→**get_signalValue()**
genericsensor→**signalValue()**
genericsensor.get_signalValue()

YGenericSensor

Returns the measured value of the electrical signal used by the sensor.

```
function get_signalValue( )
```

Returns :

a floating point number corresponding to the measured value of the electrical signal used by the sensor

On failure, throws an exception or returns Y_SIGNALVALUE_INVALID.

genericsensor→**get_unit()****YGenericSensor****genericsensor**→**unit()****genericsensor.get_unit()**

Returns the measuring unit for the measure.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the measure

On failure, throws an exception or returns `Y_UNIT_INVALID`.

genericsensor→**get_userData()**
genericsensor→**userData()**
genericsensor.get_userData()

YGenericSensor

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

genericsensor→get_valueRange()**YGenericSensor****genericsensor→valueRange()****genericsensor.get_valueRange()**

Returns the physical value range measured by the sensor.

```
function get_valueRange( )
```

Returns :

a string corresponding to the physical value range measured by the sensor

On failure, throws an exception or returns Y_VALUERANGE_INVALID.

genericsensor→**isOnline()****genericsensor.isOnline()**

YGenericSensor

Checks if the generic sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the generic sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the generic sensor.

Returns :

`true` if the generic sensor can be reached, and `false` otherwise

genericsensor→**isOnline_async()**
genericsensor.isOnline_async()

YGenericSensor

Checks if the generic sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the generic sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

genericsensor→**load()****genericsensor.load()****YGenericSensor**

Preloads the generic sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

genericsensor→**loadCalibrationPoints()**
genericsensor.loadCalibrationPoints()**YGenericSensor**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**load_async()**
genericsensor.load_async()**YGenericSensor**

Preloads the generic sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

genericsensor→**nextGenericSensor()**
genericsensor.nextGenericSensor()

YGenericSensor

Continues the enumeration of generic sensors started using `yFirstGenericSensor()`.

```
function nextGenericSensor( )
```

Returns :

a pointer to a `YGenericSensor` object, corresponding to a generic sensor currently online, or a null pointer if there are no more generic sensors to enumerate.

genericsensor→**registerTimedReportCallback()**
genericsensor.registerTimedReportCallback()

YGenericSensor

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

genericsensor→**registerValueCallback()**
genericsensor.registerValueCallback()

YGenericSensor

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

genericsensor→**set_highestValue()**
genericsensor→**setHighestValue()**
genericsensor.set_highestValue()

YGenericSensor

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_logFrequency()****YGenericSensor****genericsensor**→**setLogFrequency()****genericsensor.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_logicalName()**

YGenericSensor

genericsensor→**setLogicalName()**

genericsensor.set_logicalName()

Changes the logical name of the generic sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the generic sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

genericsensor→**set_lowestValue()**
genericsensor→**setLowestValue()**
genericsensor.set_lowestValue()

YGenericSensor

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_reportFrequency()**
genericsensor→**setReportFrequency()**
genericsensor.set_reportFrequency()

YGenericSensor

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_resolution()**
genericsensor→**setResolution()**
genericsensor.set_resolution()

YGenericSensor

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_signalRange()**

YGenericSensor

genericsensor→**setSignalRange()**

genericsensor.set_signalRange()

Changes the electric signal range used by the sensor.

```
function set_signalRange( newval)
```

Parameters :

newval a string corresponding to the electric signal range used by the sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_unit()****YGenericSensor****genericsensor**→**setUnit()****genericsensor.set_unit()**

Changes the measuring unit for the measured value.

```
function set_unit( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the measuring unit for the measured value

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**set_userData()**
genericsensor→**setUserData()**
genericsensor.set_userData()

YGenericSensor

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

genericsensor→set_valueRange()
genericsensor→setValueRange()
genericsensor.set_valueRange()

YGenericSensor

Changes the physical value range measured by the sensor.

```
function set_valueRange( newval)
```

The range change may have a side effect on the display resolution, as it may be adapted automatically.

Parameters :

newval a string corresponding to the physical value range measured by the sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

genericsensor→**wait_async()**
genericsensor.wait_async()

YGenericSensor

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.18. Gyroscope function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_gyro.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YGyro = yoctolib.YGyro;
php	require_once('yocto_gyro.php');
c++	#include "yocto_gyro.h"
m	#import "yocto_gyro.h"
pas	uses yocto_gyro;
vb	yocto_gyro.vb
cs	yocto_gyro.cs
java	import com.yoctopuce.YoctoAPI.YGyro;
py	from yocto_gyro import *

Global functions

yFindGyro(func)

Retrieves a gyroscope for a given identifier.

yFirstGyro()

Starts the enumeration of gyroscopes currently accessible.

YGyro methods

gyro→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

gyro→describe()

Returns a short text that describes unambiguously the instance of the gyroscope in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

gyro→get_advertisedValue()

Returns the current value of the gyroscope (no more than 6 characters).

gyro→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

gyro→get_currentValue()

Returns the current value of the angular velocity.

gyro→get_errorMessage()

Returns the error message of the latest error with the gyroscope.

gyro→get_errorType()

Returns the numerical error code of the latest error with the gyroscope.

gyro→get_friendlyName()

Returns a global identifier of the gyroscope in the format `MODULE_NAME . FUNCTION_NAME`.

gyro→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

gyro→get_functionId()

Returns the hardware identifier of the gyroscope, without reference to the module.

gyro→get_hardwareId()

Returns the unique hardware identifier of the gyroscope in the form `SERIAL . FUNCTIONID`.

gyro→get_heading()

Returns the estimated heading angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_highestValue()

Returns the maximal value observed for the angular velocity since the device was started.

gyro→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

gyro→get_logicalName()

Returns the logical name of the gyroscope.

gyro→get_lowestValue()

Returns the minimal value observed for the angular velocity since the device was started.

gyro→get_module()

Gets the YModule object for the device on which the function is located.

gyro→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

gyro→get_pitch()

Returns the estimated pitch angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_quaternionW()

Returns the w component (real part) of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_quaternionX()

Returns the x component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_quaternionY()

Returns the y component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_quaternionZ()

Returns the z component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_recordedData(startTime, endTime)

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

gyro→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

gyro→get_resolution()

Returns the resolution of the measured values.

gyro→get_roll()

Returns the estimated roll angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

gyro→get_unit()

Returns the measuring unit for the angular velocity.

gyro→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

gyro→get_xValue()

Returns the angular velocity around the X axis of the device, as a floating point number.

gyro→get_yValue()

Returns the angular velocity around the Y axis of the device, as a floating point number.

gyro→get_zValue()

Returns the angular velocity around the Z axis of the device, as a floating point number.

gyro→isOnline()

Checks if the gyroscope is currently reachable, without raising any error.

gyro→isOnline_async(callback, context)

Checks if the gyroscope is currently reachable, without raising any error (asynchronous version).

gyro→load(msValidity)

Preloads the gyroscope cache with a specified validity duration.

gyro→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

gyro→load_async(msValidity, callback, context)

Preloads the gyroscope cache with a specified validity duration (asynchronous version).

gyro→nextGyro()

Continues the enumeration of gyroscopes started using `yFirstGyro()`.

gyro→registerAnglesCallback(callback)

Registers a callback function that will be invoked each time that the estimated device orientation has changed.

gyro→registerQuaternionCallback(callback)

Registers a callback function that will be invoked each time that the estimated device orientation has changed.

gyro→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

gyro→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

gyro→set_highestValue(newval)

Changes the recorded maximal value observed.

gyro→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

gyro→set_logicalName(newval)

Changes the logical name of the gyroscope.

gyro→set_lowestValue(newval)

Changes the recorded minimal value observed.

gyro→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

gyro→set_resolution(newval)

Changes the resolution of the measured physical values.

gyro→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

gyro→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YGyro.FindGyro() yFindGyro()yFindGyro()

YGyro

Retrieves a gyroscope for a given identifier.

```
function yFindGyro( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the gyroscope is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YGyro.isOnline()` to test if the gyroscope is indeed online at a given time. In case of ambiguity when looking for a gyroscope by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the gyroscope

Returns :

a `YGyro` object allowing you to drive the gyroscope.

**YGyro.FirstGyro()
yFirstGyro()yFirstGyro()**

YGyro

Starts the enumeration of gyroscopes currently accessible.

```
function yFirstGyro( )
```

Use the method `YGyro.nextGyro()` to iterate on next gyroscopes.

Returns :

a pointer to a `YGyro` object, corresponding to the first gyro currently online, or a `null` pointer if there are none.

gyro→calibrateFromPoints()
gyro.calibrateFromPoints()**YGyro**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→describe()**gyro.describe()****YGyro**

Returns a short text that describes unambiguously the instance of the gyroscope in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the gyroscope (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

gyro→**get_advertisedValue()**

YGyro

gyro→**advertisedValue()****gyro.get_advertisedValue()**

Returns the current value of the gyroscope (no more than 6 characters).

```
function get_advertisedValue()
```

Returns :

a string corresponding to the current value of the gyroscope (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

gyro→**get_currentRawValue()****YGyro****gyro**→**currentRawValue()****gyro.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

gyro→**get_currentValue()**

YGyro

gyro→**currentValue()****gyro.get_currentValue()**

Returns the current value of the angular velocity.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the angular velocity

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

gyro→**get_errorMessage()****YGyro****gyro**→**errorMessage()****gyro.get_errorMessage()**

Returns the error message of the latest error with the gyroscope.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the gyroscope object

gyro→**get_errorType()**

YGyro

gyro→**errorType()****gyro.get_errorType()**

Returns the numerical error code of the latest error with the gyroscope.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the gyroscope object

gyro→**get_friendlyName()****YGyro****gyro**→**friendlyName()****gyro.get_friendlyName()**

Returns a global identifier of the gyroscope in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the gyroscope if they are defined, otherwise the serial number of the module and the hardware identifier of the gyroscope (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the gyroscope using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

gyro→**get_functionDescriptor()**
gyro→**functionDescriptor()**
gyro.get_functionDescriptor()

YGyro

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

gyro→**get_functionId()****YGyro****gyro**→**functionId()****gyro.get_functionId()**

Returns the hardware identifier of the gyroscope, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the gyroscope (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

gyro→**get_hardwareId()**

YGyro

gyro→**hardwareId()****gyro.get_hardwareId()**

Returns the unique hardware identifier of the gyroscope in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the gyroscope. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the gyroscope (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

gyro→**get_heading()****YGyro****gyro**→**heading()****gyro.get_heading()**

Returns the estimated heading angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_heading( )
```

The axis corresponding to the heading can be mapped to any of the device X, Y or Z physical directions using methods of the class `YRefFrame`.

Returns :

a floating-point number corresponding to heading in degrees, between 0 and 360.

gyro→**get_highestValue()**

YGyro

gyro→**highestValue()****gyro.get_highestValue()**

Returns the maximal value observed for the angular velocity since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the angular velocity since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

gyro→**get_logFrequency()****YGyro****gyro**→**logFrequency()****gyro.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

gyro→**get_logicalName()**

YGyro

gyro→**logicalName()****gyro.get_logicalName()**

Returns the logical name of the gyroscope.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the gyroscope. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

gyro→**get_lowestValue()****YGyro****gyro**→**lowestValue()****gyro.get_lowestValue()**

Returns the minimal value observed for the angular velocity since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the angular velocity since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

gyro→**get_module()**

YGyro

gyro→**module()****gyro.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

gyro→**get_module_async()****YGyro****gyro**→**module_async()****gyro.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

gyro→**get_pitch()**

YGyro

gyro→**pitch()****gyro.get_pitch()**

Returns the estimated pitch angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_pitch( )
```

The axis corresponding to the pitch angle can be mapped to any of the device X, Y or Z physical directions using methods of the class `YRefFrame`.

Returns :

a floating-point number corresponding to pitch angle in degrees, between -90 and +90.

gyro→**get_quaternionW()****YGyro****gyro**→**quaternionW()****gyro.get_quaternionW()**

Returns the w component (real part) of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_quaternionW( )
```

Returns :

a floating-point number corresponding to the w component of the quaternion.

gyro→**get_quaternionX()**

YGyro

gyro→**quaternionX()****gyro.get_quaternionX()**

Returns the x component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_quaternionX( )
```

The x component is mostly correlated with rotations on the roll axis.

Returns :

a floating-point number corresponding to the x component of the quaternion.

gyro→**get_quaternionY()****YGyro****gyro**→**quaternionY()****gyro.get_quaternionY()**

Returns the y component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_quaternionY( )
```

The y component is mostly correlated with rotations on the pitch axis.

Returns :

a floating-point number corresponding to the y component of the quaternion.

gyro→**get_quaternionZ()**

YGyro

gyro→**quaternionZ()****gyro.get_quaternionZ()**

Returns the x component of the quaternion describing the device estimated orientation, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_quaternionZ( )
```

The x component is mostly correlated with changes of heading.

Returns :

a floating-point number corresponding to the z component of the quaternion.

gyro→**get_recordedData()****YGyro****gyro**→**recordedData()****gyro.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

gyro→**get_reportFrequency()**

YGyro

gyro→**reportFrequency()****gyro.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

gyro→**get_resolution()****YGyro****gyro**→**resolution()****gyro.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

gyro→**get_roll()**

YGyro

gyro→**roll()****gyro.get_roll()**

Returns the estimated roll angle, based on the integration of gyroscopic measures combined with acceleration and magnetic field measurements.

```
function get_roll( )
```

The axis corresponding to the roll angle can be mapped to any of the device X, Y or Z physical directions using methods of the class `YRefFrame`.

Returns :

a floating-point number corresponding to roll angle in degrees, between -180 and +180.

gyro→**get_unit()****YGyro****gyro**→**unit()****gyro.get_unit()**

Returns the measuring unit for the angular velocity.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the angular velocity

On failure, throws an exception or returns `Y_UNIT_INVALID`.

gyro→**get_userData()**

YGyro

gyro→**userData()****gyro.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

gyro→**get_xValue()****YGyro****gyro**→**xValue()****gyro.get_xValue()**

Returns the angular velocity around the X axis of the device, as a floating point number.

```
function get_xValue( )
```

Returns :

a floating point number corresponding to the angular velocity around the X axis of the device, as a floating point number

On failure, throws an exception or returns `Y_XVALUE_INVALID`.

gyro→**get_yValue()**

YGyro

gyro→**yValue()****gyro.get_yValue()**

Returns the angular velocity around the Y axis of the device, as a floating point number.

```
function get_yValue( )
```

Returns :

a floating point number corresponding to the angular velocity around the Y axis of the device, as a floating point number

On failure, throws an exception or returns `Y_YVALUE_INVALID`.

gyro→**get_zValue()****YGyro****gyro**→**zValue()****gyro.get_zValue()**

Returns the angular velocity around the Z axis of the device, as a floating point number.

```
function get_zValue( )
```

Returns :

a floating point number corresponding to the angular velocity around the Z axis of the device, as a floating point number

On failure, throws an exception or returns `Y_ZVALUE_INVALID`.

gyro→**isOnline()****gyro.isOnline()**

YGyro

Checks if the gyroscope is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the gyroscope in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the gyroscope.

Returns :

`true` if the gyroscope can be reached, and `false` otherwise

gyro→isOnline_async()gyro.isOnline_async()**YGyro**

Checks if the gyroscope is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the gyroscope in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

gyro→**load()****gyro.load()****YGyro**

Preloads the gyroscope cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

gyro→loadCalibrationPoints()
gyro.loadCalibrationPoints()

YGyro

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→**load_async()****gyro.load_async()****YGyro**

Preloads the gyroscope cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

gyro→**nextGyro()****gyro.nextGyro()****YGyro**

Continues the enumeration of gyroscopes started using `yFirstGyro()`.

```
function nextGyro( )
```

Returns :

a pointer to a `YGyro` object, corresponding to a gyroscope currently online, or a `null` pointer if there are no more gyroscopes to enumerate.

gyro→registerAnglesCallback()
gyro.registerAnglesCallback()

YGyro

Registers a callback function that will be invoked each time that the estimated device orientation has changed.

```
function registerAnglesCallback( callback)
```

The call frequency is typically around 95Hz during a move. The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to invoke, or a null pointer. The callback function should take four arguments: the YGyro object of the turning device, and the floating point values of the three angles roll, pitch and heading in degrees (as floating-point numbers).

gyro→registerQuaternionCallback()
gyro.registerQuaternionCallback()

YGyro

Registers a callback function that will be invoked each time that the estimated device orientation has changed.

```
function registerQuaternionCallback( callback)
```

The call frequency is typically around 95Hz during a move. The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to invoke, or a null pointer. The callback function should take five arguments: the YGyro object of the turning device, and the floating point values of the four components w, x, y and z (as floating-point numbers).

gyro→**registerTimedReportCallback()**
gyro.registerTimedReportCallback()**YGyro**

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

gyro→registerValueCallback()
gyro.registerValueCallback()

YGyro

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

gyro→**set_highestValue()**

YGyro

gyro→**setHighestValue()****gyro.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→set_logFrequency()**YGyro****gyro→setLogFrequency()gyro.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→**set_logicalName()**

YGyro

gyro→**setLogicalName()****gyro.set_logicalName()**

Changes the logical name of the gyroscope.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the gyroscope.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

gyro→**set_lowestValue()****YGyro****gyro**→**setLowestValue()****gyro.set_lowestValue()**

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→set_reportFrequency()
gyro→setReportFrequency()
gyro.set_reportFrequency()

YGyro

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→**set_resolution()****YGyro****gyro**→**setResolution()****gyro.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

gyro→**set_userData()**

YGyro

gyro→**setUserData()****gyro.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

gyro→**wait_async()****gyro.wait_async()****YGyro**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.19. Yocto-hub port interface

YHubPort objects provide control over the power supply for every YoctoHub port and provide information about the device connected to it. The logical name of a YHubPort is always automatically set to the unique serial number of the Yoctopuce device connected to it.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_hubport.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YHubPort = yoctolib.YHubPort;
php	require_once('yocto_hubport.php');
c++	#include "yocto_hubport.h"
m	#import "yocto_hubport.h"
pas	uses yocto_hubport;
vb	yocto_hubport.vb
cs	yocto_hubport.cs
java	import com.yoctopuce.YoctoAPI.YHubPort;
py	from yocto_hubport import *

Global functions

yFindHubPort(func)

Retrieves a Yocto-hub port for a given identifier.

yFirstHubPort()

Starts the enumeration of Yocto-hub ports currently accessible.

YHubPort methods

hubport→describe()

Returns a short text that describes unambiguously the instance of the Yocto-hub port in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

hubport→get_advertisedValue()

Returns the current value of the Yocto-hub port (no more than 6 characters).

hubport→get_baudRate()

Returns the current baud rate used by this Yocto-hub port, in kbps.

hubport→get_enabled()

Returns true if the Yocto-hub port is powered, false otherwise.

hubport→get_errorMessage()

Returns the error message of the latest error with the Yocto-hub port.

hubport→get_errorType()

Returns the numerical error code of the latest error with the Yocto-hub port.

hubport→get_friendlyName()

Returns a global identifier of the Yocto-hub port in the format `MODULE_NAME . FUNCTION_NAME`.

hubport→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

hubport→get_functionId()

Returns the hardware identifier of the Yocto-hub port, without reference to the module.

hubport→get_hardwareId()

Returns the unique hardware identifier of the Yocto-hub port in the form `SERIAL . FUNCTIONID`.

hubport→get_logicalName()

Returns the logical name of the Yocto-hub port.

hubport→**get_module()**

Gets the `YModule` object for the device on which the function is located.

hubport→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

hubport→**get_portState()**

Returns the current state of the Yocto-hub port.

hubport→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

hubport→**isOnline()**

Checks if the Yocto-hub port is currently reachable, without raising any error.

hubport→**isOnline_async(callback, context)**

Checks if the Yocto-hub port is currently reachable, without raising any error (asynchronous version).

hubport→**load(msValidity)**

Preloads the Yocto-hub port cache with a specified validity duration.

hubport→**load_async(msValidity, callback, context)**

Preloads the Yocto-hub port cache with a specified validity duration (asynchronous version).

hubport→**nextHubPort()**

Continues the enumeration of Yocto-hub ports started using `yFirstHubPort()`.

hubport→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

hubport→**set_enabled(newval)**

Changes the activation of the Yocto-hub port.

hubport→**set_logicalName(newval)**

Changes the logical name of the Yocto-hub port.

hubport→**set_userData(data)**

Stores a user context provided as argument in the `userData` attribute of the function.

hubport→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YHubPort.FindHubPort() **yFindHubPort()**

YHubPort

Retrieves a Yocto-hub port for a given identifier.

```
function yFindHubPort( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the Yocto-hub port is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YHubPort.isOnline()` to test if the Yocto-hub port is indeed online at a given time. In case of ambiguity when looking for a Yocto-hub port by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the Yocto-hub port

Returns :

a `YHubPort` object allowing you to drive the Yocto-hub port.

**YHubPort.FirstHubPort()
yFirstHubPort()yFirstHubPort()**

YHubPort

Starts the enumeration of Yocto-hub ports currently accessible.

```
function yFirstHubPort( )
```

Use the method `YHubPort.nextHubPort()` to iterate on next Yocto-hub ports.

Returns :

a pointer to a `YHubPort` object, corresponding to the first Yocto-hub port currently online, or a `null` pointer if there are none.

hubport→**describe()****hubport.describe()****YHubPort**

Returns a short text that describes unambiguously the instance of the Yocto-hub port in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the Yocto-hub port (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

hubport→**get_advertisedValue()****YHubPort****hubport**→**advertisedValue()****hubport.get_advertisedValue()**

Returns the current value of the Yocto-hub port (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the Yocto-hub port (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

hubport→**get_baudRate()**

YHubPort

hubport→**baudRate()****hubport.get_baudRate()**

Returns the current baud rate used by this Yocto-hub port, in kbps.

```
function get_baudRate( )
```

The default value is 1000 kbps, but a slower rate may be used if communication problems are encountered.

Returns :

an integer corresponding to the current baud rate used by this Yocto-hub port, in kbps

On failure, throws an exception or returns `Y_BAUDRATE_INVALID`.

hubport→**get_enabled()****YHubPort****hubport**→**enabled()****hubport.get_enabled()**

Returns true if the Yocto-hub port is powered, false otherwise.

```
function get_enabled( )
```

Returns :

either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to true if the Yocto-hub port is powered, false otherwise

On failure, throws an exception or returns `Y_ENABLED_INVALID`.

hubport→**get_errorMessage()**

YHubPort

hubport→**errorMessage()****hubport.get_errorMessage()**

Returns the error message of the latest error with the Yocto-hub port.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the Yocto-hub port object

hubport→**get_errorType()****YHubPort****hubport**→**errorType()****hubport.get_errorType()**

Returns the numerical error code of the latest error with the Yocto-hub port.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the Yocto-hub port object

hubport→**get_friendlyName()**

YHubPort

hubport→**friendlyName()****hubport.get_friendlyName()**

Returns a global identifier of the Yocto-hub port in the format `MODULE_NAME.FUNCTION_NAME`.

function **get_friendlyName()**

The returned string uses the logical names of the module and of the Yocto-hub port if they are defined, otherwise the serial number of the module and the hardware identifier of the Yocto-hub port (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the Yocto-hub port using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

hubport→**get_functionDescriptor()****YHubPort****hubport**→**functionDescriptor()****hubport.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

hubport→**get_functionId()**

YHubPort

hubport→**functionId()****hubport.get_functionId()**

Returns the hardware identifier of the Yocto-hub port, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the Yocto-hub port (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

hubport→**get_hardwareId()****YHubPort****hubport**→**hardwareId()****hubport.get_hardwareId()**

Returns the unique hardware identifier of the Yocto-hub port in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the Yocto-hub port. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the Yocto-hub port (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

hubport→**get_logicalName()**

YHubPort

hubport→**logicalName()****hubport.get_logicalName()**

Returns the logical name of the Yocto-hub port.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the Yocto-hub port. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

hubport→**get_module()****YHubPort****hubport**→**module()****hubport.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

hubport→**get_module_async()****YHubPort****hubport**→**module_async()****hubport.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport→**get_portState()****YHubPort****hubport**→**portState()****hubport.get_portState()**

Returns the current state of the Yocto-hub port.

```
function get_portState( )
```

Returns :

a value among `Y_PORTSTATE_OFF`, `Y_PORTSTATE_OVRLD`, `Y_PORTSTATE_ON`, `Y_PORTSTATE_RUN` and `Y_PORTSTATE_PROG` corresponding to the current state of the Yocto-hub port

On failure, throws an exception or returns `Y_PORTSTATE_INVALID`.

hubport→**get_userData()**

YHubPort

hubport→**userData()****hubport.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

hubport→**isOnline()****hubport.isOnline()****YHubPort**

Checks if the Yocto-hub port is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the Yocto-hub port in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the Yocto-hub port.

Returns :

`true` if the Yocto-hub port can be reached, and `false` otherwise

hubport→isOnline_async()hubport.isOnline_async()

YHubPort

Checks if the Yocto-hub port is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the Yocto-hub port in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport→**load()****hubport.load()****YHubPort**

Preloads the Yocto-hub port cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

hubport→**load_async()****hubport.load_async()****YHubPort**

Preloads the Yocto-hub port cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport→**nextHubPort()****hubport.nextHubPort()****YHubPort**

Continues the enumeration of Yocto-hub ports started using `yFirstHubPort()`.

```
function nextHubPort( )
```

Returns :

a pointer to a `YHubPort` object, corresponding to a Yocto-hub port currently online, or a `null` pointer if there are no more Yocto-hub ports to enumerate.

hubport→**registerValueCallback()**
hubport.registerValueCallback()

YHubPort

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

hubport→**set_enabled()****YHubPort****hubport**→**setEnabled()****hubport.set_enabled()**

Changes the activation of the Yocto-hub port.

```
function set_enabled( newval)
```

If the port is enabled, the connected module is powered. Otherwise, port power is shut down.

Parameters :

newval either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to the activation of the Yocto-hub port

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

hubport→**set_logicalName()**

YHubPort

hubport→**setLogicalName()**

hubport.set_logicalName()

Changes the logical name of the Yocto-hub port.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the Yocto-hub port.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

hubport→**set_userData()****YHubPort****hubport**→**setUserData()****hubport.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

hubport→wait_async()hubport.wait_async()

YHubPort

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.20. Humidity function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_humidity.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YHumidity = yoctolib.YHumidity;
php	require_once('yocto_humidity.php');
c++	#include "yocto_humidity.h"
m	#import "yocto_humidity.h"
pas	uses yocto_humidity;
vb	yocto_humidity.vb
cs	yocto_humidity.cs
java	import com.yoctopuce.YoctoAPI.YHumidity;
py	from yocto_humidity import *

Global functions

yFindHumidity(func)

Retrieves a humidity sensor for a given identifier.

yFirstHumidity()

Starts the enumeration of humidity sensors currently accessible.

YHumidity methods

humidity→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

humidity→describe()

Returns a short text that describes unambiguously the instance of the humidity sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

humidity→get_advertisedValue()

Returns the current value of the humidity sensor (no more than 6 characters).

humidity→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

humidity→get_currentValue()

Returns the current measure for the humidity.

humidity→get_errorMessage()

Returns the error message of the latest error with the humidity sensor.

humidity→get_errorType()

Returns the numerical error code of the latest error with the humidity sensor.

humidity→get_friendlyName()

Returns a global identifier of the humidity sensor in the format `MODULE_NAME . FUNCTION_NAME`.

humidity→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

humidity→get_functionId()

Returns the hardware identifier of the humidity sensor, without reference to the module.

humidity→get_hardwareId()

Returns the unique hardware identifier of the humidity sensor in the form `SERIAL . FUNCTIONID`.

humidity→get_highestValue()

Returns the maximal value observed for the humidity.

humidity→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

humidity→get_logicalName()

Returns the logical name of the humidity sensor.

humidity→get_lowestValue()

Returns the minimal value observed for the humidity.

humidity→get_module()

Gets the YModule object for the device on which the function is located.

humidity→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

humidity→get_recordedData(startTime, endTime)

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

humidity→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

humidity→get_resolution()

Returns the resolution of the measured values.

humidity→get_unit()

Returns the measuring unit for the humidity.

humidity→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

humidity→isOnline()

Checks if the humidity sensor is currently reachable, without raising any error.

humidity→isOnline_async(callback, context)

Checks if the humidity sensor is currently reachable, without raising any error (asynchronous version).

humidity→load(msValidity)

Preloads the humidity sensor cache with a specified validity duration.

humidity→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method calibrateFromPoints.

humidity→load_async(msValidity, callback, context)

Preloads the humidity sensor cache with a specified validity duration (asynchronous version).

humidity→nextHumidity()

Continues the enumeration of humidity sensors started using yFirstHumidity().

humidity→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

humidity→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

humidity→set_highestValue(newval)

Changes the recorded maximal value observed for the humidity.

humidity→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

humidity→set_logicalName(newval)

Changes the logical name of the humidity sensor.

humidity→set_lowestValue(newval)

Changes the recorded minimal value observed for the humidity.

humidity→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

humidity→set_resolution(newval)

Changes the resolution of the measured physical values.

humidity→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

humidity→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YHumidity.FindHumidity() yFindHumidity()yFindHumidity()

YHumidity

Retrieves a humidity sensor for a given identifier.

```
function yFindHumidity( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the humidity sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YHumidity.isOnline()` to test if the humidity sensor is indeed online at a given time. In case of ambiguity when looking for a humidity sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the humidity sensor

Returns :

a `YHumidity` object allowing you to drive the humidity sensor.

**YHumidity.FirstHumidity()
yFirstHumidity()yFirstHumidity()**

YHumidity

Starts the enumeration of humidity sensors currently accessible.

```
function yFirstHumidity( )
```

Use the method `YHumidity.nextHumidity()` to iterate on next humidity sensors.

Returns :

a pointer to a `YHumidity` object, corresponding to the first humidity sensor currently online, or a `null` pointer if there are none.

humidity→calibrateFromPoints() humidity.calibrateFromPoints()

YHumidity

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→**describe()****humidity.describe()****YHumidity**

Returns a short text that describes unambiguously the instance of the humidity sensor in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the humidity sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

humidity→get_advertisedValue()

YHumidity

humidity→advertisedValue()

humidity.get_advertisedValue()

Returns the current value of the humidity sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the humidity sensor (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

humidity→`get_currentRawValue()`**YHumidity****humidity**→`currentRawValue()`**humidity**.`get_currentRawValue()`

Returns the unrounded and uncalibrated raw value returned by the sensor.

```
function get_currentRawValue() ( )
```

Returns :

a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

humidity→**get_currentValue()**

YHumidity

humidity→**currentValue()****humidity.get_currentValue()**

Returns the current measure for the humidity.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the humidity

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

humidity→get_errorMessage()**YHumidity****humidity→errorMessage()****humidity.get_errorMessage()**

Returns the error message of the latest error with the humidity sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the humidity sensor object

humidity→**get_errorType()**

YHumidity

humidity→**errorType()****humidity.get_errorType()**

Returns the numerical error code of the latest error with the humidity sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the humidity sensor object

humidity→get_friendlyName()**YHumidity****humidity→friendlyName()****humidity.get_friendlyName()**

Returns a global identifier of the humidity sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the humidity sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the humidity sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the humidity sensor using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

humidity→**get_functionDescriptor()**

YHumidity

humidity→**functionDescriptor()**

humidity.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

humidity→**get_functionId()****YHumidity****humidity**→**functionId()****humidity.get_functionId()**

Returns the hardware identifier of the humidity sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the humidity sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

humidity→get_hardwareId()

YHumidity

humidity→hardwareId()humidity.get_hardwareId()

Returns the unique hardware identifier of the humidity sensor in the form SERIAL.FUNCTIONID.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the humidity sensor. (for example RELAYLO1-123456.relay1)

Returns :

a string that uniquely identifies the humidity sensor (ex: RELAYLO1-123456.relay1) On failure, throws an exception or returns Y_HARDWAREID_INVALID.

humidity→**get_highestValue()****YHumidity****humidity**→**highestValue()****humidity.get_highestValue()**

Returns the maximal value observed for the humidity.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the humidity

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

humidity→get_logFrequency()

YHumidity

humidity→logFrequency()

humidity.get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

humidity→**get_logicalName()****YHumidity****humidity**→**logicalName()****humidity.get_logicalName()**

Returns the logical name of the humidity sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the humidity sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

humidity→**get_lowestValue()**

YHumidity

humidity→**lowestValue()****humidity.get_lowestValue()**

Returns the minimal value observed for the humidity.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the humidity

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

humidity→**get_module()****YHumidity****humidity**→**module()****humidity.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

humidity→**get_module_async()****YHumidity****humidity**→**module_async()****humidity.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

humidity→**get_recordedData()****YHumidity****humidity**→**recordedData()****humidity.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

humidity→get_reportFrequency()

YHumidity

humidity→reportFrequency()

humidity.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

humidity→**get_resolution()****YHumidity****humidity**→**resolution()****humidity.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

humidity→**get_unit()**

YHumidity

humidity→**unit()****humidity.get_unit()**

Returns the measuring unit for the humidity.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the humidity

On failure, throws an exception or returns `Y_UNIT_INVALID`.

humidity→**get_userData()****YHumidity****humidity**→**userData()****humidity.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

humidity→isOnline()humidity.isOnline()

YHumidity

Checks if the humidity sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the humidity sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the humidity sensor.

Returns :

`true` if the humidity sensor can be reached, and `false` otherwise

humidity→isOnline_async()
humidity.isOnline_async()

YHumidity

Checks if the humidity sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the humidity sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

humidity→load()humidity.load()

YHumidity

Preloads the humidity sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**humidity→loadCalibrationPoints()
humidity.loadCalibrationPoints()**

YHumidity

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→**load_async()****humidity.load_async()****YHumidity**

Preloads the humidity sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

humidity→**nextHumidity()****humidity.nextHumidity()****YHumidity**

Continues the enumeration of humidity sensors started using `yFirstHumidity()`.

```
function nextHumidity( )
```

Returns :

a pointer to a `YHumidity` object, corresponding to a humidity sensor currently online, or a `null` pointer if there are no more humidity sensors to enumerate.

humidity→registerTimedReportCallback()
humidity.registerTimedReportCallback()

YHumidity

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

humidity→registerValueCallback()
humidity.registerValueCallback()

YHumidity

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

humidity→**set_highestValue()**

YHumidity

humidity→**setHighestValue()**

humidity.set_highestValue()

Changes the recorded maximal value observed for the humidity.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed for the humidity

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→set_logFrequency()**YHumidity****humidity→setLogFrequency()****humidity.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→**set_logicalName()**

YHumidity

humidity→**setLogicalName()**

humidity.set_logicalName()

Changes the logical name of the humidity sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the humidity sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

humidity→set_lowestValue()
humidity→setLowestValue()
humidity.set_lowestValue()

YHumidity

Changes the recorded minimal value observed for the humidity.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed for the humidity

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→set_reportFrequency()

YHumidity

humidity→setReportFrequency()

humidity.set_reportFrequency()

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→**set_resolution()****YHumidity****humidity**→**setResolution()****humidity.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity→**set_userdata()**

YHumidity

humidity→**setUserData()****humidity.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

humidity→**wait_async()****humidity.wait_async()****YHumidity**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.21. Led function interface

Yoctopuce application programming interface allows you not only to drive the intensity of the led, but also to have it blink at various preset frequencies.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_led.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YLed = yoctolib.YLed;
php	require_once('yocto_led.php');
c++	#include "yocto_led.h"
m	#import "yocto_led.h"
pas	uses yocto_led;
vb	yocto_led.vb
cs	yocto_led.cs
java	import com.yoctopuce.YoctoAPI.YLed;
py	from yocto_led import *

Global functions

yFindLed(func)

Retrieves a led for a given identifier.

yFirstLed()

Starts the enumeration of leds currently accessible.

YLed methods

led→describe()

Returns a short text that describes unambiguously the instance of the led in the form TYPE (NAME) = SERIAL . FUNCTIONID.

led→get_advertisedValue()

Returns the current value of the led (no more than 6 characters).

led→get_blinking()

Returns the current led signaling mode.

led→get_errorMessage()

Returns the error message of the latest error with the led.

led→get_errorType()

Returns the numerical error code of the latest error with the led.

led→get_friendlyName()

Returns a global identifier of the led in the format MODULE_NAME . FUNCTION_NAME.

led→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

led→get_functionId()

Returns the hardware identifier of the led, without reference to the module.

led→get_hardwareId()

Returns the unique hardware identifier of the led in the form SERIAL . FUNCTIONID.

led→get_logicalName()

Returns the logical name of the led.

led→get_luminosity()

Returns the current led intensity (in per cent).

led→get_module()

Gets the `YModule` object for the device on which the function is located.

`led→get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`led→get_power()`

Returns the current led state.

`led→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`led→isOnline()`

Checks if the led is currently reachable, without raising any error.

`led→isOnline_async(callback, context)`

Checks if the led is currently reachable, without raising any error (asynchronous version).

`led→load(msValidity)`

Preloads the led cache with a specified validity duration.

`led→load_async(msValidity, callback, context)`

Preloads the led cache with a specified validity duration (asynchronous version).

`led→nextLed()`

Continues the enumeration of leds started using `yFirstLed()`.

`led→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`led→set_blinking(newval)`

Changes the current led signaling mode.

`led→set_logicalName(newval)`

Changes the logical name of the led.

`led→set_luminosity(newval)`

Changes the current led intensity (in per cent).

`led→set_power(newval)`

Changes the state of the led.

`led→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

`led→wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YLed.FindLed() yFindLed()yFindLed()

YLed

Retrieves a led for a given identifier.

```
function yFindLed( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the led is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YLed.isOnline()` to test if the led is indeed online at a given time. In case of ambiguity when looking for a led by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the led

Returns :

a YLed object allowing you to drive the led.

YLed.FirstLed()**YLed****yFirstLed()**

Starts the enumeration of leds currently accessible.

```
function yFirstLed( )
```

Use the method `YLed.nextLed()` to iterate on next leds.

Returns :

a pointer to a `YLed` object, corresponding to the first led currently online, or a `null` pointer if there are none.

led→**describe()****led.describe()****YLed**

Returns a short text that describes unambiguously the instance of the led in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the led (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

led→**get_advertisedValue()****YLed****led**→**advertisedValue()****led.get_advertisedValue()**

Returns the current value of the led (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the led (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

led→**get_blinking()**

YLed

led→**blinking()****led.get_blinking()**

Returns the current led signaling mode.

```
function get_blinking( )
```

Returns :

a value among `Y_BLINKING_STILL`, `Y_BLINKING_RELAX`, `Y_BLINKING_AWARE`, `Y_BLINKING_RUN`, `Y_BLINKING_CALL` and `Y_BLINKING_PANIC` corresponding to the current led signaling mode

On failure, throws an exception or returns `Y_BLINKING_INVALID`.

led→`get_errorMessage()`**YLed****led**→`errorMessage()`**led**.`get_errorMessage()`

Returns the error message of the latest error with the led.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the led object

led→**get_errorType()**

YLed

led→**errorType()****led.get_errorType()**

Returns the numerical error code of the latest error with the led.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the led object

led→**get_friendlyName()****YLed****led**→**friendlyName()****led.get_friendlyName()**

Returns a global identifier of the led in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the led if they are defined, otherwise the serial number of the module and the hardware identifier of the led (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the led using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

led→**get_functionDescriptor()**

YLed

led→**functionDescriptor()**

led.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

led→`get_functionId()`

YLed

led→`functionId()`**led**.`get_functionId()`

Returns the hardware identifier of the led, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the led (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

led→**get_hardwareId()**

YLed

led→**hardwareId()****led.get_hardwareId()**

Returns the unique hardware identifier of the led in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the led. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the led (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

led→**get_logicalName()****YLed****led**→**logicalName()****led.get_logicalName()**

Returns the logical name of the led.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the led. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

led→**get_luminosity()**

YLed

led→**luminosity()****led.get_luminosity()**

Returns the current led intensity (in per cent).

```
function get_luminosity( )
```

Returns :

an integer corresponding to the current led intensity (in per cent)

On failure, throws an exception or returns `Y_LUMINOSITY_INVALID`.

led→**get_module()****YLed****led**→**module()****led.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

led→**get_module_async()****YLed****led**→**module_async()****led.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

led→**get_power()****YLed****led**→**power()****led.get_power()**

Returns the current led state.

```
function get_power( )
```

Returns :

either `Y_POWER_OFF` or `Y_POWER_ON`, according to the current led state

On failure, throws an exception or returns `Y_POWER_INVALID`.

led→**get_userData()**

YLed

led→**userData()****led.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

led→**isOnline()****led.isOnline()****YLed**

Checks if the led is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the led in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the led.

Returns :

`true` if the led can be reached, and `false` otherwise

led→isOnline_async()led.isOnline_async()

YLed

Checks if the led is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the led in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

led→**load()****led.load()****YLed**

Preloads the led cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

led→**load_async()****led.load_async()****YLed**

Preloads the led cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

led→**nextLed()****led.nextLed()****YLed**

Continues the enumeration of leds started using `yFirstLed()`.

```
function nextLed( )
```

Returns :

a pointer to a `YLed` object, corresponding to a led currently online, or a `null` pointer if there are no more leds to enumerate.

led→**registerValueCallback()**
led.registerValueCallback()**YLed**

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

led→**set_blinking()****YLed****led**→**setBlinking()****led.set_blinking()**

Changes the current led signaling mode.

```
function set_blinking( newval)
```

Parameters :

newval a value among Y_BLINKING_STILL, Y_BLINKING_RELAX, Y_BLINKING_AWARE, Y_BLINKING_RUN, Y_BLINKING_CALL and Y_BLINKING_PANIC corresponding to the current led signaling mode

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led→**set_logicalName()**

YLed

led→**setLogicalName()****led.set_logicalName()**

Changes the logical name of the led.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the led.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

led→**set_luminosity()****YLed****led**→**setLuminosity()****led.set_luminosity()**

Changes the current led intensity (in per cent).

```
function set_luminosity( newval)
```

Parameters :

newval an integer corresponding to the current led intensity (in per cent)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led→**set_power()**

YLed

led→**setPower()****led.set_power()**

Changes the state of the led.

```
function set_power( newval)
```

Parameters :

newval either Y_POWER_OFF or Y_POWER_ON, according to the state of the led

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led→**set_userdata()****YLed****led**→**setUserData()****led.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

led→wait_async()led.wait_async()

YLed

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.22. LightSensor function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_lightsensor.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YLightSensor = yoctolib.YLightSensor;
php	require_once('yocto_lightsensor.php');
cpp	#include "yocto_lightsensor.h"
m	#import "yocto_lightsensor.h"
pas	uses yocto_lightsensor;
vb	yocto_lightsensor.vb
cs	yocto_lightsensor.cs
java	import com.yoctopuce.YoctoAPI.YLightSensor;
py	from yocto_lightsensor import *

Global functions

yFindLightSensor(func)

Retrieves a light sensor for a given identifier.

yFirstLightSensor()

Starts the enumeration of light sensors currently accessible.

YLightSensor methods

lightsensor→calibrate(calibratedVal)

Changes the sensor-specific calibration parameter so that the current value matches a desired target (linear scaling).

lightsensor→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

lightsensor→describe()

Returns a short text that describes unambiguously the instance of the light sensor in the form TYPE (NAME) =SERIAL.FUNCTIONID.

lightsensor→get_advertisedValue()

Returns the current value of the light sensor (no more than 6 characters).

lightsensor→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

lightsensor→get_currentValue()

Returns the current measure for the ambient light.

lightsensor→get_errorMessage()

Returns the error message of the latest error with the light sensor.

lightsensor→get_errorType()

Returns the numerical error code of the latest error with the light sensor.

lightsensor→get_friendlyName()

Returns a global identifier of the light sensor in the format MODULE_NAME.FUNCTION_NAME.

lightsensor→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

lightsensor→get_functionId()

3. Reference

Returns the hardware identifier of the light sensor, without reference to the module.

lightsensor→**get_hardwareId()**

Returns the unique hardware identifier of the light sensor in the form `SERIAL.FUNCTIONID`.

lightsensor→**get_highestValue()**

Returns the maximal value observed for the ambient light.

lightsensor→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

lightsensor→**get_logicalName()**

Returns the logical name of the light sensor.

lightsensor→**get_lowestValue()**

Returns the minimal value observed for the ambient light.

lightsensor→**get_module()**

Gets the `YModule` object for the device on which the function is located.

lightsensor→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

lightsensor→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

lightsensor→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

lightsensor→**get_resolution()**

Returns the resolution of the measured values.

lightsensor→**get_unit()**

Returns the measuring unit for the ambient light.

lightsensor→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

lightsensor→**isOnline()**

Checks if the light sensor is currently reachable, without raising any error.

lightsensor→**isOnline_async(callback, context)**

Checks if the light sensor is currently reachable, without raising any error (asynchronous version).

lightsensor→**load(msValidity)**

Preloads the light sensor cache with a specified validity duration.

lightsensor→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

lightsensor→**load_async(msValidity, callback, context)**

Preloads the light sensor cache with a specified validity duration (asynchronous version).

lightsensor→**nextLightSensor()**

Continues the enumeration of light sensors started using `yFirstLightSensor()`.

lightsensor→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

lightsensor→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

lightsensor→**set_highestValue(newval)**

Changes the recorded maximal value observed for the ambient light.

lightsensor→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

lightsensor→**set_logicalName(newval)**

Changes the logical name of the light sensor.

lightsensor→**set_lowestValue(newval)**

Changes the recorded minimal value observed for the ambient light.

lightsensor→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

lightsensor→**set_resolution(newval)**

Changes the resolution of the measured physical values.

lightsensor→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

lightsensor→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YLightSensor.FindLightSensor() yFindLightSensor()yFindLightSensor()

YLightSensor

Retrieves a light sensor for a given identifier.

```
function yFindLightSensor( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the light sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YLightSensor.isOnline()` to test if the light sensor is indeed online at a given time. In case of ambiguity when looking for a light sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the light sensor

Returns :

a `YLightSensor` object allowing you to drive the light sensor.

**YLightSensor.FirstLightSensor()
yFirstLightSensor()yFirstLightSensor()**

YLightSensor

Starts the enumeration of light sensors currently accessible.

```
function yFirstLightSensor( )
```

Use the method `YLightSensor.nextLightSensor()` to iterate on next light sensors.

Returns :

a pointer to a `YLightSensor` object, corresponding to the first light sensor currently online, or a `null` pointer if there are none.

lightsensor→calibrate()lightsensor.calibrate()

YLightSensor

Changes the sensor-specific calibration parameter so that the current value matches a desired target (linear scaling).

```
function calibrate( calibratedVal)
```

Parameters :

calibratedVal the desired target value.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**calibrateFromPoints()**
lightsensor.calibrateFromPoints()**YLightSensor**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→describe()lightsensor.describe()

YLightSensor

Returns a short text that describes unambiguously the instance of the light sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the light sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

lightsensor→**get_advertisedValue()****YLightSensor****lightsensor**→**advertisedValue()****lightsensor.get_advertisedValue()**

Returns the current value of the light sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the light sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

lightsensor→get_currentRawValue()

YLightSensor

lightsensor→currentRawValue()

lightsensor.get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor

On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

lightsensor→**get_currentValue()****YLightSensor****lightsensor**→**currentValue()****lightsensor.get_currentValue()**

Returns the current measure for the ambient light.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the ambient light

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

lightsensor→get_errorMessage()

YLightSensor

lightsensor→errorMessage()

lightsensor.get_errorMessage()

Returns the error message of the latest error with the light sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the light sensor object

lightsensor→**get_errorType()****YLightSensor****lightsensor**→**errorType()****lightsensor.get_errorType()**

Returns the numerical error code of the latest error with the light sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the light sensor object

lightsensor→get_friendlyName()

YLightSensor

lightsensor→friendlyName()

lightsensor.get_friendlyName()

Returns a global identifier of the light sensor in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the light sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the light sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the light sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

lightsensor→**get_functionDescriptor()**
lightsensor→**functionDescriptor()**
lightsensor.get_functionDescriptor()

YLightSensor

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

lightsensor→**get_functionId()**

YLightSensor

lightsensor→**functionId()****lightsensor.get_functionId()**

Returns the hardware identifier of the light sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the light sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

lightsensor→**get_hardwareId()****YLightSensor****lightsensor**→**hardwareId()****lightsensor.get_hardwareId()**

Returns the unique hardware identifier of the light sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the light sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the light sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

lightsensor→get_highestValue()

YLightSensor

lightsensor→highestValue()

lightsensor.get_highestValue()

Returns the maximal value observed for the ambient light.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the ambient light

On failure, throws an exception or returns Y_HIGHESTVALUE_INVALID.

lightsensor→get_logFrequency()**YLightSensor****lightsensor→logFrequency()****lightsensor.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

lightsensor→**get_logicalName()**

YLightSensor

lightsensor→**logicalName()**

lightsensor.get_logicalName()

Returns the logical name of the light sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the light sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

lightsensor→**get_lowestValue()****YLightSensor****lightsensor**→**lowestValue()****lightsensor.get_lowestValue()**

Returns the minimal value observed for the ambient light.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the ambient light

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

lightsensor→get_module()

YLightSensor

lightsensor→module()lightsensor.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

lightsensor→**get_module_async()****YLightSensor****lightsensor**→**module_async()****lightsensor.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

lightsensor→**get_recordedData()****YLightSensor****lightsensor**→**recordedData()****lightsensor.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

lightsensor→**get_reportFrequency()****YLightSensor****lightsensor**→**reportFrequency()****lightsensor.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

lightsensor→get_resolution()

YLightSensor

lightsensor→resolution()lightsensor.get_resolution()

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns Y_RESOLUTION_INVALID.

lightsensor→**get_unit()****YLightSensor****lightsensor**→**unit()****lightsensor.get_unit()**

Returns the measuring unit for the ambient light.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the ambient light

On failure, throws an exception or returns `Y_UNIT_INVALID`.

lightsensor→**get_userData()**

YLightSensor

lightsensor→**userData()****lightsensor.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

lightsensor→**isOnline()****lightsensor.isOnline()****YLightSensor**

Checks if the light sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the light sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the light sensor.

Returns :

`true` if the light sensor can be reached, and `false` otherwise

**lightsensor→isOnline_async()
lightsensor.isOnline_async()**

YLightSensor

Checks if the light sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the light sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

lightsensor→**load()****lightsensor.load()****YLightSensor**

Preloads the light sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

lightsensor→loadCalibrationPoints()
lightsensor.loadCalibrationPoints()**YLightSensor**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**load_async()****lightsensor.load_async()****YLightSensor**

Preloads the light sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

lightsensor→**nextLightSensor()**
lightsensor.nextLightSensor()

YLightSensor

Continues the enumeration of light sensors started using `yFirstLightSensor()`.

```
function nextLightSensor( )
```

Returns :

a pointer to a `YLightSensor` object, corresponding to a light sensor currently online, or a `null` pointer if there are no more light sensors to enumerate.

lightsensor→**registerTimedReportCallback()**
lightsensor.registerTimedReportCallback()

YLightSensor

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The **callback** is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

lightsensor→**registerValueCallback()**
lightsensor.registerValueCallback()

YLightSensor

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

lightsensor→**set_highestValue()****YLightSensor****lightsensor**→**setHighestValue()****lightsensor.set_highestValue()**

Changes the recorded maximal value observed for the ambient light.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed for the ambient light

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**set_logFrequency()**

YLightSensor

lightsensor→**setLogFrequency()**

lightsensor.set_logFrequency()

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**set_logicalName()****YLightSensor****lightsensor**→**setLogicalName()****lightsensor.set_logicalName()**

Changes the logical name of the light sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the light sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

lightsensor→set_lowestValue()

YLightSensor

lightsensor→setLowestValue()

lightsensor.set_lowestValue()

Changes the recorded minimal value observed for the ambient light.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed for the ambient light

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**set_reportFrequency()****YLightSensor****lightsensor**→**setReportFrequency()****lightsensor.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**set_resolution()**
lightsensor→**setResolution()**
lightsensor.set_resolution()

YLightSensor

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor→**set_userData()****YLightSensor****lightsensor**→**setUserData()****lightsensor.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

lightsensor→wait_async()lightsensor.wait_async()

YLightSensor

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.23. Magnetometer function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_magnetometer.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YMagnetometer = yoctolib.YMagnetometer;
php	require_once('yocto_magnetometer.php');
c++	#include "yocto_magnetometer.h"
m	#import "yocto_magnetometer.h"
pas	uses yocto_magnetometer;
vb	yocto_magnetometer.vb
cs	yocto_magnetometer.cs
java	import com.yoctopuce.YoctoAPI.YMagnetometer;
py	from yocto_magnetometer import *

Global functions

yFindMagnetometer(func)

Retrieves a magnetometer for a given identifier.

yFirstMagnetometer()

Starts the enumeration of magnetometers currently accessible.

YMagnetometer methods

magnetometer→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

magnetometer→describe()

Returns a short text that describes unambiguously the instance of the magnetometer in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

magnetometer→get_advertisedValue()

Returns the current value of the magnetometer (no more than 6 characters).

magnetometer→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

magnetometer→get_currentValue()

Returns the current value of the magnetic field.

magnetometer→get_errorMessage()

Returns the error message of the latest error with the magnetometer.

magnetometer→get_errorType()

Returns the numerical error code of the latest error with the magnetometer.

magnetometer→get_friendlyName()

Returns a global identifier of the magnetometer in the format `MODULE_NAME . FUNCTION_NAME`.

magnetometer→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

magnetometer→get_functionId()

Returns the hardware identifier of the magnetometer, without reference to the module.

magnetometer→get_hardwareId()

Returns the unique hardware identifier of the magnetometer in the form `SERIAL . FUNCTIONID`.

magnetometer→**get_highestValue()**

Returns the maximal value observed for the magnetic field since the device was started.

magnetometer→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

magnetometer→**get_logicalName()**

Returns the logical name of the magnetometer.

magnetometer→**get_lowestValue()**

Returns the minimal value observed for the magnetic field since the device was started.

magnetometer→**get_module()**

Gets the `YModule` object for the device on which the function is located.

magnetometer→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

magnetometer→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

magnetometer→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

magnetometer→**get_resolution()**

Returns the resolution of the measured values.

magnetometer→**get_unit()**

Returns the measuring unit for the magnetic field.

magnetometer→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

magnetometer→**get_xValue()**

Returns the X component of the magnetic field, as a floating point number.

magnetometer→**get_yValue()**

Returns the Y component of the magnetic field, as a floating point number.

magnetometer→**get_zValue()**

Returns the Z component of the magnetic field, as a floating point number.

magnetometer→**isOnline()**

Checks if the magnetometer is currently reachable, without raising any error.

magnetometer→**isOnline_async(callback, context)**

Checks if the magnetometer is currently reachable, without raising any error (asynchronous version).

magnetometer→**load(msValidity)**

Preloads the magnetometer cache with a specified validity duration.

magnetometer→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

magnetometer→**load_async(msValidity, callback, context)**

Preloads the magnetometer cache with a specified validity duration (asynchronous version).

magnetometer→**nextMagnetometer()**

Continues the enumeration of magnetometers started using `yFirstMagnetometer()`.

magnetometer→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

magnetometer→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

magnetometer→**set_highestValue(newval)**

Changes the recorded maximal value observed.

magnetometer→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

magnetometer→**set_logicalName(newval)**

Changes the logical name of the magnetometer.

magnetometer→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

magnetometer→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

magnetometer→**set_resolution(newval)**

Changes the resolution of the measured physical values.

magnetometer→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

magnetometer→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YMagnetometer.FindMagnetometer() yFindMagnetometer()yFindMagnetometer()

YMagnetometer

Retrieves a magnetometer for a given identifier.

```
function yFindMagnetometer( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the magnetometer is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YMagnetometer.isOnline()` to test if the magnetometer is indeed online at a given time. In case of ambiguity when looking for a magnetometer by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the magnetometer

Returns :

a `YMagnetometer` object allowing you to drive the magnetometer.

**YMagnetometer.FirstMagnetometer()
yFirstMagnetometer()yFirstMagnetometer()**

YMagnetometer

Starts the enumeration of magnetometers currently accessible.

```
function yFirstMagnetometer( )
```

Use the method `YMagnetometer.nextMagnetometer()` to iterate on next magnetometers.

Returns :

a pointer to a `YMagnetometer` object, corresponding to the first magnetometer currently online, or a `null` pointer if there are none.

magnetometer→**calibrateFromPoints()**
magnetometer.calibrateFromPoints()**YMagnetometer**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**describe()****magnetometer.describe()****YMagnetometer**

Returns a short text that describes unambiguously the instance of the magnetometer in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the magnetometer (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

magnetometer→get_advertisedValue()

YMagnetometer

magnetometer→advertisedValue()

magnetometer.get_advertisedValue()

Returns the current value of the magnetometer (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the magnetometer (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

magnetometer→**get_currentRawValue()****YMagnetometer****magnetometer**→**currentRawValue()****magnetometer.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

magnetometer→get_currentValue()

YMagnetometer

magnetometer→currentValue()

magnetometer.get_currentValue()

Returns the current value of the magnetic field.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the magnetic field

On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

magnetometer→**get_errorMessage()****YMagnetometer****magnetometer**→**errorMessage()****magnetometer.get_errorMessage()**

Returns the error message of the latest error with the magnetometer.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the magnetometer object

magnetometer→**get_errorType()**

YMagnetometer

magnetometer→**errorType()**

magnetometer.get_errorType()

Returns the numerical error code of the latest error with the magnetometer.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the magnetometer object

magnetometer→**get_friendlyName()****YMagnetometer****magnetometer**→**friendlyName()****magnetometer.get_friendlyName()**

Returns a global identifier of the magnetometer in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the magnetometer if they are defined, otherwise the serial number of the module and the hardware identifier of the magnetometer (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the magnetometer using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

magnetometer→**get_functionDescriptor()**

YMagnetometer

magnetometer→**functionDescriptor()**

magnetometer.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

magnetometer→**get_functionId()****YMagnetometer****magnetometer**→**functionId()****magnetometer.get_functionId()**

Returns the hardware identifier of the magnetometer, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the magnetometer (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

magnetometer→get_hardwareId()

YMagnetometer

magnetometer→hardwareId()

magnetometer.get_hardwareId()

Returns the unique hardware identifier of the magnetometer in the form SERIAL.FUNCTIONID.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the magnetometer. (for example RELAYLO1-123456.relay1)

Returns :

a string that uniquely identifies the magnetometer (ex: RELAYLO1-123456.relay1) On failure, throws an exception or returns Y_HARDWAREID_INVALID.

magnetometer→**get_highestValue()****YMagnetometer****magnetometer**→**highestValue()****magnetometer.get_highestValue()**

Returns the maximal value observed for the magnetic field since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the magnetic field since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

magnetometer→get_logFrequency()

YMagnetometer

magnetometer→logFrequency()

magnetometer.get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

magnetometer→**get_logicalName()****YMagnetometer****magnetometer**→**logicalName()****magnetometer.get_logicalName()**

Returns the logical name of the magnetometer.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the magnetometer. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

magnetometer→**get_lowestValue()**

YMagnetometer

magnetometer→**lowestValue()**

magnetometer.get_lowestValue()

Returns the minimal value observed for the magnetic field since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the magnetic field since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

magnetometer→**get_module()**
magnetometer→**module()**
magnetometer.get_module()

YMagnetometer

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

magnetometer→get_module_async()
magnetometer→module_async()
magnetometer.get_module_async()

YMagnetometer

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

magnetometer→**get_recordedData()****YMagnetometer****magnetometer**→**recordedData()****magnetometer.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

magnetometer→get_reportFrequency()

YMagnetometer

magnetometer→reportFrequency()

magnetometer.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

magnetometer→**get_resolution()****YMagnetometer****magnetometer**→**resolution()****magnetometer.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

magnetometer→**get_unit()**

YMagnetometer

magnetometer→**unit()****magnetometer.get_unit()**

Returns the measuring unit for the magnetic field.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the magnetic field

On failure, throws an exception or returns `Y_UNIT_INVALID`.

magnetometer→**get_userData()****YMagnetometer****magnetometer**→**userData()****magnetometer.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

magnetometer→get_xValue()

YMagnetometer

magnetometer→xValue()magnetometer.get_xValue()

Returns the X component of the magnetic field, as a floating point number.

```
function get_xValue( )
```

Returns :

a floating point number corresponding to the X component of the magnetic field, as a floating point number

On failure, throws an exception or returns Y_XVALUE_INVALID.

magnetometer→**get_yValue()****YMagnetometer****magnetometer**→**yValue()****magnetometer.get_yValue()**

Returns the Y component of the magnetic field, as a floating point number.

```
function get_yValue( )
```

Returns :

a floating point number corresponding to the Y component of the magnetic field, as a floating point number

On failure, throws an exception or returns `Y_YVALUE_INVALID`.

magnetometer→**get_zValue()**

YMagnetometer

magnetometer→**zValue()****magnetometer.get_zValue()**

Returns the Z component of the magnetic field, as a floating point number.

```
function get_zValue( )
```

Returns :

a floating point number corresponding to the Z component of the magnetic field, as a floating point number

On failure, throws an exception or returns `Y_ZVALUE_INVALID`.

magnetometer→**isOnline()****magnetometer.isOnline()****YMagnetometer**

Checks if the magnetometer is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the magnetometer in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the magnetometer.

Returns :

`true` if the magnetometer can be reached, and `false` otherwise

**magnetometer→isOnline_async()
magnetometer.isOnline_async()**

YMagnetometer

Checks if the magnetometer is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the magnetometer in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

magnetometer→**load()****magnetometer.load()****YMagnetometer**

Preloads the magnetometer cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

magnetometer→loadCalibrationPoints()
magnetometer.loadCalibrationPoints()

YMagnetometer

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**load_async()**
magnetometer.load_async()

YMagnetometer

Preloads the magnetometer cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

magnetometer→**nextMagnetometer()**
magnetometer.nextMagnetometer()

YMagnetometer

Continues the enumeration of magnetometers started using `yFirstMagnetometer()`.

```
function nextMagnetometer( )
```

Returns :

a pointer to a `YMagnetometer` object, corresponding to a magnetometer currently online, or a `null` pointer if there are no more magnetometers to enumerate.

magnetometer→**registerTimedReportCallback()**
magnetometer.registerTimedReportCallback()

YMagnetometer

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

magnetometer→**registerValueCallback()**
magnetometer.registerValueCallback()

YMagnetometer

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

magnetometer→**set_highestValue()****YMagnetometer****magnetometer**→**setHighestValue()****magnetometer.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→set_logFrequency()

YMagnetometer

magnetometer→setLogFrequency()

magnetometer.set_logFrequency()

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**set_logicalName()****YMagnetometer****magnetometer**→**setLogicalName()****magnetometer.set_logicalName()**

Changes the logical name of the magnetometer.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the magnetometer.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

magnetometer→set_lowestValue()

YMagnetometer

magnetometer→setLowestValue()

magnetometer.set_lowestValue()

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**set_reportFrequency()**
magnetometer→**setReportFrequency()**
magnetometer.set_reportFrequency()

YMagnetometer

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**set_resolution()**

YMagnetometer

magnetometer→**setResolution()**

magnetometer.set_resolution()

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

magnetometer→**set_userData()**
magnetometer→**setUserData()**
magnetometer.set_userData()

YMagnetometer

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

magnetometer→**wait_async()**
magnetometer.wait_async()

YMagnetometer

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.24. Measured value

YMeasure objects are used within the API to represent a value measured at a specified time. These objects are used in particular in conjunction with the YDataSet class.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_api.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YAPI = yoctolib.YAPI; var YModule = yoctolib.YModule;
php	require_once('yocto_api.php');
cpp	#include "yocto_api.h"
m	#import "yocto_api.h"
pas	uses yocto_api;
vb	yocto_api.vb
cs	yocto_api.cs
java	import com.yoctopuce.YoctoAPI.YModule;
py	from yocto_api import *

YMeasure methods

measure→get_averageValue()

Returns the average value observed during the time interval covered by this measure.

measure→get_endTimeUTC()

Returns the end time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

measure→get_maxValue()

Returns the largest value observed during the time interval covered by this measure.

measure→get_minValue()

Returns the smallest value observed during the time interval covered by this measure.

measure→get_startTimeUTC()

Returns the start time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

measure→**get_averageValue()**

YMeasure

measure→**averageValue()**

measure.get_averageValue()

Returns the average value observed during the time interval covered by this measure.

```
function get_averageValue( )
```

Returns :

a floating-point number corresponding to the average value observed.

measure→**get_endTimeUTC()**

YMeasure

measure→**endTimeUTC()****measure.get_endTimeUTC()**

Returns the end time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

```
function get_endTimeUTC( )
```

When the recording rate is higher than 1 sample per second, the timestamp may have a fractional part.

Returns :

an floating point number corresponding to the number of seconds between the Jan 1, 1970 UTC and the end of this measure.

measure→**get_maxValue()**

YMeasure

measure→**maxValue()****measure.get_maxValue()**

Returns the largest value observed during the time interval covered by this measure.

```
function get_maxValue( )
```

Returns :

a floating-point number corresponding to the largest value observed.

measure→**get_minValue()****YMeasure****measure**→**minValue()****measure.get_minValue()**

Returns the smallest value observed during the time interval covered by this measure.

```
function get_minValue( )
```

Returns :

a floating-point number corresponding to the smallest value observed.

measure→**get_startTimeUTC()**

YMeasure

measure→**startTimeUTC()**

measure.get_startTimeUTC()

Returns the start time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

```
function get_startTimeUTC( )
```

When the recording rate is higher than 1 sample per second, the timestamp may have a fractional part.

Returns :

an floating point number corresponding to the number of seconds between the Jan 1, 1970 UTC and the beginning of this measure.

3.25. Module control interface

This interface is identical for all Yoctopuce USB modules. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_api.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YAPI = yoctolib.YAPI; var YModule = yoctolib.YModule;
php	require_once('yocto_api.php');
cpp	#include "yocto_api.h"
m	#import "yocto_api.h"
pas	uses yocto_api;
vb	yocto_api.vb
cs	yocto_api.cs
java	import com.yoctopuce.YoctoAPI.YModule;
py	from yocto_api import *

Global functions

yFindModule(func)

Allows you to find a module from its serial number or from its logical name.

yFirstModule()

Starts the enumeration of modules currently accessible.

YModule methods

module→describe()

Returns a descriptive text that identifies the module.

module→download(pathname)

Downloads the specified built-in file and returns a binary buffer with its content.

module→functionCount()

Returns the number of functions (beside the "module" interface) available on the module.

module→functionId(functionIndex)

Retrieves the hardware identifier of the *n*th function on the module.

module→functionName(functionIndex)

Retrieves the logical name of the *n*th function on the module.

module→functionValue(functionIndex)

Retrieves the advertised value of the *n*th function on the module.

module→get_beacon()

Returns the state of the localization beacon.

module→get_errorMessage()

Returns the error message of the latest error with this module object.

module→get_errorType()

Returns the numerical error code of the latest error with this module object.

module→get_firmwareRelease()

Returns the version of the firmware embedded in the module.

module→get_hardwareId()

Returns the unique hardware identifier of the module.

module→get_icon2d()

	Returns the icon of the module.
module → get_lastLogs()	Returns a string with last logs of the module.
module → get_logicalName()	Returns the logical name of the module.
module → get_luminosity()	Returns the luminosity of the module informative leds (from 0 to 100).
module → get_persistentSettings()	Returns the current state of persistent module settings.
module → get_productId()	Returns the USB device identifier of the module.
module → get_productName()	Returns the commercial name of the module, as set by the factory.
module → get_productRelease()	Returns the hardware release version of the module.
module → get_rebootCountdown()	Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.
module → get_serialNumber()	Returns the serial number of the module, as set by the factory.
module → get_upTime()	Returns the number of milliseconds spent since the module was powered on.
module → get_usbBandwidth()	Returns the number of USB interfaces used by the module.
module → get_usbCurrent()	Returns the current consumed by the module on the USB bus, in milli-amps.
module → get_userData()	Returns the value of the userData attribute, as previously stored using method <code>set_userData</code> .
module → isOnline()	Checks if the module is currently reachable, without raising any error.
module → isOnline_async(callback, context)	Checks if the module is currently reachable, without raising any error.
module → load(msValidity)	Preloads the module cache with a specified validity duration.
module → load_async(msValidity, callback, context)	Preloads the module cache with a specified validity duration (asynchronous version).
module → nextModule()	Continues the module enumeration started using <code>yFirstModule()</code> .
module → reboot(secBeforeReboot)	Schedules a simple module reboot after the given number of seconds.
module → registerLogCallback(callback)	todo
module → revertFromFlash()	Reloads the settings stored in the nonvolatile memory, as when the module is powered on.
module → saveToFlash()	Saves current settings in the nonvolatile memory of the module.

module→**set_beacon(newval)**

Turns on or off the module localization beacon.

module→**set_logicalName(newval)**

Changes the logical name of the module.

module→**set_luminosity(newval)**

Changes the luminosity of the module informative leds.

module→**set_usbBandwidth(newval)**

Changes the number of USB interfaces used by the module.

module→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

module→**triggerFirmwareUpdate(secBeforeReboot)**

Schedules a module reboot into special firmware update mode.

module→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

**YModule.FindModule()
yFindModule()yFindModule()****YModule**

Allows you to find a module from its serial number or from its logical name.

```
function yFindModule( func)
```

This function does not require that the module is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YModule.isOnline()` to test if the module is indeed online at a given time. In case of ambiguity when looking for a module by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string containing either the serial number or the logical name of the desired module

Returns :

a `YModule` object allowing you to drive the module or get additional information on the module.

**YModule.FirstModule()
yFirstModule()yFirstModule()**

YModule

Starts the enumeration of modules currently accessible.

```
function yFirstModule( )
```

Use the method `YModule.nextModule()` to iterate on the next modules.

Returns :

a pointer to a `YModule` object, corresponding to the first module currently online, or a `null` pointer if there are none.

module→**describe()****module.describe()**

YModule

Returns a descriptive text that identifies the module.

function **describe**()

The text may include either the logical name or the serial number of the module.

Returns :

a string that describes the module

module→**download()****module.download()****YModule**

Downloads the specified built-in file and returns a binary buffer with its content.

```
function download( pathname)
```

Parameters :

pathname name of the new file to load

Returns :

a binary buffer with the file content

On failure, throws an exception or returns an empty content.

module→**functionCount()****module.functionCount()**

YModule

Returns the number of functions (beside the "module" interface) available on the module.

function **functionCount**()

Returns :

the number of functions on the module

On failure, throws an exception or returns a negative error code.

module→**functionId()****module.functionId()****YModule**

Retrieves the hardware identifier of the *n*th function on the module.

```
function functionId( functionIndex)
```

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a string corresponding to the unambiguous hardware identifier of the requested module function

On failure, throws an exception or returns an empty string.

module→**functionName()****module.functionName()**

YModule

Retrieves the logical name of the *n*th function on the module.

function **functionName**(**functionIndex**)

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a string corresponding to the logical name of the requested module function

On failure, throws an exception or returns an empty string.

module→**functionValue()****module.functionValue()****YModule**

Retrieves the advertised value of the *n*th function on the module.

```
function functionValue( functionIndex)
```

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a short string (up to 6 characters) corresponding to the advertised value of the requested module function

On failure, throws an exception or returns an empty string.

module→**get_beacon()**

YModule

module→**beacon()****module.get_beacon()**

Returns the state of the localization beacon.

function **get_beacon()** ()

Returns :

either `Y_BEACON_OFF` or `Y_BEACON_ON`, according to the state of the localization beacon

On failure, throws an exception or returns `Y_BEACON_INVALID`.

module→**get_errorMessage()****YModule****module**→**errorMessage()****module.get_errorMessage()**

Returns the error message of the latest error with this module object.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this module object

module→**get_errorType()**

YModule

module→**errorType()****module.get_errorType()**

Returns the numerical error code of the latest error with this module object.

function **get_errorType()** ()

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this module object

module→**get_firmwareRelease()****YModule****module**→**firmwareRelease()****module.get_firmwareRelease()**

Returns the version of the firmware embedded in the module.

```
function get_firmwareRelease( )
```

Returns :

a string corresponding to the version of the firmware embedded in the module

On failure, throws an exception or returns `Y_FIRMWARERELEASE_INVALID`.

module→**get_hardwareId()**

YModule

module→**hardwareId()****module.get_hardwareId()**

Returns the unique hardware identifier of the module.

```
function get_hardwareId( )
```

The unique hardware identifier is made of the device serial number followed by string ".module".

Returns :

a string that uniquely identifies the module

module→**get_icon2d()****YModule****module**→**icon2d()****module.get_icon2d()**

Returns the icon of the module.

```
function get_icon2d( )
```

The icon is a PNG image and does not exceeds 1536 bytes.

Returns :

a binary buffer with module icon, in png format.

module→**get_lastLogs()**

YModule

module→**lastLogs()****module.get_lastLogs()**

Returns a string with last logs of the module.

function **get_lastLogs()**

This method return only logs that are still in the module.

Returns :

a string with last logs of the module.

module→**get_logicalName()****YModule****module**→**logicalName()****module.get_logicalName()**

Returns the logical name of the module.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the module

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

module→**get_luminosity()**

YModule

module→**luminosity()****module.get_luminosity()**

Returns the luminosity of the module informative leds (from 0 to 100).

```
function get_luminosity( )
```

Returns :

an integer corresponding to the luminosity of the module informative leds (from 0 to 100)

On failure, throws an exception or returns `Y_LUMINOSITY_INVALID`.

module→**get_persistentSettings()****YModule****module**→**persistentSettings()****module.get_persistentSettings()**

Returns the current state of persistent module settings.

```
function get_persistentSettings( )
```

Returns :

a value among `Y_PERSISTENTSETTINGS_LOADED`, `Y_PERSISTENTSETTINGS_SAVED` and `Y_PERSISTENTSETTINGS_MODIFIED` corresponding to the current state of persistent module settings

On failure, throws an exception or returns `Y_PERSISTENTSETTINGS_INVALID`.

module→**get_productId()**

YModule

module→**productId()****module.get_productId()**

Returns the USB device identifier of the module.

function **get_productId()** ()

Returns :

an integer corresponding to the USB device identifier of the module

On failure, throws an exception or returns `Y_PRODUCTID_INVALID`.

module→**get_productName()****YModule****module**→**productName()****module.get_productName()**

Returns the commercial name of the module, as set by the factory.

```
function get_productName( )
```

Returns :

a string corresponding to the commercial name of the module, as set by the factory

On failure, throws an exception or returns `Y_PRODUCTNAME_INVALID`.

module→**get_productRelease()**

YModule

module→**productRelease()**

module.get_productRelease()

Returns the hardware release version of the module.

function **get_productRelease()** ()

Returns :

an integer corresponding to the hardware release version of the module

On failure, throws an exception or returns Y_PRODUCTRELEASE_INVALID.

module→**get_rebootCountdown()****YModule****module**→**rebootCountdown()****module.get_rebootCountdown()**

Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.

```
function get_rebootCountdown( )
```

Returns :

an integer corresponding to the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled

On failure, throws an exception or returns `Y_REBOOTCOUNTDOWN_INVALID`.

module→**get_serialNumber()**

YModule

module→**serialNumber()****module.get_serialNumber()**

Returns the serial number of the module, as set by the factory.

function **get_serialNumber()**

Returns :

a string corresponding to the serial number of the module, as set by the factory

On failure, throws an exception or returns `Y_SERIALNUMBER_INVALID`.

module→**get_upTime()****YModule****module**→**upTime()****module.get_upTime()**

Returns the number of milliseconds spent since the module was powered on.

```
function get_upTime( )
```

Returns :

an integer corresponding to the number of milliseconds spent since the module was powered on

On failure, throws an exception or returns `Y_UPTIME_INVALID`.

module→**get_usbBandwidth()**

YModule

module→**usbBandwidth()**

module.get_usbBandwidth()

Returns the number of USB interfaces used by the module.

function **get_usbBandwidth()** ()

Returns :

either `Y_USBBANDWIDTH_SIMPLE` or `Y_USBBANDWIDTH_DOUBLE`, according to the number of USB interfaces used by the module

On failure, throws an exception or returns `Y_USBBANDWIDTH_INVALID`.

module→**get_usbCurrent()****YModule****module**→**usbCurrent()****module.get_usbCurrent()**

Returns the current consumed by the module on the USB bus, in milli-amps.

```
function get_usbCurrent( )
```

Returns :

an integer corresponding to the current consumed by the module on the USB bus, in milli-amps

On failure, throws an exception or returns `Y_USBCURRENT_INVALID`.

module→**get_userData()**

YModule

module→**userData()****module.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**()

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

module→**isOnline()****module.isOnline()****YModule**

Checks if the module is currently reachable, without raising any error.

```
function isOnline( )
```

If there are valid cached values for the module, that have not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the requested module.

Returns :

`true` if the module can be reached, and `false` otherwise

module→**isOnline_async()****module.isOnline_async()**

YModule

Checks if the module is currently reachable, without raising any error.

```
function isOnline_async( callback, context)
```

If there are valid cached values for the module, that have not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the requested module.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving module object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

module→**load()****module.load()**

YModule

Preloads the module cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all module attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded module parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

module→**load_async()****module.load_async()****YModule**

Preloads the module cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all module attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded module parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving module object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

module→**nextModule()****module.nextModule()****YModule**

Continues the module enumeration started using `yFirstModule()`.

```
function nextModule( )
```

Returns :

a pointer to a `YModule` object, corresponding to the next module found, or a `null` pointer if there are no more modules to enumerate.

module→reboot()**module.reboot()**

YModule

Schedules a simple module reboot after the given number of seconds.

```
function reboot( secBeforeReboot)
```

Parameters :

secBeforeReboot number of seconds before rebooting

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

module→**revertFromFlash()**
module.revertFromFlash()

YModule

Reloads the settings stored in the nonvolatile memory, as when the module is powered on.

```
function revertFromFlash( )
```

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

module→**saveToFlash()****module.saveToFlash()**

YModule

Saves current settings in the nonvolatile memory of the module.

```
function saveToFlash( )
```

Warning: the number of allowed save operations during a module life is limited (about 100000 cycles). Do not call this function within a loop.

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

module→**set_beacon()****YModule****module**→**setBeacon()****module.set_beacon()**

Turns on or off the module localization beacon.

```
function set_beacon( newval)
```

Parameters :

newval either Y_BEACON_OFF or Y_BEACON_ON

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module→**set_logicalName()**

YModule

module→**setLogicalName()****module.set_logicalName()**

Changes the logical name of the module.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module→**set_luminosity()****YModule****module**→**setLuminosity()****module.set_luminosity()**

Changes the luminosity of the module informative leds.

```
function set_luminosity( newval)
```

The parameter is a value between 0 and 100. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the luminosity of the module informative leds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module→**set_usbBandwidth()**

YModule

module→**setUsbBandwidth()**

module.set_usbBandwidth()

Changes the number of USB interfaces used by the module.

```
function set_usbBandwidth( newval)
```

You must reboot the module after changing this setting.

Parameters :

newval either `Y_USBBANDWIDTH_SIMPLE` or `Y_USBBANDWIDTH_DOUBLE`, according to the number of USB interfaces used by the module

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

module→**set_userData()****YModule****module**→**setUserData()****module.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

module→**triggerFirmwareUpdate()**
module.triggerFirmwareUpdate()

YModule

Schedules a module reboot into special firmware update mode.

```
function triggerFirmwareUpdate( secBeforeReboot)
```

Parameters :

secBeforeReboot number of seconds before rebooting

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

module→**wait_async()****module.wait_async()****YModule**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.26. Network function interface

YNetwork objects provide access to TCP/IP parameters of Yoctopuce modules that include a built-in network interface.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_network.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YNetwork = yoctolib.YNetwork;
php	require_once('yocto_network.php');
c++	#include "yocto_network.h"
m	#import "yocto_network.h"
pas	uses yocto_network;
vb	yocto_network.vb
cs	yocto_network.cs
java	import com.yoctopuce.YoctoAPI.YNetwork;
py	from yocto_network import *

Global functions

yFindNetwork(func)

Retrieves a network interface for a given identifier.

yFirstNetwork()

Starts the enumeration of network interfaces currently accessible.

YNetwork methods

network→callbackLogin(username, password)

Connects to the notification callback and saves the credentials required to log into it.

network→describe()

Returns a short text that describes unambiguously the instance of the network interface in the form TYPE (NAME) = SERIAL . FUNCTIONID.

network→get_adminPassword()

Returns a hash string if a password has been set for user "admin", or an empty string otherwise.

network→get_advertisedValue()

Returns the current value of the network interface (no more than 6 characters).

network→get_callbackCredentials()

Returns a hashed version of the notification callback credentials if set, or an empty string otherwise.

network→get_callbackEncoding()

Returns the encoding standard to use for representing notification values.

network→get_callbackMaxDelay()

Returns the maximum waiting time between two callback notifications, in seconds.

network→get_callbackMethod()

Returns the HTTP method used to notify callbacks for significant state changes.

network→get_callbackMinDelay()

Returns the minimum waiting time between two callback notifications, in seconds.

network→get_callbackUrl()

Returns the callback URL to notify of significant state changes.

network→get_discoverable()

Returns the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol).

network→get_errorMessage()

Returns the error message of the latest error with the network interface.

network→get_errorType()

Returns the numerical error code of the latest error with the network interface.

network→get_friendlyName()

Returns a global identifier of the network interface in the format `MODULE_NAME . FUNCTION_NAME`.

network→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

network→get_functionId()

Returns the hardware identifier of the network interface, without reference to the module.

network→get_hardwareId()

Returns the unique hardware identifier of the network interface in the form `SERIAL . FUNCTIONID`.

network→get_ipAddress()

Returns the IP address currently in use by the device.

network→get_logicalName()

Returns the logical name of the network interface.

network→get_macAddress()

Returns the MAC address of the network interface.

network→get_module()

Gets the `YModule` object for the device on which the function is located.

network→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

network→get_poeCurrent()

Returns the current consumed by the module from Power-over-Ethernet (PoE), in milli-amps.

network→get_primaryDNS()

Returns the IP address of the primary name server to be used by the module.

network→get_readiness()

Returns the current established working mode of the network interface.

network→get_router()

Returns the IP address of the router on the device subnet (default gateway).

network→get_secondaryDNS()

Returns the IP address of the secondary name server to be used by the module.

network→get_subnetMask()

Returns the subnet mask currently used by the device.

network→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

network→get_userPassword()

Returns a hash string if a password has been set for "user" user, or an empty string otherwise.

network→get_wwwWatchdogDelay()

Returns the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity.

network→isOnline()

Checks if the network interface is currently reachable, without raising any error.

network→isOnline_async(callback, context)

Checks if the network interface is currently reachable, without raising any error (asynchronous version).

network→load(msValidity)

Preloads the network interface cache with a specified validity duration.

network→load_async(msValidity, callback, context)

Preloads the network interface cache with a specified validity duration (asynchronous version).

network→nextNetwork()

Continues the enumeration of network interfaces started using `yFirstNetwork()`.

network→ping(host)

Pings `str_host` to test the network connectivity.

network→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

network→set_adminPassword(newval)

Changes the password for the "admin" user.

network→set_callbackCredentials(newval)

Changes the credentials required to connect to the callback address.

network→set_callbackEncoding(newval)

Changes the encoding standard to use for representing notification values.

network→set_callbackMaxDelay(newval)

Changes the maximum waiting time between two callback notifications, in seconds.

network→set_callbackMethod(newval)

Changes the HTTP method used to notify callbacks for significant state changes.

network→set_callbackMinDelay(newval)

Changes the minimum waiting time between two callback notifications, in seconds.

network→set_callbackUrl(newval)

Changes the callback URL to notify significant state changes.

network→set_discoverable(newval)

Changes the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol).

network→set_logicalName(newval)

Changes the logical name of the network interface.

network→set_primaryDNS(newval)

Changes the IP address of the primary name server to be used by the module.

network→set_secondaryDNS(newval)

Changes the IP address of the secondary name server to be used by the module.

network→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

network→set_userPassword(newval)

Changes the password for the "user" user.

network→set_wwwWatchdogDelay(newval)

Changes the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity.

network→useDHCP(fallbackIpAddr, fallbackSubnetMaskLen, fallbackRouter)

Changes the configuration of the network interface to enable the use of an IP address received from a DHCP server.

network→useStaticIP(ipAddress, subnetMaskLen, router)

Changes the configuration of the network interface to use a static IP address.

network→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YNetwork.FindNetwork() yFindNetwork()yFindNetwork()

YNetwork

Retrieves a network interface for a given identifier.

```
function yFindNetwork( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the network interface is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YNetwork.isOnline()` to test if the network interface is indeed online at a given time. In case of ambiguity when looking for a network interface by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the network interface

Returns :

a `YNetwork` object allowing you to drive the network interface.

**YNetwork.FirstNetwork()
yFirstNetwork()yFirstNetwork()**

YNetwork

Starts the enumeration of network interfaces currently accessible.

```
function yFirstNetwork( )
```

Use the method `YNetwork.nextNetwork()` to iterate on next network interfaces.

Returns :

a pointer to a `YNetwork` object, corresponding to the first network interface currently online, or a `null` pointer if there are none.

network→**callbackLogin()****network.callbackLogin()****YNetwork**

Connects to the notification callback and saves the credentials required to log into it.

```
function callbackLogin( username, password)
```

The password is not stored into the module, only a hashed copy of the credentials are saved. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

username username required to log to the callback

password password required to log to the callback

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**describe()****network.describe()****YNetwork**

Returns a short text that describes unambiguously the instance of the network interface in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the network interface (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

network→**get_adminPassword()**

YNetwork

network→**adminPassword()**

network.get_adminPassword()

Returns a hash string if a password has been set for user "admin", or an empty string otherwise.

```
function get_adminPassword( )
```

Returns :

a string corresponding to a hash string if a password has been set for user "admin", or an empty string otherwise

On failure, throws an exception or returns `Y_ADMINPASSWORD_INVALID`.

network→**get_advertisedValue()****YNetwork****network**→**advertisedValue()****network.get_advertisedValue()**

Returns the current value of the network interface (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the network interface (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

network→**get_callbackCredentials()**

YNetwork

network→**callbackCredentials()**

network.get_callbackCredentials()

Returns a hashed version of the notification callback credentials if set, or an empty string otherwise.

```
function get_callbackCredentials( )
```

Returns :

a string corresponding to a hashed version of the notification callback credentials if set, or an empty string otherwise

On failure, throws an exception or returns `Y_CALLBACKCREDENTIALS_INVALID`.

network→**get_callbackEncoding()****YNetwork****network**→**callbackEncoding()****network.get_callbackEncoding()**

Returns the encoding standard to use for representing notification values.

```
function get_callbackEncoding( )
```

Returns :

a value among `Y_CALLBACKENCODING_FORM`, `Y_CALLBACKENCODING_JSON`, `Y_CALLBACKENCODING_JSON_ARRAY`, `Y_CALLBACKENCODING_CSV` and `Y_CALLBACKENCODING_YOCTO_API` corresponding to the encoding standard to use for representing notification values

On failure, throws an exception or returns `Y_CALLBACKENCODING_INVALID`.

network→**get_callbackMaxDelay()**

YNetwork

network→**callbackMaxDelay()**

network.get_callbackMaxDelay()

Returns the maximum waiting time between two callback notifications, in seconds.

```
function get_callbackMaxDelay( )
```

Returns :

an integer corresponding to the maximum waiting time between two callback notifications, in seconds

On failure, throws an exception or returns `Y_CALLBACKMAXDELAY_INVALID`.

network→**get_callbackMethod()****YNetwork****network**→**callbackMethod()****network.get_callbackMethod()**

Returns the HTTP method used to notify callbacks for significant state changes.

```
function get_callbackMethod( )
```

Returns :

a value among `Y_CALLBACKMETHOD_POST`, `Y_CALLBACKMETHOD_GET` and `Y_CALLBACKMETHOD_PUT` corresponding to the HTTP method used to notify callbacks for significant state changes

On failure, throws an exception or returns `Y_CALLBACKMETHOD_INVALID`.

network→**get_callbackMinDelay()**
network→**callbackMinDelay()**
network.get_callbackMinDelay()

YNetwork

Returns the minimum waiting time between two callback notifications, in seconds.

```
function get_callbackMinDelay( )
```

Returns :

an integer corresponding to the minimum waiting time between two callback notifications, in seconds

On failure, throws an exception or returns `Y_CALLBACKMINDELAY_INVALID`.

network→**get_callbackUrl()****YNetwork****network**→**callbackUrl()****network.get_callbackUrl()**

Returns the callback URL to notify of significant state changes.

```
function get_callbackUrl( )
```

Returns :

a string corresponding to the callback URL to notify of significant state changes

On failure, throws an exception or returns `Y_CALLBACKURL_INVALID`.

network→**get_discoverable()**

YNetwork

network→**discoverable()****network.get_discoverable()**

Returns the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol).

```
function get_discoverable( )
```

Returns :

either `Y_DISCOVERABLE_FALSE` or `Y_DISCOVERABLE_TRUE`, according to the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol)

On failure, throws an exception or returns `Y_DISCOVERABLE_INVALID`.

network→`get_errorMessage()`**YNetwork****network**→`errorMessage()`**network**.`get_errorMessage()`

Returns the error message of the latest error with the network interface.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the network interface object

network→**get_errorType()**

YNetwork

network→**errorType()****network.get_errorType()**

Returns the numerical error code of the latest error with the network interface.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the network interface object

network→**get_friendlyName()****YNetwork****network**→**friendlyName()****network.get_friendlyName()**

Returns a global identifier of the network interface in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the network interface if they are defined, otherwise the serial number of the module and the hardware identifier of the network interface (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the network interface using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

network→**get_functionDescriptor()**
network→**functionDescriptor()**
network.get_functionDescriptor()

YNetwork

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

network→**get_functionId()****YNetwork****network**→**functionId()****network.get_functionId()**

Returns the hardware identifier of the network interface, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the network interface (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

network→**get_hardwareId()**

YNetwork

network→**hardwareId()****network.get_hardwareId()**

Returns the unique hardware identifier of the network interface in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the network interface. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the network interface (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

network→**get_ipAddress()****YNetwork****network**→**ipAddress()****network.get_ipAddress()**

Returns the IP address currently in use by the device.

```
function get_ipAddress( )
```

The address may have been configured statically, or provided by a DHCP server.

Returns :

a string corresponding to the IP address currently in use by the device

On failure, throws an exception or returns `Y_IPADDRESS_INVALID`.

network→**get_logicalName()**

YNetwork

network→**logicalName()****network.get_logicalName()**

Returns the logical name of the network interface.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the network interface. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

network→**get_macAddress()****YNetwork****network**→**macAddress()****network.get_macAddress()**

Returns the MAC address of the network interface.

```
function get_macAddress( )
```

The MAC address is also available on a sticker on the module, in both numeric and barcode forms.

Returns :

a string corresponding to the MAC address of the network interface

On failure, throws an exception or returns `Y_MACADDRESS_INVALID`.

network→get_module()

YNetwork

network→module()network.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

network→**get_module_async()****YNetwork****network**→**module_async()****network.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network→**get_poeCurrent()**

YNetwork

network→**poeCurrent()****network.get_poeCurrent()**

Returns the current consumed by the module from Power-over-Ethernet (PoE), in milli-amps.

```
function get_poeCurrent( )
```

The current consumption is measured after converting PoE source to 5 Volt, and should never exceed 1800 mA.

Returns :

an integer corresponding to the current consumed by the module from Power-over-Ethernet (PoE), in milli-amps

On failure, throws an exception or returns `Y_POECURRENT_INVALID`.

network→**get_primaryDNS()****YNetwork****network**→**primaryDNS()****network.get_primaryDNS()**

Returns the IP address of the primary name server to be used by the module.

```
function get_primaryDNS( )
```

Returns :

a string corresponding to the IP address of the primary name server to be used by the module

On failure, throws an exception or returns `Y_PRIMARYDNS_INVALID`.

network→**get_readiness()**

network→**readiness()****network.get_readiness()**

Returns the current established working mode of the network interface.

```
function get_readiness( )
```

Level zero (DOWN_0) means that no hardware link has been detected. Either there is no signal on the network cable, or the selected wireless access point cannot be detected. Level 1 (LIVE_1) is reached when the network is detected, but is not yet connected. For a wireless network, this shows that the requested SSID is present. Level 2 (LINK_2) is reached when the hardware connection is established. For a wired network connection, level 2 means that the cable is attached at both ends. For a connection to a wireless access point, it shows that the security parameters are properly configured. For an ad-hoc wireless connection, it means that there is at least one other device connected on the ad-hoc network. Level 3 (DHCP_3) is reached when an IP address has been obtained using DHCP. Level 4 (DNS_4) is reached when the DNS server is reachable on the network. Level 5 (WWW_5) is reached when global connectivity is demonstrated by properly loading the current time from an NTP server.

Returns :

a value among Y_READINESS_DOWN, Y_READINESS_EXISTS, Y_READINESS_LINKED, Y_READINESS_LAN_OK and Y_READINESS_WWW_OK corresponding to the current established working mode of the network interface

On failure, throws an exception or returns Y_READINESS_INVALID.

network→**get_router()****YNetwork****network**→**router()****network.get_router()**

Returns the IP address of the router on the device subnet (default gateway).

```
function get_router( )
```

Returns :

a string corresponding to the IP address of the router on the device subnet (default gateway)

On failure, throws an exception or returns `Y_ROUTER_INVALID`.

network→**get_secondaryDNS()**
network→**secondaryDNS()**
network.get_secondaryDNS()

YNetwork

Returns the IP address of the secondary name server to be used by the module.

```
function get_secondaryDNS( )
```

Returns :

a string corresponding to the IP address of the secondary name server to be used by the module

On failure, throws an exception or returns `Y_SECONDARYDNS_INVALID`.

network→**get_subnetMask()****YNetwork****network**→**subnetMask()****network.get_subnetMask()**

Returns the subnet mask currently used by the device.

```
function get_subnetMask( )
```

Returns :

a string corresponding to the subnet mask currently used by the device

On failure, throws an exception or returns `Y_SUBNETMASK_INVALID`.

network→**get_userData()**

YNetwork

network→**userData()****network.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

network→**get_userPassword()****YNetwork****network**→**userPassword()****network.get_userPassword()**

Returns a hash string if a password has been set for "user" user, or an empty string otherwise.

```
function get_userPassword( )
```

Returns :

a string corresponding to a hash string if a password has been set for "user" user, or an empty string otherwise

On failure, throws an exception or returns `Y_USERPASSWORD_INVALID`.

network→**get_wwwWatchdogDelay()**

YNetwork

network→**wwwWatchdogDelay()**

network.get_wwwWatchdogDelay()

Returns the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity.

```
function get_wwwWatchdogDelay( )
```

A zero value disables automated reboot in case of Internet connectivity loss.

Returns :

an integer corresponding to the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity

On failure, throws an exception or returns `Y_WWWWATCHDOGDELAY_INVALID`.

network→**isOnline()****network.isOnline()****YNetwork**

Checks if the network interface is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the network interface in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the network interface.

Returns :

`true` if the network interface can be reached, and `false` otherwise

network→isOnline_async()network.isOnline_async()

YNetwork

Checks if the network interface is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the network interface in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network→**load()****network.load()****YNetwork**

Preloads the network interface cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

network→**load_async()****network.load_async()****YNetwork**

Preloads the network interface cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network→**nextNetwork()****network.nextNetwork()****YNetwork**

Continues the enumeration of network interfaces started using `yFirstNetwork()`.

```
function nextNetwork( )
```

Returns :

a pointer to a `YNetwork` object, corresponding to a network interface currently online, or a null pointer if there are no more network interfaces to enumerate.

network→ping()network.ping()

YNetwork

Pings str_host to test the network connectivity.

```
function ping( host)
```

Sends four ICMP ECHO_REQUEST requests from the module to the target str_host. This method returns a string with the result of the 4 ICMP ECHO_REQUEST requests.

Parameters :

host the hostname or the IP address of the target

Returns :

a string with the result of the ping.

network→registerValueCallback()
network.registerValueCallback()

YNetwork

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

network→**set_adminPassword()**
network→**setAdminPassword()**
network.set_adminPassword()

YNetwork

Changes the password for the "admin" user.

```
function set_adminPassword( newval)
```

This password becomes instantly required to perform any change of the module state. If the specified value is an empty string, a password is not required anymore. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the password for the "admin" user

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackCredentials()****YNetwork****network**→**setCallbackCredentials()****network.set_callbackCredentials()**

Changes the credentials required to connect to the callback address.

```
function set_callbackCredentials( newval)
```

The credentials must be provided as returned by function `get_callbackCredentials`, in the form `username:hash`. The method used to compute the hash varies according to the authentication scheme implemented by the callback, For Basic authentication, the hash is the MD5 of the string `username:password`. For Digest authentication, the hash is the MD5 of the string `username:realm:password`. For a simpler way to configure callback credentials, use function `callbackLogin` instead. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the credentials required to connect to the callback address

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackEncoding()**
network→**setCallbackEncoding()**
network.set_callbackEncoding()

YNetwork

Changes the encoding standard to use for representing notification values.

```
function set_callbackEncoding( newval)
```

Parameters :

newval a value among `Y_CALLBACKENCODING_FORM`, `Y_CALLBACKENCODING_JSON`, `Y_CALLBACKENCODING_JSON_ARRAY`, `Y_CALLBACKENCODING_CSV` and `Y_CALLBACKENCODING_YOCTO_API` corresponding to the encoding standard to use for representing notification values

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackMaxDelay()****YNetwork****network**→**setCallbackMaxDelay()****network.set_callbackMaxDelay()**

Changes the maximum waiting time between two callback notifications, in seconds.

```
function set_callbackMaxDelay( newval)
```

Parameters :

newval an integer corresponding to the maximum waiting time between two callback notifications, in seconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackMethod()****YNetwork****network**→**setCallbackMethod()****network.set_callbackMethod()**

Changes the HTTP method used to notify callbacks for significant state changes.

```
function set_callbackMethod( newval)
```

Parameters :

newval a value among `Y_CALLBACKMETHOD_POST`, `Y_CALLBACKMETHOD_GET` and `Y_CALLBACKMETHOD_PUT` corresponding to the HTTP method used to notify callbacks for significant state changes

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackMinDelay()****YNetwork****network**→**setCallbackMinDelay()****network.set_callbackMinDelay()**

Changes the minimum waiting time between two callback notifications, in seconds.

```
function set_callbackMinDelay( newval)
```

Parameters :

newval an integer corresponding to the minimum waiting time between two callback notifications, in seconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_callbackUrl()**

YNetwork

network→**setCallbackUrl()****network.set_callbackUrl()**

Changes the callback URL to notify significant state changes.

```
function set_callbackUrl( newval)
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the callback URL to notify significant state changes

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_discoverable()****YNetwork****network**→**setDiscoverable()****network.set_discoverable()**

Changes the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol).

```
function set_discoverable( newval)
```

Parameters :

newval either `Y_DISCOVERABLE_FALSE` or `Y_DISCOVERABLE_TRUE`, according to the activation state of the multicast announce protocols to allow easy discovery of the module in the network neighborhood (uPnP/Bonjour protocol)

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_logicalName()****YNetwork****network**→**setLogicalName()****network.set_logicalName()**

Changes the logical name of the network interface.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the network interface.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

network→**set_primaryDNS()****YNetwork****network**→**setPrimaryDNS()****network.set_primaryDNS()**

Changes the IP address of the primary name server to be used by the module.

```
function set_primaryDNS( newval)
```

When using DHCP, if a value is specified, it overrides the value received from the DHCP server. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

newval a string corresponding to the IP address of the primary name server to be used by the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_secondaryDNS()****YNetwork****network**→**setSecondaryDNS()****network.set_secondaryDNS()**

Changes the IP address of the secondary name server to be used by the module.

```
function set_secondaryDNS( newval)
```

When using DHCP, if a value is specified, it overrides the value received from the DHCP server. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

newval a string corresponding to the IP address of the secondary name server to be used by the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_userData()****YNetwork****network**→**setUserData()****network.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

network→**set_userPassword()****network**→**setUserPassword()****network.set_userPassword()**

Changes the password for the "user" user.

```
function set_userPassword( newval)
```

This password becomes instantly required to perform any use of the module. If the specified value is an empty string, a password is not required anymore. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the password for the "user" user

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→**set_wwwWatchdogDelay()****YNetwork****network**→**setWwwWatchdogDelay()****network.set_wwwWatchdogDelay()**

Changes the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity.

```
function set_wwwWatchdogDelay( newval)
```

A zero value disables automated reboot in case of Internet connectivity loss. The smallest valid non-zero timeout is 90 seconds.

Parameters :

newval an integer corresponding to the allowed downtime of the WWW link (in seconds) before triggering an automated reboot to try to recover Internet connectivity

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→useDHCP()**network.useDHCP()****YNetwork**

Changes the configuration of the network interface to enable the use of an IP address received from a DHCP server.

```
function useDHCP( fallbackIpAddr, fallbackSubnetMaskLen, fallbackRouter)
```

Until an address is received from a DHCP server, the module uses the IP parameters specified to this function. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

- | | |
|------------------------------|--|
| fallbackIpAddr | fallback IP address, to be used when no DHCP reply is received |
| fallbackSubnetMaskLen | fallback subnet mask length when no DHCP reply is received, as an integer (eg. 24 means 255.255.255.0) |
| fallbackRouter | fallback router IP address, to be used when no DHCP reply is received |

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→useStaticIP(network.useStaticIP)**YNetwork**

Changes the configuration of the network interface to use a static IP address.

```
function useStaticIP( ipAddress, subnetMaskLen, router)
```

Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ipAddress device IP address
subnetMaskLen subnet mask length, as an integer (eg. 24 means 255.255.255.0)
router router IP address (default gateway)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network→wait_async()network.wait_async()

YNetwork

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.27. OS control

The OScontrol object allows some control over the operating system running a VirtualHub. OsControl is available on the VirtualHub software only. This feature must be activated at the VirtualHub start up with -o option.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_oscontrol.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YOsControl = yoctolib.YOsControl;
php	require_once('yocto_oscontrol.php');
cpp	#include "yocto_oscontrol.h"
m	#import "yocto_oscontrol.h"
pas	uses yocto_oscontrol;
vb	yocto_oscontrol.vb
cs	yocto_oscontrol.cs
java	import com.yoctopuce.YoctoAPI.YOsControl;
py	from yocto_oscontrol import *

Global functions

yFindOsControl(func)

Retrieves OS control for a given identifier.

yFirstOsControl()

Starts the enumeration of OS control currently accessible.

YOsControl methods

oscontrol→describe()

Returns a short text that describes unambiguously the instance of the OS control in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

oscontrol→get_advertisedValue()

Returns the current value of the OS control (no more than 6 characters).

oscontrol→get_errorMessage()

Returns the error message of the latest error with the OS control.

oscontrol→get_errorType()

Returns the numerical error code of the latest error with the OS control.

oscontrol→get_friendlyName()

Returns a global identifier of the OS control in the format `MODULE_NAME . FUNCTION_NAME`.

oscontrol→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

oscontrol→get_functionId()

Returns the hardware identifier of the OS control, without reference to the module.

oscontrol→get_hardwareId()

Returns the unique hardware identifier of the OS control in the form `SERIAL . FUNCTIONID`.

oscontrol→get_logicalName()

Returns the logical name of the OS control.

oscontrol→get_module()

Gets the `YModule` object for the device on which the function is located.

oscontrol→get_module_async(callback, context)

3. Reference

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`oscontrol→get_shutdownCountdown()`

Returns the remaining number of seconds before the OS shutdown, or zero when no shutdown has been scheduled.

`oscontrol→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`oscontrol→isOnline()`

Checks if the OS control is currently reachable, without raising any error.

`oscontrol→isOnline_async(callback, context)`

Checks if the OS control is currently reachable, without raising any error (asynchronous version).

`oscontrol→load(msValidity)`

Preloads the OS control cache with a specified validity duration.

`oscontrol→load_async(msValidity, callback, context)`

Preloads the OS control cache with a specified validity duration (asynchronous version).

`oscontrol→nextOsControl()`

Continues the enumeration of OS control started using `yFirstOsControl()`.

`oscontrol→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`oscontrol→set_logicalName(newval)`

Changes the logical name of the OS control.

`oscontrol→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

`oscontrol→shutdown(secBeforeShutDown)`

Schedules an OS shutdown after a given number of seconds.

`oscontrol→wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

**YOsControl.FindOsControl()
yFindOsControl()yFindOsControl()**

YOsControl

Retrieves OS control for a given identifier.

```
function yFindOsControl( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the OS control is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YOsControl.isOnline()` to test if the OS control is indeed online at a given time. In case of ambiguity when looking for OS control by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the OS control

Returns :

a `YOsControl` object allowing you to drive the OS control.

YOsControl.FirstOsControl() yFirstOsControl()yFirstOsControl()

YOsControl

Starts the enumeration of OS control currently accessible.

```
function yFirstOsControl( )
```

Use the method `YOsControl.nextOsControl()` to iterate on next OS control.

Returns :

a pointer to a `YOsControl` object, corresponding to the first OS control currently online, or a `null` pointer if there are none.

oscontrol→describe()`oscontrol.describe()`**YOsControl**

Returns a short text that describes unambiguously the instance of the OS control in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function `describe()`

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the OS control (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

oscontrol→**get_advertisedValue()**

YOsControl

oscontrol→**advertisedValue()**

oscontrol.get_advertisedValue()

Returns the current value of the OS control (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the OS control (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

oscontrol→get_errorMessage()**YOsControl****oscontrol→errorMessage()****oscontrol.get_errorMessage()**

Returns the error message of the latest error with the OS control.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the OS control object

oscontrol→**get_errorType()**

YOsControl

oscontrol→**errorType()****oscontrol.get_errorType()**

Returns the numerical error code of the latest error with the OS control.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the OS control object

oscontrol→get_friendlyName()**YOsControl****oscontrol→friendlyName()****oscontrol.get_friendlyName()**

Returns a global identifier of the OS control in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the OS control if they are defined, otherwise the serial number of the module and the hardware identifier of the OS control (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the OS control using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

oscontrol→**get_functionDescriptor()**
oscontrol→**functionDescriptor()**
oscontrol.get_functionDescriptor()

YOsControl

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

oscontrol→**get_functionId()****YOsControl****oscontrol**→**functionId()****oscontrol.get_functionId()**

Returns the hardware identifier of the OS control, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the OS control (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

oscontrol→**get_hardwareId()**

YOsControl

oscontrol→**hardwareId()****oscontrol.get_hardwareId()**

Returns the unique hardware identifier of the OS control in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the OS control. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the OS control (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

oscontrol→**get_logicalName()**
oscontrol→**logicalName()**
oscontrol.get_logicalName()

YOsControl

Returns the logical name of the OS control.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the OS control. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

oscontrol→**get_module()**

YOsControl

oscontrol→**module()****oscontrol.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

oscontrol→**get_module_async()**
oscontrol→**module_async()**
oscontrol.get_module_async()

YOsControl

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

oscontrol→get_shutdownCountdown()

YOsControl

oscontrol→shutdownCountdown()

oscontrol.get_shutdownCountdown()

Returns the remaining number of seconds before the OS shutdown, or zero when no shutdown has been scheduled.

```
function get_shutdownCountdown( )
```

Returns :

an integer corresponding to the remaining number of seconds before the OS shutdown, or zero when no shutdown has been scheduled

On failure, throws an exception or returns `Y_SHUTDOWNCOUNTDOWN_INVALID`.

oscontrol→**get_userData()****YOsControl****oscontrol**→**userData()****oscontrol.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

oscontrol→isOnline() oscontrol.isOnline()

YOsControl

Checks if the OS control is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the OS control in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the OS control.

Returns :

`true` if the OS control can be reached, and `false` otherwise

oscontrol→**isOnline_async()**
oscontrol.isOnline_async()

YOsControl

Checks if the OS control is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the OS control in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

oscontrol→**load()****oscontrol.load()****YOsControl**

Preloads the OS control cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

oscontrol→**load_async()****oscontrol.load_async()****YOsControl**

Preloads the OS control cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

oscontrol→**nextOsControl()**
oscontrol.nextOsControl()

YOsControl

Continues the enumeration of OS control started using `yFirstOsControl()`.

```
function nextOsControl( )
```

Returns :

a pointer to a `YOsControl` object, corresponding to OS control currently online, or a `null` pointer if there are no more OS control to enumerate.

oscontrol→**registerValueCallback()**
oscontrol.registerValueCallback()

YOsControl

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

oscontrol→**set_logicalName()**
oscontrol→**setLogicalName()**
oscontrol.set_logicalName()

YOsControl

Changes the logical name of the OS control.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the OS control.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

oscontrol→**set_userdata()****YOsControl****oscontrol**→**setUserData()****oscontrol.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data )
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

oscontrol→**shutdown()****oscontrol.shutdown()**

YOsControl

Schedules an OS shutdown after a given number of seconds.

```
function shutdown( secBeforeShutDown)
```

Parameters :

secBeforeShutDown number of seconds before shutdown

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

oscontrol→**wait_async()****oscontrol.wait_async()****YOsControl**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.28. Power function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_power.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YPower = yoctolib.YPower;
php	require_once('yocto_power.php');
c++	#include "yocto_power.h"
m	#import "yocto_power.h"
pas	uses yocto_power;
vb	yocto_power.vb
cs	yocto_power.cs
java	import com.yoctopuce.YoctoAPI.YPower;
py	from yocto_power import *

Global functions

yFindPower(func)

Retrieves a electrical power sensor for a given identifier.

yFirstPower()

Starts the enumeration of electrical power sensors currently accessible.

YPower methods

power→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

power→describe()

Returns a short text that describes unambiguously the instance of the electrical power sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

power→get_advertisedValue()

Returns the current value of the electrical power sensor (no more than 6 characters).

power→get_cosPhi()

Returns the power factor (the ratio between the real power consumed, measured in W, and the apparent power provided, measured in VA).

power→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

power→get_currentValue()

Returns the current measure for the electrical power.

power→get_errorMessage()

Returns the error message of the latest error with the electrical power sensor.

power→get_errorType()

Returns the numerical error code of the latest error with the electrical power sensor.

power→get_friendlyName()

Returns a global identifier of the electrical power sensor in the format `MODULE_NAME . FUNCTION_NAME`.

power→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

power→get_functionId()

Returns the hardware identifier of the electrical power sensor, without reference to the module.

power→**get_hardwareId()**

Returns the unique hardware identifier of the electrical power sensor in the form `SERIAL.FUNCTIONID`.

power→**get_highestValue()**

Returns the maximal value observed for the electrical power.

power→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

power→**get_logicalName()**

Returns the logical name of the electrical power sensor.

power→**get_lowestValue()**

Returns the minimal value observed for the electrical power.

power→**get_meter()**

Returns the energy counter, maintained by the wattmeter by integrating the power consumption over time.

power→**get_meterTimer()**

Returns the elapsed time since last energy counter reset, in seconds.

power→**get_module()**

Gets the `YModule` object for the device on which the function is located.

power→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

power→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

power→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

power→**get_resolution()**

Returns the resolution of the measured values.

power→**get_unit()**

Returns the measuring unit for the electrical power.

power→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

power→**isOnline()**

Checks if the electrical power sensor is currently reachable, without raising any error.

power→**isOnline_async(callback, context)**

Checks if the electrical power sensor is currently reachable, without raising any error (asynchronous version).

power→**load(msValidity)**

Preloads the electrical power sensor cache with a specified validity duration.

power→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

power→**load_async(msValidity, callback, context)**

Preloads the electrical power sensor cache with a specified validity duration (asynchronous version).

power→**nextPower()**

Continues the enumeration of electrical power sensors started using `yFirstPower()`.

power→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

power→**registerValueCallback(callback)**

3. Reference

Registers the callback function that is invoked on every change of advertised value.

power→**reset()**

Resets the energy counter.

power→**set_highestValue(newval)**

Changes the recorded maximal value observed pour the electrical power.

power→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

power→**set_logicalName(newval)**

Changes the logical name of the electrical power sensor.

power→**set_lowestValue(newval)**

Changes the recorded minimal value observed pour the electrical power.

power→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

power→**set_resolution(newval)**

Changes the resolution of the measured values.

power→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

power→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YPower.FindPower() yFindPower()yFindPower()

YPower

Retrieves a electrical power sensor for a given identifier.

```
function yFindPower( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the electrical power sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YPower.isOnline()` to test if the electrical power sensor is indeed online at a given time. In case of ambiguity when looking for a electrical power sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the electrical power sensor

Returns :

a `YPower` object allowing you to drive the electrical power sensor.

YPower.FirstPower()

YPower

yFirstPower()yFirstPower()

Starts the enumeration of electrical power sensors currently accessible.

```
function yFirstPower( )
```

Use the method `YPower.nextPower()` to iterate on next electrical power sensors.

Returns :

a pointer to a `YPower` object, corresponding to the first electrical power sensor currently online, or a `null` pointer if there are none.

power→calibrateFromPoints()
power.calibrateFromPoints()

YPower

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→describe()**power.describe()****YPower**

Returns a short text that describes unambiguously the instance of the electrical power sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the electrical power sensor (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

power→**get_advertisedValue()**

YPower

power→**advertisedValue()**

power.get_advertisedValue()

Returns the current value of the electrical power sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the electrical power sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

power→**get_cosPhi()**

YPower

power→**cosPhi()****power.get_cosPhi()**

Returns the power factor (the ratio between the real power consumed, measured in W, and the apparent power provided, measured in VA).

```
function get_cosPhi( )
```

Returns :

a floating point number corresponding to the power factor (the ratio between the real power consumed, measured in W, and the apparent power provided, measured in VA)

On failure, throws an exception or returns Y_COSPHI_INVALID.

power→**get_currentRawValue()****YPower****power**→**currentRawValue()****power.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

power→**get_currentValue()**

YPower

power→**currentValue()****power.get_currentValue()**

Returns the current measure for the electrical power.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the electrical power

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

power→**get_errorMessage()****YPower****power**→**errorMessage()****power**.**get_errorMessage()**

Returns the error message of the latest error with the electrical power sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the electrical power sensor object

power→**get_errorType()**

YPower

power→**errorType()****power.get_errorType()**

Returns the numerical error code of the latest error with the electrical power sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the electrical power sensor object

power→**get_friendlyName()****YPower****power**→**friendlyName()****power.get_friendlyName()**

Returns a global identifier of the electrical power sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the electrical power sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the electrical power sensor (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the electrical power sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

power→**get_functionDescriptor()**

YPower

power→**functionDescriptor()**

power.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

power→**get_functionId()****YPower****power**→**functionId()****power.get_functionId()**

Returns the hardware identifier of the electrical power sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the electrical power sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

power→**get_hardwareId()**

YPower

power→**hardwareId()****power.get_hardwareId()**

Returns the unique hardware identifier of the electrical power sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the electrical power sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the electrical power sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

power→**get_highestValue()****YPower****power**→**highestValue()****power.get_highestValue()**

Returns the maximal value observed for the electrical power.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the electrical power

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

power→**get_logFrequency()**

YPower

power→**logFrequency()****power.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

function **get_logFrequency()** ()

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

power→**get_logicalName()****YPower****power**→**logicalName()****power.get_logicalName()**

Returns the logical name of the electrical power sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the electrical power sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

power→**get_lowestValue()**

YPower

power→**lowestValue()****power.get_lowestValue()**

Returns the minimal value observed for the electrical power.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the electrical power

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

power→**get_meter()****YPower****power**→**meter()****power.get_meter()**

Returns the energy counter, maintained by the wattmeter by integrating the power consumption over time.

```
function get_meter( )
```

Note that this counter is reset at each start of the device.

Returns :

a floating point number corresponding to the energy counter, maintained by the wattmeter by integrating the power consumption over time

On failure, throws an exception or returns `Y_METER_INVALID`.

power→**get_meterTimer()**

YPower

power→**meterTimer()****power.get_meterTimer()**

Returns the elapsed time since last energy counter reset, in seconds.

```
function get_meterTimer( )
```

Returns :

an integer corresponding to the elapsed time since last energy counter reset, in seconds

On failure, throws an exception or returns `Y_METERTIMER_INVALID`.

power→**get_module()****YPower****power**→**module()****power.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

power→**get_module_async()****YPower****power**→**module_async()****power.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

power→**get_recordedData()****YPower****power**→**recordedData()****power.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

- startTime** the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.
- endTime** the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

power→**get_reportFrequency()**

YPower

power→**reportFrequency()**

power.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

function **get_reportFrequency()**

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

power→**get_resolution()****YPower****power**→**resolution()****power.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

power→**get_unit()**

YPower

power→**unit()****power.get_unit()**

Returns the measuring unit for the electrical power.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the electrical power

On failure, throws an exception or returns `Y_UNIT_INVALID`.

power→**get_userData()****YPower****power**→**userData()****power.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

power→**isOnline()****power.isOnline()**

YPower

Checks if the electrical power sensor is currently reachable, without raising any error.

function **isOnline**()

If there is a cached value for the electrical power sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the electrical power sensor.

Returns :

`true` if the electrical power sensor can be reached, and `false` otherwise

power→**isOnline_async()****power.isOnline_async()****YPower**

Checks if the electrical power sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the electrical power sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

power→**load()****power.load()****YPower**

Preloads the electrical power sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

power→loadCalibrationPoints()
power.loadCalibrationPoints()

YPower

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**load_async()****power.load_async()****YPower**

Preloads the electrical power sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

power→**nextPower()****power.nextPower()****YPower**

Continues the enumeration of electrical power sensors started using `yFirstPower()`.

```
function nextPower( )
```

Returns :

a pointer to a `YPower` object, corresponding to a electrical power sensor currently online, or a `null` pointer if there are no more electrical power sensors to enumerate.

power→**registerTimedReportCallback()**
power.registerTimedReportCallback()

YPower

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an YMeasure object describing the new advertised value.

power→**registerValueCallback()**
power.registerValueCallback()

YPower

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

power→reset()power.reset()

YPower

Resets the energy counter.

function **reset**()

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_highestValue()****YPower****power**→**setHighestValue()****power.set_highestValue()**

Changes the recorded maximal value observed pour the electrical power.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed pour the electrical power

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_logFrequency()**

YPower

power→**setLogFrequency()****power.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_logicalName()****YPower****power**→**setLogicalName()****power.set_logicalName()**

Changes the logical name of the electrical power sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the electrical power sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

power→**set_lowestValue()**

YPower

power→**setLowestValue()****power.set_lowestValue()**

Changes the recorded minimal value observed pour the electrical power.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed pour the electrical power

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_reportFrequency()****YPower****power**→**setReportFrequency()****power.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_resolution()**

YPower

power→**setResolution()****power.set_resolution()**

Changes the resolution of the measured values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

power→**set_userdata()****YPower****power**→**setUserData()****power.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

power→wait_async()power.wait_async()

YPower

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.29. Pressure function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_pressure.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YPressure = yoctolib.YPressure;
php	require_once('yocto_pressure.php');
c++	#include "yocto_pressure.h"
m	#import "yocto_pressure.h"
pas	uses yocto_pressure;
vb	yocto_pressure.vb
cs	yocto_pressure.cs
java	import com.yoctopuce.YoctoAPI.YPressure;
py	from yocto_pressure import *

Global functions

yFindPressure(func)

Retrieves a pressure sensor for a given identifier.

yFirstPressure()

Starts the enumeration of pressure sensors currently accessible.

YPressure methods

pressure→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

pressure→describe()

Returns a short text that describes unambiguously the instance of the pressure sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

pressure→get_advertisedValue()

Returns the current value of the pressure sensor (no more than 6 characters).

pressure→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

pressure→get_currentValue()

Returns the current measure for the pressure.

pressure→get_errorMessage()

Returns the error message of the latest error with the pressure sensor.

pressure→get_errorType()

Returns the numerical error code of the latest error with the pressure sensor.

pressure→get_friendlyName()

Returns a global identifier of the pressure sensor in the format `MODULE_NAME . FUNCTION_NAME`.

pressure→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

pressure→get_functionId()

Returns the hardware identifier of the pressure sensor, without reference to the module.

pressure→get_hardwareId()

Returns the unique hardware identifier of the pressure sensor in the form `SERIAL . FUNCTIONID`.

pressure→**get_highestValue()**

Returns the maximal value observed for the pressure.

pressure→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

pressure→**get_logicalName()**

Returns the logical name of the pressure sensor.

pressure→**get_lowestValue()**

Returns the minimal value observed for the pressure.

pressure→**get_module()**

Gets the YModule object for the device on which the function is located.

pressure→**get_module_async(callback, context)**

Gets the YModule object for the device on which the function is located (asynchronous version).

pressure→**get_recordedData(startTime, endTime)**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

pressure→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

pressure→**get_resolution()**

Returns the resolution of the measured values.

pressure→**get_unit()**

Returns the measuring unit for the pressure.

pressure→**get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

pressure→**isOnline()**

Checks if the pressure sensor is currently reachable, without raising any error.

pressure→**isOnline_async(callback, context)**

Checks if the pressure sensor is currently reachable, without raising any error (asynchronous version).

pressure→**load(msValidity)**

Preloads the pressure sensor cache with a specified validity duration.

pressure→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

pressure→**load_async(msValidity, callback, context)**

Preloads the pressure sensor cache with a specified validity duration (asynchronous version).

pressure→**nextPressure()**

Continues the enumeration of pressure sensors started using `yFirstPressure()`.

pressure→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

pressure→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

pressure→**set_highestValue(newval)**

Changes the recorded maximal value observed for the pressure.

pressure→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

pressure→**set_logicalName(newval)**

Changes the logical name of the pressure sensor.

pressure→**set_lowestValue(newval)**

Changes the recorded minimal value observed for the pressure.

pressure→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

pressure→**set_resolution(newval)**

Changes the resolution of the measured physical values.

pressure→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

pressure→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YPressure.FindPressure() yFindPressure()yFindPressure()

YPressure

Retrieves a pressure sensor for a given identifier.

```
function yFindPressure( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the pressure sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YPressure.isOnline()` to test if the pressure sensor is indeed online at a given time. In case of ambiguity when looking for a pressure sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the pressure sensor

Returns :

a `YPressure` object allowing you to drive the pressure sensor.

**YPressure.FirstPressure()
yFirstPressure()yFirstPressure()**

YPressure

Starts the enumeration of pressure sensors currently accessible.

```
function yFirstPressure( )
```

Use the method `YPressure.nextPressure()` to iterate on next pressure sensors.

Returns :

a pointer to a `YPressure` object, corresponding to the first pressure sensor currently online, or a `null` pointer if there are none.

pressure→**calibrateFromPoints()**
pressure.calibrateFromPoints()**YPressure**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**describe()****pressure.describe()****YPressure**

Returns a short text that describes unambiguously the instance of the pressure sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the pressure sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

pressure→**get_advertisedValue()**

YPressure

pressure→**advertisedValue()**

pressure.**get_advertisedValue()**

Returns the current value of the pressure sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the pressure sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

pressure→**get_currentRawValue()**

YPressure

pressure→**currentRawValue()**

pressure.get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

pressure→**get_currentValue()**

YPressure

pressure→**currentValue()****pressure.get_currentValue()**

Returns the current measure for the pressure.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the pressure

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

pressure→**get_errorMessage()****YPressure****pressure**→**errorMessage()****pressure.get_errorMessage()**

Returns the error message of the latest error with the pressure sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the pressure sensor object

pressure→**get_errorType()**

YPressure

pressure→**errorType()****pressure.get_errorType()**

Returns the numerical error code of the latest error with the pressure sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the pressure sensor object

pressure→**get_friendlyName()****YPressure****pressure**→**friendlyName()****pressure.get_friendlyName()**

Returns a global identifier of the pressure sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the pressure sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the pressure sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the pressure sensor using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

pressure→**get_functionDescriptor()**

YPressure

pressure→**functionDescriptor()**

pressure.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

pressure→**get_functionId()****YPressure****pressure**→**functionId()****pressure.get_functionId()**

Returns the hardware identifier of the pressure sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the pressure sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

pressure→**get_hardwareId()**

YPressure

pressure→**hardwareId()****pressure.get_hardwareId()**

Returns the unique hardware identifier of the pressure sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the pressure sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the pressure sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

pressure→**get_highestValue()**

YPressure

pressure→**highestValue()**

pressure.get_highestValue()

Returns the maximal value observed for the pressure.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the pressure

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

pressure→**get_logFrequency()**

YPressure

pressure→**logFrequency()**

pressure.get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

pressure→**get_logicalName()****YPressure****pressure**→**logicalName()****pressure.get_logicalName()**

Returns the logical name of the pressure sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the pressure sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

pressure→**get_lowestValue()**

YPressure

pressure→**lowestValue()****pressure.get_lowestValue()**

Returns the minimal value observed for the pressure.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the pressure

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

pressure→**get_module()****YPressure****pressure**→**module()****pressure.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

pressure→**get_module_async()****YPressure****pressure**→**module_async()****pressure.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure→**get_recordedData()****YPressure****pressure**→**recordedData()****pressure.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

pressure→**get_reportFrequency()**

YPressure

pressure→**reportFrequency()**

pressure.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency()
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

pressure→**get_resolution()****YPressure****pressure**→**resolution()****pressure.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

pressure→**get_unit()**

YPressure

pressure→**unit()****pressure.get_unit()**

Returns the measuring unit for the pressure.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the pressure

On failure, throws an exception or returns `Y_UNIT_INVALID`.

pressure→**get_userData()****YPressure****pressure**→**userData()****pressure.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

pressure→**isOnline()****pressure.isOnline()**

YPressure

Checks if the pressure sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the pressure sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the pressure sensor.

Returns :

`true` if the pressure sensor can be reached, and `false` otherwise

pressure→**isOnline_async()**
pressure.isOnline_async()

YPressure

Checks if the pressure sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the pressure sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure→**load()****pressure.load()****YPressure**

Preloads the pressure sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

pressure→**loadCalibrationPoints()**
pressure.loadCalibrationPoints()**YPressure**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**load_async()****pressure.load_async()****YPressure**

Preloads the pressure sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure→**nextPressure()****pressure.nextPressure()****YPressure**

Continues the enumeration of pressure sensors started using `yFirstPressure()`.

```
function nextPressure( )
```

Returns :

a pointer to a `YPressure` object, corresponding to a pressure sensor currently online, or a `null` pointer if there are no more pressure sensors to enumerate.

pressure→**registerTimedReportCallback()**
pressure.registerTimedReportCallback()

YPressure

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

pressure→**registerValueCallback()**
pressure.registerValueCallback()

YPressure

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

pressure→**set_highestValue()**

YPressure

pressure→**setHighestValue()**

pressure.set_highestValue()

Changes the recorded maximal value observed for the pressure.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed for the pressure

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**set_logFrequency()****YPressure****pressure**→**setLogFrequency()****pressure.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**set_logicalName()**

YPressure

pressure→**setLogicalName()**

pressure.set_logicalName()

Changes the logical name of the pressure sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the pressure sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

pressure→**set_lowestValue()**
pressure→**setLowestValue()**
pressure.set_lowestValue()

YPressure

Changes the recorded minimal value observed for the pressure.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed for the pressure

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**set_reportFrequency()**
pressure→**setReportFrequency()**
pressure.set_reportFrequency()

YPressure

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**set_resolution()****YPressure****pressure**→**setResolution()****pressure.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure→**set_userData()**

YPressure

pressure→**setUserData()****pressure.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

pressure→**wait_async()****pressure.wait_async()****YPressure**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.30. Pwm function interface

The Yoctopuce application programming interface allows you to configure, start, and stop the PWM.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_pwmoutput.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YPwmOutput = yoctolib.YPwmOutput;
php	require_once('yocto_pwmoutput.php');
cpp	#include "yocto_pwmoutput.h"
m	#import "yocto_pwmoutput.h"
pas	uses yocto_pwmoutput;
vb	yocto_pwmoutput.vb
cs	yocto_pwmoutput.cs
java	import com.yoctopuce.YoctoAPI.YPwmOutput;
py	from yocto_pwmoutput import *

Global functions

yFindPwmOutput(func)

Retrieves a PWM for a given identifier.

yFirstPwmOutput()

Starts the enumeration of PWMs currently accessible.

YPwmOutput methods

pwmoutput→describe()

Returns a short text that describes unambiguously the instance of the PWM in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

pwmoutput→dutyCycleMove(target, ms_duration)

Performs a smooth change of the pulse duration toward a given value.

pwmoutput→get_advertisedValue()

Returns the current value of the PWM (no more than 6 characters).

pwmoutput→get_dutyCycle()

Returns the PWM duty cycle, in per cents.

pwmoutput→get_dutyCycleAtPowerOn()

Returns the PWMs duty cycle at device power on as a floating point number between 0 and 100

pwmoutput→get_enabled()

Returns the state of the PWMs.

pwmoutput→get_enabledAtPowerOn()

Returns the state of the PWM at device power on.

pwmoutput→get_errorMessage()

Returns the error message of the latest error with the PWM.

pwmoutput→get_errorType()

Returns the numerical error code of the latest error with the PWM.

pwmoutput→get_frequency()

Returns the PWM frequency in Hz.

pwmoutput→get_friendlyName()

Returns a global identifier of the PWM in the format `MODULE_NAME . FUNCTION_NAME`.

pwmoutput→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

`pwmoutput→get_functionId()`

Returns the hardware identifier of the PWM, without reference to the module.

`pwmoutput→get_hardwareId()`

Returns the unique hardware identifier of the PWM in the form `SERIAL . FUNCTIONID`.

`pwmoutput→get_logicalName()`

Returns the logical name of the PWM.

`pwmoutput→get_module()`

Gets the `YModule` object for the device on which the function is located.

`pwmoutput→get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`pwmoutput→get_period()`

Returns the PWM period in milliseconds.

`pwmoutput→get_pulseDuration()`

Returns the PWM pulse length in milliseconds.

`pwmoutput→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`pwmoutput→isOnline()`

Checks if the PWM is currently reachable, without raising any error.

`pwmoutput→isOnline_async(callback, context)`

Checks if the PWM is currently reachable, without raising any error (asynchronous version).

`pwmoutput→load(msValidity)`

Preloads the PWM cache with a specified validity duration.

`pwmoutput→load_async(msValidity, callback, context)`

Preloads the PWM cache with a specified validity duration (asynchronous version).

`pwmoutput→nextPwmOutput()`

Continues the enumeration of PWMs started using `yFirstPwmOutput()`.

`pwmoutput→pulseDurationMove(ms_target, ms_duration)`

Performs a smooth transition of the pulse duration toward a given value.

`pwmoutput→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`pwmoutput→set_dutyCycle(newval)`

Changes the PWM duty cycle, in per cents.

`pwmoutput→set_dutyCycleAtPowerOn(newval)`

Changes the PWM duty cycle at device power on.

`pwmoutput→set_enabled(newval)`

Stops or starts the PWM.

`pwmoutput→set_enabledAtPowerOn(newval)`

Changes the state of the PWM at device power on.

`pwmoutput→set_frequency(newval)`

Changes the PWM frequency.

`pwmoutput→set_logicalName(newval)`

Changes the logical name of the PWM.

`pwmoutput→set_period(newval)`

Changes the PWM period.

3. Reference

pwmoutput→**set_pulseDuration(newval)**

Changes the PWM pulse length, in milliseconds.

pwmoutput→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

pwmoutput→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YPwmOutput.FindPwmOutput() yFindPwmOutput(yFindPwmOutput())

YPwmOutput

Retrieves a PWM for a given identifier.

```
function yFindPwmOutput( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the PWM is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YPwmOutput.isOnline()` to test if the PWM is indeed online at a given time. In case of ambiguity when looking for a PWM by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the PWM

Returns :

a `YPwmOutput` object allowing you to drive the PWM.

YPwmOutput.FirstPwmOutput() yFirstPwmOutput()yFirstPwmOutput()

YPwmOutput

Starts the enumeration of PWMs currently accessible.

```
function yFirstPwmOutput( )
```

Use the method `YPwmOutput.nextPwmOutput()` to iterate on next PWMs.

Returns :

a pointer to a `YPwmOutput` object, corresponding to the first PWM currently online, or a `null` pointer if there are none.

pwmoutput→describe()**pwmoutput.describe()****YPwmOutput**

Returns a short text that describes unambiguously the instance of the PWM in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the PWM (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

pwmoutput→dutyCycleMove()
pwmoutput.dutyCycleMove()

YPwmOutput

Performs a smooth change of the pulse duration toward a given value.

```
function dutyCycleMove( target, ms_duration)
```

Parameters :

- target** new duty cycle at the end of the transition (floating-point number, between 0 and 1)
- ms_duration** total duration of the transition, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

pwmoutput→**get_advertisedValue()**

YPwmOutput

pwmoutput→**advertisedValue()**

pwmoutput.get_advertisedValue()

Returns the current value of the PWM (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the PWM (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

`pwmoutput`→`get_dutyCycle()`

YPwmOutput

`pwmoutput`→`dutyCycle()``pwmoutput.get_dutyCycle()`

Returns the PWM duty cycle, in per cents.

```
function get_dutyCycle( )
```

Returns :

a floating point number corresponding to the PWM duty cycle, in per cents

On failure, throws an exception or returns `Y_DUTYCYCLE_INVALID`.

`pwmoutput`→`get_dutyCycleAtPowerOn()`

`YPwmOutput`

`pwmoutput`→`dutyCycleAtPowerOn()`

`pwmoutput.get_dutyCycleAtPowerOn()`

Returns the PWMs duty cycle at device power on as a floating point number between 0 and 100

```
function get_dutyCycleAtPowerOn( )
```

Returns :

a floating point number corresponding to the PWMs duty cycle at device power on as a floating point number between 0 and 100

On failure, throws an exception or returns `Y_DUTYCYCLEATPOWERON_INVALID`.

`pwmoutput`→`get_enabled()`

YPwmOutput

`pwmoutput`→`enabled()``pwmoutput.get_enabled()`

Returns the state of the PWMs.

```
function get_enabled( )
```

Returns :

either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to the state of the PWMs

On failure, throws an exception or returns `Y_ENABLED_INVALID`.

pwmoutput→get_enabledAtPowerOn()

YPwmOutput

pwmoutput→enabledAtPowerOn()

pwmoutput.get_enabledAtPowerOn()

Returns the state of the PWM at device power on.

```
function get_enabledAtPowerOn( )
```

Returns :

either `Y_ENABLEDATPOWERON_FALSE` or `Y_ENABLEDATPOWERON_TRUE`, according to the state of the PWM at device power on

On failure, throws an exception or returns `Y_ENABLEDATPOWERON_INVALID`.

`pwmoutput→get_errorMessage()`

YPwmOutput

`pwmoutput→errorMessage()`

`pwmoutput.get_errorMessage()`

Returns the error message of the latest error with the PWM.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the PWM object

pwmoutput→**get_errorType()****YPwmOutput****pwmoutput**→**errorType()****pwmoutput.get_errorType()**

Returns the numerical error code of the latest error with the PWM.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the PWM object

`pwmoutput`→`get_frequency()`

`YPwmOutput`

`pwmoutput`→`frequency()``pwmoutput.get_frequency()`

Returns the PWM frequency in Hz.

```
function get_frequency() ( )
```

Returns :

an integer corresponding to the PWM frequency in Hz

On failure, throws an exception or returns `Y_FREQUENCY_INVALID`.

pwmoutput→**get_friendlyName()****YPwmOutput****pwmoutput**→**friendlyName()****pwmoutput.get_friendlyName()**

Returns a global identifier of the PWM in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the PWM if they are defined, otherwise the serial number of the module and the hardware identifier of the PWM (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the PWM using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

pwmoutput→get_functionDescriptor()
pwmoutput→functionDescriptor()
pwmoutput.get_functionDescriptor()

YPwmOutput

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

pwmoutput→**get_functionId()****YPwmOutput****pwmoutput**→**functionId()****pwmoutput.get_functionId()**

Returns the hardware identifier of the PWM, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the PWM (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`pwmoutput→get_hardwareId()`

YPwmOutput

`pwmoutput→hardwareId()`

`pwmoutput.get_hardwareId()`

Returns the unique hardware identifier of the PWM in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the PWM. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the PWM (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

pwmoutput→**get_logicalName()**

YPwmOutput

pwmoutput→**logicalName()**

pwmoutput.get_logicalName()

Returns the logical name of the PWM.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the PWM. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

pwmoutput→get_module()

YPwmOutput

pwmoutput→module()pwmoutput.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

pwmoutput→**get_module_async()****YPwmOutput****pwmoutput**→**module_async()****pwmoutput.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

`pwmoutput`→`get_period()`

YPwmOutput

`pwmoutput`→`period()``pwmoutput.get_period()`

Returns the PWM period in milliseconds.

```
function get_period( )
```

Returns :

a floating point number corresponding to the PWM period in milliseconds

On failure, throws an exception or returns `Y_PERIOD_INVALID`.

pwmoutput→get_pulseDuration()

YPwmOutput

pwmoutput→pulseDuration()

pwmoutput.get_pulseDuration()

Returns the PWM pulse length in milliseconds.

```
function get_pulseDuration( )
```

Returns :

a floating point number corresponding to the PWM pulse length in milliseconds

On failure, throws an exception or returns `Y_PULSEDURATION_INVALID`.

pwmoutput→get_userData()

YPwmOutput

pwmoutput→userData()pwmoutput.get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

pwmoutput→**isOnline()****pwmoutput.isOnline()****YPwmOutput**

Checks if the PWM is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the PWM in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the PWM.

Returns :

`true` if the PWM can be reached, and `false` otherwise

**pwmoutput→isOnline_async()
pwmoutput.isOnline_async()****YPwmOutput**

Checks if the PWM is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the PWM in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pwmoutput→**load()****pwmoutput.load()****YPwmOutput**

Preloads the PWM cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

pwmoutput→load_async()**pwmoutput.load_async()****YPwmOutput**

Preloads the PWM cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pwmoutput→**nextPwmOutput()**
pwmoutput.nextPwmOutput()

YPwmOutput

Continues the enumeration of PWMs started using `yFirstPwmOutput()`.

```
function nextPwmOutput()
```

Returns :

a pointer to a `YPwmOutput` object, corresponding to a PWM currently online, or a `null` pointer if there are no more PWMs to enumerate.

**pwmoutput→pulseDurationMove()
pwmoutput.pulseDurationMove()****YPwmOutput**

Performs a smooth transistion of the pulse duration toward a given value.

```
function pulseDurationMove( ms_target, ms_duration)
```

Any period, frequency, duty cycle or pulse width change will cancel any ongoing transition process.

Parameters :

ms_target new pulse duration at the end of the transition (floating-point number, representing the pulse duration in milliseconds)

ms_duration total duration of the transition, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

pwmoutput→**registerValueCallback()**
pwmoutput.registerValueCallback()

YPwmOutput

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

pwmoutput→set_dutyCycle()
pwmoutput→setDutyCycle()
pwmoutput.set_dutyCycle()

YPwmOutput

Changes the PWM duty cycle, in per cents.

```
function set_dutyCycle( newval)
```

Parameters :

newval a floating point number corresponding to the PWM duty cycle, in per cents

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pwmoutput→**set_dutyCycleAtPowerOn()**
pwmoutput→**setDutyCycleAtPowerOn()**
pwmoutput.set_dutyCycleAtPowerOn()

YPwmOutput

Changes the PWM duty cycle at device power on.

```
function set_dutyCycleAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval a floating point number corresponding to the PWM duty cycle at device power on

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

`pwmoutput`→`set_enabled()`

YPwmOutput

`pwmoutput`→`setEnabled()``pwmoutput.set_enabled()`

Stops or starts the PWM.

```
function set_enabled( newval)
```

Parameters :

newval either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

`pwmoutput`→`set_enabledAtPowerOn()`
`pwmoutput`→`setEnabledAtPowerOn()`
`pwmoutput.set_enabledAtPowerOn()`

YPwmOutput

Changes the state of the PWM at device power on.

```
function set_enabledAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval either `Y_ENABLEDATPOWERON_FALSE` or `Y_ENABLEDATPOWERON_TRUE`, according to the state of the PWM at device power on

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

`pwmoutput→set_frequency()`
`pwmoutput→setFrequency()`
`pwmoutput.set_frequency()`

YPwmOutput

Changes the PWM frequency.

```
function set_frequency( newval)
```

The duty cycle is kept unchanged thanks to an automatic pulse width change.

Parameters :

newval an integer corresponding to the PWM frequency

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pwmoutput→**set_logicalName()****YPwmOutput****pwmoutput**→**setLogicalName()****pwmoutput.set_logicalName()**

Changes the logical name of the PWM.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the PWM.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

`pwmoutput`→`set_period()`

YPwmOutput

`pwmoutput`→`setPeriod()``pwmoutput.set_period()`

Changes the PWM period.

```
function set_period( newval)
```

Parameters :

newval a floating point number corresponding to the PWM period

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pwmoutput→set_pulseDuration()
pwmoutput→setPulseDuration()
pwmoutput.set_pulseDuration()

YPwmOutput

Changes the PWM pulse length, in milliseconds.

```
function set_pulseDuration( newval)
```

A pulse length cannot be longer than period, otherwise it is truncated.

Parameters :

newval a floating point number corresponding to the PWM pulse length, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

`pwmoutput→set_userData()`
`pwmoutput→setUserData()`
`pwmoutput.set_userData()`

YPwmOutput

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

pwmoutput→**wait_async()****pwmoutput.wait_async()****YPwmOutput**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.31. PwmPowerSource function interface

The Yoctopuce application programming interface allows you to configure the voltage source used by all PWM on the same device.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_pwmpowersource.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YPwmPowerSource = yoctolib.YPwmPowerSource;
php	require_once('yocto_pwmpowersource.php');
c++	#include "yocto_pwmpowersource.h"
m	#import "yocto_pwmpowersource.h"
pas	uses yocto_pwmpowersource;
vb	yocto_pwmpowersource.vb
cs	yocto_pwmpowersource.cs
java	import com.yoctopuce.YoctoAPI.YPwmPowerSource;
py	from yocto_pwmpowersource import *

Global functions

yFindPwmPowerSource(func)

Retrieves a voltage source for a given identifier.

yFirstPwmPowerSource()

Starts the enumeration of Voltage sources currently accessible.

YPwmPowerSource methods

pwmpowersource→describe()

Returns a short text that describes unambiguously the instance of the voltage source in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

pwmpowersource→get_advertisedValue()

Returns the current value of the voltage source (no more than 6 characters).

pwmpowersource→get_errorMessage()

Returns the error message of the latest error with the voltage source.

pwmpowersource→get_errorType()

Returns the numerical error code of the latest error with the voltage source.

pwmpowersource→get_friendlyName()

Returns a global identifier of the voltage source in the format `MODULE_NAME . FUNCTION_NAME`.

pwmpowersource→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

pwmpowersource→get_functionId()

Returns the hardware identifier of the voltage source, without reference to the module.

pwmpowersource→get_hardwareId()

Returns the unique hardware identifier of the voltage source in the form `SERIAL . FUNCTIONID`.

pwmpowersource→get_logicalName()

Returns the logical name of the voltage source.

pwmpowersource→get_module()

Gets the `YModule` object for the device on which the function is located.

pwmpowersource→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

pwmpowersource→**get_powerMode()**

Returns the selected power source for the PWM on the same device

pwmpowersource→**get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

pwmpowersource→**isOnline()**

Checks if the voltage source is currently reachable, without raising any error.

pwmpowersource→**isOnline_async(callback, context)**

Checks if the voltage source is currently reachable, without raising any error (asynchronous version).

pwmpowersource→**load(msValidity)**

Preloads the voltage source cache with a specified validity duration.

pwmpowersource→**load_async(msValidity, callback, context)**

Preloads the voltage source cache with a specified validity duration (asynchronous version).

pwmpowersource→**nextPwmPowerSource()**

Continues the enumeration of Voltage sources started using `yFirstPwmPowerSource()`.

pwmpowersource→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

pwmpowersource→**set_logicalName(newval)**

Changes the logical name of the voltage source.

pwmpowersource→**set_powerMode(newval)**

Changes the PWM power source.

pwmpowersource→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

pwmpowersource→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YPwmPowerSource.FindPwmPowerSource() yFindPwmPowerSource()yFindPwmPowerSource()

YPwmPowerSource

Retrieves a voltage source for a given identifier.

```
function yFindPwmPowerSource( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the voltage source is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YPwmPowerSource.isOnline()` to test if the voltage source is indeed online at a given time. In case of ambiguity when looking for a voltage source by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the voltage source

Returns :

a `YPwmPowerSource` object allowing you to drive the voltage source.

**YPwmPowerSource.FirstPwmPowerSource()
yFirstPwmPowerSource(yFirstPwmPowerSource())**

YPwmPowerSource

Starts the enumeration of Voltage sources currently accessible.

```
function yFirstPwmPowerSource( )
```

Use the method `YPwmPowerSource.nextPwmPowerSource()` to iterate on next Voltage sources.

Returns :

a pointer to a `YPwmPowerSource` object, corresponding to the first source currently online, or a `null` pointer if there are none.

pwmpowersource→**describe()**
pwmpowersource.describe()**YPwmPowerSource**

Returns a short text that describes unambiguously the instance of the voltage source in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the voltage source (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

`pwmpowersource`→`get_advertisedValue()`

YPwmPowerSource

`pwmpowersource`→`advertisedValue()`

`pwmpowersource.get_advertisedValue()`

Returns the current value of the voltage source (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the voltage source (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

`pwmpowersource→get_errorMessage()`

YPwmPowerSource

`pwmpowersource→errorMessage()`

`pwmpowersource.get_errorMessage()`

Returns the error message of the latest error with the voltage source.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the voltage source object

`pwmpowersource`→`get_errorType()`

YPwmPowerSource

`pwmpowersource`→`errorType()`

`pwmpowersource.get_errorType()`

Returns the numerical error code of the latest error with the voltage source.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the voltage source object

pwmpowersource→get_friendlyName()

YPwmPowerSource

pwmpowersource→friendlyName()

pwmpowersource.get_friendlyName()

Returns a global identifier of the voltage source in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the voltage source if they are defined, otherwise the serial number of the module and the hardware identifier of the voltage source (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the voltage source using logical names (ex: `MyCustomName.relay1`)

On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

pwmpowersource→**get_functionDescriptor()**
pwmpowersource→**functionDescriptor()**
pwmpowersource.get_functionDescriptor()

YPwmPowerSource

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**()

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

pwmpowersource→**get_functionId()**

YPwmPowerSource

pwmpowersource→**functionId()**

pwmpowersource.get_functionId()

Returns the hardware identifier of the voltage source, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the voltage source (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`pwmpowersource`→`get_hardwareId()`

`YPwmPowerSource`

`pwmpowersource`→`hardwareId()`

`pwmpowersource.get_hardwareId()`

Returns the unique hardware identifier of the voltage source in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId() ( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the voltage source. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the voltage source (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

`pwmpowersource→get_logicalName()`

YPwmPowerSource

`pwmpowersource→logicalName()`

`pwmpowersource.get_logicalName()`

Returns the logical name of the voltage source.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the voltage source. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

pwmpowersource→get_module()**YPwmPowerSource****pwmpowersource→module()****pwmpowersource.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

pwmpowersource→**get_module_async()**
pwmpowersource→**module_async()**
pwmpowersource.**get_module_async()**

YPwmPowerSource

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pwmpowersource→**get_powerMode()**

YPwmPowerSource

pwmpowersource→**powerMode()**

pwmpowersource.get_powerMode()

Returns the selected power source for the PWM on the same device

```
function get_powerMode( )
```

Returns :

a value among `Y_POWERMODE_USB_5V`, `Y_POWERMODE_USB_3V`, `Y_POWERMODE_EXT_V` and `Y_POWERMODE_OPNDRN` corresponding to the selected power source for the PWM on the same device

On failure, throws an exception or returns `Y_POWERMODE_INVALID`.

pwmpowersource→get_userData()

YPwmPowerSource

pwmpowersource→userData()

pwmpowersource.get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

pwmpowersource→isOnline()
pwmpowersource.isOnline()

YPwmPowerSource

Checks if the voltage source is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the voltage source in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the voltage source.

Returns :

`true` if the voltage source can be reached, and `false` otherwise

pwmpowersource→**isOnline_async()**
pwmpowersource.isOnline_async()

YPwmPowerSource

Checks if the voltage source is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the voltage source in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pwmpowersource→load()pwmpowersource.load()**YPwmPowerSource**

Preloads the voltage source cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

pwmpowersource→**load_async()**
pwmpowersource.load_async()**YPwmPowerSource**

Preloads the voltage source cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pwmpowersource→nextPwmPowerSource()
pwmpowersource.nextPwmPowerSource()

YPwmPowerSource

Continues the enumeration of Voltage sources started using `yFirstPwmPowerSource()`.

```
function nextPwmPowerSource( )
```

Returns :

a pointer to a `YPwmPowerSource` object, corresponding to a voltage source currently online, or a `null` pointer if there are no more Voltage sources to enumerate.

pwmpowersource→**registerValueCallback()**
pwmpowersource.registerValueCallback()

YPwmPowerSource

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

pwmpowersource→**set_logicalName()****YPwmPowerSource****pwmpowersource**→**setLogicalName()****pwmpowersource.set_logicalName()**

Changes the logical name of the voltage source.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the voltage source.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

pwmpowersource→**set_powerMode()****YPwmPowerSource****pwmpowersource**→**setPowerMode()****pwmpowersource.set_powerMode()**

Changes the PWM power source.

```
function set_powerMode( newval)
```

PWM can use isolated 5V from USB, isolated 3V from USB or voltage from an external power source. The PWM can also work in open drain mode. In that mode, the PWM actively pulls the line down. Warning: this setting is common to all PWM on the same device. If you change that parameter, all PWM located on the same device are affected. If you want the change to be kept after a device reboot, make sure to call the matching module `saveToFlash()`.

Parameters :

newval a value among `Y_POWERMODE_USB_5V`, `Y_POWERMODE_USB_3V`, `Y_POWERMODE_EXT_V` and `Y_POWERMODE_OPNDRN` corresponding to the PWM power source

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

pwmpowersource→set_userdata()

YPwmPowerSource

pwmpowersource→setUserData()

pwmpowersource.set_userdata()

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

pwmpowersource→**wait_async()**
pwmpowersource.wait_async()

YPwmPowerSource

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.32. Quaternion interface

The Yoctopuce API YQt class provides direct access to the Yocto3D attitude estimation using a quaternion. It is usually not needed to use the YQt class directly, as the YGyro class provides a more convenient higher-level interface.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_gyro.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YGyro = yoctolib.YGyro;</code>
php	<code>require_once('yocto_gyro.php');</code>
c++	<code>#include "yocto_gyro.h"</code>
m	<code>#import "yocto_gyro.h"</code>
pas	<code>uses yocto_gyro;</code>
vb	<code>yocto_gyro.vb</code>
cs	<code>yocto_gyro.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YGyro;</code>
py	<code>from yocto_gyro import *</code>

Global functions

yFindQt(func)

Retrieves a quaternion component for a given identifier.

yFirstQt()

Starts the enumeration of quaternion components currently accessible.

YQt methods

qt→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

qt→describe()

Returns a short text that describes unambiguously the instance of the quaternion component in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

qt→get_advertisedValue()

Returns the current value of the quaternion component (no more than 6 characters).

qt→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

qt→get_currentValue()

Returns the current value of the value.

qt→get_errorMessage()

Returns the error message of the latest error with the quaternion component.

qt→get_errorType()

Returns the numerical error code of the latest error with the quaternion component.

qt→get_friendlyName()

Returns a global identifier of the quaternion component in the format `MODULE_NAME . FUNCTION_NAME`.

qt→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

qt→get_functionId()

Returns the hardware identifier of the quaternion component, without reference to the module.

qt→get_hardwareId()

3. Reference

	Returns the unique hardware identifier of the quaternion component in the form <code>SERIAL.FUNCTIONID</code> .
qt→get_highestValue()	Returns the maximal value observed for the value since the device was started.
qt→get_logFrequency()	Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.
qt→get_logicalName()	Returns the logical name of the quaternion component.
qt→get_lowestValue()	Returns the minimal value observed for the value since the device was started.
qt→get_module()	Gets the <code>YModule</code> object for the device on which the function is located.
qt→get_module_async(callback, context)	Gets the <code>YModule</code> object for the device on which the function is located (asynchronous version).
qt→get_recordedData(startTime, endTime)	Retrieves a <code>DataSet</code> object holding historical data for this sensor, for a specified time interval.
qt→get_reportFrequency()	Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.
qt→get_resolution()	Returns the resolution of the measured values.
qt→get_unit()	Returns the measuring unit for the value.
qt→get_userData()	Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
qt→isOnline()	Checks if the quaternion component is currently reachable, without raising any error.
qt→isOnline_async(callback, context)	Checks if the quaternion component is currently reachable, without raising any error (asynchronous version).
qt→load(msValidity)	Preloads the quaternion component cache with a specified validity duration.
qt→loadCalibrationPoints(rawValues, refValues)	Retrieves error correction data points previously entered using the method <code>calibrateFromPoints</code> .
qt→load_async(msValidity, callback, context)	Preloads the quaternion component cache with a specified validity duration (asynchronous version).
qt→nextQt()	Continues the enumeration of quaternion components started using <code>yFirstQt()</code> .
qt→registerTimedReportCallback(callback)	Registers the callback function that is invoked on every periodic timed notification.
qt→registerValueCallback(callback)	Registers the callback function that is invoked on every change of advertised value.
qt→set_highestValue(newval)	Changes the recorded maximal value observed.
qt→set_logFrequency(newval)	Changes the datalogger recording frequency for this function.
qt→set_logicalName(newval)	

Changes the logical name of the quaternion component.

qt→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

qt→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

qt→**set_resolution(newval)**

Changes the resolution of the measured physical values.

qt→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

qt→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YQt.FindQt() yFindQt(yFindQt())

YQt

Retrieves a quaternion component for a given identifier.

```
function yFindQt( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the quaternion component is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YQt.isOnline()` to test if the quaternion component is indeed online at a given time. In case of ambiguity when looking for a quaternion component by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the quaternion component

Returns :

a `YQt` object allowing you to drive the quaternion component.

YQt.FirstQt()
yFirstQt()yFirstQt()

YQt

Starts the enumeration of quaternion components currently accessible.

```
function yFirstQt( )
```

Use the method `YQt.nextQt()` to iterate on next quaternion components.

Returns :

a pointer to a `YQt` object, corresponding to the first quaternion component currently online, or a `null` pointer if there are none.

qt→calibrateFromPoints()qt.calibrateFromPoints()**YQt**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→describe()qt.describe()**YQt**

Returns a short text that describes unambiguously the instance of the quaternion component in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

```
function describe( )
```

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the quaternion component (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

qt→**get_advertisedValue()**

YQt

qt→**advertisedValue()****qt.get_advertisedValue()**

Returns the current value of the quaternion component (no more than 6 characters).

```
function get_advertisedValue()
```

Returns :

a string corresponding to the current value of the quaternion component (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

qt→**get_currentRawValue()**

YQt

qt→**currentRawValue()****qt.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

qt→**get_currentValue()**

YQt

qt→**currentValue()****qt.get_currentValue()**

Returns the current value of the value.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the value

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

qt→**get_errorMessage()**

YQt

qt→**errorMessage()****qt.get_errorMessage()**

Returns the error message of the latest error with the quaternion component.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the quaternion component object

qt→get_errorType()

YQt

qt→errorType()qt.get_errorType()

Returns the numerical error code of the latest error with the quaternion component.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the quaternion component object

qt→**get_friendlyName()**

YQt

qt→**friendlyName()****qt.get_friendlyName()**

Returns a global identifier of the quaternion component in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the quaternion component if they are defined, otherwise the serial number of the module and the hardware identifier of the quaternion component (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the quaternion component using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

qt→**get_functionDescriptor()**

YQt

qt→**functionDescriptor()****qt.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor()**

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

qt→**get_functionId()****YQt****qt**→**functionId()****qt.get_functionId()**

Returns the hardware identifier of the quaternion component, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the quaternion component (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

qt→**get_hardwareId()**

YQt

qt→**hardwareId()****qt.get_hardwareId()**

Returns the unique hardware identifier of the quaternion component in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the quaternion component. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the quaternion component (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

qt→**get_highestValue()**

YQt

qt→**highestValue()****qt.get_highestValue()**

Returns the maximal value observed for the value since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the value since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

qt→**get_logFrequency()**

YQt

qt→**logFrequency()****qt.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

qt→**get_logicalName()**

YQt

qt→**logicalName()****qt.get_logicalName()**

Returns the logical name of the quaternion component.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the quaternion component. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

qt→**get_lowestValue()**

YQt

qt→**lowestValue()****qt.get_lowestValue()**

Returns the minimal value observed for the value since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the value since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

qt→get_module()**YQt****qt→module()qt.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

qt→**get_module_async()****YQt****qt**→**module_async()****qt.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

qt→**get_recordedData()**

YQt

qt→**recordedData()****qt.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

qt→get_reportFrequency()

YQt

qt→reportFrequency()qt.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

qt→**get_resolution()**

YQt

qt→**resolution()****qt.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

qt→get_unit()

YQt

qt→unit()qt.get_unit()

Returns the measuring unit for the value.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

qt→get_userdata()

YQt

qt→userdata()qt.get_userdata()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

```
function get_userdata( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

qt→isOnline()qt.isOnline()

YQt

Checks if the quaternion component is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the quaternion component in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the quaternion component.

Returns :

`true` if the quaternion component can be reached, and `false` otherwise

qt→isOnline_async()qt.isOnline_async()**YQt**

Checks if the quaternion component is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the quaternion component in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

Preloads the quaternion component cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

qt→loadCalibrationPoints()qt.loadCalibrationPoints()**YQt**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→load_async()qt.load_async()

YQt

Preloads the quaternion component cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

qt→**nextQt()****qt.nextQt()****YQt**

Continues the enumeration of quaternion components started using `yFirstQt()`.

```
function nextQt( )
```

Returns :

a pointer to a `YQt` object, corresponding to a quaternion component currently online, or a `null` pointer if there are no more quaternion components to enumerate.

qt→registerTimedReportCallback()
qt.registerTimedReportCallback()

YQt

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

qt→registerValueCallback()
qt.registerValueCallback()

YQt

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

qt→**set_highestValue()**

YQt

qt→**setHighestValue()****qt.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→**set_logFrequency()**

YQt

qt→**setLogFrequency()****qt.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→**set_logicalName()**

YQt

qt→**setLogicalName()****qt.set_logicalName()**

Changes the logical name of the quaternion component.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the quaternion component.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

qt→**set_lowestValue()**

YQt

qt→**setLowestValue()****qt.set_lowestValue()**

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→**set_reportFrequency()**

YQt

qt→**setReportFrequency()****qt.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→**set_resolution()**

YQt

qt→**setResolution()****qt.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

qt→set_userdata()

YQt

qt→setUserData()qt.set_userdata()

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

qt→**wait_async()****qt.wait_async()**YQt

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.33. Real Time Clock function interface

The RealTimeClock function maintains and provides current date and time, even accross power cut lasting several days. It is the base for automated wake-up functions provided by the WakeUpScheduler. The current time may represent a local time as well as an UTC time, but no automatic time change will occur to account for daylight saving time.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_realtimelock.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YRealTimeClock = yoctolib.YRealTimeClock;
php	require_once('yocto_realtimelock.php');
c++	#include "yocto_realtimelock.h"
m	#import "yocto_realtimelock.h"
pas	uses yocto_realtimelock;
vb	yocto_realtimelock.vb
cs	yocto_realtimelock.cs
java	import com.yoctopuce.YoctoAPI.YRealTimeClock;
py	from yocto_realtimelock import *

Global functions

yFindRealTimeClock(func)

Retrieves a clock for a given identifier.

yFirstRealTimeClock()

Starts the enumeration of clocks currently accessible.

YRealTimeClock methods

realtimelock→describe()

Returns a short text that describes unambiguously the instance of the clock in the form TYPE (NAME) =SERIAL . FUNCTIONID.

realtimelock→get_advertisedValue()

Returns the current value of the clock (no more than 6 characters).

realtimelock→get_dateTime()

Returns the current time in the form "YYYY/MM/DD hh:mm:ss"

realtimelock→get_errorMessage()

Returns the error message of the latest error with the clock.

realtimelock→get_errorType()

Returns the numerical error code of the latest error with the clock.

realtimelock→get_friendlyName()

Returns a global identifier of the clock in the format MODULE_NAME . FUNCTION_NAME.

realtimelock→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

realtimelock→get_functionId()

Returns the hardware identifier of the clock, without reference to the module.

realtimelock→get_hardwareId()

Returns the unique hardware identifier of the clock in the form SERIAL . FUNCTIONID.

realtimelock→get_logicalName()

Returns the logical name of the clock.

realtimelock→get_module()

Gets the `YModule` object for the device on which the function is located.

`realtimeclock→get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`realtimeclock→get_timeSet()`

Returns true if the clock has been set, and false otherwise.

`realtimeclock→get_unixTime()`

Returns the current time in Unix format (number of elapsed seconds since Jan 1st, 1970).

`realtimeclock→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`realtimeclock→get_utcOffset()`

Returns the number of seconds between current time and UTC time (time zone).

`realtimeclock→isOnline()`

Checks if the clock is currently reachable, without raising any error.

`realtimeclock→isOnline_async(callback, context)`

Checks if the clock is currently reachable, without raising any error (asynchronous version).

`realtimeclock→load(msValidity)`

Preloads the clock cache with a specified validity duration.

`realtimeclock→load_async(msValidity, callback, context)`

Preloads the clock cache with a specified validity duration (asynchronous version).

`realtimeclock→nextRealTimeClock()`

Continues the enumeration of clocks started using `yFirstRealTimeClock()`.

`realtimeclock→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`realtimeclock→set_logicalName(newval)`

Changes the logical name of the clock.

`realtimeclock→set_unixTime(newval)`

Changes the current time.

`realtimeclock→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

`realtimeclock→set_utcOffset(newval)`

Changes the number of seconds between current time and UTC time (time zone).

`realtimeclock→wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YRealTimeClock.FindRealTimeClock() yFindRealTimeClock()yFindRealTimeClock()

YRealTimeClock

Retrieves a clock for a given identifier.

```
function yFindRealTimeClock( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the clock is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YRealTimeClock.isOnline()` to test if the clock is indeed online at a given time. In case of ambiguity when looking for a clock by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the clock

Returns :

a `YRealTimeClock` object allowing you to drive the clock.

**YRealTimeClock.FirstRealTimeClock()
yFirstRealTimeClock()yFirstRealTimeClock()**

YRealTimeClock

Starts the enumeration of clocks currently accessible.

```
function yFirstRealTimeClock( )
```

Use the method `YRealTimeClock.nextRealTimeClock()` to iterate on next clocks.

Returns :

a pointer to a `YRealTimeClock` object, corresponding to the first clock currently online, or a `null` pointer if there are none.

realtimeclock→describe()**realtimeclock.describe()****YRealTimeClock**

Returns a short text that describes unambiguously the instance of the clock in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the clock (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

realtimeclock→**get_advertisedValue()****YRealTimeClock****realtimeclock**→**advertisedValue()****realtimeclock.get_advertisedValue()**

Returns the current value of the clock (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the clock (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

`realtimeclock→get_dateTime()`

`YRealTimeClock`

`realtimeclock→dateTime()`

`realtimeclock.get_dateTime()`

Returns the current time in the form "YYYY/MM/DD hh:mm:ss"

```
function get_dateTime( )
```

Returns :

a string corresponding to the current time in the form "YYYY/MM/DD hh:mm:ss"

On failure, throws an exception or returns `Y_DATETIME_INVALID`.

realtimeclock→get_errorMessage()**YRealTimeClock****realtimeclock→errorMessage()****realtimeclock.get_errorMessage()**

Returns the error message of the latest error with the clock.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the clock object

`realtimeclock→get_errorType()`
`realtimeclock→errorType()`
`realtimeclock.get_errorType()`

YRealTimeClock

Returns the numerical error code of the latest error with the clock.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the clock object

realtimeclock→**get_friendlyName()****YRealTimeClock****realtimeclock**→**friendlyName()****realtimeclock.get_friendlyName()**

Returns a global identifier of the clock in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the clock if they are defined, otherwise the serial number of the module and the hardware identifier of the clock (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the clock using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

realtimeclock→get_functionDescriptor()
realtimeclock→functionDescriptor()
realtimeclock.get_functionDescriptor()

YRealTimeClock

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

realtimeclock→**get_functionId()****YRealTimeClock****realtimeclock**→**functionId()****realtimeclock.get_functionId()**

Returns the hardware identifier of the clock, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the clock (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`realtimeclock→get_hardwareId()`

YRealTimeClock

`realtimeclock→hardwareId()`

`realtimeclock.get_hardwareId()`

Returns the unique hardware identifier of the clock in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the clock. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the clock (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

realtimeclock→**get_logicalName()****YRealTimeClock****realtimeclock**→**logicalName()****realtimeclock.get_logicalName()**

Returns the logical name of the clock.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the clock. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

realtimeclock→get_module()

YRealTimeClock

realtimeclock→module()realtimeclock.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

realtimelock→**get_module_async()****YRealTimeClock****realtimelock**→**module_async()****realtimelock.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

realtimeclock→get_timeSet()

YRealTimeClock

realtimeclock→timeSet()realtimeclock.get_timeSet()

Returns true if the clock has been set, and false otherwise.

```
function get_timeSet( )
```

Returns :

either Y_TIMESET_FALSE or Y_TIMESET_TRUE, according to true if the clock has been set, and false otherwise

On failure, throws an exception or returns Y_TIMESET_INVALID.

realtimeclock→get_unixTime()**YRealTimeClock****realtimeclock→unixTime()****realtimeclock.get_unixTime()**

Returns the current time in Unix format (number of elapsed seconds since Jan 1st, 1970).

```
function get_unixTime( )
```

Returns :

an integer corresponding to the current time in Unix format (number of elapsed seconds since Jan 1st, 1970)

On failure, throws an exception or returns `Y_UNIXTIME_INVALID`.

realtimeclock→get_userdata()

YRealTimeClock

realtimeclock→userData()

realtimeclock.get_userdata()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

```
function get_userdata( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

realtimeclock→**get_utcOffset()****YRealTimeClock****realtimeclock**→**utcOffset()****realtimeclock.get_utcOffset()**

Returns the number of seconds between current time and UTC time (time zone).

```
function get_utcOffset( )
```

Returns :

an integer corresponding to the number of seconds between current time and UTC time (time zone)

On failure, throws an exception or returns `Y_UTC_OFFSET_INVALID`.

realtimeclock→isOnline()realtimeclock.isOnline()

YRealTimeClock

Checks if the clock is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the clock in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the clock.

Returns :

`true` if the clock can be reached, and `false` otherwise

**realtimeclock→isOnline_async()
realtimeclock.isOnline_async()**

YRealTimeClock

Checks if the clock is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the clock in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

realtimeclock→load()realtimeclock.load()

YRealTimeClock

Preloads the clock cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**realtimeclock→load_async()
realtimeclock.load_async()**

YRealTimeClock

Preloads the clock cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

realtimeclock→nextRealTimeClock()
realtimeclock.nextRealTimeClock()

YRealTimeClock

Continues the enumeration of clocks started using `yFirstRealTimeClock()`.

```
function nextRealTimeClock( )
```

Returns :

a pointer to a `YRealTimeClock` object, corresponding to a clock currently online, or a `null` pointer if there are no more clocks to enumerate.

realtimedclock→**registerValueCallback()**
realtimedclock.registerValueCallback()

YRealTimeClock

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

realtimeclock→set_logicalName()
realtimeclock→setLogicalName()
realtimeclock.set_logicalName()

YRealTimeClock

Changes the logical name of the clock.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the clock.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

`realtimeclock`→`set_unixTime()`
`realtimeclock`→`setUnixTime()`
`realtimeclock.set_unixTime()`

YRealTimeClock

Changes the current time.

```
function set_unixTime( newval)
```

Time is specified in Unix format (number of elapsed seconds since Jan 1st, 1970). If current UTC time is known, `utcOffset` will be automatically adjusted for the new specified time.

Parameters :

newval an integer corresponding to the current time

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

realtimeclock→set_userdata()
realtimeclock→setUserData()
realtimeclock.set_userdata()

YRealTimeClock

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data )
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

realtimeclock→set_utcOffset()**YRealTimeClock****realtimeclock→setUtcOffset()****realtimeclock.set_utcOffset()**

Changes the number of seconds between current time and UTC time (time zone).

```
function set_utcOffset( newval)
```

The timezone is automatically rounded to the nearest multiple of 15 minutes. If current UTC time is known, the current time will automatically be updated according to the selected time zone.

Parameters :

newval an integer corresponding to the number of seconds between current time and UTC time (time zone)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

**realtimeclock→wait_async()
realtimeclock.wait_async()**

YRealTimeClock

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.34. Reference frame configuration

This class is used to setup the base orientation of the Yocto-3D, so that the orientation functions, relative to the earth surface plane, use the proper reference frame. The class also implements a tridimensional sensor calibration process, which can compensate for local variations of standard gravity and improve the precision of the tilt sensors.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_refframe.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YRefFrame = yoctolib.YRefFrame;
php	require_once('yocto_refframe.php');
cpp	#include "yocto_refframe.h"
m	#import "yocto_refframe.h"
pas	uses yocto_refframe;
vb	yocto_refframe.vb
cs	yocto_refframe.cs
java	import com.yoctopuce.YoctoAPI.YRefFrame;
py	from yocto_refframe import *

Global functions

yFindRefFrame(func)

Retrieves a reference frame for a given identifier.

yFirstRefFrame()

Starts the enumeration of reference frames currently accessible.

YRefFrame methods

refframe→cancel3DCalibration()

Aborts the sensors tridimensional calibration process et restores normal settings.

refframe→describe()

Returns a short text that describes unambiguously the instance of the reference frame in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

refframe→get_3DCalibrationHint()

Returns instructions to proceed to the tridimensional calibration initiated with method `start3DCalibration`.

refframe→get_3DCalibrationLogMsg()

Returns the latest log message from the calibration process.

refframe→get_3DCalibrationProgress()

Returns the global process indicator for the tridimensional calibration initiated with method `start3DCalibration`.

refframe→get_3DCalibrationStage()

Returns index of the current stage of the calibration initiated with method `start3DCalibration`.

refframe→get_3DCalibrationStageProgress()

Returns the process indicator for the current stage of the calibration initiated with method `start3DCalibration`.

refframe→get_advertisedValue()

Returns the current value of the reference frame (no more than 6 characters).

refframe→get_bearing()

Returns the reference bearing used by the compass.

3. Reference

reiframe→**get_errorMessage()**

Returns the error message of the latest error with the reference frame.

reiframe→**get_errorType()**

Returns the numerical error code of the latest error with the reference frame.

reiframe→**get_friendlyName()**

Returns a global identifier of the reference frame in the format `MODULE_NAME . FUNCTION_NAME`.

reiframe→**get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

reiframe→**get_functionId()**

Returns the hardware identifier of the reference frame, without reference to the module.

reiframe→**get_hardwareId()**

Returns the unique hardware identifier of the reference frame in the form `SERIAL . FUNCTIONID`.

reiframe→**get_logicalName()**

Returns the logical name of the reference frame.

reiframe→**get_module()**

Gets the `YModule` object for the device on which the function is located.

reiframe→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

reiframe→**get_mountOrientation()**

Returns the installation orientation of the device, as configured in order to define the reference frame for the compass and the pitch/roll tilt sensors.

reiframe→**get_mountPosition()**

Returns the installation position of the device, as configured in order to define the reference frame for the compass and the pitch/roll tilt sensors.

reiframe→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

reiframe→**isOnline()**

Checks if the reference frame is currently reachable, without raising any error.

reiframe→**isOnline_async(callback, context)**

Checks if the reference frame is currently reachable, without raising any error (asynchronous version).

reiframe→**load(msValidity)**

Preloads the reference frame cache with a specified validity duration.

reiframe→**load_async(msValidity, callback, context)**

Preloads the reference frame cache with a specified validity duration (asynchronous version).

reiframe→**more3DCalibration()**

Continues the sensors tridimensional calibration process previously initiated using method `start3DCalibration`.

reiframe→**nextRefFrame()**

Continues the enumeration of reference frames started using `yFirstRefFrame()`.

reiframe→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

reiframe→**save3DCalibration()**

Applies the sensors tridimensional calibration parameters that have just been computed.

reiframe→**set_bearing(newval)**

Changes the reference bearing used by the compass.

reiframe→**set_logicalName(newval)**

Changes the logical name of the reference frame.

refframe→**set_mountPosition(position, orientation)**

Changes the compass and tilt sensor frame of reference.

refframe→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

refframe→**start3DCalibration()**

Initiates the sensors tridimensional calibration process.

refframe→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YRefFrame.FindRefFrame() yFindRefFrame()yFindRefFrame()

YRefFrame

Retrieves a reference frame for a given identifier.

```
function yFindRefFrame( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the reference frame is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YRefFrame.isOnline()` to test if the reference frame is indeed online at a given time. In case of ambiguity when looking for a reference frame by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the reference frame

Returns :

a `YRefFrame` object allowing you to drive the reference frame.

**YRefFrame.FirstRefFrame()
yFirstRefFrame(yFirstRefFrame())**

YRefFrame

Starts the enumeration of reference frames currently accessible.

```
function yFirstRefFrame( )
```

Use the method `YRefFrame.nextRefFrame()` to iterate on next reference frames.

Returns :

a pointer to a `YRefFrame` object, corresponding to the first reference frame currently online, or a `null` pointer if there are none.

refframe→**cancel3DCalibration()**
refframe.cancel3DCalibration()

YRefFrame

Aborts the sensors tridimensional calibration process et restores normal settings.

```
function cancel3DCalibration( )
```

On failure, throws an exception or returns a negative error code.

refframe→**describe()****refframe.describe()****YRefFrame**

Returns a short text that describes unambiguously the instance of the reference frame in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the reference frame (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

refframe→**get_3DCalibrationHint()**

YRefFrame

refframe→**3DCalibrationHint()**

refframe.get_3DCalibrationHint()

Returns instructions to proceed to the tridimensional calibration initiated with method `start3DCalibration`.

```
function get_3DCalibrationHint( )
```

Returns :

a character string.

refframe→**get_3DCalibrationLogMsg()**
refframe→**3DCalibrationLogMsg()**
refframe.get_3DCalibrationLogMsg()

YRefFrame

Returns the latest log message from the calibration process.

```
function get_3DCalibrationLogMsg( )
```

When no new message is available, returns an empty string.

Returns :

a character string.

refframe→get_3DCalibrationProgress()

YRefFrame

refframe→3DCalibrationProgress()

refframe.get_3DCalibrationProgress()

Returns the global process indicator for the tridimensional calibration initiated with method `start3DCalibration`.

function **get_3DCalibrationProgress()**

Returns :

an integer between 0 (not started) and 100 (stage completed).

refframe→**get_3DCalibrationStage()**
refframe→**3DCalibrationStage()**
refframe.get_3DCalibrationStage()

YRefFrame

Returns index of the current stage of the calibration initiated with method `start3DCalibration`.

```
function get_3DCalibrationStage( )
```

Returns :

an integer, growing each time a calibration stage is completed.

refframe→get_3DCalibrationStageProgress()

YRefFrame

refframe→3DCalibrationStageProgress()

refframe.get_3DCalibrationStageProgress()

Returns the process indicator for the current stage of the calibration initiated with method `start3DCalibration`.

```
function get_3DCalibrationStageProgress( )
```

Returns :

an integer between 0 (not started) and 100 (stage completed).

refframe→**get_advertisedValue()****YRefFrame****refframe**→**advertisedValue()****refframe.get_advertisedValue()**

Returns the current value of the reference frame (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the reference frame (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

refframe→**get_bearing()**

YRefFrame

refframe→**bearing()****refframe.get_bearing()**

Returns the reference bearing used by the compass.

```
function get_bearing( )
```

The relative bearing indicated by the compass is the difference between the measured magnetic heading and the reference bearing indicated here.

Returns :

a floating point number corresponding to the reference bearing used by the compass

On failure, throws an exception or returns `Y_BEARING_INVALID`.

refframe→**get_errorMessage()**
refframe→**errorMessage()**
refframe.**get_errorMessage()**

YRefFrame

Returns the error message of the latest error with the reference frame.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the reference frame object

refframe→**get_errorType()**

YRefFrame

refframe→**errorType()****refframe.get_errorType()**

Returns the numerical error code of the latest error with the reference frame.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the reference frame object

refframe→**get_friendlyName()****YRefFrame****refframe**→**friendlyName()****refframe.get_friendlyName()**

Returns a global identifier of the reference frame in the format `MODULE_NAME.FUNCTION_NAME`.

function **get_friendlyName()**

The returned string uses the logical names of the module and of the reference frame if they are defined, otherwise the serial number of the module and the hardware identifier of the reference frame (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the reference frame using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

refframe→**get_functionDescriptor()**
refframe→**functionDescriptor()**
refframe.get_functionDescriptor()

YRefFrame

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor()** ()

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

refframe→**get_functionId()****YRefFrame****refframe**→**functionId()****refframe.get_functionId()**

Returns the hardware identifier of the reference frame, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the reference frame (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

refframe→get_hardwareId()

YRefFrame

refframe→hardwareId()refframe.get_hardwareId()

Returns the unique hardware identifier of the reference frame in the form SERIAL.FUNCTIONID.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the reference frame. (for example RELAYLO1-123456.relay1)

Returns :

a string that uniquely identifies the reference frame (ex: RELAYLO1-123456.relay1) On failure, throws an exception or returns Y_HARDWAREID_INVALID.

refframe→**get_logicalName()****YRefFrame****refframe**→**logicalName()****refframe.get_logicalName()**

Returns the logical name of the reference frame.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the reference frame. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

refframe→get_module()

YRefFrame

refframe→module()refframe.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

refframe→**get_module_async()****YRefFrame****refframe**→**module_async()****refframe.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

refframe→**get_mountOrientation()**

YRefFrame

refframe→**mountOrientation()**

refframe.get_mountOrientation()

Returns the installation orientation of the device, as configured in order to define the reference frame for the compass and the pitch/roll tilt sensors.

```
function get_mountOrientation( )
```

Returns :

a value among the enumeration `Y_MOUNTORIENTATION` (`Y_MOUNTORIENTATION_TWELVE`, `Y_MOUNTORIENTATION_THREE`, `Y_MOUNTORIENTATION_SIX`, `Y_MOUNTORIENTATION_NINE`) corresponding to the orientation of the "X" arrow on the device, as on a clock dial seen from an observer in the center of the box. On the bottom face, the 12H orientation points to the front, while on the top face, the 12H orientation points to the rear.

On failure, throws an exception or returns a negative error code.

refframe→**get_mountPosition()****YRefFrame****refframe**→**mountPosition()****refframe.get_mountPosition()**

Returns the installation position of the device, as configured in order to define the reference frame for the compass and the pitch/roll tilt sensors.

```
function get_mountPosition( )
```

Returns :

a value among the Y_MOUNTPOSITION enumeration (Y_MOUNTPOSITION_BOTTOM, Y_MOUNTPOSITION_TOP, Y_MOUNTPOSITION_FRONT, Y_MOUNTPOSITION_RIGHT, Y_MOUNTPOSITION_REAR, Y_MOUNTPOSITION_LEFT), corresponding to the installation in a box, on one of the six faces.

On failure, throws an exception or returns a negative error code.

refframe→**get_userData()**

YRefFrame

refframe→**userData()****refframe.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

refframe→**isOnline()****refframe.isOnline()****YRefFrame**

Checks if the reference frame is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the reference frame in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the reference frame.

Returns :

`true` if the reference frame can be reached, and `false` otherwise

refframe→isOnline_async()refframe.isOnline_async()

YRefFrame

Checks if the reference frame is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the reference frame in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

refframe→**load()****refframe.load()****YRefFrame**

Preloads the reference frame cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

refframe→**load_async()****refframe.load_async()****YRefFrame**

Preloads the reference frame cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

refframe→**more3DCalibration()**
refframe.more3DCalibration()

YRefFrame

Continues the sensors tridimensional calibration process previously initiated using method `start3DCalibration`.

```
function more3DCalibration( )
```

This method should be called approximately 5 times per second, while positioning the device according to the instructions provided by method `get_3DCalibrationHint`. Note that the instructions change during the calibration process. On failure, throws an exception or returns a negative error code.

refframe→**nextRefFrame()****refframe.nextRefFrame()**

YRefFrame

Continues the enumeration of reference frames started using `yFirstRefFrame()`.

function **nextRefFrame()**

Returns :

a pointer to a `YRefFrame` object, corresponding to a reference frame currently online, or a `null` pointer if there are no more reference frames to enumerate.

refframe→**registerValueCallback()**
refframe.registerValueCallback()

YRefFrame

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

refframe→**save3DCalibration()**
refframe.save3DCalibration()

YRefFrame

Applies the sensors tridimensional calibration parameters that have just been computed.

```
function save3DCalibration( )
```

Remember to call the `saveToFlash()` method of the module if the changes must be kept when the device is restarted. On failure, throws an exception or returns a negative error code.

refframe→**set_bearing()****YRefFrame****refframe**→**setBearing()****refframe.set_bearing()**

Changes the reference bearing used by the compass.

```
function set_bearing( newval)
```

The relative bearing indicated by the compass is the difference between the measured magnetic heading and the reference bearing indicated here. For instance, if you setup as reference bearing the value of the earth magnetic declination, the compass will provide the orientation relative to the geographic North. Similarly, when the sensor is not mounted along the standard directions because it has an additional yaw angle, you can set this angle in the reference bearing so that the compass provides the expected natural direction. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a floating point number corresponding to the reference bearing used by the compass

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

refframe→**set_logicalName()**

YRefFrame

refframe→**setLogicalName()**

refframe.set_logicalName()

Changes the logical name of the reference frame.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the reference frame.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

refframe→set_mountPosition()**YRefFrame****refframe→setMountPosition()****refframe.set_mountPosition()**

Changes the compass and tilt sensor frame of reference.

```
function set_mountPosition( position, orientation)
```

The magnetic compass and the tilt sensors (pitch and roll) naturally work in the plane parallel to the earth surface. In case the device is not installed upright and horizontally, you must select its reference orientation (parallel to the earth surface) so that the measures are made relative to this position.

Parameters :

position a value among the Y_MOUNTPOSITION enumeration (Y_MOUNTPOSITION_BOTTOM, Y_MOUNTPOSITION_TOP, Y_MOUNTPOSITION_FRONT, Y_MOUNTPOSITION_RIGHT, Y_MOUNTPOSITION_REAR, Y_MOUNTPOSITION_LEFT), corresponding to the installation in a box, on one of the six faces.

orientation a value among the enumeration Y_MOUNTORIENTATION (Y_MOUNTORIENTATION_TWELVE, Y_MOUNTORIENTATION_THREE, Y_MOUNTORIENTATION_SIX, Y_MOUNTORIENTATION_NINE) corresponding to the orientation of the "X" arrow on the device, as on a clock dial seen from an observer in the center of the box. On the bottom face, the 12H orientation points to the front, while on the top face, the 12H orientation points to the rear. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

refframe→set_userdata()

YRefFrame

refframe→setUserData()refframe.set_userdata()

Stores a user context provided as argument in the userData attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

refframe→**start3DCalibration()**
refframe.start3DCalibration()

YRefFrame

Initiates the sensors tridimensional calibration process.

```
function start3DCalibration( )
```

This calibration is used at low level for inertial position estimation and to enhance the precision of the tilt sensors. After calling this method, the device should be moved according to the instructions provided by method `get_3DCalibrationHint`, and `more3DCalibration` should be invoked about 5 times per second. The calibration procedure is completed when the method `get_3DCalibrationProgress` returns 100. At this point, the computed calibration parameters can be applied using method `save3DCalibration`. The calibration process can be canceled at any time using method `cancel3DCalibration`. On failure, throws an exception or returns a negative error code.

refframe→**wait_async()****refframe.wait_async()**

YRefFrame

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.35. Relay function interface

The Yoctopuce application programming interface allows you to switch the relay state. This change is not persistent: the relay will automatically return to its idle position whenever power is lost or if the module is restarted. The library can also generate automatically short pulses of determined duration. On devices with two output for each relay (double throw), the two outputs are named A and B, with output A corresponding to the idle position (at power off) and the output B corresponding to the active state. If you prefer the alternate default state, simply switch your cables on the board.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_relay.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YRelay = yoctolib.YRelay;
php	require_once('yocto_relay.php');
c++	#include "yocto_relay.h"
m	#import "yocto_relay.h"
pas	uses yocto_relay;
vb	yocto_relay.vb
cs	yocto_relay.cs
java	import com.yoctopuce.YoctoAPI.YRelay;
py	from yocto_relay import *

Global functions	
yFindRelay(func)	Retrieves a relay for a given identifier.
yFirstRelay()	Starts the enumeration of relays currently accessible.
YRelay methods	
relay→delayedPulse(ms_delay, ms_duration)	Schedules a pulse.
relay→describe()	Returns a short text that describes unambiguously the instance of the relay in the form TYPE (NAME) = SERIAL . FUNCTIONID.
relay→get_advertisedValue()	Returns the current value of the relay (no more than 6 characters).
relay→get_countdown()	Returns the number of milliseconds remaining before a pulse (delayedPulse() call) When there is no scheduled pulse, returns zero.
relay→get_errorMessage()	Returns the error message of the latest error with the relay.
relay→get_errorType()	Returns the numerical error code of the latest error with the relay.
relay→get_friendlyName()	Returns a global identifier of the relay in the format MODULE_NAME . FUNCTION_NAME.
relay→get_functionDescriptor()	Returns a unique identifier of type YFUN_DESCR corresponding to the function.
relay→get_functionId()	Returns the hardware identifier of the relay, without reference to the module.
relay→get_hardwareId()	

3. Reference

Returns the unique hardware identifier of the relay in the form `SERIAL.FUNCTIONID`.

relay→**get_logicalName()**

Returns the logical name of the relay.

relay→**get_maxTimeOnStateA()**

Retourne the maximum time (ms) allowed for `$THEFUNCTIONS$` to stay in state A before automatically switching back in to B state.

relay→**get_maxTimeOnStateB()**

Retourne the maximum time (ms) allowed for `$THEFUNCTIONS$` to stay in state B before automatically switching back in to A state.

relay→**get_module()**

Gets the `YModule` object for the device on which the function is located.

relay→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

relay→**get_output()**

Returns the output state of the relays, when used as a simple switch (single throw).

relay→**get_pulseTimer()**

Returns the number of milliseconds remaining before the relays is returned to idle position (state A), during a measured pulse generation.

relay→**get_state()**

Returns the state of the relays (A for the idle position, B for the active position).

relay→**get_stateAtPowerOn()**

Returns the state of the relays at device startup (A for the idle position, B for the active position, UNCHANGED for no change).

relay→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

relay→**isOnline()**

Checks if the relay is currently reachable, without raising any error.

relay→**isOnline_async(callback, context)**

Checks if the relay is currently reachable, without raising any error (asynchronous version).

relay→**load(msValidity)**

Preloads the relay cache with a specified validity duration.

relay→**load_async(msValidity, callback, context)**

Preloads the relay cache with a specified validity duration (asynchronous version).

relay→**nextRelay()**

Continues the enumeration of relays started using `yFirstRelay()`.

relay→**pulse(ms_duration)**

Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).

relay→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

relay→**set_logicalName(newval)**

Changes the logical name of the relay.

relay→**set_maxTimeOnStateA(newval)**

Sets the maximum time (ms) allowed for `$THEFUNCTIONS$` to stay in state A before automatically switching back in to B state.

relay→**set_maxTimeOnStateB(newval)**

Sets the maximum time (ms) allowed for `$THEFUNCTIONS$` to stay in state B before automatically switching back in to A state.

relay→set_output(newval)

Changes the output state of the relays, when used as a simple switch (single throw).

relay→set_state(newval)

Changes the state of the relays (A for the idle position, B for the active position).

relay→set_stateAtPowerOn(newval)

Preset the state of the relays at device startup (A for the idle position, B for the active position, UNCHANGED for no modification).

relay→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

relay→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YRelay.FindRelay() yFindRelay()yFindRelay()

YRelay

Retrieves a relay for a given identifier.

```
function yFindRelay( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the relay is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YRelay.isOnline()` to test if the relay is indeed online at a given time. In case of ambiguity when looking for a relay by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the relay

Returns :

a `YRelay` object allowing you to drive the relay.

YRelay.FirstRelay()
yFirstRelay()**YRelay**

Starts the enumeration of relays currently accessible.

```
function yFirstRelay( )
```

Use the method `YRelay.nextRelay()` to iterate on next relays.

Returns :

a pointer to a `YRelay` object, corresponding to the first relay currently online, or a `null` pointer if there are none.

relay→delayedPulse()relay.delayedPulse()

YRelay

Schedules a pulse.

```
function delayedPulse( ms_delay, ms_duration)
```

Parameters :

ms_delay waiting time before the pulse, in milliseconds

ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**describe()****relay.describe()****YRelay**

Returns a short text that describes unambiguously the instance of the relay in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the relay (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

relay→**get_advertisedValue()**

YRelay

relay→**advertisedValue()****relay.get_advertisedValue()**

Returns the current value of the relay (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the relay (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

relay→**get_countdown()****YRelay****relay**→**countdown()****relay.get_countdown()**

Returns the number of milliseconds remaining before a pulse (delayedPulse() call) When there is no scheduled pulse, returns zero.

```
function get_countdown( )
```

Returns :

an integer corresponding to the number of milliseconds remaining before a pulse (delayedPulse() call) When there is no scheduled pulse, returns zero

On failure, throws an exception or returns Y_COUNTDOWN_INVALID.

relay→**get_errorMessage()**

YRelay

relay→**errorMessage()****relay**.**get_errorMessage()**

Returns the error message of the latest error with the relay.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the relay object

relay→**get_errorType()****YRelay****relay**→**errorType()****relay.get_errorType()**

Returns the numerical error code of the latest error with the relay.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the relay object

relay→**get_friendlyName()**

YRelay

relay→**friendlyName()****relay.get_friendlyName()**

Returns a global identifier of the relay in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the relay if they are defined, otherwise the serial number of the module and the hardware identifier of the relay (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the relay using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

relay→**get_functionDescriptor()****YRelay****relay**→**functionDescriptor()****relay.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

relay→**get_functionId()**

YRelay

relay→**functionId()****relay.get_functionId()**

Returns the hardware identifier of the relay, without reference to the module.

function **get_functionId()**

For example `relay1`

Returns :

a string that identifies the relay (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

relay→**get_hardwareId()****YRelay****relay**→**hardwareId()****relay.get_hardwareId()**

Returns the unique hardware identifier of the relay in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the relay. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the relay (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

relay→**get_logicalName()**

YRelay

relay→**logicalName()****relay.get_logicalName()**

Returns the logical name of the relay.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the relay. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

relay→**get_maxTimeOnStateA()****YRelay****relay**→**maxTimeOnStateA()****relay.get_maxTimeOnStateA()**

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

```
function get_maxTimeOnStateA( )
```

Zero means no maximum time.

Returns :

an integer

On failure, throws an exception or returns `Y_MAXTIMEONSTATEA_INVALID`.

relay→**get_maxTimeOnStateB()**

YRelay

relay→**maxTimeOnStateB()**

relay.get_maxTimeOnStateB()

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

```
function get_maxTimeOnStateB( )
```

Zero means no maximum time.

Returns :

an integer

On failure, throws an exception or returns Y_MAXTIMEONSTATEB_INVALID.

relay→**get_module()****YRelay****relay**→**module()****relay.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

relay→**get_module_async()****YRelay****relay**→**module_async()****relay.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

relay→**get_output()****YRelay****relay**→**output()****relay.get_output()**

Returns the output state of the relays, when used as a simple switch (single throw).

```
function get_output( )
```

Returns :

either `Y_OUTPUT_OFF` or `Y_OUTPUT_ON`, according to the output state of the relays, when used as a simple switch (single throw)

On failure, throws an exception or returns `Y_OUTPUT_INVALID`.

relay→**get_pulseTimer()**

YRelay

relay→**pulseTimer()****relay.get_pulseTimer()**

Returns the number of milliseconds remaining before the relays is returned to idle position (state A), during a measured pulse generation.

```
function get_pulseTimer( )
```

When there is no ongoing pulse, returns zero.

Returns :

an integer corresponding to the number of milliseconds remaining before the relays is returned to idle position (state A), during a measured pulse generation

On failure, throws an exception or returns `Y_PULSETIMER_INVALID`.

relay→**get_state()****YRelay****relay**→**state()****relay.get_state()**

Returns the state of the relays (A for the idle position, B for the active position).

```
function get_state( )
```

Returns :

either `Y_STATE_A` or `Y_STATE_B`, according to the state of the relays (A for the idle position, B for the active position)

On failure, throws an exception or returns `Y_STATE_INVALID`.

relay→**get_stateAtPowerOn()**

YRelay

relay→**stateAtPowerOn()****relay.get_stateAtPowerOn()**

Returns the state of the relays at device startup (A for the idle position, B for the active position, UNCHANGED for no change).

```
function get_stateAtPowerOn( )
```

Returns :

a value among `Y_STATEATPOWERON_UNCHANGED`, `Y_STATEATPOWERON_A` and `Y_STATEATPOWERON_B` corresponding to the state of the relays at device startup (A for the idle position, B for the active position, UNCHANGED for no change)

On failure, throws an exception or returns `Y_STATEATPOWERON_INVALID`.

relay→**get_userData()****YRelay****relay**→**userData()****relay.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

relay→**isOnline()****relay.isOnline()**

YRelay

Checks if the relay is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the relay in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the relay.

Returns :

`true` if the relay can be reached, and `false` otherwise

relay→**isOnline_async()****relay.isOnline_async()****YRelay**

Checks if the relay is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the relay in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

relay→**load()****relay.load()****YRelay**

Preloads the relay cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

relay→**load_async()****relay.load_async()****YRelay**

Preloads the relay cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

relay→**nextRelay()**relay.nextRelay()

YRelay

Continues the enumeration of relays started using `yFirstRelay()`.

```
function nextRelay( )
```

Returns :

a pointer to a `YRelay` object, corresponding to a relay currently online, or a `null` pointer if there are no more relays to enumerate.

relay→**pulse()****relay.pulse()****YRelay**

Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).

```
function pulse( ms_duration)
```

Parameters :

ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**registerValueCallback()**
relay.registerValueCallback()

YRelay

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

relay→**set_logicalName()****YRelay****relay**→**setLogicalName()****relay.set_logicalName()**

Changes the logical name of the relay.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the relay.

Returns :

`YAPI_SUCCESS` if the call succeeds. On failure, throws an exception or returns a negative error code.

relay→**set_maxTimeOnStateA()**

YRelay

relay→**setMaxTimeOnStateA()**

relay.set_maxTimeOnStateA()

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

```
function set_maxTimeOnStateA( newval)
```

Use zero for no maximum time.

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**set_maxTimeOnStateB()**
relay→**setMaxTimeOnStateB()**
relay.set_maxTimeOnStateB()

YRelay

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

```
function set_maxTimeOnStateB( newval)
```

Use zero for no maximum time.

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**set_output()**

YRelay

relay→**setOutput()****relay.set_output()**

Changes the output state of the relays, when used as a simple switch (single throw).

```
function set_output( newval)
```

Parameters :

newval either Y_OUTPUT_OFF or Y_OUTPUT_ON, according to the output state of the relays, when used as a simple switch (single throw)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**set_state()****YRelay****relay**→**setState()****relay.set_state()**

Changes the state of the relays (A for the idle position, B for the active position).

```
function set_state( newval)
```

Parameters :

newval either Y_STATE_A or Y_STATE_B, according to the state of the relays (A for the idle position, B for the active position)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**set_stateAtPowerOn()**

YRelay

relay→**setStateAtPowerOn()**

relay.set_stateAtPowerOn()

Preset the state of the relays at device startup (A for the idle position, B for the active position, UNCHANGED for no modification).

```
function set_stateAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval a value among `Y_STATEATPOWERON_UNCHANGED`, `Y_STATEATPOWERON_A` and `Y_STATEATPOWERON_B`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay→**set_userData()****YRelay****relay**→**setUserData()****relay.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

relay→wait_async()relay.wait_async()

YRelay

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.36. Sensor function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_api.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YAPI = yoctolib.YAPI; var YModule = yoctolib.YModule;
php	require_once('yocto_api.php');
cpp	#include "yocto_api.h"
m	#import "yocto_api.h"
pas	uses yocto_api;
vb	yocto_api.vb
cs	yocto_api.cs
java	import com.yoctopuce.YoctoAPI.YModule;
py	from yocto_api import *

Global functions

yFindSensor(func)

Retrieves a sensor for a given identifier.

yFirstSensor()

Starts the enumeration of sensors currently accessible.

YSensor methods

sensor→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

sensor→describe()

Returns a short text that describes unambiguously the instance of the sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

sensor→get_advertisedValue()

Returns the current value of the sensor (no more than 6 characters).

sensor→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

sensor→get_currentValue()

Returns the current value of the measure.

sensor→get_errorMessage()

Returns the error message of the latest error with the sensor.

sensor→get_errorType()

Returns the numerical error code of the latest error with the sensor.

sensor→get_friendlyName()

Returns a global identifier of the sensor in the format `MODULE_NAME . FUNCTION_NAME`.

sensor→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

sensor→get_functionId()

Returns the hardware identifier of the sensor, without reference to the module.

sensor→get_hardwareId()

3. Reference

Returns the unique hardware identifier of the sensor in the form `SERIAL.FUNCTIONID`.

sensor→`get_highestValue()`

Returns the maximal value observed for the measure since the device was started.

sensor→`get_logFrequency()`

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

sensor→`get_logicalName()`

Returns the logical name of the sensor.

sensor→`get_lowestValue()`

Returns the minimal value observed for the measure since the device was started.

sensor→`get_module()`

Gets the `YModule` object for the device on which the function is located.

sensor→`get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

sensor→`get_recordedData(startTime, endTime)`

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

sensor→`get_reportFrequency()`

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

sensor→`get_resolution()`

Returns the resolution of the measured values.

sensor→`get_unit()`

Returns the measuring unit for the measure.

sensor→`get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

sensor→`isOnline()`

Checks if the sensor is currently reachable, without raising any error.

sensor→`isOnline_async(callback, context)`

Checks if the sensor is currently reachable, without raising any error (asynchronous version).

sensor→`load(msValidity)`

Preloads the sensor cache with a specified validity duration.

sensor→`loadCalibrationPoints(rawValues, refValues)`

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

sensor→`load_async(msValidity, callback, context)`

Preloads the sensor cache with a specified validity duration (asynchronous version).

sensor→`nextSensor()`

Continues the enumeration of sensors started using `yFirstSensor()`.

sensor→`registerTimedReportCallback(callback)`

Registers the callback function that is invoked on every periodic timed notification.

sensor→`registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

sensor→`set_highestValue(newval)`

Changes the recorded maximal value observed.

sensor→`set_logFrequency(newval)`

Changes the datalogger recording frequency for this function.

sensor→`set_logicalName(newval)`

Changes the logical name of the sensor.

sensor→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

sensor→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

sensor→**set_resolution(newval)**

Changes the resolution of the measured physical values.

sensor→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

sensor→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YSensor.FindSensor() yFindSensor()yFindSensor()

YSensor

Retrieves a sensor for a given identifier.

```
function yFindSensor( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YSensor.isOnline()` to test if the sensor is indeed online at a given time. In case of ambiguity when looking for a sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the sensor

Returns :

a `YSensor` object allowing you to drive the sensor.

**YSensor.FirstSensor()
yFirstSensor()yFirstSensor()**

YSensor

Starts the enumeration of sensors currently accessible.

```
function yFirstSensor( )
```

Use the method `YSensor.nextSensor()` to iterate on next sensors.

Returns :

a pointer to a `YSensor` object, corresponding to the first sensor currently online, or a `null` pointer if there are none.

sensor→**calibrateFromPoints()**
sensor.calibrateFromPoints()**YSensor**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**describe()****sensor.describe()****YSensor**

Returns a short text that describes unambiguously the instance of the sensor in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

sensor→**get_advertisedValue()**

YSensor

sensor→**advertisedValue()**

sensor.get_advertisedValue()

Returns the current value of the sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

sensor→**get_currentRawValue()****YSensor****sensor**→**currentRawValue()****sensor.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

sensor→**get_currentValue()**

YSensor

sensor→**currentValue()****sensor.get_currentValue()**

Returns the current value of the measure.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the measure

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

sensor→**get_errorMessage()****YSensor****sensor**→**errorMessage()****sensor.errorMessage()**

Returns the error message of the latest error with the sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the sensor object

sensor→**get_errorType()**

YSensor

sensor→**errorType()****sensor.get_errorType()**

Returns the numerical error code of the latest error with the sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the sensor object

sensor→**get_friendlyName()****YSensor****sensor**→**friendlyName()****sensor.get_friendlyName()**

Returns a global identifier of the sensor in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

sensor→**get_functionDescriptor()**

YSensor

sensor→**functionDescriptor()**

sensor.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor()** ()

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

sensor→**get_functionId()****YSensor****sensor**→**functionId()****sensor.get_functionId()**

Returns the hardware identifier of the sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

sensor→**get_hardwareId()**

YSensor

sensor→**hardwareId()****sensor.get_hardwareId()**

Returns the unique hardware identifier of the sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

sensor→**get_highestValue()****YSensor****sensor**→**highestValue()****sensor.get_highestValue()**

Returns the maximal value observed for the measure since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the measure since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

sensor→**get_logFrequency()**

YSensor

sensor→**logFrequency()****sensor.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

function **get_logFrequency()** ()

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

sensor→**get_logicalName()****YSensor****sensor**→**logicalName()****sensor.get_logicalName()**

Returns the logical name of the sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

sensor→**get_lowestValue()**

YSensor

sensor→**lowestValue()****sensor.get_lowestValue()**

Returns the minimal value observed for the measure since the device was started.

function **get_lowestValue()** ()

Returns :

a floating point number corresponding to the minimal value observed for the measure since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

sensor→**get_module()****YSensor****sensor**→**module()****sensor.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

sensor→**get_module_async()**

YSensor

sensor→**module_async()****sensor.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

sensor→**get_recordedData()****YSensor****sensor**→**recordedData()****sensor.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

sensor→**get_reportFrequency()**

YSensor

sensor→**reportFrequency()**

sensor.get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

function **get_reportFrequency()**

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

sensor→**get_resolution()****YSensor****sensor**→**resolution()****sensor.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

sensor→**get_unit()**

YSensor

sensor→**unit()****sensor.get_unit()**

Returns the measuring unit for the measure.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the measure

On failure, throws an exception or returns `Y_UNIT_INVALID`.

sensor→**get_userData()****YSensor****sensor**→**userData()****sensor.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

sensor→**isOnline()****sensor.isOnline()**

YSensor

Checks if the sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the sensor.

Returns :

`true` if the sensor can be reached, and `false` otherwise

sensor→**isOnline_async()****sensor.isOnline_async()****YSensor**

Checks if the sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

sensor→**load()****sensor.load()****YSensor**

Preloads the sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

sensor→**loadCalibrationPoints()**
sensor.loadCalibrationPoints()**YSensor**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**load_async()****sensor.load_async()****YSensor**

Preloads the sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

sensor→**nextSensor()****sensor.nextSensor()****YSensor**

Continues the enumeration of sensors started using `yFirstSensor()`.

```
function nextSensor( )
```

Returns :

a pointer to a `YSensor` object, corresponding to a sensor currently online, or a `null` pointer if there are no more sensors to enumerate.

sensor→**registerTimedReportCallback()**
sensor.registerTimedReportCallback()

YSensor

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an YMeasure object describing the new advertised value.

sensor→**registerValueCallback()**
sensor.registerValueCallback()

YSensor

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

sensor→**set_highestValue()**

YSensor

sensor→**setHighestValue()****sensor.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**set_logFrequency()****YSensor****sensor**→**setLogFrequency()****sensor.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**set_logicalName()**

YSensor

sensor→**setLogicalName()****sensor.set_logicalName()**

Changes the logical name of the sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

sensor→**set_lowestValue()****YSensor****sensor**→**setLowestValue()****sensor.set_lowestValue()**

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**set_reportFrequency()**

YSensor

sensor→**setReportFrequency()**

sensor.set_reportFrequency()

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**set_resolution()****YSensor****sensor**→**setResolution()****sensor.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

sensor→**set_userData()**

YSensor

sensor→**setUserData()****sensor.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

sensor→**wait_async()****sensor.wait_async()****YSensor**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.37. Servo function interface

Yoctopuce application programming interface allows you not only to move a servo to a given position, but also to specify the time interval in which the move should be performed. This makes it possible to synchronize two servos involved in a same move.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_servo.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YServo = yoctolib.YServo;
php	require_once('yocto_servo.php');
c++	#include "yocto_servo.h"
m	#import "yocto_servo.h"
pas	uses yocto_servo;
vb	yocto_servo.vb
cs	yocto_servo.cs
java	import com.yoctopuce.YoctoAPI.YServo;
py	from yocto_servo import *

Global functions

yFindServo(func)

Retrieves a servo for a given identifier.

yFirstServo()

Starts the enumeration of servos currently accessible.

YServo methods

servo→describe()

Returns a short text that describes unambiguously the instance of the servo in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

servo→get_advertisedValue()

Returns the current value of the servo (no more than 6 characters).

servo→get_enabled()

Returns the state of the servos.

servo→get_enabledAtPowerOn()

Returns the servo signal generator state at power up.

servo→get_errorMessage()

Returns the error message of the latest error with the servo.

servo→get_errorType()

Returns the numerical error code of the latest error with the servo.

servo→get_friendlyName()

Returns a global identifier of the servo in the format `MODULE_NAME . FUNCTION_NAME`.

servo→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

servo→get_functionId()

Returns the hardware identifier of the servo, without reference to the module.

servo→get_hardwareId()

Returns the unique hardware identifier of the servo in the form `SERIAL . FUNCTIONID`.

servo→get_logicalName()

Returns the logical name of the servo.

servo→get_module()

Gets the YModule object for the device on which the function is located.

servo→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

servo→get_neutral()

Returns the duration in microseconds of a neutral pulse for the servo.

servo→get_position()

Returns the current servo position.

servo→get_positionAtPowerOn()

Returns the servo position at device power up.

servo→get_range()

Returns the current range of use of the servo.

servo→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

servo→isOnline()

Checks if the servo is currently reachable, without raising any error.

servo→isOnline_async(callback, context)

Checks if the servo is currently reachable, without raising any error (asynchronous version).

servo→load(msValidity)

Preloads the servo cache with a specified validity duration.

servo→load_async(msValidity, callback, context)

Preloads the servo cache with a specified validity duration (asynchronous version).

servo→move(target, ms_duration)

Performs a smooth move at constant speed toward a given position.

servo→nextServo()

Continues the enumeration of servos started using yFirstServo().

servo→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

servo→set_enabled(newval)

Stops or starts the servo.

servo→set_enabledAtPowerOn(newval)

Configure the servo signal generator state at power up.

servo→set_logicalName(newval)

Changes the logical name of the servo.

servo→set_neutral(newval)

Changes the duration of the pulse corresponding to the neutral position of the servo.

servo→set_position(newval)

Changes immediately the servo driving position.

servo→set_positionAtPowerOn(newval)

Configure the servo position at device power up.

servo→set_range(newval)

Changes the range of use of the servo, specified in per cents.

servo→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

servo→wait_async(callback, context)

3. Reference

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YServo.FindServo() yFindServo()yFindServo()

YServo

Retrieves a servo for a given identifier.

```
function yFindServo( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the servo is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YServo.isOnline()` to test if the servo is indeed online at a given time. In case of ambiguity when looking for a servo by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the servo

Returns :

a `YServo` object allowing you to drive the servo.

YServo.FirstServo() yFirstServo()yFirstServo()

YServo

Starts the enumeration of servos currently accessible.

```
function yFirstServo( )
```

Use the method `YServo.nextServo()` to iterate on next servos.

Returns :

a pointer to a `YServo` object, corresponding to the first servo currently online, or a `null` pointer if there are none.

servo→describe()**servo.describe()****YServo**

Returns a short text that describes unambiguously the instance of the servo in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the servo (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

servo→**get_advertisedValue()**

YServo

servo→**advertisedValue()****servo.get_advertisedValue()**

Returns the current value of the servo (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the servo (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

servo→**get_enabled()**
servo→**enabled()****servo.get_enabled()**

YServo

Returns the state of the servos.

```
function get_enabled( )
```

Returns :

either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to the state of the servos

On failure, throws an exception or returns `Y_ENABLED_INVALID`.

servo→**get_enabledAtPowerOn()**

YServo

servo→**enabledAtPowerOn()**

servo.get_enabledAtPowerOn()

Returns the servo signal generator state at power up.

```
function get_enabledAtPowerOn( )
```

Returns :

either `Y_ENABLEDATPOWERON_FALSE` or `Y_ENABLEDATPOWERON_TRUE`, according to the servo signal generator state at power up

On failure, throws an exception or returns `Y_ENABLEDATPOWERON_INVALID`.

servo→**get_errorMessage()****YServo****servo**→**errorMessage()****servo**.**get_errorMessage()**

Returns the error message of the latest error with the servo.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the servo object

servo→**get_errorType()**

YServo

servo→**errorType()****servo.get_errorType()**

Returns the numerical error code of the latest error with the servo.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the servo object

servo→**get_friendlyName()****YServo****servo**→**friendlyName()****servo.get_friendlyName()**

Returns a global identifier of the servo in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the servo if they are defined, otherwise the serial number of the module and the hardware identifier of the servo (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the servo using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

servo→**get_functionDescriptor()**

YServo

servo→**functionDescriptor()**

servo.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

servo→**get_functionId()****YServo****servo**→**functionId()****servo.get_functionId()**

Returns the hardware identifier of the servo, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the servo (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

servo→**get_hardwareId()**

YServo

servo→**hardwareId()****servo.get_hardwareId()**

Returns the unique hardware identifier of the servo in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the servo. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the servo (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

servo→**get_logicalName()****YServo****servo**→**logicalName()****servo.get_logicalName()**

Returns the logical name of the servo.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the servo. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

servo→**get_module()**

YServo

servo→**module()****servo.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

servo→**get_module_async()****YServo****servo**→**module_async()****servo.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo→**get_neutral()**

YServo

servo→**neutral()****servo.get_neutral()**

Returns the duration in microseconds of a neutral pulse for the servo.

```
function get_neutral( )
```

Returns :

an integer corresponding to the duration in microseconds of a neutral pulse for the servo

On failure, throws an exception or returns `Y_NEUTRAL_INVALID`.

servo→**get_position()**
servo→**position()****servo.get_position()**

YServo

Returns the current servo position.

```
function get_position( )
```

Returns :

an integer corresponding to the current servo position

On failure, throws an exception or returns `Y_POSITION_INVALID`.

servo→**get_positionAtPowerOn()**

YServo

servo→**positionAtPowerOn()**

servo.get_positionAtPowerOn()

Returns the servo position at device power up.

```
function get_positionAtPowerOn( )
```

Returns :

an integer corresponding to the servo position at device power up

On failure, throws an exception or returns `Y_POSITIONATPOWERON_INVALID`.

servo→**get_range()****YServo****servo**→**range()****servo.get_range()**

Returns the current range of use of the servo.

```
function get_range( )
```

Returns :

an integer corresponding to the current range of use of the servo

On failure, throws an exception or returns `Y_RANGE_INVALID`.

servo→**get_userData()**

YServo

servo→**userData()****servo.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

servo→isOnline()**servo.isOnline()****YServo**

Checks if the servo is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the servo in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the servo.

Returns :

`true` if the servo can be reached, and `false` otherwise

servo→**isOnline_async()****servo.isOnline_async()**

YServo

Checks if the servo is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the servo in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo→load()**servo.load()**

YServo

Preloads the servo cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

servo→**load_async()**(**servo.load_async()**)**YServo**

Preloads the servo cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo→move()`servo.move()`

YServo

Performs a smooth move at constant speed toward a given position.

```
function move( target, ms_duration)
```

Parameters :

target new position at the end of the move
ms_duration total duration of the move, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**nextServo()****servo.nextServo()**

YServo

Continues the enumeration of servos started using `yFirstServo()`.

```
function nextServo( )
```

Returns :

a pointer to a `YServo` object, corresponding to a servo currently online, or a `null` pointer if there are no more servos to enumerate.

servo→registerValueCallback()
servo.registerValueCallback()

YServo

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

servo→**set_enabled()**

YServo

servo→**setEnabled()****servo.set_enabled()**

Stops or starts the servo.

```
function set_enabled( newval)
```

Parameters :

newval either Y_ENABLED_FALSE or Y_ENABLED_TRUE

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_enabledAtPowerOn()****YServo****servo**→**setEnabledAtPowerOn()****servo.set_enabledAtPowerOn()**

Configure the servo signal generator state at power up.

```
function set_enabledAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval either `Y_ENABLEDATPOWERON_FALSE` or `Y_ENABLEDATPOWERON_TRUE`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_logicalName()**

YServo

servo→**setLogicalName()****servo.set_logicalName()**

Changes the logical name of the servo.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the servo.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

servo→**set_neutral()****YServo****servo**→**setNeutral()****servo.set_neutral()**

Changes the duration of the pulse corresponding to the neutral position of the servo.

```
function set_neutral( newval)
```

The duration is specified in microseconds, and the standard value is 1500 [us]. This setting makes it possible to shift the range of use of the servo. Be aware that using a range higher than what is supported by the servo is likely to damage the servo.

Parameters :

newval an integer corresponding to the duration of the pulse corresponding to the neutral position of the servo

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_position()**

YServo

servo→**setPosition()****servo.set_position()**

Changes immediately the servo driving position.

```
function set_position( newval)
```

Parameters :

newval an integer corresponding to immediately the servo driving position

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_positionAtPowerOn()**
servo→**setPositionAtPowerOn()**
servo.set_positionAtPowerOn()

YServo

Configure the servo position at device power up.

```
function set_positionAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_range()****YServo****servo**→**setRange()****servo.set_range()**

Changes the range of use of the servo, specified in per cents.

```
function set_range( newval)
```

A range of 100% corresponds to a standard control signal, that varies from 1 [ms] to 2 [ms], When using a servo that supports a double range, from 0.5 [ms] to 2.5 [ms], you can select a range of 200%. Be aware that using a range higher than what is supported by the servo is likely to damage the servo.

Parameters :

newval an integer corresponding to the range of use of the servo, specified in per cents

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo→**set_userdata()****YServo****servo**→**setUserData()****servo.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

servo→**wait_async()****servo.wait_async()**

YServo

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.38. Temperature function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_temperature.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YTemperature = yoctolib.YTemperature;</code>
php	<code>require_once('yocto_temperature.php');</code>
cpp	<code>#include "yocto_temperature.h"</code>
m	<code>#import "yocto_temperature.h"</code>
pas	<code>uses yocto_temperature;</code>
vb	<code>yocto_temperature.vb</code>
cs	<code>yocto_temperature.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YTemperature;</code>
py	<code>from yocto_temperature import *</code>

Global functions

yFindTemperature(func)

Retrieves a temperature sensor for a given identifier.

yFirstTemperature()

Starts the enumeration of temperature sensors currently accessible.

YTemperature methods

temperature→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

temperature→describe()

Returns a short text that describes unambiguously the instance of the temperature sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

temperature→get_advertisedValue()

Returns the current value of the temperature sensor (no more than 6 characters).

temperature→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

temperature→get_currentValue()

Returns the current value of the temperature.

temperature→get_errorMessage()

Returns the error message of the latest error with the temperature sensor.

temperature→get_errorType()

Returns the numerical error code of the latest error with the temperature sensor.

temperature→get_friendlyName()

Returns a global identifier of the temperature sensor in the format `MODULE_NAME . FUNCTION_NAME`.

temperature→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

temperature→get_functionId()

Returns the hardware identifier of the temperature sensor, without reference to the module.

temperature→get_hardwareId()

Returns the unique hardware identifier of the temperature sensor in the form `SERIAL . FUNCTIONID`.

temperature→**get_highestValue()**

Returns the maximal value observed for the temperature since the device was started.

temperature→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

temperature→**get_logicalName()**

Returns the logical name of the temperature sensor.

temperature→**get_lowestValue()**

Returns the minimal value observed for the temperature since the device was started.

temperature→**get_module()**

Gets the `YModule` object for the device on which the function is located.

temperature→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

temperature→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

temperature→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

temperature→**get_resolution()**

Returns the resolution of the measured values.

temperature→**get_sensorType()**

Returns the temperature sensor type.

temperature→**get_unit()**

Returns the measuring unit for the temperature.

temperature→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

temperature→**isOnline()**

Checks if the temperature sensor is currently reachable, without raising any error.

temperature→**isOnline_async(callback, context)**

Checks if the temperature sensor is currently reachable, without raising any error (asynchronous version).

temperature→**load(msValidity)**

Preloads the temperature sensor cache with a specified validity duration.

temperature→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

temperature→**load_async(msValidity, callback, context)**

Preloads the temperature sensor cache with a specified validity duration (asynchronous version).

temperature→**nextTemperature()**

Continues the enumeration of temperature sensors started using `yFirstTemperature()`.

temperature→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

temperature→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

temperature→**set_highestValue(newval)**

Changes the recorded maximal value observed.

temperature→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

temperature→**set_logicalName(newval)**

Changes the logical name of the temperature sensor.

temperature→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

temperature→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

temperature→**set_resolution(newval)**

Changes the resolution of the measured physical values.

temperature→**set_sensorType(newval)**

Modify the temperature sensor type.

temperature→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

temperature→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YTemperature.FindTemperature() yFindTemperature()yFindTemperature()

YTemperature

Retrieves a temperature sensor for a given identifier.

```
function yFindTemperature( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the temperature sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YTemperature.isOnline()` to test if the temperature sensor is indeed online at a given time. In case of ambiguity when looking for a temperature sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the temperature sensor

Returns :

a YTemperature object allowing you to drive the temperature sensor.

**YTemperature.FirstTemperature()
yFirstTemperature()yFirstTemperature()**

YTemperature

Starts the enumeration of temperature sensors currently accessible.

```
function yFirstTemperature( )
```

Use the method `YTemperature.nextTemperature()` to iterate on next temperature sensors.

Returns :

a pointer to a `YTemperature` object, corresponding to the first temperature sensor currently online, or a `null` pointer if there are none.

temperature→**calibrateFromPoints()**
temperature.calibrateFromPoints()**YTemperature**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→describe()temperature.describe()**YTemperature**

Returns a short text that describes unambiguously the instance of the temperature sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the temperature sensor (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

temperature→get_advertisedValue()

YTemperature

temperature→advertisedValue()

temperature.get_advertisedValue()

Returns the current value of the temperature sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the temperature sensor (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

`temperature`→`get_currentRawValue()`

`YTemperature`

`temperature`→`currentRawValue()`

`temperature.get_currentRawValue()`

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue() ( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

temperature→**get_currentValue()**

YTemperature

temperature→**currentValue()**

temperature.get_currentValue()

Returns the current value of the temperature.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the temperature

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

temperature→**get_errorMessage()****YTemperature****temperature**→**errorMessage()****temperature**.**get_errorMessage()**

Returns the error message of the latest error with the temperature sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the temperature sensor object

temperature→**get_errorType()**
temperature→**errorType()**
temperature.get_errorType()

YTemperature

Returns the numerical error code of the latest error with the temperature sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the temperature sensor object

temperature→**get_friendlyName()****YTemperature****temperature**→**friendlyName()****temperature.get_friendlyName()**

Returns a global identifier of the temperature sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the temperature sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the temperature sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the temperature sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

temperature→**get_functionDescriptor()**

YTemperature

temperature→**functionDescriptor()**

temperature.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

temperature→**get_functionId()****YTemperature****temperature**→**functionId()****temperature.get_functionId()**

Returns the hardware identifier of the temperature sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the temperature sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

temperature→get_hardwareId()

YTemperature

temperature→hardwareId()

temperature.get_hardwareId()

Returns the unique hardware identifier of the temperature sensor in the form SERIAL.FUNCTIONID.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the temperature sensor. (for example RELAYLO1-123456.relay1)

Returns :

a string that uniquely identifies the temperature sensor (ex: RELAYLO1-123456.relay1) On failure, throws an exception or returns Y_HARDWAREID_INVALID.

temperature→**get_highestValue()****YTemperature****temperature**→**highestValue()****temperature.get_highestValue()**

Returns the maximal value observed for the temperature since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the temperature since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

temperature→**get_logFrequency()**

YTemperature

temperature→**logFrequency()**

temperature.get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

temperature→**get_logicalName()****YTemperature****temperature**→**logicalName()****temperature.get_logicalName()**

Returns the logical name of the temperature sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the temperature sensor. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

temperature→**get_lowestValue()**
temperature→**lowestValue()**
temperature.get_lowestValue()

YTemperature

Returns the minimal value observed for the temperature since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the temperature since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

temperature→**get_module()****YTemperature****temperature**→**module()****temperature.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

temperature→**get_module_async()****YTemperature****temperature**→**module_async()****temperature.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature→**get_recordedData()****YTemperature****temperature**→**recordedData()****temperature.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

`temperature→get_reportFrequency()`

YTemperature

`temperature→reportFrequency()`

`temperature.get_reportFrequency()`

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

temperature→**get_resolution()**
temperature→**resolution()**
temperature.get_resolution()

YTemperature

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

temperature→**get_sensorType()**
temperature→**sensorType()**
temperature.get_sensorType()

YTemperature

Returns the temperature sensor type.

```
function get_sensorType( )
```

Returns :

a value among `Y_SENSORTYPE_DIGITAL`, `Y_SENSORTYPE_TYPE_K`, `Y_SENSORTYPE_TYPE_E`, `Y_SENSORTYPE_TYPE_J`, `Y_SENSORTYPE_TYPE_N`, `Y_SENSORTYPE_TYPE_R`, `Y_SENSORTYPE_TYPE_S`, `Y_SENSORTYPE_TYPE_T`, `Y_SENSORTYPE_PT100_4WIRES`, `Y_SENSORTYPE_PT100_3WIRES` and `Y_SENSORTYPE_PT100_2WIRES` corresponding to the temperature sensor type

On failure, throws an exception or returns `Y_SENSORTYPE_INVALID`.

temperature→**get_unit()****YTemperature****temperature**→**unit()****temperature.get_unit()**

Returns the measuring unit for the temperature.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the temperature

On failure, throws an exception or returns `Y_UNIT_INVALID`.

temperature→**get_userData()**

YTemperature

temperature→**userData()****temperature.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

temperature→**isOnline()****temperature.isOnline()****YTemperature**

Checks if the temperature sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the temperature sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the temperature sensor.

Returns :

`true` if the temperature sensor can be reached, and `false` otherwise

temperature→isOnline_async() temperature.isOnline_async()

YTemperature

Checks if the temperature sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the temperature sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature→**load()****temperature.load()****YTemperature**

Preloads the temperature sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

temperature→**loadCalibrationPoints()**
temperature.loadCalibrationPoints()

YTemperature

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→**load_async()**(**temperature.load_async()**)**YTemperature**

Preloads the temperature sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature→**nextTemperature()**
temperature.nextTemperature()

YTemperature

Continues the enumeration of temperature sensors started using `yFirstTemperature()`.

```
function nextTemperature()
```

Returns :

a pointer to a `YTemperature` object, corresponding to a temperature sensor currently online, or a `null` pointer if there are no more temperature sensors to enumerate.

temperature→**registerTimedReportCallback()**
temperature.registerTimedReportCallback()

YTemperature

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

temperature→**registerValueCallback()**
temperature.registerValueCallback()

YTemperature

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

temperature→**set_highestValue()****YTemperature****temperature**→**setHighestValue()****temperature.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→**set_logFrequency()**
temperature→**setLogFrequency()**
temperature.set_logFrequency()

YTemperature

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→**set_logicalName()****YTemperature****temperature**→**setLogicalName()****temperature.set_logicalName()**

Changes the logical name of the temperature sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the temperature sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

temperature→**set_lowestValue()**
temperature→**setLowestValue()**
temperature.set_lowestValue()

YTemperature

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→**set_reportFrequency()****YTemperature****temperature**→**setReportFrequency()****temperature.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→set_resolution()

YTemperature

temperature→setResolution()

temperature.set_resolution()

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→**set_sensorType()****YTemperature****temperature**→**setSensorType()****temperature.set_sensorType()**

Modify the temperature sensor type.

```
function set_sensorType( newval)
```

This function is used to to define the type of thermocouple (K,E...) used with the device. This will have no effect if module is using a digital sensor. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a value among `Y_SENSORTYPE_DIGITAL`, `Y_SENSORTYPE_TYPE_K`, `Y_SENSORTYPE_TYPE_E`, `Y_SENSORTYPE_TYPE_J`, `Y_SENSORTYPE_TYPE_N`, `Y_SENSORTYPE_TYPE_R`, `Y_SENSORTYPE_TYPE_S`, `Y_SENSORTYPE_TYPE_T`, `Y_SENSORTYPE_PT100_4WIRES`, `Y_SENSORTYPE_PT100_3WIRES` and `Y_SENSORTYPE_PT100_2WIRES`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature→set_userData()

YTemperature

temperature→setUserData()

temperature.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

temperature→**wait_async()****temperature.wait_async()****YTemperature**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.39. Tilt function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_tilt.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YTilt = yoctolib.YTilt;
php	require_once('yocto_tilt.php');
c++	#include "yocto_tilt.h"
m	#import "yocto_tilt.h"
pas	uses yocto_tilt;
vb	yocto_tilt.vb
cs	yocto_tilt.cs
java	import com.yoctopuce.YoctoAPI.YTilt;
py	from yocto_tilt import *

Global functions

yFindTilt(func)

Retrieves a tilt sensor for a given identifier.

yFirstTilt()

Starts the enumeration of tilt sensors currently accessible.

YTilt methods

tilt→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

tilt→describe()

Returns a short text that describes unambiguously the instance of the tilt sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

tilt→get_advertisedValue()

Returns the current value of the tilt sensor (no more than 6 characters).

tilt→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

tilt→get_currentValue()

Returns the current value of the inclination.

tilt→get_errorMessage()

Returns the error message of the latest error with the tilt sensor.

tilt→get_errorType()

Returns the numerical error code of the latest error with the tilt sensor.

tilt→get_friendlyName()

Returns a global identifier of the tilt sensor in the format `MODULE_NAME . FUNCTION_NAME`.

tilt→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

tilt→get_functionId()

Returns the hardware identifier of the tilt sensor, without reference to the module.

tilt→get_hardwareId()

Returns the unique hardware identifier of the tilt sensor in the form `SERIAL . FUNCTIONID`.

tilt→get_highestValue()

Returns the maximal value observed for the inclination since the device was started.

tilt→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

tilt→get_logicalName()

Returns the logical name of the tilt sensor.

tilt→get_lowestValue()

Returns the minimal value observed for the inclination since the device was started.

tilt→get_module()

Gets the YModule object for the device on which the function is located.

tilt→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

tilt→get_recordedData(startTime, endTime)

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

tilt→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

tilt→get_resolution()

Returns the resolution of the measured values.

tilt→get_unit()

Returns the measuring unit for the inclination.

tilt→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

tilt→isOnline()

Checks if the tilt sensor is currently reachable, without raising any error.

tilt→isOnline_async(callback, context)

Checks if the tilt sensor is currently reachable, without raising any error (asynchronous version).

tilt→load(msValidity)

Preloads the tilt sensor cache with a specified validity duration.

tilt→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method calibrateFromPoints.

tilt→load_async(msValidity, callback, context)

Preloads the tilt sensor cache with a specified validity duration (asynchronous version).

tilt→nextTilt()

Continues the enumeration of tilt sensors started using yFirstTilt().

tilt→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

tilt→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

tilt→set_highestValue(newval)

Changes the recorded maximal value observed.

tilt→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

tilt→set_logicalName(newval)

Changes the logical name of the tilt sensor.

3. Reference

tilt→**set_lowestValue(newval)**

Changes the recorded minimal value observed.

tilt→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

tilt→**set_resolution(newval)**

Changes the resolution of the measured physical values.

tilt→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

tilt→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YTilt.FindTilt() yFindTilt()yFindTilt()

YTilt

Retrieves a tilt sensor for a given identifier.

```
function yFindTilt( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the tilt sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YTilt.isOnline()` to test if the tilt sensor is indeed online at a given time. In case of ambiguity when looking for a tilt sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the tilt sensor

Returns :

a `YTilt` object allowing you to drive the tilt sensor.

YTilt.FirstTilt() yFirstTilt()yFirstTilt()

YTilt

Starts the enumeration of tilt sensors currently accessible.

```
function yFirstTilt( )
```

Use the method `YTilt.nextTilt()` to iterate on next tilt sensors.

Returns :

a pointer to a `YTilt` object, corresponding to the first tilt sensor currently online, or a `null` pointer if there are none.

tilt→calibrateFromPoints()**tilt.calibrateFromPoints()****YTilt**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**describe()****tilt.describe()****YTilt**

Returns a short text that describes unambiguously the instance of the tilt sensor in the form `TYPE (NAME) =SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the tilt sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

tilt→**get_advertisedValue()****YTilt****tilt**→**advertisedValue()****tilt.get_advertisedValue()**

Returns the current value of the tilt sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the tilt sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

tilt→**get_currentRawValue()**

YTilt

tilt→**currentRawValue()****tilt.get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

tilt→**get_currentValue()**

YTilt

tilt→**currentValue()****tilt.get_currentValue()**

Returns the current value of the inclination.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current value of the inclination

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

tilt→**get_errorMessage()**

YTilt

tilt→**errorMessage()****tilt.get_errorMessage()**

Returns the error message of the latest error with the tilt sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the tilt sensor object

tilt→**get_errorType()**

YTilt

tilt→**errorType()****tilt.get_errorType()**

Returns the numerical error code of the latest error with the tilt sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the tilt sensor object

tilt→**get_friendlyName()****YTilt****tilt**→**friendlyName()****tilt.get_friendlyName()**

Returns a global identifier of the tilt sensor in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the tilt sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the tilt sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the tilt sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

tilt→**get_functionDescriptor()****YTilt****tilt**→**functionDescriptor()****tilt.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

tilt→**get_functionId()**

YTilt

tilt→**functionId()****tilt.get_functionId()**

Returns the hardware identifier of the tilt sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the tilt sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

tilt→**get_hardwareId()****YTilt****tilt**→**hardwareId()****tilt.get_hardwareId()**

Returns the unique hardware identifier of the tilt sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the tilt sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the tilt sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

tilt→**get_highestValue()**

YTilt

tilt→**highestValue()****tilt.get_highestValue()**

Returns the maximal value observed for the inclination since the device was started.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the inclination since the device was started

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

tilt→**get_logFrequency()****YTilt****tilt**→**logFrequency()****tilt.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

tilt→**get_logicalName()**

YTilt

tilt→**logicalName()****tilt.get_logicalName()**

Returns the logical name of the tilt sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the tilt sensor. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

tilt→**get_lowestValue()****YTilt****tilt**→**lowestValue()****tilt.get_lowestValue()**

Returns the minimal value observed for the inclination since the device was started.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the inclination since the device was started

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

tilt→**get_module()**

YTilt

tilt→**module()****tilt.get_module()**

Gets the `YModule` object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

tilt→**get_module_async()**

YTilt

tilt→**module_async()****tilt.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

tilt→**get_recordedData()****YTilt****tilt**→**recordedData()****tilt.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

tilt→**get_reportFrequency()****YTilt****tilt**→**reportFrequency()****tilt.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

tilt→**get_resolution()**

YTilt

tilt→**resolution()****tilt.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

tilt→**get_unit()****YTilt****tilt**→**unit()****tilt.get_unit()**

Returns the measuring unit for the inclination.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the inclination

On failure, throws an exception or returns `Y_UNIT_INVALID`.

tilt→**get_userData()**

YTilt

tilt→**userData()****tilt.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

tilt→isOnline()tilt.isOnline()**YTilt**

Checks if the tilt sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the tilt sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the tilt sensor.

Returns :

`true` if the tilt sensor can be reached, and `false` otherwise

tilt→**isOnline_async()****tilt.isOnline_async()****YTilt**

Checks if the tilt sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the tilt sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

tilt→load()**tilt.load()****YTilt**

Preloads the tilt sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**tilt→loadCalibrationPoints()
tilt.loadCalibrationPoints()**

YTilt

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→load_async()tilt.load_async()**YTilt**

Preloads the tilt sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

tilt→**nextTilt()****tilt.nextTilt()**

YTilt

Continues the enumeration of tilt sensors started using `yFirstTilt()`.

```
function nextTilt( )
```

Returns :

a pointer to a `YTilt` object, corresponding to a tilt sensor currently online, or a `null` pointer if there are no more tilt sensors to enumerate.

tilt→**registerTimedReportCallback()**
tilt.registerTimedReportCallback()

YTilt

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

tilt→**registerValueCallback()**
tilt.registerValueCallback()

YTilt

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

tilt→**set_highestValue()**

YTilt

tilt→**setHighestValue()****tilt.set_highestValue()**

Changes the recorded maximal value observed.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**set_logFrequency()****YTilt****tilt**→**setLogFrequency()****tilt.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**set_logicalName()**

YTilt

tilt→**setLogicalName()****tilt.set_logicalName()**

Changes the logical name of the tilt sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the tilt sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

tilt→**set_lowestValue()**

YTilt

tilt→**setLowestValue()****tilt.set_lowestValue()**

Changes the recorded minimal value observed.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**set_reportFrequency()****YTilt****tilt**→**setReportFrequency()****tilt.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**set_resolution()**

YTilt

tilt→**setResolution()****tilt.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

tilt→**set_userData()**

YTilt

tilt→**setUserData()****tilt.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

tilt→**wait_async()****tilt.wait_async()**

YTilt

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.40. Voc function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_voc.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YVoc = yoctolib.YVoc;
php	require_once('yocto_voc.php');
c++	#include "yocto_voc.h"
m	#import "yocto_voc.h"
pas	uses yocto_voc;
vb	yocto_voc.vb
cs	yocto_voc.cs
java	import com.yoctopuce.YoctoAPI.YVoc;
py	from yocto_voc import *

Global functions

yFindVoc(func)

Retrieves a Volatile Organic Compound sensor for a given identifier.

yFirstVoc()

Starts the enumeration of Volatile Organic Compound sensors currently accessible.

YVoc methods

voc→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

voc→describe()

Returns a short text that describes unambiguously the instance of the Volatile Organic Compound sensor in the form TYPE (NAME) =SERIAL . FUNCTIONID.

voc→get_advertisedValue()

Returns the current value of the Volatile Organic Compound sensor (no more than 6 characters).

voc→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

voc→get_currentValue()

Returns the current measure for the estimated VOC concentration.

voc→get_errorMessage()

Returns the error message of the latest error with the Volatile Organic Compound sensor.

voc→get_errorType()

Returns the numerical error code of the latest error with the Volatile Organic Compound sensor.

voc→get_friendlyName()

Returns a global identifier of the Volatile Organic Compound sensor in the format MODULE_NAME . FUNCTION_NAME.

voc→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

voc→get_functionId()

Returns the hardware identifier of the Volatile Organic Compound sensor, without reference to the module.

voc→get_hardwareId()

3. Reference

Returns the unique hardware identifier of the Volatile Organic Compound sensor in the form `SERIAL.FUNCTIONID`.

`voc→get_highestValue()`

Returns the maximal value observed for the estimated VOC concentration.

`voc→get_logFrequency()`

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

`voc→get_logicalName()`

Returns the logical name of the Volatile Organic Compound sensor.

`voc→get_lowestValue()`

Returns the minimal value observed for the estimated VOC concentration.

`voc→get_module()`

Gets the `YModule` object for the device on which the function is located.

`voc→get_module_async(callback, context)`

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`voc→get_recordedData(startTime, endTime)`

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

`voc→get_reportFrequency()`

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

`voc→get_resolution()`

Returns the resolution of the measured values.

`voc→get_unit()`

Returns the measuring unit for the estimated VOC concentration.

`voc→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`voc→isOnline()`

Checks if the Volatile Organic Compound sensor is currently reachable, without raising any error.

`voc→isOnline_async(callback, context)`

Checks if the Volatile Organic Compound sensor is currently reachable, without raising any error (asynchronous version).

`voc→load(msValidity)`

Preloads the Volatile Organic Compound sensor cache with a specified validity duration.

`voc→loadCalibrationPoints(rawValues, refValues)`

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

`voc→load_async(msValidity, callback, context)`

Preloads the Volatile Organic Compound sensor cache with a specified validity duration (asynchronous version).

`voc→nextVoc()`

Continues the enumeration of Volatile Organic Compound sensors started using `yFirstVoc()`.

`voc→registerTimedReportCallback(callback)`

Registers the callback function that is invoked on every periodic timed notification.

`voc→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`voc→set_highestValue(newval)`

Changes the recorded maximal value observed for the estimated VOC concentration.

voc→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

voc→set_logicalName(newval)

Changes the logical name of the Volatile Organic Compound sensor.

voc→set_lowestValue(newval)

Changes the recorded minimal value observed for the estimated VOC concentration.

voc→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

voc→set_resolution(newval)

Changes the resolution of the measured physical values.

voc→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

voc→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YVoc.FindVoc() yFindVoc()yFindVoc()

YVoc

Retrieves a Volatile Organic Compound sensor for a given identifier.

```
function yFindVoc( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the Volatile Organic Compound sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YVoc.isOnline()` to test if the Volatile Organic Compound sensor is indeed online at a given time. In case of ambiguity when looking for a Volatile Organic Compound sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the Volatile Organic Compound sensor

Returns :

a YVoc object allowing you to drive the Volatile Organic Compound sensor.

**YVoc.FirstVoc()
yFirstVoc()yFirstVoc()**

YVoc

Starts the enumeration of Volatile Organic Compound sensors currently accessible.

```
function yFirstVoc( )
```

Use the method `YVoc.nextVoc()` to iterate on next Volatile Organic Compound sensors.

Returns :

a pointer to a `YVoc` object, corresponding to the first Volatile Organic Compound sensor currently online, or a `null` pointer if there are none.

voc→**calibrateFromPoints()****voc.calibrateFromPoints()****YVoc**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→describe(voc.describe())**YVoc**

Returns a short text that describes unambiguously the instance of the Volatile Organic Compound sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the Volatile Organic Compound sensor (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

YVoc
voc→**get_advertisedValue()**

YVoc

voc→**advertisedValue()****voc.get_advertisedValue()**

Returns the current value of the Volatile Organic Compound sensor (no more than 6 characters).

```
function get_advertisedValue()
```

Returns :

a string corresponding to the current value of the Volatile Organic Compound sensor (no more than 6 characters). On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

voc→**get_currentValue()**

YVoc

voc→**currentValue()****voc.get_currentValue()**

Returns the current measure for the estimated VOC concentration.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the estimated VOC concentration

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

voc→**get_errorMessage()****YVoc****voc**→**errorMessage()****voc.get_errorMessage()**

Returns the error message of the latest error with the Volatile Organic Compound sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the Volatile Organic Compound sensor object

voc→**get_errorType()**

YVoc

voc→**errorType()****voc.get_errorType()**

Returns the numerical error code of the latest error with the Volatile Organic Compound sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the Volatile Organic Compound sensor object

voc→**get_friendlyName()****YVoc****voc**→**friendlyName()****voc.get_friendlyName()**

Returns a global identifier of the Volatile Organic Compound sensor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the Volatile Organic Compound sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the Volatile Organic Compound sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the Volatile Organic Compound sensor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

voc→**get_functionDescriptor()**

YVoc

voc→**functionDescriptor()**

voc.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

voc→**get_functionId()****YVoc****voc**→**functionId()****voc.get_functionId()**

Returns the hardware identifier of the Volatile Organic Compound sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the Volatile Organic Compound sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

voc→**get_hardwareId()**

YVoc

voc→**hardwareId()****voc.get_hardwareId()**

Returns the unique hardware identifier of the Volatile Organic Compound sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the Volatile Organic Compound sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the Volatile Organic Compound sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

voc→**get_highestValue()****YVoc****voc**→**highestValue()****voc.get_highestValue()**

Returns the maximal value observed for the estimated VOC concentration.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the estimated VOC concentration

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

voc→**get_logFrequency()**

YVoc

voc→**logFrequency()****voc.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns Y_LOGFREQUENCY_INVALID.

voc→**get_logicalName()****YVoc****voc**→**logicalName()****voc.get_logicalName()**

Returns the logical name of the Volatile Organic Compound sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the Volatile Organic Compound sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

voc→**get_lowestValue()**

YVoc

voc→**lowestValue()****voc.get_lowestValue()**

Returns the minimal value observed for the estimated VOC concentration.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the estimated VOC concentration

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

voc→**get_module()****YVoc****voc**→**module()****voc.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

voc→**get_module_async()****YVoc****voc**→**module_async()****voc.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voc→**get_recordedData()****YVoc****voc**→**recordedData()****voc.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any measure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

voc→**get_reportFrequency()**

YVoc

voc→**reportFrequency()****voc.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns Y_REPORTFREQUENCY_INVALID.

voc→**get_resolution()****YVoc****voc**→**resolution()****voc.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

voc→**get_unit()**

YVoc

voc→**unit()****voc.get_unit()**

Returns the measuring unit for the estimated VOC concentration.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the estimated VOC concentration

On failure, throws an exception or returns `Y_UNIT_INVALID`.

voc→**get_userData()****YVoc****voc**→**userData()****voc.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

voc→**isOnline()****voc.isOnline()**

YVoc

Checks if the Volatile Organic Compound sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the Volatile Organic Compound sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the Volatile Organic Compound sensor.

Returns :

`true` if the Volatile Organic Compound sensor can be reached, and `false` otherwise

voc→isOnline_async()voc.isOnline_async()

YVoc

Checks if the Volatile Organic Compound sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the Volatile Organic Compound sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voc→**load()****voc.load()****YVoc**

Preloads the Volatile Organic Compound sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

voc→loadCalibrationPoints()
voc.loadCalibrationPoints()

YVoc

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**load_async()**(**voc.load_async()**)**YVoc**

Preloads the Volatile Organic Compound sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voc→**nextVoc()****voc.nextVoc()****YVoc**

Continues the enumeration of Volatile Organic Compound sensors started using `yFirstVoc()`.

```
function nextVoc( )
```

Returns :

a pointer to a `YVoc` object, corresponding to a Volatile Organic Compound sensor currently online, or a `null` pointer if there are no more Volatile Organic Compound sensors to enumerate.

voc→**registerTimedReportCallback()**
voc.registerTimedReportCallback()

YVoc

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an YMeasure object describing the new advertised value.

voc→**registerValueCallback()**
voc.registerValueCallback()

YVoc

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

voc→**set_highestValue()**

YVoc

voc→**setHighestValue()****voc.set_highestValue()**

Changes the recorded maximal value observed for the estimated VOC concentration.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed for the estimated VOC concentration

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**set_logFrequency()****YVoc****voc**→**setLogFrequency()****voc.set_logFrequency()**

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**set_logicalName()**

YVoc

voc→**setLogicalName()****voc.set_logicalName()**

Changes the logical name of the Volatile Organic Compound sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the Volatile Organic Compound sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

voc→**set_lowestValue()****YVoc****voc**→**setLowestValue()****voc.set_lowestValue()**

Changes the recorded minimal value observed for the estimated VOC concentration.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed for the estimated VOC concentration

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**set_reportFrequency()**

YVoc

voc→**setReportFrequency()**

voc.set_reportFrequency()

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**set_resolution()****YVoc****voc**→**setResolution()****voc.set_resolution()**

Changes the resolution of the measured physical values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured physical values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voc→**set_userData()**

YVoc

voc→**setUserData()****voc.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

voc→**wait_async()****voc.wait_async()****YVoc**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.41. Voltage function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_voltage.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YVoltage = yoctolib.YVoltage;
php	require_once('yocto_voltage.php');
c++	#include "yocto_voltage.h"
m	#import "yocto_voltage.h"
pas	uses yocto_voltage;
vb	yocto_voltage.vb
cs	yocto_voltage.cs
java	import com.yoctopuce.YoctoAPI.YVoltage;
py	from yocto_voltage import *

Global functions

yFindVoltage(func)

Retrieves a voltage sensor for a given identifier.

yFirstVoltage()

Starts the enumeration of voltage sensors currently accessible.

YVoltage methods

voltage→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

voltage→describe()

Returns a short text that describes unambiguously the instance of the voltage sensor in the form TYPE (NAME) = SERIAL . FUNCTIONID.

voltage→get_advertisedValue()

Returns the current value of the voltage sensor (no more than 6 characters).

voltage→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

voltage→get_currentValue()

Returns the current measure for the voltage.

voltage→get_errorMessage()

Returns the error message of the latest error with the voltage sensor.

voltage→get_errorType()

Returns the numerical error code of the latest error with the voltage sensor.

voltage→get_friendlyName()

Returns a global identifier of the voltage sensor in the format MODULE_NAME . FUNCTION_NAME.

voltage→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

voltage→get_functionId()

Returns the hardware identifier of the voltage sensor, without reference to the module.

voltage→get_hardwareId()

Returns the unique hardware identifier of the voltage sensor in the form SERIAL . FUNCTIONID.

voltage→**get_highestValue()**

Returns the maximal value observed for the voltage.

voltage→**get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

voltage→**get_logicalName()**

Returns the logical name of the voltage sensor.

voltage→**get_lowestValue()**

Returns the minimal value observed for the voltage.

voltage→**get_module()**

Gets the `YModule` object for the device on which the function is located.

voltage→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

voltage→**get_recordedData(startTime, endTime)**

Retrieves a `DataSet` object holding historical data for this sensor, for a specified time interval.

voltage→**get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

voltage→**get_resolution()**

Returns the resolution of the measured values.

voltage→**get_unit()**

Returns the measuring unit for the voltage.

voltage→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

voltage→**isOnline()**

Checks if the voltage sensor is currently reachable, without raising any error.

voltage→**isOnline_async(callback, context)**

Checks if the voltage sensor is currently reachable, without raising any error (asynchronous version).

voltage→**load(msValidity)**

Preloads the voltage sensor cache with a specified validity duration.

voltage→**loadCalibrationPoints(rawValues, refValues)**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

voltage→**load_async(msValidity, callback, context)**

Preloads the voltage sensor cache with a specified validity duration (asynchronous version).

voltage→**nextVoltage()**

Continues the enumeration of voltage sensors started using `yFirstVoltage()`.

voltage→**registerTimedReportCallback(callback)**

Registers the callback function that is invoked on every periodic timed notification.

voltage→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

voltage→**set_highestValue(newval)**

Changes the recorded maximal value observed pour the voltage.

voltage→**set_logFrequency(newval)**

Changes the datalogger recording frequency for this function.

voltage→**set_logicalName(newval)**

Changes the logical name of the voltage sensor.

3. Reference

voltage→**set_lowestValue(newval)**

Changes the recorded minimal value observed pour the voltage.

voltage→**set_reportFrequency(newval)**

Changes the timed value notification frequency for this function.

voltage→**set_resolution(newval)**

Changes the resolution of the measured values.

voltage→**set_userData(data)**

Stores a user context provided as argument in the userData attribute of the function.

voltage→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YVoltage.FindVoltage() yFindVoltage()yFindVoltage()

YVoltage

Retrieves a voltage sensor for a given identifier.

```
function yFindVoltage( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the voltage sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YVoltage.isOnline()` to test if the voltage sensor is indeed online at a given time. In case of ambiguity when looking for a voltage sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the voltage sensor

Returns :

a `YVoltage` object allowing you to drive the voltage sensor.

YVoltage.FirstVoltage() yFirstVoltage()yFirstVoltage()

YVoltage

Starts the enumeration of voltage sensors currently accessible.

```
function yFirstVoltage( )
```

Use the method `YVoltage.nextVoltage()` to iterate on next voltage sensors.

Returns :

a pointer to a `YVoltage` object, corresponding to the first voltage sensor currently online, or a `null` pointer if there are none.

voltage→**calibrateFromPoints()**
voltage.calibrateFromPoints()

YVoltage

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
function calibrateFromPoints( rawValues, refValues)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→describe()**voltage.describe()****YVoltage**

Returns a short text that describes unambiguously the instance of the voltage sensor in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the voltage sensor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

voltage→**get_advertisedValue()**

YVoltage

voltage→**advertisedValue()**

voltage.get_advertisedValue()

Returns the current value of the voltage sensor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the voltage sensor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

voltage→**get_currentRawValue()**

YVoltage

voltage→**currentRawValue()**

voltage.**get_currentRawValue()**

Returns the uncalibrated, unrounded raw value returned by the sensor.

```
function get_currentRawValue( )
```

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

voltage→**get_currentValue()****YVoltage****voltage**→**currentValue()****voltage.get_currentValue()**

Returns the current measure for the voltage.

```
function get_currentValue( )
```

Returns :

a floating point number corresponding to the current measure for the voltage

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

voltage→**get_errorMessage()**

YVoltage

voltage→**errorMessage()****voltage.get_errorMessage()**

Returns the error message of the latest error with the voltage sensor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the voltage sensor object

voltage→**get_errorType()****YVoltage****voltage**→**errorType()****voltage.get_errorType()**

Returns the numerical error code of the latest error with the voltage sensor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the voltage sensor object

voltage→**get_friendlyName()**

YVoltage

voltage→**friendlyName()****voltage.get_friendlyName()**

Returns a global identifier of the voltage sensor in the format `MODULE_NAME.FUNCTION_NAME`.

function **get_friendlyName()**

The returned string uses the logical names of the module and of the voltage sensor if they are defined, otherwise the serial number of the module and the hardware identifier of the voltage sensor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the voltage sensor using logical names (ex: `MyCustomName.relay1`)
On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

voltage→**get_functionDescriptor()****YVoltage****voltage**→**functionDescriptor()****voltage.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

voltage→**get_functionId()**

YVoltage

voltage→**functionId()****voltage.get_functionId()**

Returns the hardware identifier of the voltage sensor, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the voltage sensor (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

voltage→**get_hardwareId()****YVoltage****voltage**→**hardwareId()****voltage.get_hardwareId()**

Returns the unique hardware identifier of the voltage sensor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the voltage sensor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the voltage sensor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

voltage→**get_highestValue()**

YVoltage

voltage→**highestValue()****voltage.get_highestValue()**

Returns the maximal value observed for the voltage.

```
function get_highestValue( )
```

Returns :

a floating point number corresponding to the maximal value observed for the voltage

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

voltage→**get_logFrequency()****YVoltage****voltage**→**logFrequency()****voltage.get_logFrequency()**

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

```
function get_logFrequency( )
```

Returns :

a string corresponding to the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory

On failure, throws an exception or returns `Y_LOGFREQUENCY_INVALID`.

voltage→**get_logicalName()**

YVoltage

voltage→**logicalName()****voltage.get_logicalName()**

Returns the logical name of the voltage sensor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the voltage sensor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

voltage→**get_lowestValue()****YVoltage****voltage**→**lowestValue()****voltage.get_lowestValue()**

Returns the minimal value observed for the voltage.

```
function get_lowestValue( )
```

Returns :

a floating point number corresponding to the minimal value observed for the voltage

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

voltage→**get_module()**

YVoltage

voltage→**module()****voltage.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

voltage→**get_module_async()****YVoltage****voltage**→**module_async()****voltage.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage→**get_recordedData()**

YVoltage

voltage→**recordedData()****voltage.get_recordedData()**

Retrieves a DataSet object holding historical data for this sensor, for a specified time interval.

```
function get_recordedData( startTime, endTime)
```

The measures will be retrieved from the data logger, which must have been turned on at the desired time. See the documentation of the DataSet class for information on how to get an overview of the recorded data, and how to load progressively a large set of measures from the data logger.

This function only works if the device uses a recent firmware, as DataSet objects are not supported by firmwares older than version 13000.

Parameters :

startTime the start of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without initial limit.

endTime the end of the desired measure time interval, as a Unix timestamp, i.e. the number of seconds since January 1, 1970 UTC. The special value 0 can be used to include any meaasure, without ending limit.

Returns :

an instance of YDataSet, providing access to historical data. Past measures can be loaded progressively using methods from the YDataSet object.

voltage→**get_reportFrequency()****YVoltage****voltage**→**reportFrequency()****voltage.get_reportFrequency()**

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

```
function get_reportFrequency( )
```

Returns :

a string corresponding to the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function

On failure, throws an exception or returns `Y_REPORTFREQUENCY_INVALID`.

voltage→**get_resolution()**

YVoltage

voltage→**resolution()****voltage.get_resolution()**

Returns the resolution of the measured values.

```
function get_resolution( )
```

The resolution corresponds to the numerical precision of the measures, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

voltage→**get_unit()****YVoltage****voltage**→**unit()****voltage.get_unit()**

Returns the measuring unit for the voltage.

```
function get_unit( )
```

Returns :

a string corresponding to the measuring unit for the voltage

On failure, throws an exception or returns `Y_UNIT_INVALID`.

voltage→**get_userData()**

YVoltage

voltage→**userData()****voltage.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

voltage→**isOnline()****voltage.isOnline()****YVoltage**

Checks if the voltage sensor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the voltage sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the voltage sensor.

Returns :

`true` if the voltage sensor can be reached, and `false` otherwise

voltage→isOnline_async()voltage.isOnline_async()

YVoltage

Checks if the voltage sensor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the voltage sensor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage→**load()****voltage.load()****YVoltage**

Preloads the voltage sensor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

voltage→loadCalibrationPoints()
voltage.loadCalibrationPoints()**YVoltage**

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

```
function loadCalibrationPoints( rawValues, refValues)
```

Parameters :

rawValues array of floating point numbers, that will be filled by the function with the raw sensor values for the correction points.

refValues array of floating point numbers, that will be filled by the function with the desired values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**load_async()****voltage.load_async()****YVoltage**

Preloads the voltage sensor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage→**nextVoltage()****voltage.nextVoltage()**

YVoltage

Continues the enumeration of voltage sensors started using `yFirstVoltage()`.

```
function nextVoltage( )
```

Returns :

a pointer to a `YVoltage` object, corresponding to a voltage sensor currently online, or a `null` pointer if there are no more voltage sensors to enumerate.

voltage→**registerTimedReportCallback()**
voltage.registerTimedReportCallback()

YVoltage

Registers the callback function that is invoked on every periodic timed notification.

```
function registerTimedReportCallback( callback)
```

The **callback** is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and an `YMeasure` object describing the new advertised value.

voltage→**registerValueCallback()**
voltage.registerValueCallback()**YVoltage**

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

voltage→**set_highestValue()****YVoltage****voltage**→**setHighestValue()****voltage.set_highestValue()**

Changes the recorded maximal value observed pour the voltage.

```
function set_highestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed pour the voltage

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**set_logFrequency()**

YVoltage

voltage→**setLogFrequency()**

voltage.set_logFrequency()

Changes the datalogger recording frequency for this function.

```
function set_logFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable recording for this function, use the value "OFF".

Parameters :

newval a string corresponding to the datalogger recording frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**set_logicalName()****YVoltage****voltage**→**setLogicalName()****voltage.set_logicalName()**

Changes the logical name of the voltage sensor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the voltage sensor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

voltage→**set_lowestValue()**

YVoltage

voltage→**setLowestValue()****voltage.set_lowestValue()**

Changes the recorded minimal value observed pour the voltage.

```
function set_lowestValue( newval)
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed pour the voltage

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**set_reportFrequency()****YVoltage****voltage**→**setReportFrequency()****voltage.set_reportFrequency()**

Changes the timed value notification frequency for this function.

```
function set_reportFrequency( newval)
```

The frequency can be specified as samples per second, as sample per minute (for instance "15/m") or in samples per hour (eg. "4/h"). To disable timed value notifications for this function, use the value "OFF".

Parameters :

newval a string corresponding to the timed value notification frequency for this function

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**set_resolution()**

YVoltage

voltage→**setResolution()****voltage.set_resolution()**

Changes the resolution of the measured values.

```
function set_resolution( newval)
```

The resolution corresponds to the numerical precision when displaying value. It does not change the precision of the measure itself.

Parameters :

newval a floating point number corresponding to the resolution of the measured values

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage→**set_userdata()****YVoltage****voltage**→**setUserData()****voltage.set_userdata()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userdata( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

voltage→wait_async()voltage.wait_async()

YVoltage

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.42. Voltage source function interface

Yoctopuce application programming interface allows you to control the module voltage output. You affect absolute output values or make transitions

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_vsource.js'></script>
php	require_once('yocto_vsource.php');
cpp	#include "yocto_vsource.h"
m	#import "yocto_vsource.h"
pas	uses yocto_vsource;
vb	yocto_vsource.vb
cs	yocto_vsource.cs
java	import com.yoctopuce.YoctoAPI.YVSource;
py	from yocto_vsource import *

Global functions	
yFindVSource(func)	Retrieves a voltage source for a given identifier.
yFirstVSource()	Starts the enumeration of voltage sources currently accessible.
YVSource methods	
vsource→describe()	Returns a short text that describes the function in the form TYPE (NAME) =SERIAL . FUNCTIONID.
vsource→get_advertisedValue()	Returns the current value of the voltage source (no more than 6 characters).
vsource→get_errorMessage()	Returns the error message of the latest error with this function.
vsource→get_errorType()	Returns the numerical error code of the latest error with this function.
vsource→get_extPowerFailure()	Returns true if external power supply voltage is too low.
vsource→get_failure()	Returns true if the module is in failure mode.
vsource→get_friendlyName()	Returns a global identifier of the function in the format MODULE_NAME . FUNCTION_NAME.
vsource→get_functionDescriptor()	Returns a unique identifier of type YFUN_DESCR corresponding to the function.
vsource→get_functionId()	Returns the hardware identifier of the function, without reference to the module.
vsource→get_hardwareId()	Returns the unique hardware identifier of the function in the form SERIAL . FUNCTIONID.
vsource→get_logicalName()	Returns the logical name of the voltage source.
vsource→get_module()	Gets the YModule object for the device on which the function is located.
vsource→get_module_async(callback, context)	

3. Reference

Gets the `YModule` object for the device on which the function is located (asynchronous version).

`vsource→get_overCurrent()`

Returns true if the appliance connected to the device is too greedy .

`vsource→get_overHeat()`

Returns TRUE if the module is overheating.

`vsource→get_overLoad()`

Returns true if the device is not able to maintain the requested voltage output .

`vsource→get_regulationFailure()`

Returns true if the voltage output is too high regarding the requested voltage .

`vsource→get_unit()`

Returns the measuring unit for the voltage.

`vsource→get_userData()`

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

`vsource→get_voltage()`

Returns the voltage output command (mV)

`vsource→isOnline()`

Checks if the function is currently reachable, without raising any error.

`vsource→isOnline_async(callback, context)`

Checks if the function is currently reachable, without raising any error (asynchronous version).

`vsource→load(msValidity)`

Preloads the function cache with a specified validity duration.

`vsource→load_async(msValidity, callback, context)`

Preloads the function cache with a specified validity duration (asynchronous version).

`vsource→nextVSource()`

Continues the enumeration of voltage sources started using `yFirstVSource()` .

`vsource→pulse(voltage, ms_duration)`

Sets device output to a specific voltage, for a specified duration, then brings it automatically to 0V.

`vsource→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`vsource→set_logicalName(newval)`

Changes the logical name of the voltage source.

`vsource→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

`vsource→set_voltage(newval)`

Tunes the device output voltage (milliVolts).

`vsource→voltageMove(target, ms_duration)`

Performs a smooth move at constant speed toward a given value.

`vsource→wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

yFindVSource() — YVSource.FindVSource(yFindVSource())

YVSource

Retrieves a voltage source for a given identifier.

```
function yFindVSource( func)
```

yFindVSource() — YVSource.FindVSource(yFindVSource())

Retrieves a voltage source for a given identifier.

```
js function yFindVSource( func)
php function yFindVSource( $func)
cpp YVSource* yFindVSource( const string& func)
m YVSource* yFindVSource( NSString* func)
pas function yFindVSource( func: string): TYVSource
vb function yFindVSource( ByVal func As String) As YVSource
cs YVSource FindVSource( string func)
java YVSource FindVSource( String func)
py def FindVSource( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the voltage source is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YVSource.isOnline()` to test if the voltage source is indeed online at a given time. In case of ambiguity when looking for a voltage source by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the voltage source

Returns :

a `YVSource` object allowing you to drive the voltage source.

yFirstVSource() —**YVSource****YVSource.FirstVSource()yFirstVSource()**

Starts the enumeration of voltage sources currently accessible.

```
function yFirstVSource( )
```

yFirstVSource() — **YVSource.FirstVSource()yFirstVSource()**

Starts the enumeration of voltage sources currently accessible.

js	function yFirstVSource ()
php	function yFirstVSource ()
cpp	YVSource* yFirstVSource ()
m	YVSource* yFirstVSource ()
pas	function yFirstVSource (): TYVSource
vb	function yFirstVSource () As YVSource
cs	YVSource FirstVSource ()
java	YVSource FirstVSource ()
py	def FirstVSource ()

Use the method `YVSource.nextVSource()` to iterate on next voltage sources.

Returns :

a pointer to a `YVSource` object, corresponding to the first voltage source currently online, or a `null` pointer if there are none.

vsource→**describe()****vsource.describe()****YVSource**

Returns a short text that describes the function in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

```
function describe( )
```

vsource→**describe()****vsource.describe()**

Returns a short text that describes the function in the form `TYPE (NAME) =SERIAL . FUNCTIONID`.

js	function describe ()
php	function describe ()
cpp	string describe ()
m	-(NSString*) describe
pas	function describe (): string
vb	function describe () As String
cs	string describe ()
java	String describe ()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the function (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

vsource→**get_advertisedValue()****YVSource****vsource**→**advertisedValue()****vsource.get_advertisedValue()**

Returns the current value of the voltage source (no more than 6 characters).

```
function get_advertisedValue( )
```

vsource→**get_advertisedValue()****vsource**→**advertisedValue()****vsource.get_advertisedValue()**

Returns the current value of the voltage source (no more than 6 characters).

js	function get_advertisedValue ()
php	function get_advertisedValue ()
cpp	string get_advertisedValue ()
m	-(NSString*) advertisedValue
pas	function get_advertisedValue (): string
vb	function get_advertisedValue () As String
cs	string get_advertisedValue ()
java	String get_advertisedValue ()
py	def get_advertisedValue ()
cmd	YVSource target get_advertisedValue

Returns :

a string corresponding to the current value of the voltage source (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

vsource→**get_errorMessage()****YVSource****vsource**→**errorMessage()****vsource.get_errorMessage()**

Returns the error message of the latest error with this function.

```
function get_errorMessage( )
```

vsource→**get_errorMessage()****vsource**→**errorMessage()****vsource.get_errorMessage()**

Returns the error message of the latest error with this function.

```
js function get_errorMessage( )  
php function get_errorMessage( )  
cpp string get_errorMessage( )  
m -(NSString*) errorMessage  
pas function get_errorMessage( ): string  
vb function get_errorMessage( ) As String  
cs string get_errorMessage( )  
java String get_errorMessage( )  
py def get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

vsource→**get_errorType()****YVSource****vsource**→**errorType()****vsource.get_errorType()**

Returns the numerical error code of the latest error with this function.

```
function get_errorType( )
```

vsource→**get_errorType()****vsource**→**errorType()****vsource.get_errorType()**

Returns the numerical error code of the latest error with this function.

```
js function get_errorType( )  
php function get_errorType( )  
cpp YRETCODE get_errorType( )  
pas function get_errorType( ): YRETCODE  
vb function get_errorType( ) As YRETCODE  
cs YRETCODE get_errorType( )  
java int get_errorType( )  
py def get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

vsource→**get_extPowerFailure()****YVSource****vsource**→**extPowerFailure()****vsource.get_extPowerFailure()**

Returns true if external power supply voltage is too low.

function **get_extPowerFailure()****vsource**→**get_extPowerFailure()****vsource**→**extPowerFailure(vsource.get_extPowerFailure())**

Returns true if external power supply voltage is too low.

js	function get_extPowerFailure()
php	function get_extPowerFailure()
cpp	Y_EXTPOWERFAILURE_enum get_extPowerFailure()
m	-(Y_EXTPOWERFAILURE_enum) extPowerFailure
pas	function get_extPowerFailure() : Integer
vb	function get_extPowerFailure() As Integer
cs	int get_extPowerFailure()
java	int get_extPowerFailure()
py	def get_extPowerFailure()
cmd	YVSource target get_extPowerFailure

Returns :

either Y_EXTPOWERFAILURE_FALSE or Y_EXTPOWERFAILURE_TRUE, according to true if external power supply voltage is too low

On failure, throws an exception or returns Y_EXTPOWERFAILURE_INVALID.

vsource→**get_failure()****vsource**→**failure()****vsource.get_failure()**

Returns true if the module is in failure mode.

```
function get_failure( )
```

vsource→**get_failure()****vsource**→**failure()****vsource.get_failure()**

Returns true if the module is in failure mode.

js	function get_failure ()
php	function get_failure ()
cpp	Y_FAILURE_enum get_failure ()
m	-(Y_FAILURE_enum) failure
pas	function get_failure (): Integer
vb	function get_failure () As Integer
cs	int get_failure ()
java	int get_failure ()
py	def get_failure ()
cmd	YVSource target get_failure

More information can be obtained by testing `get_overheat`, `get_overcurrent` etc... When a error condition is met, the output voltage is set to zéro and cannot be changed until the `reset()` function is called.

Returns :

either `Y_FAILURE_FALSE` or `Y_FAILURE_TRUE`, according to true if the module is in failure mode

On failure, throws an exception or returns `Y_FAILURE_INVALID`.

vsource→**get_friendlyName()****YVSource****vsource**→**friendlyName()****vsource.get_friendlyName()**

Returns a global identifier of the function in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

vsource→**get_friendlyName()****vsource**→**friendlyName()****vsource.get_friendlyName()**

Returns a global identifier of the function in the format `MODULE_NAME . FUNCTION_NAME`.

<code>js</code>	<code>function get_friendlyName()</code>
<code>php</code>	<code>function get_friendlyName()</code>
<code>cpp</code>	<code>virtual string get_friendlyName()</code>
<code>m</code>	<code>-(NSString*) friendlyName</code>
<code>cs</code>	<code>override string get_friendlyName()</code>
<code>java</code>	<code>String get_friendlyName()</code>

The returned string uses the logical names of the module and of the function if they are defined, otherwise the serial number of the module and the hardware identifier of the function (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the function using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

vsource→**get_functionDescriptor()****YVSource****vsource**→**functionDescriptor()****vsource.get_vsourceDescriptor()**

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor()**

vsource→**get_functionDescriptor()****vsource**→**functionDescriptor()****vsource.get_vsourceDescriptor()**

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

js	function get_functionDescriptor()
php	function get_functionDescriptor()
cpp	YFUN_DESCR get_functionDescriptor()
m	-(YFUN_DESCR) functionDescriptor
pas	function get_functionDescriptor() : YFUN_DESCR
vb	function get_functionDescriptor() As YFUN_DESCR
cs	YFUN_DESCR get_functionDescriptor()
java	String get_functionDescriptor()
py	def get_functionDescriptor()

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

vsource→**get_functionId()****YVSource****vsource**→**functionId()****vsource.get_vsourceId()**

Returns the hardware identifier of the function, without reference to the module.

```
function get_functionId( )
```

vsource→**get_functionId()****vsource**→**functionId()****vsource.get_vsourceId()**

Returns the hardware identifier of the function, without reference to the module.

```
js function get_functionId( )  
php function get_functionId( )  
cpp string get_functionId( )  
m -(NSString*) functionId  
vb function get_functionId( ) As String  
cs string get_functionId( )  
java String get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the function (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

vsource→**get_hardwareId()****YVSource****vsource**→**hardwareId()****vsource.get_hardwareId()**

Returns the unique hardware identifier of the function in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

vsource→**get_hardwareId()****vsource**→**hardwareId()****vsource.get_hardwareId()**

Returns the unique hardware identifier of the function in the form `SERIAL.FUNCTIONID`.

```
js function get_hardwareId( )
```

```
php function get_hardwareId( )
```

```
cpp string get_hardwareId( )
```

```
m -(NSString*) hardwareId
```

```
vb function get_hardwareId( ) As String
```

```
cs string get_hardwareId( )
```

```
java String get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the function. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the function (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

vsource→**get_logicalName()****YVSource****vsource**→**logicalName()****vsource.get_logicalName()**

Returns the logical name of the voltage source.

function **get_logicalName()****vsource**→**get_logicalName()****vsource**→**logicalName()****vsource.get_logicalName()**

Returns the logical name of the voltage source.

js	function get_logicalName()
php	function get_logicalName()
cpp	string get_logicalName()
m	-(NSString*) logicalName
pas	function get_logicalName() : string
vb	function get_logicalName() As String
cs	string get_logicalName()
java	String get_logicalName()
py	def get_logicalName()
cmd	YVSource target get_logicalName

Returns :

a string corresponding to the logical name of the voltage source

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

vsource→**get_module()****vsource**→**module()****vsource.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

vsource→**get_module()****vsource**→**module()****vsource.get_module()**

Gets the YModule object for the device on which the function is located.

js	function get_module ()
php	function get_module ()
cpp	YModule * get_module ()
m	-(YModule*) module
pas	function get_module (): TModule
vb	function get_module () As YModule
cs	YModule get_module ()
java	YModule get_module ()
py	def get_module ()

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

vsource→**get_module_async()****YVSource****vsource**→**module_async()****vsource.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

function **get_module_async**(**callback**, **context**)

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

vsource→**get_overCurrent()****YVSource****vsource**→**overCurrent()****vsource.get_overCurrent()**

Returns true if the appliance connected to the device is too greedy .

```
function get_overCurrent( )
```

vsource→**get_overCurrent()****vsource**→**overCurrent()****vsource.get_overCurrent()**

Returns true if the appliance connected to the device is too greedy .

js	function get_overCurrent ()
php	function get_overCurrent ()
cpp	Y_OVERCURRENT_enum get_overCurrent ()
m	-(Y_OVERCURRENT_enum) overCurrent
pas	function get_overCurrent (): Integer
vb	function get_overCurrent () As Integer
cs	int get_overCurrent ()
java	int get_overCurrent ()
py	def get_overCurrent ()
cmd	YVSource target get_overCurrent

Returns :

either Y_OVERCURRENT_FALSE or Y_OVERCURRENT_TRUE, according to true if the appliance connected to the device is too greedy

On failure, throws an exception or returns Y_OVERCURRENT_INVALID.

vsource→**get_overHeat()****YVSource****vsource**→**overHeat()****vsource.get_overHeat()**

Returns TRUE if the module is overheating.

function **get_overHeat()****vsource**→**get_overHeat()****vsource**→**overHeat()****vsource.get_overHeat()**

Returns TRUE if the module is overheating.

js	function get_overHeat()
php	function get_overHeat()
cpp	Y_OVERHEAT_enum get_overHeat()
m	-(Y_OVERHEAT_enum) overHeat
pas	function get_overHeat() : Integer
vb	function get_overHeat() As Integer
cs	int get_overHeat()
java	int get_overHeat()
py	def get_overHeat()
cmd	YVSource target get_overHeat

Returns :

either Y_OVERHEAT_FALSE or Y_OVERHEAT_TRUE, according to TRUE if the module is overheating

On failure, throws an exception or returns Y_OVERHEAT_INVALID.

vsource→**get_overLoad()****YVSource****vsource**→**overLoad()****vsource.get_overLoad()**

Returns true if the device is not able to maintaint the requested voltage output .

```
function get_overLoad( )
```

vsource→**get_overLoad()****vsource**→**overLoad()****vsource.get_overLoad()**

Returns true if the device is not able to maintaint the requested voltage output .

js	function get_overLoad ()
php	function get_overLoad ()
cpp	Y_OVERLOAD_enum get_overLoad ()
m	-(Y_OVERLOAD_enum) overLoad
pas	function get_overLoad (): Integer
vb	function get_overLoad () As Integer
cs	int get_overLoad ()
java	int get_overLoad ()
py	def get_overLoad ()
cmd	YVSource target get_overLoad

Returns :

either Y_OVERLOAD_FALSE or Y_OVERLOAD_TRUE, according to true if the device is not able to maintaint the requested voltage output

On failure, throws an exception or returns Y_OVERLOAD_INVALID.

vsource→**get_regulationFailure()****YVSource****vsource**→**regulationFailure()****vsource.get_regulationFailure()**

Returns true if the voltage output is too high regarding the requested voltage .

```
function get_regulationFailure( )
```

vsource→**get_regulationFailure()****vsource**→**regulationFailure()****vsource.get_regulationFailure()**

Returns true if the voltage output is too high regarding the requested voltage .

js	function get_regulationFailure ()
php	function get_regulationFailure ()
cpp	Y_REGULATIONFAILURE_enum get_regulationFailure ()
m	-(Y_REGULATIONFAILURE_enum) regulationFailure
pas	function get_regulationFailure (): Integer
vb	function get_regulationFailure () As Integer
cs	int get_regulationFailure ()
java	int get_regulationFailure ()
py	def get_regulationFailure ()
cmd	YVSource target get_regulationFailure

Returns :

either Y_REGULATIONFAILURE_FALSE or Y_REGULATIONFAILURE_TRUE, according to true if the voltage output is too high regarding the requested voltage

On failure, throws an exception or returns Y_REGULATIONFAILURE_INVALID.

vsource→**get_unit()****vsource**→**unit()****vsource.get_unit()**

Returns the measuring unit for the voltage.

```
function get_unit( )
```

vsource→**get_unit()****vsource**→**unit()****vsource.get_unit()**

Returns the measuring unit for the voltage.

```
js function get_unit( )
```

```
php function get_unit( )
```

```
cpp string get_unit( )
```

```
m -(NSString*) unit
```

```
pas function get_unit( ): string
```

```
vb function get_unit( ) As String
```

```
cs string get_unit( )
```

```
java String get_unit( )
```

```
py def get_unit( )
```

```
cmd YVSource target get_unit
```

Returns :

a string corresponding to the measuring unit for the voltage

On failure, throws an exception or returns Y_UNIT_INVALID.

vsource→**get_userData()****YVSource****vsource**→**userData()****vsource.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

vsource→**get_userData()****vsource**→**userData()****vsource.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
js function get_userData( )  
php function get_userData( )  
cpp void * get_userData( )  
m -(void*) userData  
pas function get_userData( ): Tobject  
vb function get_userData( ) As Object  
cs object get_userData( )  
java Object get_userData( )  
py def get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

vsource→**get_voltage()**

YVSource

vsource→**voltage()****vsource.get_voltage()**

Returns the voltage output command (mV)

```
function get_voltage( )
```

vsource→**get_voltage()****vsource**→**voltage()****vsource.get_voltage()**

Returns the voltage output command (mV)

js	function get_voltage ()
php	function get_voltage ()
cpp	int get_voltage ()
m	-(int) voltage
pas	function get_voltage (): LongInt
vb	function get_voltage () As Integer
cs	int get_voltage ()
java	int get_voltage ()
py	def get_voltage ()

Returns :

an integer corresponding to the voltage output command (mV)

On failure, throws an exception or returns Y_VOLTAGE_INVALID.

vsource→**isOnline()****vsource.isOnline()****YVSource**

Checks if the function is currently reachable, without raising any error.

```
function isOnline( )
```

vsource→**isOnline()****vsource.isOnline()**

Checks if the function is currently reachable, without raising any error.

```
js function isOnline( )  
php function isOnline( )  
cpp bool isOnline( )  
m -(BOOL) isOnline  
pas function isOnline( ): boolean  
vb function isOnline( ) As Boolean  
cs bool isOnline( )  
java boolean isOnline( )  
py def isOnline( )
```

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

vsource→**isOnline_async()****vsource.isOnline_async()****YVSource**

Checks if the function is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

vsource→**load()****vsource.load()****YVSource**

Preloads the function cache with a specified validity duration.

```
function load( msValidity)
```

vsource→**load()****vsource.load()**

Preloads the function cache with a specified validity duration.

js	function load(msValidity)
php	function load(\$msValidity)
cpp	YRETCODE load(int msValidity)
m	-(YRETCODE) load : (int) msValidity
pas	function load(msValidity: integer): YRETCODE
vb	function load(ByVal msValidity As Integer) As YRETCODE
cs	YRETCODE load(int msValidity)
java	int load(long msValidity)
py	def load(msValidity)

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

vsource→**load_async()****vsource.load_async()****YVSource**

Preloads the function cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

vsource→**nextVSource()**vsource.nextVSource()**YVSource**

Continues the enumeration of voltage sources started using `yFirstVSource()`.

```
function nextVSource( )
```

vsource→**nextVSource()**vsource.nextVSource()

Continues the enumeration of voltage sources started using `yFirstVSource()`.

js	function nextVSource ()
php	function nextVSource ()
cpp	YVSource * nextVSource ()
m	-(YVSource*) nextVSource
pas	function nextVSource (): TYVSource
vb	function nextVSource () As YVSource
cs	YVSource nextVSource ()
java	YVSource nextVSource ()
py	def nextVSource ()

Returns :

a pointer to a `YVSource` object, corresponding to a voltage source currently online, or a `null` pointer if there are no more voltage sources to enumerate.

vsource→**pulse()****vsource.pulse()****YVSource**

Sets device output to a specific volatage, for a specified duration, then brings it automatically to 0V.

```
function pulse( voltage, ms_duration)
```

vsource→**pulse()****vsource.pulse()**

Sets device output to a specific volatage, for a specified duration, then brings it automatically to 0V.

js	function pulse (voltage , ms_duration)
php	function pulse (\$voltage , \$ms_duration)
cpp	int pulse (int voltage , int ms_duration)
m	-(int) pulse : (int) voltage : (int) ms_duration
pas	function pulse (voltage : integer, ms_duration : integer): integer
vb	function pulse (ByVal voltage As Integer, ByVal ms_duration As Integer) As Integer
cs	int pulse (int voltage , int ms_duration)
java	int pulse (int voltage , int ms_duration)
py	def pulse (voltage , ms_duration)
cmd	YVSource target pulse voltage ms_duration

Parameters :

voltage pulse voltage, in millivolts
ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource→**registerValueCallback()** **vsource.registerValueCallback()**

YVSource

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

vsource→**registerValueCallback()****vsource.registerValueCallback()**

Registers the callback function that is invoked on every change of advertised value.

js	function registerValueCallback (callback)
php	function registerValueCallback (\$callback)
cpp	void registerValueCallback (YDisplayUpdateCallback callback)
pas	procedure registerValueCallback (callback : TGenericUpdateCallback)
vb	procedure registerValueCallback (ByVal callback As GenericUpdateCallback)
cs	void registerValueCallback (UpdateCallback callback)
java	void registerValueCallback (UpdateCallback callback)
py	def registerValueCallback (callback)
m	-(void) registerValueCallback : (YFunctionUpdateCallback) callback

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

vsource→**set_logicalName()****vsource**→**setLogicalName()****vsource.set_logicalName()**

Changes the logical name of the voltage source.

```
function set_logicalName( newval)
```

vsource→**set_logicalName()****vsource**→**setLogicalName()****vsource.set_logicalName()**

Changes the logical name of the voltage source.

js	function set_logicalName (newval)
php	function set_logicalName (\$newval)
cpp	int set_logicalName (const string& newval)
m	-(int) setLogicalName : (NSString*) newval
pas	function set_logicalName (newval: string): integer
vb	function set_logicalName (ByVal newval As String) As Integer
cs	int set_logicalName (string newval)
java	int set_logicalName (String newval)
py	def set_logicalName (newval)
cmd	YVSource target set_logicalName newval

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the voltage source

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource→**set_userData()**

YVSource

vsource→**setUserData()****vsource.set_userData()**

Stores a user context provided as argument in the userData attribute of the function.

```
function set_userData( data)
```

vsource→**set_userData()****vsource**→**setUserData()****vsource.set_userData()**

Stores a user context provided as argument in the userData attribute of the function.

js	function set_userData(data)
php	function set_userData(\$data)
cpp	void set_userData(void* data)
m	-(void) setUserData : (void*) data
pas	procedure set_userData(data: TObject)
vb	procedure set_userData(ByVal data As Object)
cs	void set_userData(object data)
java	void set_userData(Object data)
py	def set_userData(data)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

vsource→**set_voltage()**

YVSource

vsource→**setVoltage()****vsource.set_voltage()**

Tunes the device output voltage (milliVolts).

```
function set_voltage( newval)
```

vsource→**set_voltage()****vsource**→**setVoltage()****vsource.set_voltage()**

Tunes the device output voltage (milliVolts).

js	function set_voltage (newval)
php	function set_voltage (\$newval)
cpp	int set_voltage (int newval)
m	-(int) setVoltage : (int) newval
pas	function set_voltage (newval : LongInt): integer
vb	function set_voltage (ByVal newval As Integer) As Integer
cs	int set_voltage (int newval)
java	int set_voltage (int newval)
py	def set_voltage (newval)
cmd	YVSource target set_voltage newval

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource→**voltageMove()****vsource.voltageMove()****YVSource**

Performs a smooth move at constant speed toward a given value.

```
function voltageMove( target, ms_duration)
```

vsource→**voltageMove()****vsource.voltageMove()**

Performs a smooth move at constant speed toward a given value.

js	function voltageMove (target , ms_duration)
php	function voltageMove (\$target , \$ms_duration)
cpp	int voltageMove (int target , int ms_duration)
m	-(int) voltageMove : (int) target : (int) ms_duration
pas	function voltageMove (target : integer, ms_duration : integer): integer
vb	function voltageMove (ByVal target As Integer, ByVal ms_duration As Integer) As Integer
cs	int voltageMove (int target , int ms_duration)
java	int voltageMove (int target , int ms_duration)
py	def voltageMove (target , ms_duration)
cmd	YVSource target voltageMove target ms_duration

Parameters :

target new output value at end of transition, in milliVolts.
ms_duration transition duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource→**wait_async()****vsource.wait_async()**

YVSource

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

function **wait_async**(**callback**, **context**)

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing :

3.43. WakeUpMonitor function interface

The WakeUpMonitor function handles globally all wake-up sources, as well as automated sleep mode.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_wakeupmonitor.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YWakeUpMonitor = yoctolib.YWakeUpMonitor;
php	require_once('yocto_wakeupmonitor.php');
c++	#include "yocto_wakeupmonitor.h"
m	#import "yocto_wakeupmonitor.h"
pas	uses yocto_wakeupmonitor;
vb	yocto_wakeupmonitor.vb
cs	yocto_wakeupmonitor.cs
java	import com.yoctopuce.YoctoAPI.YWakeUpMonitor;
py	from yocto_wakeupmonitor import *

Global functions

yFindWakeUpMonitor(func)

Retrieves a monitor for a given identifier.

yFirstWakeUpMonitor()

Starts the enumeration of monitors currently accessible.

YWakeUpMonitor methods

wakeupmonitor→describe()

Returns a short text that describes unambiguously the instance of the monitor in the form TYPE (NAME) = SERIAL . FUNCTIONID.

wakeupmonitor→get_advertisedValue()

Returns the current value of the monitor (no more than 6 characters).

wakeupmonitor→get_errorMessage()

Returns the error message of the latest error with the monitor.

wakeupmonitor→get_errorType()

Returns the numerical error code of the latest error with the monitor.

wakeupmonitor→get_friendlyName()

Returns a global identifier of the monitor in the format MODULE_NAME . FUNCTION_NAME.

wakeupmonitor→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

wakeupmonitor→get_functionId()

Returns the hardware identifier of the monitor, without reference to the module.

wakeupmonitor→get_hardwareId()

Returns the unique hardware identifier of the monitor in the form SERIAL . FUNCTIONID.

wakeupmonitor→get_logicalName()

Returns the logical name of the monitor.

wakeupmonitor→get_module()

Gets the YModule object for the device on which the function is located.

wakeupmonitor→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

wakeupmonitor→get_nextWakeUp()

3. Reference

Returns the next scheduled wake up date/time (UNIX format)
wakeupmonitor → get_powerDuration() Returns the maximal wake up time (in seconds) before automatically going to sleep.
wakeupmonitor → get_sleepCountdown() Returns the delay before the next sleep period.
wakeupmonitor → get_userData() Returns the value of the userData attribute, as previously stored using method <code>set_userData</code> .
wakeupmonitor → get_wakeUpReason() Returns the latest wake up reason.
wakeupmonitor → get_wakeUpState() Returns the current state of the monitor
wakeupmonitor → isOnline() Checks if the monitor is currently reachable, without raising any error.
wakeupmonitor → isOnline_async(callback, context) Checks if the monitor is currently reachable, without raising any error (asynchronous version).
wakeupmonitor → load(msValidity) Preloads the monitor cache with a specified validity duration.
wakeupmonitor → load_async(msValidity, callback, context) Preloads the monitor cache with a specified validity duration (asynchronous version).
wakeupmonitor → nextWakeUpMonitor() Continues the enumeration of monitors started using <code>yFirstWakeUpMonitor()</code> .
wakeupmonitor → registerValueCallback(callback) Registers the callback function that is invoked on every change of advertised value.
wakeupmonitor → resetSleepCountDown() Resets the sleep countdown.
wakeupmonitor → set_logicalName(newval) Changes the logical name of the monitor.
wakeupmonitor → set_nextWakeUp(newval) Changes the days of the week when a wake up must take place.
wakeupmonitor → set_powerDuration(newval) Changes the maximal wake up time (seconds) before automatically going to sleep.
wakeupmonitor → set_sleepCountdown(newval) Changes the delay before the next sleep period.
wakeupmonitor → set_userData(data) Stores a user context provided as argument in the userData attribute of the function.
wakeupmonitor → sleep(secBeforeSleep) Goes to sleep until the next wake up condition is met, the RTC time must have been set before calling this function.
wakeupmonitor → sleepFor(secUntilWakeUp, secBeforeSleep) Goes to sleep for a specific duration or until the next wake up condition is met, the RTC time must have been set before calling this function.
wakeupmonitor → sleepUntil(wakeUpTime, secBeforeSleep) Go to sleep until a specific date is reached or until the next wake up condition is met, the RTC time must have been set before calling this function.
wakeupmonitor → wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

wakeupmonitor→**wakeUp()**

Forces a wake up.

YWakeUpMonitor.FindWakeUpMonitor() yFindWakeUpMonitor()yFindWakeUpMonitor()

YWakeUpMonitor

Retrieves a monitor for a given identifier.

```
function yFindWakeUpMonitor( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the monitor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YWakeUpMonitor.isOnline()` to test if the monitor is indeed online at a given time. In case of ambiguity when looking for a monitor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the monitor

Returns :

a `YWakeUpMonitor` object allowing you to drive the monitor.

**YWakeUpMonitor.FirstWakeUpMonitor()
yFirstWakeUpMonitor()yFirstWakeUpMonitor()**

YWakeUpMonitor

Starts the enumeration of monitors currently accessible.

```
function yFirstWakeUpMonitor( )
```

Use the method `YWakeUpMonitor.nextWakeUpMonitor()` to iterate on next monitors.

Returns :

a pointer to a `YWakeUpMonitor` object, corresponding to the first monitor currently online, or a `null` pointer if there are none.

**wakeupmonitor→describe()
wakeupmonitor.describe()****YWakeUpMonitor**

Returns a short text that describes unambiguously the instance of the monitor in the form
`TYPE (NAME) =SERIAL . FUNCTIONID`.

function **describe**()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the monitor (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

wakeupmonitor→**get_advertisedValue()****YWakeUpMonitor****wakeupmonitor**→**advertisedValue()****wakeupmonitor.get_advertisedValue()**

Returns the current value of the monitor (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the monitor (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

wakeupmonitor→get_errorMessage()

YWakeUpMonitor

wakeupmonitor→errorMessage()

wakeupmonitor.get_errorMessage()

Returns the error message of the latest error with the monitor.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the monitor object

wakeupmonitor→**get_errorType()****YWakeUpMonitor****wakeupmonitor**→**errorType()****wakeupmonitor.get_errorType()**

Returns the numerical error code of the latest error with the monitor.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the monitor object

wakeupmonitor→get_friendlyName()

YWakeUpMonitor

wakeupmonitor→friendlyName()

wakeupmonitor.get_friendlyName()

Returns a global identifier of the monitor in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the monitor if they are defined, otherwise the serial number of the module and the hardware identifier of the monitor (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the monitor using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

wakeupmonitor→**get_functionDescriptor()****YWakeUpMonitor****wakeupmonitor**→**functionDescriptor()****wakeupmonitor.get_functionDescriptor()**

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

wakeupmonitor→get_functionId()

YWakeUpMonitor

wakeupmonitor→functionId()

wakeupmonitor.get_functionId()

Returns the hardware identifier of the monitor, without reference to the module.

```
function get_functionId( )
```

For example relay1

Returns :

a string that identifies the monitor (ex: relay1) On failure, throws an exception or returns Y_FUNCTIONID_INVALID.

wakeupmonitor→**get_hardwareId()****YWakeUpMonitor****wakeupmonitor**→**hardwareId()****wakeupmonitor.get_hardwareId()**

Returns the unique hardware identifier of the monitor in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the monitor. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the monitor (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

wakeupmonitor→get_logicalName()

YWakeUpMonitor

wakeupmonitor→logicalName()

wakeupmonitor.get_logicalName()

Returns the logical name of the monitor.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the monitor. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

wakeupmonitor→**get_module()****YWakeUpMonitor****wakeupmonitor**→**module()****wakeupmonitor.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

wakeupmonitor→**get_module_async()****YWakeUpMonitor****wakeupmonitor**→**module_async()****wakeupmonitor.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wakeupmonitor→**get_nextWakeUp()**
wakeupmonitor→**nextWakeUp()**
wakeupmonitor.get_nextWakeUp()

YWakeUpMonitor

Returns the next scheduled wake up date/time (UNIX format)

```
function get_nextWakeUp( )
```

Returns :

an integer corresponding to the next scheduled wake up date/time (UNIX format)

On failure, throws an exception or returns `Y_NEXTWAKEUP_INVALID`.

wakeupmonitor→get_powerDuration()

YWakeUpMonitor

wakeupmonitor→powerDuration()

wakeupmonitor.get_powerDuration()

Returns the maximal wake up time (in seconds) before automatically going to sleep.

```
function get_powerDuration( )
```

Returns :

an integer corresponding to the maximal wake up time (in seconds) before automatically going to sleep

On failure, throws an exception or returns Y_POWERDURATION_INVALID.

wakeupmonitor→get_sleepCountdown()

YWakeUpMonitor

wakeupmonitor→sleepCountdown()

wakeupmonitor.get_sleepCountdown()

Returns the delay before the next sleep period.

```
function get_sleepCountdown( )
```

Returns :

an integer corresponding to the delay before the next sleep period

On failure, throws an exception or returns Y_SLEEPDOWNDOWN_INVALID.

wakeupmonitor→get_userData()

YWakeUpMonitor

wakeupmonitor→userData()

wakeupmonitor.get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

wakeupmonitor→**get_wakeUpReason()****YWakeUpMonitor****wakeupmonitor**→**wakeUpReason()****wakeupmonitor.get_wakeUpReason()**

Returns the latest wake up reason.

```
function get_wakeUpReason()
```

Returns :

a value among Y_WAKEUPREASON_USBPOWER, Y_WAKEUPREASON_EXTPOWER, Y_WAKEUPREASON_ENDOFSLEEP, Y_WAKEUPREASON_EXTSIG1, Y_WAKEUPREASON_EXTSIG2, Y_WAKEUPREASON_EXTSIG3, Y_WAKEUPREASON_EXTSIG4, Y_WAKEUPREASON_SCHEDULE1, Y_WAKEUPREASON_SCHEDULE2, Y_WAKEUPREASON_SCHEDULE3, Y_WAKEUPREASON_SCHEDULE4, Y_WAKEUPREASON_SCHEDULE5 and Y_WAKEUPREASON_SCHEDULE6 corresponding to the latest wake up reason

On failure, throws an exception or returns Y_WAKEUPREASON_INVALID.

wakeupmonitor→get_wakeUpState()

YWakeUpMonitor

wakeupmonitor→wakeUpState()

wakeupmonitor.get_wakeUpState()

Returns the current state of the monitor

```
function get_wakeUpState( )
```

Returns :

either Y_WAKEUPSTATE_SLEEPING or Y_WAKEUPSTATE_AWAKE, according to the current state of the monitor

On failure, throws an exception or returns Y_WAKEUPSTATE_INVALID.

wakeupmonitor→**isOnline()**wakeupmonitor.isOnline()**YWakeUpMonitor**

Checks if the monitor is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the monitor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the monitor.

Returns :

`true` if the monitor can be reached, and `false` otherwise

**wakeupmonitor→isOnline_async()
wakeupmonitor.isOnline_async()**

YWakeUpMonitor

Checks if the monitor is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the monitor in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wakeupmonitor→**load()**wakeupmonitor.load()**YWakeUpMonitor**

Preloads the monitor cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→**load_async()**
wakeupmonitor.load_async()**YWakeUpMonitor**

Preloads the monitor cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wakeupmonitor→**nextWakeUpMonitor()**
wakeupmonitor.nextWakeUpMonitor()

YWakeUpMonitor

Continues the enumeration of monitors started using `yFirstWakeUpMonitor()`.

```
function nextWakeUpMonitor( )
```

Returns :

a pointer to a `YWakeUpMonitor` object, corresponding to a monitor currently online, or a `null` pointer if there are no more monitors to enumerate.

wakeupmonitor→**registerValueCallback()**
wakeupmonitor.registerValueCallback()

YWakeUpMonitor

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

wakeupmonitor→**resetSleepCountDown()**
wakeupmonitor.resetSleepCountDown()

YWakeUpMonitor

Resets the sleep countdown.

```
function resetSleepCountDown( )
```

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→set_logicalName()

YWakeUpMonitor

wakeupmonitor→setLogicalName()

wakeupmonitor.set_logicalName()

Changes the logical name of the monitor.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the monitor.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→**set_nextWakeUp()****YWakeUpMonitor****wakeupmonitor**→**setNextWakeUp()****wakeupmonitor.set_nextWakeUp()**

Changes the days of the week when a wake up must take place.

```
function set_nextWakeUp( newval)
```

Parameters :

newval an integer corresponding to the days of the week when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupmonitor→set_powerDuration()
wakeupmonitor→setPowerDuration()
wakeupmonitor.set_powerDuration()

YWakeUpMonitor

Changes the maximal wake up time (seconds) before automatically going to sleep.

```
function set_powerDuration( newval)
```

Parameters :

newval an integer corresponding to the maximal wake up time (seconds) before automatically going to sleep

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupmonitor→set_sleepCountdown()

YWakeUpMonitor

wakeupmonitor→setSleepCountdown()

wakeupmonitor.set_sleepCountdown()

Changes the delay before the next sleep period.

```
function set_sleepCountdown( newval)
```

Parameters :

newval an integer corresponding to the delay before the next sleep period

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupmonitor→**set_userData()**
wakeupmonitor→**setUserData()**
wakeupmonitor.set_userData()

YWakeUpMonitor

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

wakeupmonitor→**sleep()****wakeupmonitor.sleep()****YWakeUpMonitor**

Goes to sleep until the next wake up condition is met, the RTC time must have been set before calling this function.

```
function sleep( secBeforeSleep)
```

Parameters :

secBeforeSleep number of seconds before going into sleep mode,

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→sleepFor()
wakeupmonitor.sleepFor()

YWakeUpMonitor

Goes to sleep for a specific duration or until the next wake up condition is met, the RTC time must have been set before calling this function.

```
function sleepFor( secUntilWakeUp, secBeforeSleep)
```

The count down before sleep can be canceled with resetSleepCountDown.

Parameters :

secUntilWakeUp sleep duration, in secondes

secBeforeSleep number of seconds before going into sleep mode

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→**sleepUntil()**
wakeupmonitor.sleepUntil()**YWakeUpMonitor**

Go to sleep until a specific date is reached or until the next wake up condition is met, the RTC time must have been set before calling this function.

```
function sleepUntil( wakeUpTime, secBeforeSleep)
```

The count down before sleep can be canceled with `resetSleepCountDown`.

Parameters :

wakeUpTime wake-up datetime (UNIX format)
secBeforeSleep number of seconds before going into sleep mode

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupmonitor→**wait_async()**
wakeupmonitor.wait_async()

YWakeUpMonitor

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

wakeupmonitor→**wakeUp()**wakeupmonitor.wakeUp()**YWakeUpMonitor**

Forces a wake up.

```
function wakeUp( )
```

3.44. WakeUpSchedule function interface

The WakeUpSchedule function implements a wake up condition. The wake up time is specified as a set of months and/or days and/or hours and/or minutes when the wake up should happen.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_wakeupschedule.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YWakeUpSchedule = yoctolib.YWakeUpSchedule;
php	require_once('yocto_wakeupschedule.php');
c++	#include "yocto_wakeupschedule.h"
m	#import "yocto_wakeupschedule.h"
pas	uses yocto_wakeupschedule;
vb	yocto_wakeupschedule.vb
cs	yocto_wakeupschedule.cs
java	import com.yoctopuce.YoctoAPI.YWakeUpSchedule;
py	from yocto_wakeupschedule import *

Global functions

yFindWakeUpSchedule(func)

Retrieves a wake up schedule for a given identifier.

yFirstWakeUpSchedule()

Starts the enumeration of wake up schedules currently accessible.

YWakeUpSchedule methods

wakeupschedule→describe()

Returns a short text that describes unambiguously the instance of the wake up schedule in the form TYPE (NAME) =SERIAL . FUNCTIONID.

wakeupschedule→get_advertisedValue()

Returns the current value of the wake up schedule (no more than 6 characters).

wakeupschedule→get_errorMessage()

Returns the error message of the latest error with the wake up schedule.

wakeupschedule→get_errorType()

Returns the numerical error code of the latest error with the wake up schedule.

wakeupschedule→get_friendlyName()

Returns a global identifier of the wake up schedule in the format MODULE_NAME . FUNCTION_NAME.

wakeupschedule→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCRIPTOR corresponding to the function.

wakeupschedule→get_functionId()

Returns the hardware identifier of the wake up schedule, without reference to the module.

wakeupschedule→get_hardwareId()

Returns the unique hardware identifier of the wake up schedule in the form SERIAL . FUNCTIONID.

wakeupschedule→get_hours()

Returns the hours scheduled for wake up.

wakeupschedule→get_logicalName()

Returns the logical name of the wake up schedule.

wakeupschedule→get_minutes()

Returns all the minutes of each hour that are scheduled for wake up.

wakeupschedule→get_minutesA()

Returns the minutes in the 00-29 interval of each hour scheduled for wake up.

wakeupschedule→**get_minutesB()**

Returns the minutes in the 30-59 interval of each hour scheduled for wake up.

wakeupschedule→**get_module()**

Gets the `YModule` object for the device on which the function is located.

wakeupschedule→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

wakeupschedule→**get_monthDays()**

Returns the days of the month scheduled for wake up.

wakeupschedule→**get_months()**

Returns the months scheduled for wake up.

wakeupschedule→**get_nextOccurence()**

Returns the date/time (seconds) of the next wake up occurrence

wakeupschedule→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

wakeupschedule→**get_weekDays()**

Returns the days of the week scheduled for wake up.

wakeupschedule→**isOnline()**

Checks if the wake up schedule is currently reachable, without raising any error.

wakeupschedule→**isOnline_async(callback, context)**

Checks if the wake up schedule is currently reachable, without raising any error (asynchronous version).

wakeupschedule→**load(msValidity)**

Preloads the wake up schedule cache with a specified validity duration.

wakeupschedule→**load_async(msValidity, callback, context)**

Preloads the wake up schedule cache with a specified validity duration (asynchronous version).

wakeupschedule→**nextWakeUpSchedule()**

Continues the enumeration of wake up schedules started using `yFirstWakeUpSchedule()`.

wakeupschedule→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

wakeupschedule→**set_hours(newval)**

Changes the hours when a wake up must take place.

wakeupschedule→**set_logicalName(newval)**

Changes the logical name of the wake up schedule.

wakeupschedule→**set_minutes(bitmap)**

Changes all the minutes where a wake up must take place.

wakeupschedule→**set_minutesA(newval)**

Changes the minutes in the 00-29 interval when a wake up must take place.

wakeupschedule→**set_minutesB(newval)**

Changes the minutes in the 30-59 interval when a wake up must take place.

wakeupschedule→**set_monthDays(newval)**

Changes the days of the month when a wake up must take place.

wakeupschedule→**set_months(newval)**

Changes the months when a wake up must take place.

wakeupschedule→**set_userData(data)**

Stores a user context provided as argument in the `userData` attribute of the function.

3. Reference

wakeupschedule→**set_weekDays(newval)**

Changes the days of the week when a wake up must take place.

wakeupschedule→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YWakeUpSchedule.FindWakeUpSchedule() yFindWakeUpSchedule()yFindWakeUpSchedule()

YWakeUpSchedule

Retrieves a wake up schedule for a given identifier.

```
function yFindWakeUpSchedule( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the wake up schedule is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YWakeUpSchedule.isOnline()` to test if the wake up schedule is indeed online at a given time. In case of ambiguity when looking for a wake up schedule by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the wake up schedule

Returns :

a `YWakeUpSchedule` object allowing you to drive the wake up schedule.

YWakeUpSchedule.FirstWakeUpSchedule() yFirstWakeUpSchedule()yFirstWakeUpSchedule()

YWakeUpSchedule

Starts the enumeration of wake up schedules currently accessible.

```
function yFirstWakeUpSchedule( )
```

Use the method `YWakeUpSchedule.nextWakeUpSchedule()` to iterate on next wake up schedules.

Returns :

a pointer to a `YWakeUpSchedule` object, corresponding to the first wake up schedule currently online, or a `null` pointer if there are none.

**wakeupschedule→describe()
wakeupschedule.describe()****YWakeUpSchedule**

Returns a short text that describes unambiguously the instance of the wake up schedule in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

```
function describe( )
```

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the wake up schedule (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

`wakeupschedule`→`get_advertisedValue()`

`YWakeUpSchedule`

`wakeupschedule`→`advertisedValue()`

`wakeupschedule.get_advertisedValue()`

Returns the current value of the wake up schedule (no more than 6 characters).

```
function get_advertisedValue() ( )
```

Returns :

a string corresponding to the current value of the wake up schedule (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

wakeupschedule→get_errorMessage()**YWakeUpSchedule****wakeupschedule→errorMessage()****wakeupschedule.get_errorMessage()**

Returns the error message of the latest error with the wake up schedule.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the wake up schedule object

`wakeupschedule`→`get_errorType()`

YWakeUpSchedule

`wakeupschedule`→`errorType()`

`wakeupschedule.get_errorType()`

Returns the numerical error code of the latest error with the wake up schedule.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the wake up schedule object

wakeupschedule→get_friendlyName()**YWakeUpSchedule****wakeupschedule→friendlyName()****wakeupschedule.get_friendlyName()**

Returns a global identifier of the wake up schedule in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the wake up schedule if they are defined, otherwise the serial number of the module and the hardware identifier of the wake up schedule (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the wake up schedule using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

`wakeupschedule`→`get_functionDescriptor()`

`YWakeUpSchedule`

`wakeupschedule`→`functionDescriptor()`

`wakeupschedule.get_functionDescriptor()`

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor() ( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

wakeupschedule→**get_functionId()****YWakeUpSchedule****wakeupschedule**→**functionId()****wakeupschedule.get_functionId()**

Returns the hardware identifier of the wake up schedule, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the wake up schedule (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

`wakeupschedule`→`get_hardwareId()`

`YWakeUpSchedule`

`wakeupschedule`→`hardwareId()`

`wakeupschedule.get_hardwareId()`

Returns the unique hardware identifier of the wake up schedule in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the wake up schedule. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the wake up schedule (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

wakeupschedule→get_hours()

YWakeUpSchedule

wakeupschedule→hours()

wakeupschedule.get_hours()

Returns the hours scheduled for wake up.

```
function get_hours( )
```

Returns :

an integer corresponding to the hours scheduled for wake up

On failure, throws an exception or returns `Y_HOURS_INVALID`.

wakeupschedule→**get_logicalName()**

YWakeUpSchedule

wakeupschedule→**logicalName()**

wakeupschedule.get_logicalName()

Returns the logical name of the wake up schedule.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the wake up schedule. On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

wakeupschedule→**get_minutes()**

YWakeUpSchedule

wakeupschedule→**minutes()**

wakeupschedule.get_minutes()

Returns all the minutes of each hour that are scheduled for wake up.

```
function get_minutes( )
```

wakeupschedule→**get_minutesA()**

YWakeUpSchedule

wakeupschedule→**minutesA()**

wakeupschedule.get_minutesA()

Returns the minutes in the 00-29 interval of each hour scheduled for wake up.

```
function get_minutesA( )
```

Returns :

an integer corresponding to the minutes in the 00-29 interval of each hour scheduled for wake up

On failure, throws an exception or returns Y_MINUTESA_INVALID.

wakeupschedule→get_minutesB()**YWakeUpSchedule****wakeupschedule→minutesB()****wakeupschedule.get_minutesB()**

Returns the minutes in the 30-59 interval of each hour scheduled for wake up.

```
function get_minutesB( )
```

Returns :

an integer corresponding to the minutes in the 30-59 interval of each hour scheduled for wake up

On failure, throws an exception or returns `Y_MINUTESB_INVALID`.

wakeupschedule→**get_module()**

YWakeUpSchedule

wakeupschedule→**module()**

wakeupschedule.get_module()

Gets the YModule object for the device on which the function is located.

```
function get_module()
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

wakeupschedule→**get_module_async()****YWakeUpSchedule****wakeupschedule**→**module_async()****wakeupschedule.get_module_async()**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

`wakeupschedule`→`get_monthDays()`

`YWakeUpSchedule`

`wakeupschedule`→`monthDays()`

`wakeupschedule.get_monthDays()`

Returns the days of the month scheduled for wake up.

```
function get_monthDays()
```

Returns :

an integer corresponding to the days of the month scheduled for wake up

On failure, throws an exception or returns `Y_MONTHDAYS_INVALID`.

wakeupschedule→get_months()**YWakeUpSchedule****wakeupschedule→months()****wakeupschedule.get_months()**

Returns the months scheduled for wake up.

```
function get_months( )
```

Returns :

an integer corresponding to the months scheduled for wake up

On failure, throws an exception or returns Y_MONTHS_INVALID.

`wakeupschedule`→`get_nextOccurence()`

`YWakeUpSchedule`

`wakeupschedule`→`nextOccurence()`

`wakeupschedule.get_nextOccurence()`

Returns the date/time (seconds) of the next wake up occurrence

```
function get_nextOccurence() ( )
```

Returns :

an integer corresponding to the date/time (seconds) of the next wake up occurrence

On failure, throws an exception or returns `Y_NEXTOCCURENCE_INVALID`.

wakeupschedule→**get_userData()****YWakeUpSchedule****wakeupschedule**→**userData()****wakeupschedule.get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

`wakeupschedule`→`get_weekDays()`

`YWakeUpSchedule`

`wakeupschedule`→`weekDays()`

`wakeupschedule.get_weekDays()`

Returns the days of the week scheduled for wake up.

```
function get_weekDays()
```

Returns :

an integer corresponding to the days of the week scheduled for wake up

On failure, throws an exception or returns `Y_WEEKDAYS_INVALID`.

**wakeupschedule→isOnline()
wakeupschedule.isOnline()**

YWakeUpSchedule

Checks if the wake up schedule is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the wake up schedule in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the wake up schedule.

Returns :

`true` if the wake up schedule can be reached, and `false` otherwise

wakeupschedule→**isOnline_async()**
wakeupschedule.isOnline_async()

YWakeUpSchedule

Checks if the wake up schedule is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the wake up schedule in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wakeupschedule→load()wakeupschedule.load()**YWakeUpSchedule**

Preloads the wake up schedule cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

**wakeupschedule→load_async()
wakeupschedule.load_async()**

YWakeUpSchedule

Preloads the wake up schedule cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

**wakeupschedule→nextWakeUpSchedule()
wakeupschedule.nextWakeUpSchedule()**

YWakeUpSchedule

Continues the enumeration of wake up schedules started using `yFirstWakeUpSchedule()`.

```
function nextWakeUpSchedule( )
```

Returns :

a pointer to a `YWakeUpSchedule` object, corresponding to a wake up schedule currently online, or a `null` pointer if there are no more wake up schedules to enumerate.

wakeupschedule→**registerValueCallback()**
wakeupschedule.registerValueCallback()

YWakeUpSchedule

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

wakeupschedule→set_hours()
wakeupschedule→setHours()
wakeupschedule.set_hours()

YWakeUpSchedule

Changes the hours when a wake up must take place.

```
function set_hours( newval)
```

Parameters :

newval an integer corresponding to the hours when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→**set_logicalName()**

YWakeUpSchedule

wakeupschedule→**setLogicalName()**

wakeupschedule.set_logicalName()

Changes the logical name of the wake up schedule.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the wake up schedule.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wakeupschedule→set_minutes()**YWakeUpSchedule****wakeupschedule→setMinutes()****wakeupschedule.set_minutes()**

Changes all the minutes where a wake up must take place.

```
function set_minutes( bitmap)
```

Parameters :

bitmap Minutes 00-59 of each hour scheduled for wake up.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

`wakeupschedule`→`set_minutesA()`
`wakeupschedule`→`setMinutesA()`
`wakeupschedule.set_minutesA()`

YWakeUpSchedule

Changes the minutes in the 00-29 interval when a wake up must take place.

```
function set_minutesA( newval)
```

Parameters :

newval an integer corresponding to the minutes in the 00-29 interval when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→set_minutesB()**YWakeUpSchedule****wakeupschedule→setMinutesB()****wakeupschedule.set_minutesB()**

Changes the minutes in the 30-59 interval when a wake up must take place.

```
function set_minutesB( newval)
```

Parameters :

newval an integer corresponding to the minutes in the 30-59 interval when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→set_monthDays()

YWakeUpSchedule

wakeupschedule→setMonthDays()

wakeupschedule.set_monthDays()

Changes the days of the month when a wake up must take place.

```
function set_monthDays( newval)
```

Parameters :

newval an integer corresponding to the days of the month when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→set_months()**YWakeUpSchedule****wakeupschedule→setMonths()****wakeupschedule.set_months()**

Changes the months when a wake up must take place.

```
function set_months( newval)
```

Parameters :

newval an integer corresponding to the months when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→**set_userData()**

YWakeUpSchedule

wakeupschedule→**setUserData()**

wakeupschedule.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

wakeupschedule→set_weekDays()**YWakeUpSchedule****wakeupschedule→setWeekDays()****wakeupschedule.set_weekDays()**

Changes the days of the week when a wake up must take place.

```
function set_weekDays( newval)
```

Parameters :

newval an integer corresponding to the days of the week when a wake up must take place

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wakeupschedule→**wait_async()**
wakeupschedule.wait_async()

YWakeUpSchedule

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.45. Watchdog function interface

The watchdog function works like a relay and can cause a brief power cut to an appliance after a preset delay to force this appliance to reset. The Watchdog must be called from time to time to reset the timer and prevent the appliance reset. The watchdog can be driven directly with *pulse* and *delayedpulse* methods to switch off an appliance for a given duration.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_watchdog.js'></script></code>
nodejs	<code>var yoctolib = require('yoctolib'); var YWatchdog = yoctolib.YWatchdog;</code>
php	<code>require_once('yocto_watchdog.php');</code>
cpp	<code>#include "yocto_watchdog.h"</code>
m	<code>#import "yocto_watchdog.h"</code>
pas	<code>uses yocto_watchdog;</code>
vb	<code>yocto_watchdog.vb</code>
cs	<code>yocto_watchdog.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YWatchdog;</code>
py	<code>from yocto_watchdog import *</code>

Global functions

yFindWatchdog(func)

Retrieves a watchdog for a given identifier.

yFirstWatchdog()

Starts the enumeration of watchdog currently accessible.

YWatchdog methods

watchdog→delayedPulse(ms_delay, ms_duration)

Schedules a pulse.

watchdog→describe()

Returns a short text that describes unambiguously the instance of the watchdog in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

watchdog→get_advertisedValue()

Returns the current value of the watchdog (no more than 6 characters).

watchdog→get_autoStart()

Returns the watchdog running state at module power on.

watchdog→get_countdown()

Returns the number of milliseconds remaining before a pulse (`delayedPulse()` call) When there is no scheduled pulse, returns zero.

watchdog→get_errorMessage()

Returns the error message of the latest error with the watchdog.

watchdog→get_errorType()

Returns the numerical error code of the latest error with the watchdog.

watchdog→get_friendlyName()

Returns a global identifier of the watchdog in the format `MODULE_NAME . FUNCTION_NAME`.

watchdog→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

watchdog→get_functionId()

Returns the hardware identifier of the watchdog, without reference to the module.

watchdog→get_hardwareId()

Returns the unique hardware identifier of the watchdog in the form SERIAL . FUNCTIONID.

watchdog→get_logicalName()

Returns the logical name of the watchdog.

watchdog→get_maxTimeOnStateA()

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

watchdog→get_maxTimeOnStateB()

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

watchdog→get_module()

Gets the YModule object for the device on which the function is located.

watchdog→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

watchdog→get_output()

Returns the output state of the watchdog, when used as a simple switch (single throw).

watchdog→get_pulseTimer()

Returns the number of milliseconds remaining before the watchdog is returned to idle position (state A), during a measured pulse generation.

watchdog→get_running()

Returns the watchdog running state.

watchdog→get_state()

Returns the state of the watchdog (A for the idle position, B for the active position).

watchdog→get_stateAtPowerOn()

Returns the state of the watchdog at device startup (A for the idle position, B for the active position, UNCHANGED for no change).

watchdog→get_triggerDelay()

Returns the waiting duration before a reset is automatically triggered by the watchdog, in milliseconds.

watchdog→get_triggerDuration()

Returns the duration of resets caused by the watchdog, in milliseconds.

watchdog→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

watchdog→isOnline()

Checks if the watchdog is currently reachable, without raising any error.

watchdog→isOnline_async(callback, context)

Checks if the watchdog is currently reachable, without raising any error (asynchronous version).

watchdog→load(msValidity)

Preloads the watchdog cache with a specified validity duration.

watchdog→load_async(msValidity, callback, context)

Preloads the watchdog cache with a specified validity duration (asynchronous version).

watchdog→nextWatchdog()

Continues the enumeration of watchdog started using yFirstWatchdog().

watchdog→pulse(ms_duration)

Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).

watchdog→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

watchdog→resetWatchdog()

Resets the watchdog.

watchdog→set_autoStart(newval)

Changes the watchdog running state at module power on.

watchdog→set_logicalName(newval)

Changes the logical name of the watchdog.

watchdog→set_maxTimeOnStateA(newval)

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

watchdog→set_maxTimeOnStateB(newval)

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

watchdog→set_output(newval)

Changes the output state of the watchdog, when used as a simple switch (single throw).

watchdog→set_running(newval)

Changes the running state of the watchdog.

watchdog→set_state(newval)

Changes the state of the watchdog (A for the idle position, B for the active position).

watchdog→set_stateAtPowerOn(newval)

Presets the state of the watchdog at device startup (A for the idle position, B for the active position, UNCHANGED for no modification).

watchdog→set_triggerDelay(newval)

Changes the waiting delay before a reset is triggered by the watchdog, in milliseconds.

watchdog→set_triggerDuration(newval)

Changes the duration of resets caused by the watchdog, in milliseconds.

watchdog→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

watchdog→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YWatchdog.FindWatchdog() yFindWatchdog()yFindWatchdog()

YWatchdog

Retrieves a watchdog for a given identifier.

```
function yFindWatchdog( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the watchdog is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YWatchdog.isOnline()` to test if the watchdog is indeed online at a given time. In case of ambiguity when looking for a watchdog by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the watchdog

Returns :

a `YWatchdog` object allowing you to drive the watchdog.

**YWatchdog.FirstWatchdog()
yFirstWatchdog()yFirstWatchdog()**

YWatchdog

Starts the enumeration of watchdog currently accessible.

```
function yFirstWatchdog( )
```

Use the method `YWatchdog.nextWatchdog()` to iterate on next watchdog.

Returns :

a pointer to a `YWatchdog` object, corresponding to the first watchdog currently online, or a `null` pointer if there are none.

watchdog→**delayedPulse()****watchdog.delayedPulse()**

YWatchdog

Schedules a pulse.

```
function delayedPulse( ms_delay, ms_duration)
```

Parameters :

ms_delay waiting time before the pulse, in milliseconds

ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→describe()watchdog.describe()**YWatchdog**

Returns a short text that describes unambiguously the instance of the watchdog in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` is the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the watchdog (ex: `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

watchdog→**get_advertisedValue()**

YWatchdog

watchdog→**advertisedValue()**

watchdog.get_advertisedValue()

Returns the current value of the watchdog (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the watchdog (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

watchdog→**get_autoStart()****YWatchdog****watchdog**→**autoStart()****watchdog.get_autoStart()**

Returns the watchdog running state at module power on.

```
function get_autoStart( )
```

Returns :

either `Y_AUTOSTART_OFF` or `Y_AUTOSTART_ON`, according to the watchdog running state at module power on

On failure, throws an exception or returns `Y_AUTOSTART_INVALID`.

watchdog→**get_countdown()**

YWatchdog

watchdog→**countdown()****watchdog.get_countdown()**

Returns the number of milliseconds remaining before a pulse (delayedPulse() call) When there is no scheduled pulse, returns zero.

```
function get_countdown( )
```

Returns :

an integer corresponding to the number of milliseconds remaining before a pulse (delayedPulse() call) When there is no scheduled pulse, returns zero

On failure, throws an exception or returns Y_COUNTDOWN_INVALID.

watchdog→get_errorMessage()**YWatchdog****watchdog→errorMessage()****watchdog.get_errorMessage()**

Returns the error message of the latest error with the watchdog.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the watchdog object

watchdog→**get_errorType()**

YWatchdog

watchdog→**errorType()****watchdog.get_errorType()**

Returns the numerical error code of the latest error with the watchdog.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the watchdog object

watchdog→get_friendlyName()**YWatchdog****watchdog→friendlyName()****watchdog.get_friendlyName()**

Returns a global identifier of the watchdog in the format `MODULE_NAME . FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the watchdog if they are defined, otherwise the serial number of the module and the hardware identifier of the watchdog (for exemple: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the watchdog using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

watchdog→**get_functionDescriptor()**

YWatchdog

watchdog→**functionDescriptor()**

watchdog.get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

watchdog→**get_functionId()****YWatchdog****watchdog**→**functionId()****watchdog.get_functionId()**

Returns the hardware identifier of the watchdog, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the watchdog (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

watchdog→**get_hardwareId()**

YWatchdog

watchdog→**hardwareId()****watchdog.get_hardwareId()**

Returns the unique hardware identifier of the watchdog in the form `SERIAL.FUNCTIONID`.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the watchdog. (for example `RELAYLO1-123456.relay1`)

Returns :

a string that uniquely identifies the watchdog (ex: `RELAYLO1-123456.relay1`) On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

watchdog→get_logicalName()**YWatchdog****watchdog→logicalName()****watchdog.get_logicalName()**

Returns the logical name of the watchdog.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the watchdog. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

watchdog→**get_maxTimeOnStateA()**

YWatchdog

watchdog→**maxTimeOnStateA()**

watchdog.get_maxTimeOnStateA()

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

```
function get_maxTimeOnStateA( )
```

Zero means no maximum time.

Returns :

an integer

On failure, throws an exception or returns Y_MAXTIMEONSTATEA_INVALID.

watchdog→**get_maxTimeOnStateB()****YWatchdog****watchdog**→**maxTimeOnStateB()****watchdog.get_maxTimeOnStateB()**

Retourne the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

```
function get_maxTimeOnStateB( )
```

Zero means no maximum time.

Returns :

an integer

On failure, throws an exception or returns `Y_MAXTIMEONSTATEB_INVALID`.

watchdog→**get_module()**

YWatchdog

watchdog→**module()****watchdog.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

watchdog→get_module_async()**YWatchdog****watchdog→module_async()****watchdog.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

watchdog→**get_output()**

YWatchdog

watchdog→**output()****watchdog.get_output()**

Returns the output state of the watchdog, when used as a simple switch (single throw).

```
function get_output( )
```

Returns :

either `Y_OUTPUT_OFF` or `Y_OUTPUT_ON`, according to the output state of the watchdog, when used as a simple switch (single throw)

On failure, throws an exception or returns `Y_OUTPUT_INVALID`.

watchdog→**get_pulseTimer()****YWatchdog****watchdog**→**pulseTimer()****watchdog.get_pulseTimer()**

Returns the number of milliseconds remaining before the watchdog is returned to idle position (state A), during a measured pulse generation.

```
function get_pulseTimer( )
```

When there is no ongoing pulse, returns zero.

Returns :

an integer corresponding to the number of milliseconds remaining before the watchdog is returned to idle position (state A), during a measured pulse generation

On failure, throws an exception or returns `Y_PULSETIMER_INVALID`.

watchdog→**get_running()**

YWatchdog

watchdog→**running()****watchdog.get_running()**

Returns the watchdog running state.

```
function get_running( )
```

Returns :

either `Y_RUNNING_OFF` or `Y_RUNNING_ON`, according to the watchdog running state

On failure, throws an exception or returns `Y_RUNNING_INVALID`.

watchdog→**get_state()****YWatchdog****watchdog**→**state()****watchdog.get_state()**

Returns the state of the watchdog (A for the idle position, B for the active position).

```
function get_state( )
```

Returns :

either `Y_STATE_A` or `Y_STATE_B`, according to the state of the watchdog (A for the idle position, B for the active position)

On failure, throws an exception or returns `Y_STATE_INVALID`.

watchdog→**get_stateAtPowerOn()**

YWatchdog

watchdog→**stateAtPowerOn()**

watchdog.get_stateAtPowerOn()

Returns the state of the watchdog at device startup (A for the idle position, B for the active position, UNCHANGED for no change).

```
function get_stateAtPowerOn( )
```

Returns :

a value among `Y_STATEATPOWERON_UNCHANGED`, `Y_STATEATPOWERON_A` and `Y_STATEATPOWERON_B` corresponding to the state of the watchdog at device startup (A for the idle position, B for the active position, UNCHANGED for no change)

On failure, throws an exception or returns `Y_STATEATPOWERON_INVALID`.

watchdog→get_triggerDelay()**YWatchdog****watchdog→triggerDelay()****watchdog.get_triggerDelay()**

Returns the waiting duration before a reset is automatically triggered by the watchdog, in milliseconds.

```
function get_triggerDelay( )
```

Returns :

an integer corresponding to the waiting duration before a reset is automatically triggered by the watchdog, in milliseconds

On failure, throws an exception or returns `Y_TRIGGERDELAY_INVALID`.

watchdog→**get_triggerDuration()**

YWatchdog

watchdog→**triggerDuration()**

watchdog.get_triggerDuration()

Returns the duration of resets caused by the watchdog, in milliseconds.

```
function get_triggerDuration( )
```

Returns :

an integer corresponding to the duration of resets caused by the watchdog, in milliseconds

On failure, throws an exception or returns `Y_TRIGGERDURATION_INVALID`.

watchdog→**get_userdata()****YWatchdog****watchdog**→**userData()****watchdog.get_userdata()**

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

```
function get_userdata( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

watchdog→isOnline()watchdog.isOnline()

YWatchdog

Checks if the watchdog is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the watchdog in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the watchdog.

Returns :

`true` if the watchdog can be reached, and `false` otherwise

watchdog→isOnline_async()
watchdog.isOnline_async()**YWatchdog**

Checks if the watchdog is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the watchdog in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

watchdog→**load()****watchdog.load()****YWatchdog**

Preloads the watchdog cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

watchdog→load_async()**watchdog.load_async()****YWatchdog**

Preloads the watchdog cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

watchdog→**nextWatchdog()**
watchdog.nextWatchdog()

YWatchdog

Continues the enumeration of watchdog started using `yFirstWatchdog()`.

```
function nextWatchdog( )
```

Returns :

a pointer to a `YWatchdog` object, corresponding to a watchdog currently online, or a `null` pointer if there are no more watchdog to enumerate.

watchdog→pulse()**watchdog.pulse()****YWatchdog**

Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).

```
function pulse( ms_duration)
```

Parameters :

ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**registerValueCallback()**
watchdog.registerValueCallback()

YWatchdog

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

**watchdog→resetWatchdog()
watchdog.resetWatchdog()**

YWatchdog

Resets the watchdog.

```
function resetWatchdog( )
```

When the watchdog is running, this function must be called on a regular basis to prevent the watchdog to trigger

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_autoStart()**

YWatchdog

watchdog→**setAutoStart()****watchdog.set_autoStart()**

Changes the watchdog runningstae at module power on.

```
function set_autoStart( newval)
```

Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

newval either `Y_AUTOSTART_OFF` or `Y_AUTOSTART_ON`, according to the watchdog runningstae at module power on

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→set_logicalName()**YWatchdog****watchdog→setLogicalName()****watchdog.set_logicalName()**

Changes the logical name of the watchdog.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the watchdog.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

watchdog→**set_maxTimeOnStateA()**

YWatchdog

watchdog→**setMaxTimeOnStateA()**

watchdog.set_maxTimeOnStateA()

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state A before automatically switching back in to B state.

```
function set_maxTimeOnStateA( newval)
```

Use zero for no maximum time.

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→set_maxTimeOnStateB()**YWatchdog****watchdog→setMaxTimeOnStateB()****watchdog.set_maxTimeOnStateB()**

Sets the maximum time (ms) allowed for \$THEFUNCTIONS\$ to stay in state B before automatically switching back in to A state.

```
function set_maxTimeOnStateB( newval)
```

Use zero for no maximum time.

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_output()**

YWatchdog

watchdog→**setOutput()****watchdog.set_output()**

Changes the output state of the watchdog, when used as a simple switch (single throw).

```
function set_output( newval)
```

Parameters :

newval either Y_OUTPUT_OFF or Y_OUTPUT_ON, according to the output state of the watchdog, when used as a simple switch (single throw)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_running()****YWatchdog****watchdog**→**setRunning()****watchdog.set_running()**

Changes the running state of the watchdog.

```
function set_running( newval)
```

Parameters :

newval either Y_RUNNING_OFF or Y_RUNNING_ON, according to the running state of the watchdog

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_state()**

YWatchdog

watchdog→**setState()****watchdog.set_state()**

Changes the state of the watchdog (A for the idle position, B for the active position).

```
function set_state( newval)
```

Parameters :

newval either `Y_STATE_A` or `Y_STATE_B`, according to the state of the watchdog (A for the idle position, B for the active position)

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_stateAtPowerOn()****YWatchdog****watchdog**→**setStateAtPowerOn()****watchdog.set_stateAtPowerOn()**

Preset the state of the watchdog at device startup (A for the idle position, B for the active position, UNCHANGED for no modification).

```
function set_stateAtPowerOn( newval)
```

Remember to call the matching module `saveToFlash()` method, otherwise this call will have no effect.

Parameters :

newval a value among `Y_STATEATPOWERON_UNCHANGED`, `Y_STATEATPOWERON_A` and `Y_STATEATPOWERON_B`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_triggerDelay()**
watchdog→**setTriggerDelay()**
watchdog.set_triggerDelay()

YWatchdog

Changes the waiting delay before a reset is triggered by the watchdog, in milliseconds.

```
function set_triggerDelay( newval)
```

Parameters :

newval an integer corresponding to the waiting delay before a reset is triggered by the watchdog, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_triggerDuration()****YWatchdog****watchdog**→**setTriggerDuration()****watchdog.set_triggerDuration()**

Changes the duration of resets caused by the watchdog, in milliseconds.

```
function set_triggerDuration( newval)
```

Parameters :

newval an integer corresponding to the duration of resets caused by the watchdog, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

watchdog→**set_userData()**

YWatchdog

watchdog→**setUserData()****watchdog.set_userData()**

Stores a user context provided as argument in the `userData` attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

watchdog→**wait_async()****watchdog.wait_async()****YWatchdog**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

- callback** callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing.

3.46. Wireless function interface

YWireless functions provides control over wireless network parameters and status for devices that are wireless-enabled.

In order to use the functions described here, you should include:

js	<script type='text/javascript' src='yocto_wireless.js'></script>
nodejs	var yoctolib = require('yoctolib'); var YWireless = yoctolib.YWireless;
php	require_once('yocto_wireless.php');
c++	#include "yocto_wireless.h"
m	#import "yocto_wireless.h"
pas	uses yocto_wireless;
vb	yocto_wireless.vb
cs	yocto_wireless.cs
java	import com.yoctopuce.YoctoAPI.YWireless;
py	from yocto_wireless import *

Global functions

yFindWireless(func)

Retrieves a wireless lan interface for a given identifier.

yFirstWireless()

Starts the enumeration of wireless lan interfaces currently accessible.

YWireless methods

wireless→adhocNetwork(ssid, securityKey)

Changes the configuration of the wireless lan interface to create an ad-hoc wireless network, without using an access point.

wireless→describe()

Returns a short text that describes unambiguously the instance of the wireless lan interface in the form TYPE (NAME) = SERIAL . FUNCTIONID.

wireless→get_advertisedValue()

Returns the current value of the wireless lan interface (no more than 6 characters).

wireless→get_channel()

Returns the 802.11 channel currently used, or 0 when the selected network has not been found.

wireless→get_detectedWlans()

Returns a list of YWlanRecord objects that describe detected Wireless networks.

wireless→get_errorMessage()

Returns the error message of the latest error with the wireless lan interface.

wireless→get_errorType()

Returns the numerical error code of the latest error with the wireless lan interface.

wireless→get_friendlyName()

Returns a global identifier of the wireless lan interface in the format MODULE_NAME . FUNCTION_NAME.

wireless→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

wireless→get_functionId()

Returns the hardware identifier of the wireless lan interface, without reference to the module.

wireless→get_hardwareId()

Returns the unique hardware identifier of the wireless lan interface in the form SERIAL . FUNCTIONID.

wireless→**get_linkQuality()**

Returns the link quality, expressed in percent.

wireless→**get_logicalName()**

Returns the logical name of the wireless lan interface.

wireless→**get_message()**

Returns the latest status message from the wireless interface.

wireless→**get_module()**

Gets the `YModule` object for the device on which the function is located.

wireless→**get_module_async(callback, context)**

Gets the `YModule` object for the device on which the function is located (asynchronous version).

wireless→**get_security()**

Returns the security algorithm used by the selected wireless network.

wireless→**get_ssid()**

Returns the wireless network name (SSID).

wireless→**get_userData()**

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

wireless→**isOnline()**

Checks if the wireless lan interface is currently reachable, without raising any error.

wireless→**isOnline_async(callback, context)**

Checks if the wireless lan interface is currently reachable, without raising any error (asynchronous version).

wireless→**joinNetwork(ssid, securityKey)**

Changes the configuration of the wireless lan interface to connect to an existing access point (infrastructure mode).

wireless→**load(msValidity)**

Preloads the wireless lan interface cache with a specified validity duration.

wireless→**load_async(msValidity, callback, context)**

Preloads the wireless lan interface cache with a specified validity duration (asynchronous version).

wireless→**nextWireless()**

Continues the enumeration of wireless lan interfaces started using `yFirstWireless()`.

wireless→**registerValueCallback(callback)**

Registers the callback function that is invoked on every change of advertised value.

wireless→**set_logicalName(newval)**

Changes the logical name of the wireless lan interface.

wireless→**set_userData(data)**

Stores a user context provided as argument in the `userData` attribute of the function.

wireless→**wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

YWireless.FindWireless() yFindWireless()yFindWireless()

YWireless

Retrieves a wireless lan interface for a given identifier.

```
function yFindWireless( func)
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the wireless lan interface is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YWireless.isOnline()` to test if the wireless lan interface is indeed online at a given time. In case of ambiguity when looking for a wireless lan interface by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the wireless lan interface

Returns :

a `YWireless` object allowing you to drive the wireless lan interface.

**YWireless.FirstWireless()
yFirstWireless()yFirstWireless()**

YWireless

Starts the enumeration of wireless lan interfaces currently accessible.

```
function yFirstWireless( )
```

Use the method `YWireless.nextWireless()` to iterate on next wireless lan interfaces.

Returns :

a pointer to a `YWireless` object, corresponding to the first wireless lan interface currently online, or a `null` pointer if there are none.

wireless→**adhocNetwork()****wireless.adhocNetwork()****YWireless**

Changes the configuration of the wireless lan interface to create an ad-hoc wireless network, without using an access point.

```
function adhocNetwork( ssid, securityKey)
```

If a security key is specified, the network is protected by WEP128, since WPA is not standardized for ad-hoc networks. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ssid the name of the network to connect to
securityKey the network key, as a character string

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wireless→describe()wireless.describe()**YWireless**

Returns a short text that describes unambiguously the instance of the wireless lan interface in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

function describe()

More precisely, `TYPE` is the type of the function, `NAME` it the name used for the first access to the function, `SERIAL` is the serial number of the module if the module is connected or "unresolved", and `FUNCTIONID` is the hardware identifier of the function if the module is connected. For example, this method returns `Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1` if the module is already connected or `Relay(BadCustomeName.relay1)=unresolved` if the module has not yet been connected. This method does not trigger any USB or TCP transaction and can therefore be used in a debugger.

Returns :

a string that describes the wireless lan interface (ex:
`Relay(MyCustomName.relay1)=RELAYLO1-123456.relay1`)

wireless→**get_advertisedValue()**

YWireless

wireless→**advertisedValue()**

wireless.get_advertisedValue()

Returns the current value of the wireless lan interface (no more than 6 characters).

```
function get_advertisedValue( )
```

Returns :

a string corresponding to the current value of the wireless lan interface (no more than 6 characters). On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

wireless→**get_channel()****YWireless****wireless**→**channel()****wireless.get_channel()**

Returns the 802.11 channel currently used, or 0 when the selected network has not been found.

```
function get_channel( )
```

Returns :

an integer corresponding to the 802.11 channel currently used, or 0 when the selected network has not been found

On failure, throws an exception or returns `Y_CHANNEL_INVALID`.

wireless→**get_detectedWlans()**

YWireless

wireless→**detectedWlans()**

wireless.get_detectedWlans()

Returns a list of `YWlanRecord` objects that describe detected Wireless networks.

```
function get_detectedWlans( )
```

This list is not updated when the module is already connected to an access point (infrastructure mode). To force an update of this list, `adhocNetwork()` must be called to disconnect the module from the current network. The returned list must be unallocated by the caller.

Returns :

a list of `YWlanRecord` objects, containing the SSID, channel, link quality and the type of security of the wireless network.

On failure, throws an exception or returns an empty list.

wireless→**get_errorMessage()****YWireless****wireless**→**errorMessage()****wireless.get_errorMessage()**

Returns the error message of the latest error with the wireless lan interface.

```
function get_errorMessage( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using the wireless lan interface object

wireless→**get_errorType()**

YWireless

wireless→**errorType()****wireless.get_errorType()**

Returns the numerical error code of the latest error with the wireless lan interface.

```
function get_errorType( )
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using the wireless lan interface object

wireless→**get_friendlyName()****YWireless****wireless**→**friendlyName()****wireless.get_friendlyName()**

Returns a global identifier of the wireless lan interface in the format `MODULE_NAME.FUNCTION_NAME`.

```
function get_friendlyName( )
```

The returned string uses the logical names of the module and of the wireless lan interface if they are defined, otherwise the serial number of the module and the hardware identifier of the wireless lan interface (for example: `MyCustomName.relay1`)

Returns :

a string that uniquely identifies the wireless lan interface using logical names (ex: `MyCustomName.relay1`) On failure, throws an exception or returns `Y_FRIENDLYNAME_INVALID`.

wireless→**get_functionDescriptor()**
wireless→**functionDescriptor()**
wireless.get_functionDescriptor()

YWireless

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( )
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

wireless→**get_functionId()****YWireless****wireless**→**functionId()****wireless.get_functionId()**

Returns the hardware identifier of the wireless lan interface, without reference to the module.

```
function get_functionId( )
```

For example `relay1`

Returns :

a string that identifies the wireless lan interface (ex: `relay1`) On failure, throws an exception or returns `Y_FUNCTIONID_INVALID`.

wireless→**get_hardwareId()**

YWireless

wireless→**hardwareId()****wireless.get_hardwareId()**

Returns the unique hardware identifier of the wireless lan interface in the form SERIAL.FUNCTIONID.

```
function get_hardwareId( )
```

The unique hardware identifier is composed of the device serial number and of the hardware identifier of the wireless lan interface. (for example RELAYLO1-123456.relay1)

Returns :

a string that uniquely identifies the wireless lan interface (ex: RELAYLO1-123456.relay1) On failure, throws an exception or returns Y_HARDWAREID_INVALID.

wireless→**get_linkQuality()****YWireless****wireless**→**linkQuality()****wireless.get_linkQuality()**

Returns the link quality, expressed in percent.

```
function get_linkQuality( )
```

Returns :

an integer corresponding to the link quality, expressed in percent

On failure, throws an exception or returns `Y_LINKQUALITY_INVALID`.

wireless→**get_logicalName()**

YWireless

wireless→**logicalName()****wireless.get_logicalName()**

Returns the logical name of the wireless lan interface.

```
function get_logicalName( )
```

Returns :

a string corresponding to the logical name of the wireless lan interface. On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

wireless→**get_message()****YWireless****wireless**→**message()****wireless.get_message()**

Returns the latest status message from the wireless interface.

```
function get_message( )
```

Returns :

a string corresponding to the latest status message from the wireless interface

On failure, throws an exception or returns `Y_MESSAGE_INVALID`.

wireless→**get_module()**

YWireless

wireless→**module()****wireless.get_module()**

Gets the YModule object for the device on which the function is located.

```
function get_module( )
```

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

wireless→**get_module_async()****YWireless****wireless**→**module_async()****wireless.get_module_async()**

Gets the YModule object for the device on which the function is located (asynchronous version).

```
function get_module_async( callback, context)
```

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless→**get_security()**

YWireless

wireless→**security()****wireless.get_security()**

Returns the security algorithm used by the selected wireless network.

```
function get_security( )
```

Returns :

a value among Y_SECURITY_UNKNOWN, Y_SECURITY_OPEN, Y_SECURITY_WEP, Y_SECURITY_WPA and Y_SECURITY_WPA2 corresponding to the security algorithm used by the selected wireless network

On failure, throws an exception or returns Y_SECURITY_INVALID.

wireless→**get_ssid()****YWireless****wireless**→**ssid()****wireless.get_ssid()**

Returns the wireless network name (SSID).

```
function get_ssid( )
```

Returns :

a string corresponding to the wireless network name (SSID)

On failure, throws an exception or returns `Y_SSID_INVALID`.

wireless→**get_userData()**

YWireless

wireless→**userData()****wireless.get_userData()**

Returns the value of the userData attribute, as previously stored using method `set_userData`.

```
function get_userData( )
```

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

wireless→**isOnline()****wireless.isOnline()****YWireless**

Checks if the wireless lan interface is currently reachable, without raising any error.

```
function isOnline( )
```

If there is a cached value for the wireless lan interface in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the wireless lan interface.

Returns :

`true` if the wireless lan interface can be reached, and `false` otherwise

wireless→**isOnline_async()****wireless.isOnline_async()**

YWireless

Checks if the wireless lan interface is currently reachable, without raising any error (asynchronous version).

```
function isOnline_async( callback, context)
```

If there is a cached value for the wireless lan interface in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless→**joinNetwork()****wireless.joinNetwork()****YWireless**

Changes the configuration of the wireless lan interface to connect to an existing access point (infrastructure mode).

```
function joinNetwork( ssid, securityKey)
```

Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ssid the name of the network to connect to
securityKey the network key, as a character string

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wireless→**load()****wireless.load()****YWireless**

Preloads the wireless lan interface cache with a specified validity duration.

```
function load( msValidity)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

wireless→**load_async()****wireless.load_async()****YWireless**

Preloads the wireless lan interface cache with a specified validity duration (asynchronous version).

```
function load_async( msValidity, callback, context)
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking the Javascript virtual machine.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless→**nextWireless()****wireless.nextWireless()**

YWireless

Continues the enumeration of wireless lan interfaces started using `yFirstWireless()`.

```
function nextWireless( )
```

Returns :

a pointer to a `YWireless` object, corresponding to a wireless lan interface currently online, or a `null` pointer if there are no more wireless lan interfaces to enumerate.

wireless→registerValueCallback()
wireless.registerValueCallback()

YWireless

Registers the callback function that is invoked on every change of advertised value.

```
function registerValueCallback( callback )
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

wireless→**set_logicalName()**

YWireless

wireless→**setLogicalName()**

wireless.set_logicalName()

Changes the logical name of the wireless lan interface.

```
function set_logicalName( newval)
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the wireless lan interface.

Returns :

YAPI_SUCCESS if the call succeeds. On failure, throws an exception or returns a negative error code.

wireless→**set_userData()****YWireless****wireless**→**setUserData()****wireless.set_userData()**

Stores a user context provided as argument in the userData attribute of the function.

```
function set_userData( data)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

wireless→**wait_async()****wireless.wait_async()**

YWireless

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

```
function wait_async( callback, context)
```

The callback function can therefore freely issue synchronous or asynchronous commands, without risking to block the Javascript VM.

Parameters :

callback callback function that is invoked when all pending commands on the module are completed. The callback function receives two arguments: the caller-specific context object and the receiving function object.

context caller-specific object that is passed as-is to the callback function

Returns :

nothing.

Index

A

Accelerometer 32
adhocNetwork, YWireless 1723
AnButton 78

B

Blueprint 12

C

calibrate, YLightSensor 761
calibrateFromPoints, YAccelerometer 36
calibrateFromPoints, YCarbonDioxide 124
calibrateFromPoints, YCompass 200
calibrateFromPoints, YCurrent 244
calibrateFromPoints, YGenericSensor 553
calibrateFromPoints, YGyro 603
calibrateFromPoints, YHumidity 687
calibrateFromPoints, YLightSensor 762
calibrateFromPoints, YMagnetometer 805
calibrateFromPoints, YPower 990
calibrateFromPoints, YPressure 1037
calibrateFromPoints, YQt 1149
calibrateFromPoints, YSensor 1303
calibrateFromPoints, YTemperature 1385
calibrateFromPoints, YTilt 1430
calibrateFromPoints, YVoc 1473
calibrateFromPoints, YVoltage 1516
callbackLogin, YNetwork 903
cancel3DCalibration, YRefFrame 1223
CarbonDioxide 120
CheckLogicalName, YAPI 14
clear, YDisplayLayer 456
clearConsole, YDisplayLayer 457
Clock 1188
ColorLed 163
Compass 196
Configuration 1219
consoleOut, YDisplayLayer 458
copyLayerContent, YDisplay 408
Current 240

D

Data 318, 328, 341
DataLogger 283
delayedPulse, YDigitalIO 360
delayedPulse, YRelay 1263
delayedPulse, YWatchdog 1675
describe, YAccelerometer 37
describe, YAnButton 82
describe, YCarbonDioxide 125
describe, YColorLed 166
describe, YCompass 201

describe, YCurrent 245
describe, YDataLogger 286
describe, YDigitalIO 361
describe, YDisplay 409
describe, YDualPower 490
describe, YFiles 519
describe, YGenericSensor 554
describe, YGyro 604
describe, YHubPort 657
describe, YHumidity 688
describe, YLed 729
describe, YLightSensor 763
describe, YMagnetometer 806
describe, YModule 857
describe, YNetwork 904
describe, YOsControl 962
describe, YPower 991
describe, YPressure 1038
describe, YPwmOutput 1080
describe, YPwmPowerSource 1121
describe, YQt 1150
describe, YRealTimeClock 1191
describe, YRefFrame 1224
describe, YRelay 1264
describe, YSensor 1304
describe, YServo 1346
describe, YTemperature 1386
describe, YTilt 1431
describe, YVoc 1474
describe, YVoltage 1517
describe, YVSource 1558
describe, YWakeUpMonitor 1595
describe, YWakeUpSchedule 1634
describe, YWatchdog 1676
describe, YWireless 1724
Digital 356
DisableExceptions, YAPI 15
Display 404
DisplayLayer 455
download, YFiles 520
download, YModule 858
download_async, YFiles 521
drawBar, YDisplayLayer 459
drawBitmap, YDisplayLayer 460
drawCircle, YDisplayLayer 461
drawDisc, YDisplayLayer 462
drawImage, YDisplayLayer 463
drawPixel, YDisplayLayer 464
drawRect, YDisplayLayer 465
drawText, YDisplayLayer 466
dutyCycleMove, YPwmOutput 1081

E

EnableExceptions, YAPI 16

Error 8
External 487

F

fade, YDisplay 410
Files 516
FindAccelerometer, YAccelerometer 34
FindAnButton, YAnButton 80
FindCarbonDioxide, YCarbonDioxide 122
FindColorLed, YColorLed 164
FindCompass, YCompass 198
FindCurrent, YCurrent 242
FindDataLogger, YDataLogger 284
FindDigitalIO, YDigitalIO 358
FindDisplay, YDisplay 406
FindDualPower, YDualPower 488
FindFiles, YFiles 517
FindGenericSensor, YGenericSensor 551
FindGyro, YGyro 601
FindHubPort, YHubPort 655
FindHumidity, YHumidity 685
FindLed, YLed 727
FindLightSensor, YLightSensor 759
FindMagnetometer, YMagnetometer 803
FindModule, YModule 855
FindNetwork, YNetwork 901
FindOsControl, YOsControl 960
FindPower, YPower 988
FindPressure, YPressure 1035
FindPwmOutput, YPwmOutput 1078
FindPwmPowerSource, YPwmPowerSource 1119
FindQt, YQt 1147
FindRealTimeClock, YRealTimeClock 1189
FindRefFrame, YRefFrame 1221
FindRelay, YRelay 1261
FindSensor, YSensor 1301
FindServo, YServo 1344
FindTemperature, YTemperature 1383
FindTilt, YTilt 1428
FindVoc, YVoc 1471
FindVoltage, YVoltage 1514
FindVSource, YVSource 1556
FindWakeUpMonitor, YWakeUpMonitor 1593
FindWakeUpSchedule, YWakeUpSchedule 1632
FindWatchdog, YWatchdog 1673
FindWireless, YWireless 1721
FirstAccelerometer, YAccelerometer 35
FirstAnButton, YAnButton 81
FirstCarbonDioxide, YCarbonDioxide 123
FirstColorLed, YColorLed 165
FirstCompass, YCompass 199
FirstCurrent, YCurrent 243
FirstDataLogger, YDataLogger 285
FirstDigitalIO, YDigitalIO 359
FirstDisplay, YDisplay 407
FirstDualPower, YDualPower 489
FirstFiles, YFiles 518
FirstGenericSensor, YGenericSensor 552
FirstGyro, YGyro 602
FirstHubPort, YHubPort 656
FirstHumidity, YHumidity 686
FirstLed, YLed 728
FirstLightSensor, YLightSensor 760
FirstMagnetometer, YMagnetometer 804
FirstModule, YModule 856
FirstNetwork, YNetwork 902
FirstOsControl, YOsControl 961
FirstPower, YPower 989
FirstPressure, YPressure 1036
FirstPwmOutput, YPwmOutput 1079
FirstPwmPowerSource, YPwmPowerSource 1120
FirstQt, YQt 1148
FirstRealTimeClock, YRealTimeClock 1190
FirstRefFrame, YRefFrame 1222
FirstRelay, YRelay 1262
FirstSensor, YSensor 1302
FirstServo, YServo 1345
FirstTemperature, YTemperature 1384
FirstTilt, YTilt 1429
FirstVoc, YVoc 1472
FirstVoltage, YVoltage 1515
FirstVSource, YVSource 1557
FirstWakeUpMonitor, YWakeUpMonitor 1594
FirstWakeUpSchedule, YWakeUpSchedule 1633
FirstWatchdog, YWatchdog 1674
FirstWireless, YWireless 1722
forgetAllDataStreams, YDataLogger 287
format_fs, YFiles 522
Formatted 318
Frame 1219
FreeAPI, YAPI 17
functionCount, YModule 859
functionId, YModule 860
functionName, YModule 861
Functions 13
functionValue, YModule 862

G

General 13
GenericSensor 549
get_3DCalibrationHint, YRefFrame 1225
get_3DCalibrationLogMsg, YRefFrame 1226
get_3DCalibrationProgress, YRefFrame 1227
get_3DCalibrationStage, YRefFrame 1228
get_3DCalibrationStageProgress, YRefFrame 1229
get_adminPassword, YNetwork 905
get_advertisedValue, YAccelerometer 38
get_advertisedValue, YAnButton 83
get_advertisedValue, YCarbonDioxide 126
get_advertisedValue, YColorLed 167
get_advertisedValue, YCompass 202
get_advertisedValue, YCurrent 246
get_advertisedValue, YDataLogger 288
get_advertisedValue, YDigitalIO 362
get_advertisedValue, YDisplay 411

get_advertisedValue, YDualPower 491
get_advertisedValue, YFiles 523
get_advertisedValue, YGenericSensor 555
get_advertisedValue, YGyro 605
get_advertisedValue, YHubPort 658
get_advertisedValue, YHumidity 689
get_advertisedValue, YLed 730
get_advertisedValue, YLightSensor 764
get_advertisedValue, YMagnetometer 807
get_advertisedValue, YNetwork 906
get_advertisedValue, YOsControl 963
get_advertisedValue, YPower 992
get_advertisedValue, YPressure 1039
get_advertisedValue, YPwmOutput 1082
get_advertisedValue, YPwmPowerSource 1122
get_advertisedValue, YQt 1151
get_advertisedValue, YRealTimeClock 1192
get_advertisedValue, YRefFrame 1230
get_advertisedValue, YRelay 1265
get_advertisedValue, YSensor 1305
get_advertisedValue, YServo 1347
get_advertisedValue, YTemperature 1387
get_advertisedValue, YTilt 1432
get_advertisedValue, YVoc 1475
get_advertisedValue, YVoltage 1518
get_advertisedValue, YVSource 1559
get_advertisedValue, YWakeUpMonitor 1596
get_advertisedValue, YWakeUpSchedule 1635
get_advertisedValue, YWatchdog 1677
get_advertisedValue, YWireless 1725
get_analogCalibration, YAnButton 84
get_autoStart, YDataLogger 289
get_autoStart, YWatchdog 1678
get_averageValue, YDataRun 318
get_averageValue, YDataStream 342
get_averageValue, YMeasure 847
get_baudRate, YHubPort 659
get_beacon, YModule 863
get_bearing, YRefFrame 1231
get_bitDirection, YDigitalIO 363
get_bitOpenDrain, YDigitalIO 364
get_bitPolarity, YDigitalIO 365
get_bitState, YDigitalIO 366
get_blinking, YLed 731
get_brightness, YDisplay 412
get_calibratedValue, YAnButton 85
get_calibrationMax, YAnButton 86
get_calibrationMin, YAnButton 87
get_callbackCredentials, YNetwork 907
get_callbackEncoding, YNetwork 908
get_callbackMaxDelay, YNetwork 909
get_callbackMethod, YNetwork 910
get_callbackMinDelay, YNetwork 911
get_callbackUrl, YNetwork 912
get_channel, YWireless 1726
get_columnCount, YDataStream 343
get_columnNames, YDataStream 344
get_cosPhi, YPower 993
get_countdown, YRelay 1266
get_countdown, YWatchdog 1679
get_currentRawValue, YAccelerometer 39
get_currentRawValue, YCarbonDioxide 127
get_currentRawValue, YCompass 203
get_currentRawValue, YCurrent 247
get_currentRawValue, YGenericSensor 556
get_currentRawValue, YGyro 606
get_currentRawValue, YHumidity 690
get_currentRawValue, YLightSensor 765
get_currentRawValue, YMagnetometer 808
get_currentRawValue, YPower 994
get_currentRawValue, YPressure 1040
get_currentRawValue, YQt 1152
get_currentRawValue, YSensor 1306
get_currentRawValue, YTemperature 1388
get_currentRawValue, YTilt 1433
get_currentRawValue, YVoc 1476
get_currentRawValue, YVoltage 1519
get_currentRunIndex, YDataLogger 290
get_currentValue, YAccelerometer 40
get_currentValue, YCarbonDioxide 128
get_currentValue, YCompass 204
get_currentValue, YCurrent 248
get_currentValue, YGenericSensor 557
get_currentValue, YGyro 607
get_currentValue, YHumidity 691
get_currentValue, YLightSensor 766
get_currentValue, YMagnetometer 809
get_currentValue, YPower 995
get_currentValue, YPressure 1041
get_currentValue, YQt 1153
get_currentValue, YSensor 1307
get_currentValue, YTemperature 1389
get_currentValue, YTilt 1434
get_currentValue, YVoc 1477
get_currentValue, YVoltage 1520
get_data, YDataStream 345
get_dataRows, YDataStream 346
get_dataSamplesIntervalMs, YDataStream 347
get_dataSets, YDataLogger 291
get_dataStreams, YDataLogger 292
get_dateTime, YRealTimeClock 1193
get_detectedWlans, YWireless 1727
get_discoverable, YNetwork 913
get_display, YDisplayLayer 467
get_displayHeight, YDisplay 413
get_displayHeight, YDisplayLayer 468
get_displayLayer, YDisplay 414
get_displayType, YDisplay 415
get_displayWidth, YDisplay 416
get_displayWidth, YDisplayLayer 469
get_duration, YDataRun 319
get_duration, YDataStream 348
get_dutyCycle, YPwmOutput 1083
get_dutyCycleAtPowerOn, YPwmOutput 1084
get_enabled, YDisplay 417
get_enabled, YHubPort 660
get_enabled, YPwmOutput 1085
get_enabled, YServo 1348

get_enabledAtPowerOn, YPwmOutput 1086
get_enabledAtPowerOn, YServo 1349
get_endTimeUTC, YDataSet 329
get_endTimeUTC, YMeasure 848
get_errorMessage, YAccelerometer 41
get_errorMessage, YAnButton 88
get_errorMessage, YCarbonDioxide 129
get_errorMessage, YColorLed 168
get_errorMessage, YCompass 205
get_errorMessage, YCurrent 249
get_errorMessage, YDataLogger 293
get_errorMessage, YDigitalIO 367
get_errorMessage, YDisplay 418
get_errorMessage, YDualPower 492
get_errorMessage, YFiles 524
get_errorMessage, YGenericSensor 558
get_errorMessage, YGyro 608
get_errorMessage, YHubPort 661
get_errorMessage, YHumidity 692
get_errorMessage, YLed 732
get_errorMessage, YLightSensor 767
get_errorMessage, YMagnetometer 810
get_errorMessage, YModule 864
get_errorMessage, YNetwork 914
get_errorMessage, YOsControl 964
get_errorMessage, YPower 996
get_errorMessage, YPressure 1042
get_errorMessage, YPwmOutput 1087
get_errorMessage, YPwmPowerSource 1123
get_errorMessage, YQt 1154
get_errorMessage, YRealTimeClock 1194
get_errorMessage, YRefFrame 1232
get_errorMessage, YRelay 1267
get_errorMessage, YSensor 1308
get_errorMessage, YServo 1350
get_errorMessage, YTemperature 1390
get_errorMessage, YTilt 1435
get_errorMessage, YVoc 1478
get_errorMessage, YVoltage 1521
get_errorMessage, YVSource 1560
get_errorMessage, YWakeUpMonitor 1597
get_errorMessage, YWakeUpSchedule 1636
get_errorMessage, YWatchdog 1680
get_errorMessage, YWireless 1728
get_errorType, YAccelerometer 42
get_errorType, YAnButton 89
get_errorType, YCarbonDioxide 130
get_errorType, YColorLed 169
get_errorType, YCompass 206
get_errorType, YCurrent 250
get_errorType, YDataLogger 294
get_errorType, YDigitalIO 368
get_errorType, YDisplay 419
get_errorType, YDualPower 493
get_errorType, YFiles 525
get_errorType, YGenericSensor 559
get_errorType, YGyro 609
get_errorType, YHubPort 662
get_errorType, YHumidity 693
get_errorType, YLed 733
get_errorType, YLightSensor 768
get_errorType, YMagnetometer 811
get_errorType, YModule 865
get_errorType, YNetwork 915
get_errorType, YOsControl 965
get_errorType, YPower 997
get_errorType, YPressure 1043
get_errorType, YPwmOutput 1088
get_errorType, YPwmPowerSource 1124
get_errorType, YQt 1155
get_errorType, YRealTimeClock 1195
get_errorType, YRefFrame 1233
get_errorType, YRelay 1268
get_errorType, YSensor 1309
get_errorType, YServo 1351
get_errorType, YTemperature 1391
get_errorType, YTilt 1436
get_errorType, YVoc 1479
get_errorType, YVoltage 1522
get_errorType, YVSource 1561
get_errorType, YWakeUpMonitor 1598
get_errorType, YWakeUpSchedule 1637
get_errorType, YWatchdog 1681
get_errorType, YWireless 1729
get_extPowerFailure, YVSource 1562
get_extVoltage, YDualPower 494
get_failure, YVSource 1563
get_filesCount, YFiles 526
get_firmwareRelease, YModule 866
get_freeSpace, YFiles 527
get_frequency, YPwmOutput 1089
get_friendlyName, YAccelerometer 43
get_friendlyName, YAnButton 90
get_friendlyName, YCarbonDioxide 131
get_friendlyName, YColorLed 170
get_friendlyName, YCompass 207
get_friendlyName, YCurrent 251
get_friendlyName, YDataLogger 295
get_friendlyName, YDigitalIO 369
get_friendlyName, YDisplay 420
get_friendlyName, YDualPower 495
get_friendlyName, YFiles 528
get_friendlyName, YGenericSensor 560
get_friendlyName, YGyro 610
get_friendlyName, YHubPort 663
get_friendlyName, YHumidity 694
get_friendlyName, YLed 734
get_friendlyName, YLightSensor 769
get_friendlyName, YMagnetometer 812
get_friendlyName, YNetwork 916
get_friendlyName, YOsControl 966
get_friendlyName, YPower 998
get_friendlyName, YPressure 1044
get_friendlyName, YPwmOutput 1090
get_friendlyName, YPwmPowerSource 1125
get_friendlyName, YQt 1156
get_friendlyName, YRealTimeClock 1196
get_friendlyName, YRefFrame 1234

get_friendlyName, YRelay 1269
get_friendlyName, YSensor 1310
get_friendlyName, YServo 1352
get_friendlyName, YTemperature 1392
get_friendlyName, YTilt 1437
get_friendlyName, YVoc 1480
get_friendlyName, YVoltage 1523
get_friendlyName, YVSource 1564
get_friendlyName, YWakeUpMonitor 1599
get_friendlyName, YWakeUpSchedule 1638
get_friendlyName, YWatchdog 1682
get_friendlyName, YWireless 1730
get_functionDescriptor, YAccelerometer 44
get_functionDescriptor, YAnButton 91
get_functionDescriptor, YCarbonDioxide 132
get_functionDescriptor, YColorLed 171
get_functionDescriptor, YCompass 208
get_functionDescriptor, YCurrent 252
get_functionDescriptor, YDataLogger 296
get_functionDescriptor, YDigitalIO 370
get_functionDescriptor, YDisplay 421
get_functionDescriptor, YDualPower 496
get_functionDescriptor, YFiles 529
get_functionDescriptor, YGenericSensor 561
get_functionDescriptor, YGyro 611
get_functionDescriptor, YHubPort 664
get_functionDescriptor, YHumidity 695
get_functionDescriptor, YLed 735
get_functionDescriptor, YLightSensor 770
get_functionDescriptor, YMagnetometer 813
get_functionDescriptor, YNetwork 917
get_functionDescriptor, YOsControl 967
get_functionDescriptor, YPower 999
get_functionDescriptor, YPressure 1045
get_functionDescriptor, YPwmOutput 1091
get_functionDescriptor, YPwmPowerSource 1126
get_functionDescriptor, YQt 1157
get_functionDescriptor, YRealTimeClock 1197
get_functionDescriptor, YRefFrame 1235
get_functionDescriptor, YRelay 1270
get_functionDescriptor, YSensor 1311
get_functionDescriptor, YServo 1353
get_functionDescriptor, YTemperature 1393
get_functionDescriptor, YTilt 1438
get_functionDescriptor, YVoc 1481
get_functionDescriptor, YVoltage 1524
get_functionDescriptor, YVSource 1565
get_functionDescriptor, YWakeUpMonitor 1600
get_functionDescriptor, YWakeUpSchedule 1639
get_functionDescriptor, YWatchdog 1683
get_functionDescriptor, YWireless 1731
get_functionId, YAccelerometer 45
get_functionId, YAnButton 92
get_functionId, YCarbonDioxide 133
get_functionId, YColorLed 172
get_functionId, YCompass 209
get_functionId, YCurrent 253
get_functionId, YDataLogger 297
get_functionId, YDataSet 330
get_functionId, YDigitalIO 371
get_functionId, YDisplay 422
get_functionId, YDualPower 497
get_functionId, YFiles 530
get_functionId, YGenericSensor 562
get_functionId, YGyro 612
get_functionId, YHubPort 665
get_functionId, YHumidity 696
get_functionId, YLed 736
get_functionId, YLightSensor 771
get_functionId, YMagnetometer 814
get_functionId, YNetwork 918
get_functionId, YOsControl 968
get_functionId, YPower 1000
get_functionId, YPressure 1046
get_functionId, YPwmOutput 1092
get_functionId, YPwmPowerSource 1127
get_functionId, YQt 1158
get_functionId, YRealTimeClock 1198
get_functionId, YRefFrame 1236
get_functionId, YRelay 1271
get_functionId, YSensor 1312
get_functionId, YServo 1354
get_functionId, YTemperature 1394
get_functionId, YTilt 1439
get_functionId, YVoc 1482
get_functionId, YVoltage 1525
get_functionId, YVSource 1566
get_functionId, YWakeUpMonitor 1601
get_functionId, YWakeUpSchedule 1640
get_functionId, YWatchdog 1684
get_functionId, YWireless 1732
get_hardwareId, YAccelerometer 46
get_hardwareId, YAnButton 93
get_hardwareId, YCarbonDioxide 134
get_hardwareId, YColorLed 173
get_hardwareId, YCompass 210
get_hardwareId, YCurrent 254
get_hardwareId, YDataLogger 298
get_hardwareId, YDataSet 331
get_hardwareId, YDigitalIO 372
get_hardwareId, YDisplay 423
get_hardwareId, YDualPower 498
get_hardwareId, YFiles 531
get_hardwareId, YGenericSensor 563
get_hardwareId, YGyro 613
get_hardwareId, YHubPort 666
get_hardwareId, YHumidity 697
get_hardwareId, YLed 737
get_hardwareId, YLightSensor 772
get_hardwareId, YMagnetometer 815
get_hardwareId, YModule 867
get_hardwareId, YNetwork 919
get_hardwareId, YOsControl 969
get_hardwareId, YPower 1001
get_hardwareId, YPressure 1047
get_hardwareId, YPwmOutput 1093
get_hardwareId, YPwmPowerSource 1128
get_hardwareId, YQt 1159

get_hardwareId, YRealTimeClock 1199
get_hardwareId, YRefFrame 1237
get_hardwareId, YRelay 1272
get_hardwareId, YSensor 1313
get_hardwareId, YServo 1355
get_hardwareId, YTemperature 1395
get_hardwareId, YTilt 1440
get_hardwareId, YVoc 1483
get_hardwareId, YVoltage 1526
get_hardwareId, YVSource 1567
get_hardwareId, YWakeUpMonitor 1602
get_hardwareId, YWakeUpSchedule 1641
get_hardwareId, YWatchdog 1685
get_hardwareId, YWireless 1733
get_heading, YGyro 614
get_highestValue, YAccelerometer 47
get_highestValue, YCarbonDioxide 135
get_highestValue, YCompass 211
get_highestValue, YCurrent 255
get_highestValue, YGenericSensor 564
get_highestValue, YGyro 615
get_highestValue, YHumidity 698
get_highestValue, YLightSensor 773
get_highestValue, YMagnetometer 816
get_highestValue, YPower 1002
get_highestValue, YPressure 1048
get_highestValue, YQt 1160
get_highestValue, YSensor 1314
get_highestValue, YTemperature 1396
get_highestValue, YTilt 1441
get_highestValue, YVoc 1484
get_highestValue, YVoltage 1527
get_hours, YWakeUpSchedule 1642
get_hslColor, YColorLed 174
get_icon2d, YModule 868
get_ipAddress, YNetwork 920
get_isPressed, YAnButton 94
get_lastLogs, YModule 869
get_lastTimePressed, YAnButton 95
get_lastTimeReleased, YAnButton 96
get_layerCount, YDisplay 424
get_layerHeight, YDisplay 425
get_layerHeight, YDisplayLayer 470
get_layerWidth, YDisplay 426
get_layerWidth, YDisplayLayer 471
get_linkQuality, YWireless 1734
get_list, YFiles 532
get_logFrequency, YAccelerometer 48
get_logFrequency, YCarbonDioxide 136
get_logFrequency, YCompass 212
get_logFrequency, YCurrent 256
get_logFrequency, YGenericSensor 565
get_logFrequency, YGyro 616
get_logFrequency, YHumidity 699
get_logFrequency, YLightSensor 774
get_logFrequency, YMagnetometer 817
get_logFrequency, YPower 1003
get_logFrequency, YPressure 1049
get_logFrequency, YQt 1161
get_logFrequency, YSensor 1315
get_logFrequency, YTemperature 1397
get_logFrequency, YTilt 1442
get_logFrequency, YVoc 1485
get_logFrequency, YVoltage 1528
get_logicalName, YAccelerometer 49
get_logicalName, YAnButton 97
get_logicalName, YCarbonDioxide 137
get_logicalName, YColorLed 175
get_logicalName, YCompass 213
get_logicalName, YCurrent 257
get_logicalName, YDataLogger 299
get_logicalName, YDigitalIO 373
get_logicalName, YDisplay 427
get_logicalName, YDualPower 499
get_logicalName, YFiles 533
get_logicalName, YGenericSensor 566
get_logicalName, YGyro 617
get_logicalName, YHubPort 667
get_logicalName, YHumidity 700
get_logicalName, YLed 738
get_logicalName, YLightSensor 775
get_logicalName, YMagnetometer 818
get_logicalName, YModule 870
get_logicalName, YNetwork 921
get_logicalName, YOsControl 970
get_logicalName, YPower 1004
get_logicalName, YPressure 1050
get_logicalName, YPwmOutput 1094
get_logicalName, YPwmPowerSource 1129
get_logicalName, YQt 1162
get_logicalName, YRealTimeClock 1200
get_logicalName, YRefFrame 1238
get_logicalName, YRelay 1273
get_logicalName, YSensor 1316
get_logicalName, YServo 1356
get_logicalName, YTemperature 1398
get_logicalName, YTilt 1443
get_logicalName, YVoc 1486
get_logicalName, YVoltage 1529
get_logicalName, YVSource 1568
get_logicalName, YWakeUpMonitor 1603
get_logicalName, YWakeUpSchedule 1643
get_logicalName, YWatchdog 1686
get_logicalName, YWireless 1735
get_lowestValue, YAccelerometer 50
get_lowestValue, YCarbonDioxide 138
get_lowestValue, YCompass 214
get_lowestValue, YCurrent 258
get_lowestValue, YGenericSensor 567
get_lowestValue, YGyro 618
get_lowestValue, YHumidity 701
get_lowestValue, YLightSensor 776
get_lowestValue, YMagnetometer 819
get_lowestValue, YPower 1005
get_lowestValue, YPressure 1051
get_lowestValue, YQt 1163
get_lowestValue, YSensor 1317
get_lowestValue, YTemperature 1399

get_lowestValue, YTilt 1444
get_lowestValue, YVoc 1487
get_lowestValue, YVoltage 1530
get_luminosity, YLed 739
get_luminosity, YModule 871
get_macAddress, YNetwork 922
get_magneticHeading, YCompass 215
get_maxTimeOnStateA, YRelay 1274
get_maxTimeOnStateA, YWatchdog 1687
get_maxTimeOnStateB, YRelay 1275
get_maxTimeOnStateB, YWatchdog 1688
get_maxValue, YDataRun 320
get_maxValue, YDataStream 349
get_maxValue, YMeasure 849
get_measureNames, YDataRun 321
get_measures, YDataSet 332
get_message, YWireless 1736
get_meter, YPower 1006
get_meterTimer, YPower 1007
get_minutes, YWakeUpSchedule 1644
get_minutesA, YWakeUpSchedule 1645
get_minutesB, YWakeUpSchedule 1646
get_minValue, YDataRun 322
get_minValue, YDataStream 350
get_minValue, YMeasure 850
get_module, YAccelerometer 51
get_module, YAnButton 98
get_module, YCarbonDioxide 139
get_module, YColorLed 176
get_module, YCompass 216
get_module, YCurrent 259
get_module, YDataLogger 300
get_module, YDigitalIO 374
get_module, YDisplay 428
get_module, YDualPower 500
get_module, YFiles 534
get_module, YGenericSensor 568
get_module, YGyro 619
get_module, YHubPort 668
get_module, YHumidity 702
get_module, YLed 740
get_module, YLightSensor 777
get_module, YMagnetometer 820
get_module, YNetwork 924
get_module, YOsControl 972
get_module, YPower 1009
get_module, YPressure 1053
get_module, YPwmOutput 1095
get_module, YPwmPowerSource 1130
get_module, YQt 1164
get_module, YRealTimeClock 1202
get_module, YRefFrame 1240
get_module, YRelay 1277
get_module, YSensor 1319
get_module, YServo 1358
get_module, YTemperature 1401
get_module, YTilt 1446
get_module, YVoc 1489
get_module, YVoltage 1532
get_module, YVSource 1570
get_module, YWakeUpMonitor 1605
get_module, YWakeUpSchedule 1648
get_module, YWatchdog 1690
get_module, YWireless 1738
get_monthDays, YWakeUpSchedule 1649
get_months, YWakeUpSchedule 1650
get_mountOrientation, YRefFrame 1241
get_mountPosition, YRefFrame 1242
get_neutral, YServo 1359
get_nextOccurence, YWakeUpSchedule 1651
get_nextWakeUp, YWakeUpMonitor 1606
get_orientation, YDisplay 430
get_output, YRelay 1278
get_output, YWatchdog 1691
get_outputVoltage, YDigitalIO 376
get_overCurrent, YVSource 1571
get_overHeat, YVSource 1572
get_overLoad, YVSource 1573
get_period, YPwmOutput 1097

get_module, YVSource 1569
get_module, YWakeUpMonitor 1604
get_module, YWakeUpSchedule 1647
get_module, YWatchdog 1689
get_module, YWireless 1737
get_module_async, YAccelerometer 52
get_module_async, YAnButton 99
get_module_async, YCarbonDioxide 140
get_module_async, YColorLed 177
get_module_async, YCompass 217
get_module_async, YCurrent 260
get_module_async, YDataLogger 301
get_module_async, YDigitalIO 375
get_module_async, YDisplay 429
get_module_async, YDualPower 501
get_module_async, YFiles 535
get_module_async, YGenericSensor 569
get_module_async, YGyro 620
get_module_async, YHubPort 669
get_module_async, YHumidity 703
get_module_async, YLed 741
get_module_async, YLightSensor 778
get_module_async, YMagnetometer 821
get_module_async, YNetwork 924
get_module_async, YOsControl 972
get_module_async, YPower 1009
get_module_async, YPressure 1053
get_module_async, YPwmOutput 1096
get_module_async, YPwmPowerSource 1131
get_module_async, YQt 1165
get_module_async, YRealTimeClock 1202
get_module_async, YRefFrame 1240
get_module_async, YRelay 1277
get_module_async, YSensor 1319
get_module_async, YServo 1358
get_module_async, YTemperature 1401
get_module_async, YTilt 1446
get_module_async, YVoc 1489
get_module_async, YVoltage 1532
get_module_async, YVSource 1570
get_module_async, YWakeUpMonitor 1605
get_module_async, YWakeUpSchedule 1648
get_module_async, YWatchdog 1690
get_module_async, YWireless 1738
get_monthDays, YWakeUpSchedule 1649
get_months, YWakeUpSchedule 1650
get_mountOrientation, YRefFrame 1241
get_mountPosition, YRefFrame 1242
get_neutral, YServo 1359
get_nextOccurence, YWakeUpSchedule 1651
get_nextWakeUp, YWakeUpMonitor 1606
get_orientation, YDisplay 430
get_output, YRelay 1278
get_output, YWatchdog 1691
get_outputVoltage, YDigitalIO 376
get_overCurrent, YVSource 1571
get_overHeat, YVSource 1572
get_overLoad, YVSource 1573
get_period, YPwmOutput 1097

get_persistentSettings, YModule 872
get_pitch, YGyro 621
get_poeCurrent, YNetwork 925
get_portDirection, YDigitalIO 377
get_portOpenDrain, YDigitalIO 378
get_portPolarity, YDigitalIO 379
get_portSize, YDigitalIO 380
get_portState, YDigitalIO 381
get_portState, YHubPort 670
get_position, YServo 1360
get_positionAtPowerOn, YServo 1361
get_power, YLed 742
get_powerControl, YDualPower 502
get_powerDuration, YWakeUpMonitor 1607
get_powerMode, YPwmPowerSource 1132
get_powerState, YDualPower 503
get_preview, YDataSet 333
get_primaryDNS, YNetwork 926
get_productId, YModule 873
get_productName, YModule 874
get_productRelease, YModule 875
get_progress, YDataSet 334
get_pulseCounter, YAnButton 100
get_pulseDuration, YPwmOutput 1098
get_pulseTimer, YAnButton 101
get_pulseTimer, YRelay 1279
get_pulseTimer, YWatchdog 1692
get_quaternionW, YGyro 622
get_quaternionX, YGyro 623
get_quaternionY, YGyro 624
get_quaternionZ, YGyro 625
get_range, YServo 1362
get_rawValue, YAnButton 102
get_readiness, YNetwork 927
get_rebootCountdown, YModule 876
get_recordedData, YAccelerometer 53
get_recordedData, YCarbonDioxide 141
get_recordedData, YCompass 218
get_recordedData, YCurrent 261
get_recordedData, YGenericSensor 570
get_recordedData, YGyro 626
get_recordedData, YHumidity 704
get_recordedData, YLightSensor 779
get_recordedData, YMagnetometer 822
get_recordedData, YPower 1010
get_recordedData, YPressure 1054
get_recordedData, YQt 1166
get_recordedData, YSensor 1320
get_recordedData, YTemperature 1402
get_recordedData, YTilt 1447
get_recordedData, YVoc 1490
get_recordedData, YVoltage 1533
get_recording, YDataLogger 302
get_regulationFailure, YVSource 1574
get_reportFrequency, YAccelerometer 54
get_reportFrequency, YCarbonDioxide 142
get_reportFrequency, YCompass 219
get_reportFrequency, YCurrent 262
get_reportFrequency, YGenericSensor 571
get_reportFrequency, YGyro 627
get_reportFrequency, YHumidity 705
get_reportFrequency, YLightSensor 780
get_reportFrequency, YMagnetometer 823
get_reportFrequency, YPower 1011
get_reportFrequency, YPressure 1055
get_reportFrequency, YQt 1167
get_reportFrequency, YSensor 1321
get_reportFrequency, YTemperature 1403
get_reportFrequency, YTilt 1448
get_reportFrequency, YVoc 1491
get_reportFrequency, YVoltage 1534
get_resolution, YAccelerometer 55
get_resolution, YCarbonDioxide 143
get_resolution, YCompass 220
get_resolution, YCurrent 263
get_resolution, YGenericSensor 572
get_resolution, YGyro 628
get_resolution, YHumidity 706
get_resolution, YLightSensor 781
get_resolution, YMagnetometer 824
get_resolution, YPower 1012
get_resolution, YPressure 1056
get_resolution, YQt 1168
get_resolution, YSensor 1322
get_resolution, YTemperature 1404
get_resolution, YTilt 1449
get_resolution, YVoc 1492
get_resolution, YVoltage 1535
get_rgbColor, YColorLed 178
get_rgbColorAtPowerOn, YColorLed 179
get_roll, YGyro 629
get_router, YNetwork 928
get_rowCount, YDataStream 351
get_runIndex, YDataStream 352
get_running, YWatchdog 1693
get_secondaryDNS, YNetwork 929
get_security, YWireless 1739
get_sensitivity, YAnButton 103
get_sensorType, YTemperature 1405
get_serialNumber, YModule 877
get_shutdownCountdown, YOsControl 973
get_signalRange, YGenericSensor 573
get_signalUnit, YGenericSensor 574
get_signalValue, YGenericSensor 575
get_sleepCountdown, YWakeUpMonitor 1608
get_ssid, YWireless 1740
get_startTime, YDataStream 353
get_startTimeUTC, YDataRun 323
get_startTimeUTC, YDataSet 335
get_startTimeUTC, YDataStream 354
get_startTimeUTC, YMeasure 851
get_startupSeq, YDisplay 431
get_state, YRelay 1280
get_state, YWatchdog 1694
get_stateAtPowerOn, YRelay 1281
get_stateAtPowerOn, YWatchdog 1695
get_subnetMask, YNetwork 930
get_summary, YDataSet 336

get_timeSet, YRealTimeClock 1203
get_timeUTC, YDataLogger 303
get_triggerDelay, YWatchdog 1696
get_triggerDuration, YWatchdog 1697
get_unit, YAccelerometer 56
get_unit, YCarbonDioxide 144
get_unit, YCompass 221
get_unit, YCurrent 264
get_unit, YDataSet 337
get_unit, YGenericSensor 576
get_unit, YGyro 630
get_unit, YHumidity 707
get_unit, YLightSensor 782
get_unit, YMagnetometer 825
get_unit, YPower 1013
get_unit, YPressure 1057
get_unit, YQt 1169
get_unit, YSensor 1323
get_unit, YTemperature 1406
get_unit, YTilt 1450
get_unit, YVoc 1493
get_unit, YVoltage 1536
get_unit, YVSource 1575
get_unixTime, YRealTimeClock 1204
get_upTime, YModule 878
get_usbBandwidth, YModule 879
get_usbCurrent, YModule 880
get_userData, YAccelerometer 57
get_userData, YAnButton 104
get_userData, YCarbonDioxide 145
get_userData, YColorLed 180
get_userData, YCompass 222
get_userData, YCurrent 265
get_userData, YDataLogger 304
get_userData, YDigitalIO 382
get_userData, YDisplay 432
get_userData, YDualPower 504
get_userData, YFiles 536
get_userData, YGenericSensor 577
get_userData, YGyro 631
get_userData, YHubPort 671
get_userData, YHumidity 708
get_userData, YLed 743
get_userData, YLightSensor 783
get_userData, YMagnetometer 826
get_userData, YModule 881
get_userData, YNetwork 931
get_userData, YOsControl 974
get_userData, YPower 1014
get_userData, YPressure 1058
get_userData, YPwmOutput 1099
get_userData, YPwmPowerSource 1133
get_userData, YQt 1170
get_userData, YRealTimeClock 1205
get_userData, YRefFrame 1243
get_userData, YRelay 1282
get_userData, YSensor 1324
get_userData, YServo 1363
get_userData, YTemperature 1407

get_userData, YTilt 1451
get_userData, YVoc 1494
get_userData, YVoltage 1537
get_userData, YVSource 1576
get_userData, YWakeUpMonitor 1609
get_userData, YWakeUpSchedule 1652
get_userData, YWatchdog 1698
get_userData, YWireless 1741
get_userPassword, YNetwork 932
get_utcOffset, YRealTimeClock 1206
get_valueCount, YDataRun 324
get_valueInterval, YDataRun 325
get_valueRange, YGenericSensor 578
get_voltage, YVSource 1577
get_wakeUpReason, YWakeUpMonitor 1610
get_wakeUpState, YWakeUpMonitor 1611
get_weekDays, YWakeUpSchedule 1653
get_wwwWatchdogDelay, YNetwork 933
get_xValue, YAccelerometer 58
get_xValue, YGyro 632
get_xValue, YMagnetometer 827
get_yValue, YAccelerometer 59
get_yValue, YGyro 633
get_yValue, YMagnetometer 828
get_zValue, YAccelerometer 60
get_zValue, YGyro 634
get_zValue, YMagnetometer 829
GetAPIVersion, YAPI 18
GetTickCount, YAPI 19
Gyroscope 599

H

HandleEvents, YAPI 20
hide, YDisplayLayer 472
hslMove, YColorLed 181
Humidity 683

I

InitAPI, YAPI 21
Interface 32, 78, 120, 163, 196, 240, 283, 356,
404, 455, 487, 516, 549, 599, 654, 683, 726,
757, 801, 853, 898, 986, 1033, 1076, 1118,
1145, 1188, 1259, 1299, 1342, 1381, 1426,
1469, 1512, 1555, 1591, 1630, 1671, 1720
Introduction 1
isOnline, YAccelerometer 61
isOnline, YAnButton 105
isOnline, YCarbonDioxide 146
isOnline, YColorLed 182
isOnline, YCompass 223
isOnline, YCurrent 266
isOnline, YDataLogger 305
isOnline, YDigitalIO 383
isOnline, YDisplay 433
isOnline, YDualPower 505
isOnline, YFiles 537
isOnline, YGenericSensor 579
isOnline, YGyro 635

isOnline, YHubPort 672
isOnline, YHumidity 709
isOnline, YLed 744
isOnline, YLightSensor 784
isOnline, YMagnetometer 830
isOnline, YModule 882
isOnline, YNetwork 934
isOnline, YOsControl 975
isOnline, YPower 1015
isOnline, YPressure 1059
isOnline, YPwmOutput 1100
isOnline, YPwmPowerSource 1134
isOnline, YQt 1171
isOnline, YRealTimeClock 1207
isOnline, YRefFrame 1244
isOnline, YRelay 1283
isOnline, YSensor 1325
isOnline, YServo 1364
isOnline, YTemperature 1408
isOnline, YTilt 1452
isOnline, YVoc 1495
isOnline, YVoltage 1538
isOnline, YVSource 1578
isOnline, YWakeUpMonitor 1612
isOnline, YWakeUpSchedule 1654
isOnline, YWatchdog 1699
isOnline, YWireless 1742
isOnline_async, YAccelerometer 62
isOnline_async, YAnButton 106
isOnline_async, YCarbonDioxide 147
isOnline_async, YColorLed 183
isOnline_async, YCompass 224
isOnline_async, YCurrent 267
isOnline_async, YDataLogger 306
isOnline_async, YDigitalIO 384
isOnline_async, YDisplay 434
isOnline_async, YDualPower 506
isOnline_async, YFiles 538
isOnline_async, YGenericSensor 580
isOnline_async, YGyro 636
isOnline_async, YHubPort 673
isOnline_async, YHumidity 710
isOnline_async, YLed 745
isOnline_async, YLightSensor 785
isOnline_async, YMagnetometer 831
isOnline_async, YModule 883
isOnline_async, YNetwork 935
isOnline_async, YOsControl 976
isOnline_async, YPower 1016
isOnline_async, YPressure 1060
isOnline_async, YPwmOutput 1101
isOnline_async, YPwmPowerSource 1135
isOnline_async, YQt 1172
isOnline_async, YRealTimeClock 1208
isOnline_async, YRefFrame 1245
isOnline_async, YRelay 1284
isOnline_async, YSensor 1326
isOnline_async, YServo 1365
isOnline_async, YTemperature 1409

isOnline_async, YTilt 1453
isOnline_async, YVoc 1496
isOnline_async, YVoltage 1539
isOnline_async, YVSource 1579
isOnline_async, YWakeUpMonitor 1613
isOnline_async, YWakeUpSchedule 1655
isOnline_async, YWatchdog 1700
isOnline_async, YWireless 1743

J

Javascript 3
joinNetwork, YWireless 1744

L

LightSensor 757
lineTo, YDisplayLayer 473
load, YAccelerometer 63
load, YAnButton 107
load, YCarbonDioxide 148
load, YColorLed 184
load, YCompass 225
load, YCurrent 268
load, YDataLogger 307
load, YDigitalIO 385
load, YDisplay 435
load, YDualPower 507
load, YFiles 539
load, YGenericSensor 581
load, YGyro 637
load, YHubPort 674
load, YHumidity 711
load, YLed 746
load, YLightSensor 786
load, YMagnetometer 832
load, YModule 884
load, YNetwork 936
load, YOsControl 977
load, YPower 1017
load, YPressure 1061
load, YPwmOutput 1102
load, YPwmPowerSource 1136
load, YQt 1173
load, YRealTimeClock 1209
load, YRefFrame 1246
load, YRelay 1285
load, YSensor 1327
load, YServo 1366
load, YTemperature 1410
load, YTilt 1454
load, YVoc 1497
load, YVoltage 1540
load, YVSource 1580
load, YWakeUpMonitor 1614
load, YWakeUpSchedule 1656
load, YWatchdog 1701
load, YWireless 1745
load_async, YAccelerometer 65
load_async, YAnButton 108

load_async, YCarbonDioxide 150
load_async, YColorLed 185
load_async, YCompass 227
load_async, YCurrent 270
load_async, YDataLogger 308
load_async, YDigitalIO 386
load_async, YDisplay 436
load_async, YDualPower 508
load_async, YFiles 540
load_async, YGenericSensor 583
load_async, YGyro 639
load_async, YHubPort 675
load_async, YHumidity 713
load_async, YLed 747
load_async, YLightSensor 788
load_async, YMagnetometer 834
load_async, YModule 885
load_async, YNetwork 937
load_async, YOsControl 978
load_async, YPower 1019
load_async, YPressure 1063
load_async, YPwmOutput 1103
load_async, YPwmPowerSource 1137
load_async, YQt 1175
load_async, YRealTimeClock 1210
load_async, YRefFrame 1247
load_async, YRelay 1286
load_async, YSensor 1329
load_async, YServo 1367
load_async, YTemperature 1412
load_async, YTilt 1456
load_async, YVoc 1499
load_async, YVoltage 1542
load_async, YVSource 1581
load_async, YWakeUpMonitor 1615
load_async, YWakeUpSchedule 1657
load_async, YWatchdog 1702
load_async, YWireless 1746
loadCalibrationPoints, YAccelerometer 64
loadCalibrationPoints, YCarbonDioxide 149
loadCalibrationPoints, YCompass 226
loadCalibrationPoints, YCurrent 269
loadCalibrationPoints, YGenericSensor 582
loadCalibrationPoints, YGyro 638
loadCalibrationPoints, YHumidity 712
loadCalibrationPoints, YLightSensor 787
loadCalibrationPoints, YMagnetometer 833
loadCalibrationPoints, YPower 1018
loadCalibrationPoints, YPressure 1062
loadCalibrationPoints, YQt 1174
loadCalibrationPoints, YSensor 1328
loadCalibrationPoints, YTemperature 1411
loadCalibrationPoints, YTilt 1455
loadCalibrationPoints, YVoc 1498
loadCalibrationPoints, YVoltage 1541
loadMore, YDataSet 338
loadMore_async, YDataSet 339

M

Magnetometer 801
Measured 847
Module 5, 853
more3DCalibration, YRefFrame 1248
move, YServo 1368
moveTo, YDisplayLayer 474

N

Network 898
newSequence, YDisplay 437
nextAccelerometer, YAccelerometer 66
nextAnButton, YAnButton 109
nextCarbonDioxide, YCarbonDioxide 151
nextColorLed, YColorLed 186
nextCompass, YCompass 228
nextCurrent, YCurrent 271
nextDataLogger, YDataLogger 309
nextDigitalIO, YDigitalIO 387
nextDisplay, YDisplay 438
nextDualPower, YDualPower 509
nextFiles, YFiles 541
nextGenericSensor, YGenericSensor 584
nextGyro, YGyro 640
nextHubPort, YHubPort 676
nextHumidity, YHumidity 714
nextLed, YLed 748
nextLightSensor, YLightSensor 789
nextMagnetometer, YMagnetometer 835
nextModule, YModule 886
nextNetwork, YNetwork 938
nextOsControl, YOsControl 979
nextPower, YPower 1020
nextPressure, YPressure 1064
nextPwmOutput, YPwmOutput 1104
nextPwmPowerSource, YPwmPowerSource 1138
nextQt, YQt 1176
nextRealTimeClock, YRealTimeClock 1211
nextRefFrame, YRefFrame 1249
nextRelay, YRelay 1287
nextSensor, YSensor 1330
nextServo, YServo 1369
nextTemperature, YTemperature 1413
nextTilt, YTilt 1457
nextVoc, YVoc 1500
nextVoltage, YVoltage 1543
nextVSource, YVSource 1582
nextWakeUpMonitor, YWakeUpMonitor 1616
nextWakeUpSchedule, YWakeUpSchedule 1658
nextWatchdog, YWatchdog 1703
nextWireless, YWireless 1747

O

Object 455

P

pauseSequence, YDisplay 439
ping, YNetwork 939
playSequence, YDisplay 440
Port 654
Power 487, 986
PreregisterHub, YAPI 22
Pressure 1033
pulse, YDigitalIO 388
pulse, YRelay 1288
pulse, YVSource 1583
pulse, YWatchdog 1704
pulseDurationMove, YPwmOutput 1105
PwmPowerSource 1118

Q

Quaternion 1145

R

Real 1188
reboot, YModule 887
Recorded 328
Reference 12, 1219
registerAnglesCallback, YGyro 641
RegisterDeviceArrivalCallback, YAPI 23
RegisterDeviceRemovalCallback, YAPI 24
RegisterHub, YAPI 25
registerQuaternionCallback, YGyro 642
registerTimedReportCallback, YAccelerometer 67
registerTimedReportCallback, YCarbonDioxide 152
registerTimedReportCallback, YCompass 229
registerTimedReportCallback, YCurrent 272
registerTimedReportCallback, YGenericSensor 585
registerTimedReportCallback, YGyro 643
registerTimedReportCallback, YHumidity 715
registerTimedReportCallback, YLightSensor 790
registerTimedReportCallback, YMagnetometer 836
registerTimedReportCallback, YPower 1021
registerTimedReportCallback, YPressure 1065
registerTimedReportCallback, YQt 1177
registerTimedReportCallback, YSensor 1331
registerTimedReportCallback, YTemperature 1414
registerTimedReportCallback, YTilt 1458
registerTimedReportCallback, YVoc 1501
registerTimedReportCallback, YVoltage 1544
registerValueCallback, YAccelerometer 68
registerValueCallback, YAnButton 110
registerValueCallback, YCarbonDioxide 153
registerValueCallback, YColorLed 187
registerValueCallback, YCompass 230
registerValueCallback, YCurrent 273
registerValueCallback, YDataLogger 310

registerValueCallback, YDigitalIO 389
registerValueCallback, YDisplay 441
registerValueCallback, YDualPower 510
registerValueCallback, YFiles 542
registerValueCallback, YGenericSensor 586
registerValueCallback, YGyro 644
registerValueCallback, YHubPort 677
registerValueCallback, YHumidity 716
registerValueCallback, YLed 749
registerValueCallback, YLightSensor 791
registerValueCallback, YMagnetometer 837
registerValueCallback, YNetwork 940
registerValueCallback, YOsControl 980
registerValueCallback, YPower 1022
registerValueCallback, YPressure 1066
registerValueCallback, YPwmOutput 1106
registerValueCallback, YPwmPowerSource 1139
registerValueCallback, YQt 1178
registerValueCallback, YRealTimeClock 1212
registerValueCallback, YRefFrame 1250
registerValueCallback, YRelay 1289
registerValueCallback, YSensor 1332
registerValueCallback, YServo 1370
registerValueCallback, YTemperature 1415
registerValueCallback, YTilt 1459
registerValueCallback, YVoc 1502
registerValueCallback, YVoltage 1545
registerValueCallback, YVSource 1584
registerValueCallback, YWakeUpMonitor 1617
registerValueCallback, YWakeUpSchedule 1659
registerValueCallback, YWatchdog 1705
registerValueCallback, YWireless 1748
Relay 1259
remove, YFiles 543
reset, YDisplayLayer 475
reset, YPower 1023
resetAll, YDisplay 442
resetCounter, YAnButton 111
resetSleepCountDown, YWakeUpMonitor 1618
resetWatchdog, YWatchdog 1706
revertFromFlash, YModule 888
rgbMove, YColorLed 188

S

save3DCalibration, YRefFrame 1251
saveSequence, YDisplay 443
saveToFlash, YModule 889
selectColorPen, YDisplayLayer 476
selectEraser, YDisplayLayer 477
selectFont, YDisplayLayer 478
selectGrayPen, YDisplayLayer 479
Sensor 1299
Sequence 318, 328, 341
Servo 1342
set_adminPassword, YNetwork 941
set_analogCalibration, YAnButton 112
set_autoStart, YDataLogger 311
set_autoStart, YWatchdog 1707
set_beacon, YModule 890

set_bearing, YRefFrame 1252
set_bitDirection, YDigitalIO 390
set_bitOpenDrain, YDigitalIO 391
set_bitPolarity, YDigitalIO 392
set_bitState, YDigitalIO 393
set_blinking, YLed 750
set_brightness, YDisplay 444
set_calibrationMax, YAnButton 113
set_calibrationMin, YAnButton 114
set_callbackCredentials, YNetwork 942
set_callbackEncoding, YNetwork 943
set_callbackMaxDelay, YNetwork 944
set_callbackMethod, YNetwork 945
set_callbackMinDelay, YNetwork 946
set_callbackUrl, YNetwork 947
set_discoverable, YNetwork 948
set_dutyCycle, YPwmOutput 1107
set_dutyCycleAtPowerOn, YPwmOutput 1108
set_enabled, YDisplay 445
set_enabled, YHubPort 678
set_enabled, YPwmOutput 1109
set_enabled, YServo 1371
set_enabledAtPowerOn, YPwmOutput 1110
set_enabledAtPowerOn, YServo 1372
set_frequency, YPwmOutput 1111
set_highestValue, YAccelerometer 69
set_highestValue, YCarbonDioxide 154
set_highestValue, YCompass 231
set_highestValue, YCurrent 274
set_highestValue, YGenericSensor 587
set_highestValue, YGyro 645
set_highestValue, YHumidity 717
set_highestValue, YLightSensor 792
set_highestValue, YMagnetometer 838
set_highestValue, YPower 1024
set_highestValue, YPressure 1067
set_highestValue, YQt 1179
set_highestValue, YSensor 1333
set_highestValue, YTemperature 1416
set_highestValue, YTilt 1460
set_highestValue, YVoc 1503
set_highestValue, YVoltage 1546
set_hours, YWakeUpSchedule 1660
set_hslColor, YColorLed 189
set_logFrequency, YAccelerometer 70
set_logFrequency, YCarbonDioxide 155
set_logFrequency, YCompass 232
set_logFrequency, YCurrent 275
set_logFrequency, YGenericSensor 588
set_logFrequency, YGyro 646
set_logFrequency, YHumidity 718
set_logFrequency, YLightSensor 793
set_logFrequency, YMagnetometer 839
set_logFrequency, YPower 1025
set_logFrequency, YPressure 1068
set_logFrequency, YQt 1180
set_logFrequency, YSensor 1334
set_logFrequency, YTemperature 1417
set_logFrequency, YTilt 1461
set_logFrequency, YVoc 1504
set_logFrequency, YVoltage 1547
set_logicalName, YAccelerometer 71
set_logicalName, YAnButton 115
set_logicalName, YCarbonDioxide 156
set_logicalName, YColorLed 190
set_logicalName, YCompass 233
set_logicalName, YCurrent 276
set_logicalName, YDataLogger 312
set_logicalName, YDigitalIO 394
set_logicalName, YDisplay 446
set_logicalName, YDualPower 511
set_logicalName, YFiles 544
set_logicalName, YGenericSensor 589
set_logicalName, YGyro 647
set_logicalName, YHubPort 679
set_logicalName, YHumidity 719
set_logicalName, YLed 751
set_logicalName, YLightSensor 794
set_logicalName, YMagnetometer 840
set_logicalName, YModule 891
set_logicalName, YNetwork 949
set_logicalName, YOsControl 981
set_logicalName, YPower 1026
set_logicalName, YPressure 1069
set_logicalName, YPwmOutput 1112
set_logicalName, YPwmPowerSource 1140
set_logicalName, YQt 1181
set_logicalName, YRealTimeClock 1213
set_logicalName, YRefFrame 1253
set_logicalName, YRelay 1290
set_logicalName, YSensor 1335
set_logicalName, YServo 1373
set_logicalName, YTemperature 1418
set_logicalName, YTilt 1462
set_logicalName, YVoc 1505
set_logicalName, YVoltage 1548
set_logicalName, YVSource 1585
set_logicalName, YWakeUpMonitor 1619
set_logicalName, YWakeUpSchedule 1661
set_logicalName, YWatchdog 1708
set_logicalName, YWireless 1749
set_lowestValue, YAccelerometer 72
set_lowestValue, YCarbonDioxide 157
set_lowestValue, YCompass 234
set_lowestValue, YCurrent 277
set_lowestValue, YGenericSensor 590
set_lowestValue, YGyro 648
set_lowestValue, YHumidity 720
set_lowestValue, YLightSensor 795
set_lowestValue, YMagnetometer 841
set_lowestValue, YPower 1027
set_lowestValue, YPressure 1070
set_lowestValue, YQt 1182
set_lowestValue, YSensor 1336
set_lowestValue, YTemperature 1419
set_lowestValue, YTilt 1463
set_lowestValue, YVoc 1506
set_lowestValue, YVoltage 1549

set_luminosity, YLed 752
set_luminosity, YModule 892
set_maxTimeOnStateA, YRelay 1291
set_maxTimeOnStateA, YWatchdog 1709
set_maxTimeOnStateB, YRelay 1292
set_maxTimeOnStateB, YWatchdog 1710
set_minutes, YWakeUpSchedule 1662
set_minutesA, YWakeUpSchedule 1663
set_minutesB, YWakeUpSchedule 1664
set_monthDays, YWakeUpSchedule 1665
set_months, YWakeUpSchedule 1666
set_mountPosition, YRefFrame 1254
set_neutral, YServo 1374
set_nextWakeUp, YWakeUpMonitor 1620
set_orientation, YDisplay 447
set_output, YRelay 1293
set_output, YWatchdog 1711
set_outputVoltage, YDigitalIO 395
set_period, YPwmOutput 1113
set_portDirection, YDigitalIO 396
set_portOpenDrain, YDigitalIO 397
set_portPolarity, YDigitalIO 398
set_portState, YDigitalIO 399
set_position, YServo 1375
set_positionAtPowerOn, YServo 1376
set_power, YLed 753
set_powerControl, YDualPower 512
set_powerDuration, YWakeUpMonitor 1621
set_powerMode, YPwmPowerSource 1141
set_primaryDNS, YNetwork 950
set_pulseDuration, YPwmOutput 1114
set_range, YServo 1377
set_recording, YDataLogger 313
set_reportFrequency, YAccelerometer 73
set_reportFrequency, YCarbonDioxide 158
set_reportFrequency, YCompass 235
set_reportFrequency, YCurrent 278
set_reportFrequency, YGenericSensor 591
set_reportFrequency, YGyro 649
set_reportFrequency, YHumidity 721
set_reportFrequency, YLightSensor 796
set_reportFrequency, YMagnetometer 842
set_reportFrequency, YPower 1028
set_reportFrequency, YPressure 1071
set_reportFrequency, YQt 1183
set_reportFrequency, YSensor 1337
set_reportFrequency, YTemperature 1420
set_reportFrequency, YTilt 1464
set_reportFrequency, YVoc 1507
set_reportFrequency, YVoltage 1550
set_resolution, YAccelerometer 74
set_resolution, YCarbonDioxide 159
set_resolution, YCompass 236
set_resolution, YCurrent 279
set_resolution, YGenericSensor 592
set_resolution, YGyro 650
set_resolution, YHumidity 722
set_resolution, YLightSensor 797
set_resolution, YMagnetometer 843
set_resolution, YPower 1029
set_resolution, YPressure 1072
set_resolution, YQt 1184
set_resolution, YSensor 1338
set_resolution, YTemperature 1421
set_resolution, YTilt 1465
set_resolution, YVoc 1508
set_resolution, YVoltage 1551
set_rgbColor, YColorLed 191
set_rgbColorAtPowerOn, YColorLed 192
set_running, YWatchdog 1712
set_secondaryDNS, YNetwork 951
set_sensitivity, YAnButton 116
set_sensorType, YTemperature 1422
set_signalRange, YGenericSensor 593
set_sleepCountdown, YWakeUpMonitor 1622
set_startupSeq, YDisplay 448
set_state, YRelay 1294
set_state, YWatchdog 1713
set_stateAtPowerOn, YRelay 1295
set_stateAtPowerOn, YWatchdog 1714
set_timeUTC, YDataLogger 314
set_triggerDelay, YWatchdog 1715
set_triggerDuration, YWatchdog 1716
set_unit, YGenericSensor 594
set_unixTime, YRealTimeClock 1214
set_usbBandwidth, YModule 893
set_userData, YAccelerometer 75
set_userData, YAnButton 117
set_userData, YCarbonDioxide 160
set_userData, YColorLed 193
set_userData, YCompass 237
set_userData, YCurrent 280
set_userData, YDataLogger 315
set_userData, YDigitalIO 400
set_userData, YDisplay 449
set_userData, YDualPower 513
set_userData, YFiles 545
set_userData, YGenericSensor 595
set_userData, YGyro 651
set_userData, YHubPort 680
set_userData, YHumidity 723
set_userData, YLed 754
set_userData, YLightSensor 798
set_userData, YMagnetometer 844
set_userData, YModule 894
set_userData, YNetwork 952
set_userData, YOsControl 982
set_userData, YPower 1030
set_userData, YPressure 1073
set_userData, YPwmOutput 1115
set_userData, YPwmPowerSource 1142
set_userData, YQt 1185
set_userData, YRealTimeClock 1215
set_userData, YRefFrame 1255
set_userData, YRelay 1296
set_userData, YSensor 1339
set_userData, YServo 1378
set_userData, YTemperature 1423

set_userdata, YTilt 1466
set_userdata, YVoc 1509
set_userdata, YVoltage 1552
set_userdata, YVSource 1586
set_userdata, YWakeUpMonitor 1623
set_userdata, YWakeUpSchedule 1667
set_userdata, YWatchdog 1717
set_userdata, YWireless 1750
set_userPassword, YNetwork 953
set_utcOffset, YRealTimeClock 1216
set_valueInterval, YDataRun 326
set_valueRange, YGenericSensor 596
set_voltage, YVSource 1587
set_weekDays, YWakeUpSchedule 1668
set_wwwWatchdogDelay, YNetwork 954
setAntialiasingMode, YDisplayLayer 480
setConsoleBackground, YDisplayLayer 481
setConsoleMargins, YDisplayLayer 482
setConsoleWordWrap, YDisplayLayer 483
setLayerPosition, YDisplayLayer 484
SetTimeout, YAPI 26
shutdown, YOsControl 983
Sleep, YAPI 27
sleep, YWakeUpMonitor 1624
sleepFor, YWakeUpMonitor 1625
sleepUntil, YWakeUpMonitor 1626
Source 1555
start3DCalibration, YRefFrame 1256
stopSequence, YDisplay 450
Supply 487
swapLayerContent, YDisplay 451

T

Temperature 1381
Tilt 1426
Time 1188
toggle_bitState, YDigitalIO 401
triggerFirmwareUpdate, YModule 895

U

Unformatted 341
unhide, YDisplayLayer 485
UnregisterHub, YAPI 28
UpdateDeviceList, YAPI 29
UpdateDeviceList_async, YAPI 30
upload, YDisplay 452
upload, YFiles 546
useDHCP, YNetwork 955
useStaticIP, YNetwork 956

V

Value 847
Voltage 1512, 1555
voltageMove, YVSource 1588

W

wait_async, YAccelerometer 76
wait_async, YAnButton 118
wait_async, YCarbonDioxide 161
wait_async, YColorLed 194
wait_async, YCompass 238
wait_async, YCurrent 281
wait_async, YDataLogger 316
wait_async, YDigitalIO 402
wait_async, YDisplay 453
wait_async, YDualPower 514
wait_async, YFiles 547
wait_async, YGenericSensor 597
wait_async, YGyro 652
wait_async, YHubPort 681
wait_async, YHumidity 724
wait_async, YLed 755
wait_async, YLightSensor 799
wait_async, YMagnetometer 845
wait_async, YModule 896
wait_async, YNetwork 957
wait_async, YOsControl 984
wait_async, YPower 1031
wait_async, YPressure 1074
wait_async, YPwmOutput 1116
wait_async, YPwmPowerSource 1143
wait_async, YQt 1186
wait_async, YRealTimeClock 1217
wait_async, YRefFrame 1257
wait_async, YRelay 1297
wait_async, YSensor 1340
wait_async, YServo 1379
wait_async, YTemperature 1424
wait_async, YTilt 1467
wait_async, YVoc 1510
wait_async, YVoltage 1553
wait_async, YVSource 1589
wait_async, YWakeUpMonitor 1627
wait_async, YWakeUpSchedule 1669
wait_async, YWatchdog 1718
wait_async, YWireless 1751
wakeUp, YWakeUpMonitor 1628
WakeUpMonitor 1591
WakeUpSchedule 1630
Watchdog 1671
Wireless 1720

Y

YAccelerometer 34-76
YAnButton 80-118
YAPI 14-30
YCarbonDioxide 122-161
yCheckLogicalName 14
YColorLed 164-194
YCompass 198-238
YCurrent 242-281
YDataLogger 284-316

YDataRun 318-326
YDataSet 329-339
YDataStream 342-354
YDigitalIO 358-402
yDisableExceptions 15
YDisplay 406-453
YDisplayLayer 456-485
YDualPower 488-514
yEnableExceptions 16
YFiles 517-547
yFindAccelerometer 34
yFindAnButton 80
yFindCarbonDioxide 122
yFindColorLed 164
yFindCompass 198
yFindCurrent 242
yFindDataLogger 284
yFindDigitalIO 358
yFindDisplay 406
yFindDualPower 488
yFindFiles 517
yFindGenericSensor 551
yFindGyro 601
yFindHubPort 655
yFindHumidity 685
yFindLed 727
yFindLightSensor 759
yFindMagnetometer 803
yFindModule 855
yFindNetwork 901
yFindOsControl 960
yFindPower 988
yFindPressure 1035
yFindPwmOutput 1078
yFindPwmPowerSource 1119
yFindQt 1147
yFindRealTimeClock 1189
yFindRefFrame 1221
yFindRelay 1261
yFindSensor 1302
yFindServo 1345
yFindTemperature 1383
yFindTilt 1429
yFindVoc 1472
yFindVoltage 1515
yFindVSource 1557
yFindWakeUpMonitor 1594
yFindWakeUpSchedule 1632
yFindWatchdog 1674
yFindWireless 1722
yFirstAccelerometer 35
yFirstAnButton 81
yFirstCarbonDioxide 123
yFirstColorLed 165
yFirstCompass 199
yFirstCurrent 243
yFirstDataLogger 285
yFirstDigitalIO 359
yFirstDisplay 407
yFirstDualPower 489
yFirstFiles 518
yFirstGenericSensor 552
yFirstGyro 602
yFirstHubPort 656
yFirstHumidity 686
yFirstLed 728
yFirstLightSensor 760
yFirstMagnetometer 804
yFirstModule 856
yFirstNetwork 902
yFirstOsControl 961
yFirstPower 989
yFirstPressure 1036
yFirstPwmOutput 1079
yFirstPwmPowerSource 1120
yFirstQt 1148
yFirstRealTimeClock 1190
yFirstRefFrame 1222
yFirstRelay 1262
yFirstSensor 1302
yFirstServo 1345
yFirstTemperature 1384
yFirstTilt 1429
yFirstVoc 1472
yFirstVoltage 1515
yFirstVSource 1557
yFirstWakeUpMonitor 1594
yFirstWakeUpSchedule 1633
yFirstWatchdog 1674
yFirstWireless 1722
yFreeAPI 17
YGenericSensor 551-597
yGetAPIVersion 18
yGetTickCount 19
YGyro 601-652
yHandleEvents 20
YHubPort 655-681
YHumidity 685-724
yInitAPI 21
YLed 727-755
YLightSensor 759-799
YMagnetometer 803-845
YMeasure 847-851
YModule 855-896
YNetwork 901-957
Yocto-Demo 3
Yocto-hub 654
YOsControl 960-984
YPower 988-1031
yPreregisterHub 22
YPressure 1035-1074
YPwmOutput 1078-1116
YPwmPowerSource 1119-1143
YQt 1147-1186
YRealTimeClock 1189-1217
YRefFrame 1221-1257
yRegisterDeviceArrivalCallback 23
yRegisterDeviceRemovalCallback 24

yRegisterHub 25
YRelay 1261-1297
YSensor 1301-1340
YServo 1344-1379
ySetTimeout 26
ySleep 27
YTemperature 1383-1424
YTilt 1428-1467
yUnregisterHub 28

yUpdateDeviceList 29
yUpdateDeviceList_async 30
YVoc 1471-1510
YVoltage 1514-1553
YVSource 1556-1589
YWakeUpMonitor 1593-1628
YWakeUpSchedule 1632-1669
YWatchdog 1673-1718
YWireless 1721-1751