



VisualBasic .NET API Reference

Table of contents

Introduction	3
Using Yocto—Demo with Visual Basic .NET	4
Installation	4
Using the Yoctopuce API in a \$LANG\$ project	4
Control of the Led function	5
Control of the module part	6
Error handling	8
Reference	10
General functions	10
AnButton function interface	16
CarbonDioxide function interface	25
ColorLed function interface	34
Current function interface	42
DataLogger function interface	50
Formatted data sequence	59
Recorded data sequence	61
External power supply control interface	64
Yocto-hub port interface	71
Humidity function interface	78
Led function interface	86
LightSensor function interface	94
Module control interface	102
Network function interface	113
Pressure function interface	126
Relay function interface	134
Servo function interface	141
Temperature function interface	149
Voltage function interface	158
Voltage source function interface	166
Wireless function interface	175
Index	184

1. Introduction

This manual is intended to be used as a reference for Yoctopuce VisualBasic .NET library, in order to interface your code with USB sensors and controllers.

The next chapter is taken from the free USB device Yocto—Demo, in order to provide a concrete examples of how the library is used within a program.

The remaining part of the manual is a function-by-function, class-by-class documentation of the API. The first section describes all general-purpose global function, while the forthcoming sections describe the various classes that you may have to use depending on the Yoctopuce device beeing used. For more informations regarding the purpose and the usage of a given device attribute, please refer to the extended discussion provided in the device-specific user manual.

2. Using Yocto—Demo with Visual Basic .NET

VisualBasic has long been the most favored entrance path to the Microsoft world. Therefore, we had to provide our library for this language, even if the new trend is shifting to C#. All the examples and the project models are tested with Microsoft VisualBasic 2010 Express, freely available on the Microsoft web site¹.

2.1. Installation

Download the \$LANG\$ Yoctopuce library from the Yoctopuce web site². There is no setup program, simply copy the content of the zip file into the directory of your choice. You mostly need the content of the `Sources` directory. The other directories contain the documentation and a few sample programs. All sample projects are \$LANG\$ 2010, projects, if you are using a previous version, you may have to recreate the projects structure from scratch.

2.2. Using the Yoctopuce API in a \$LANG\$ project

The \$LANG\$.NET Yoctopuce library is composed of a DLL and of source files in \$LANG\$. The DLL is not a .NET DLL, but a classic DLL, written in C, which manages the low level communications with the modules³. The source files in \$LANG\$ manage the high level part of the API. Therefore, you need both this DLL and the .EXT\$ files of the `sources` directory to create a project managing Yoctopuce modules.

Configuring a \$LANG\$ project

The following indications are provided for Visual Studio Express 2010, but the process is similar for other versions. Start by creating your project. Then, on the *Solution Explorer* panel, right click on your project, and select "Add" and then "Add an existing item".

A file selection window opens. Select the `yocto_api.EXT$` file and the files corresponding to the functions of the Yoctopuce modules that your project is going to manage. If in doubt, select all the files.

You then have the choice between simply adding these files to your project, or to add them as links (the **Add** button is in fact a scroll-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply keeps a link on the original files. We recommend you to use links, which makes updates of the library much easier.

Then add in the same manner the `yapi.dll` DLL, located in the `Sources/dll` directory⁴. Then, from the **Solution Explorer** window, right click on the DLL, select **Properties** and in the

¹ <http://www.microsoft.com/visualstudio/en-us/products/2010-editions/visual-basic-express>

² www.yoctopuce.com/EN/libraries.php

³ The sources of this DLL are available in the C++ API

⁴ Remember to change the filter of the selection window, otherwise the DLL will not show.

Properties panel, set the **Copy to output folder** to **always**. You are now ready to use your Yoctopuce modules from Visual Studio.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

2.3. Control of the Led function

A few lines of code are enough to use a Yocto—Demo. Here is the skeleton of a Visual Basic code snippet to use the Led function.

```
[...]  
Dim errmsg As String : errmsg  
Dim led As YLed  
  
REM Get access to your device, connected locally on USB for instance  
yRegisterHub("usb", errmsg)  
led = yFindLed("YCTOPOC1-123456.led")  
  
REM Hot-plug is easy: just check that the device is online  
If (led.isOnline()) Then  
    REM Use led.set_power(), ...  
End If
```

Let's look at these lines in more details.

yRegisterHub

The `yRegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter "usb", it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

yFindLed

The `yFindLed` function allows you to find a led from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto—Demo module with serial number `YCTOPOC1-123456` which you have named "MyModule", and for which you have given the `led` function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
led = yFindLed("YCTOPOC1-123456.led")  
led = yFindLed("YCTOPOC1-123456.MyFunction")  
led = yFindLed("MyModule.led")  
led = yFindLed("MyModule.MyFunction")  
led = yFindLed("MyFunction")
```

`yFindLed` returns an object which you can then use at will to control the led.

isOnline

The `isOnline()` method of the object returned by `yFindLed` allows you to know if the corresponding module is present and in working order.

set_power

The `set_power()` function of the object returned by `yFindLed` allows you to turn on and off the led. The argument is `Y_POWER_ON` or `Y_POWER_OFF`. In the reference on the programming interface, you will find more methods to precisely control the luminosity and make the led blink automatically.

A real example

Launch Microsoft VisualBasic and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Demo** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```

i>>Module Module1

Private Sub Usage()
    Console.WriteLine("demo <serial_number> [ on | off ]")
    Console.WriteLine("demo <logical_name> [ on | off ]")
    Console.WriteLine("demo any [ on | off ] ")
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim target As String
    Dim led As YLed

    Dim on_off As String

    If argv.Length < 3 Then Usage()

    target = argv(1)
    on_off = argv(2).ToUpper()

    REM Setup the API to use local USB devices
    If (yRegisterHub("usb", errmsg) <> YAPI_SUCCESS) Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End If

    If target = "any" Then
        led = yFirstLed()
        If led Is Nothing Then
            Console.WriteLine("No module connected (check USB cable) ")
        End If
    End If

    Else
        led = yFindLed(target + ".led")
    End If

    If (led.isOnline()) Then
        If on_off = "ON" Then led.set_power(Y_POWER_ON) Else led.set_power
(Y_POWER_OFF)
    Else
        Console.WriteLine("Module not connected (check identification and USB
cable)")
    End If
End Sub

End Module

```

2.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

i>>
Imports System.IO
Imports System.Environment

Module Module1

Sub usage()
    Console.WriteLine("usage: demo <serial or logical name> [ON/OFF]")
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim m As ymodule

    If (yRegisterHub("usb", errmsg) <> YAPI_SUCCESS) Then
        Console.WriteLine("RegisterHub error:" + errmsg)
    End

```

```

End If

If argv.Length < 2 Then usage()

m = yFindModule(argv(1)) REM use serial or logical name

If (m.isOnline()) Then
    If argv.Length > 2 Then
        If argv(2) = "ON" Then m.set_beacon(Y_BEACON_ON)
        If argv(2) = "OFF" Then m.set_beacon(Y_BEACON_OFF)
    End If
    Console.WriteLine("serial: " + m.get_serialNumber())
    Console.WriteLine("logical name: " + m.get_logicalName())
    Console.WriteLine("luminosity: " + Str(m.get_luminosity()))
    Console.WriteLine("beacon: ")
    If (m.get_beacon() = Y_BEACON_ON) Then
        Console.WriteLine("ON")
    Else
        Console.WriteLine("OFF")
    End If
Else
    Console.WriteLine(argv(1) + " not connected (check identification and USB cable)")
End If

End Sub

End Module

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the [API](#) chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

i>>Module Module1

Sub usage()

    Console.WriteLine("usage: demo <serial or logical name> <new logical name>")
End
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim newname As String
    Dim m As YModule

    If (argv.Length <> 3) Then usage()

    REM Setup the API to use local USB devices
    If yRegisterHub("usb", errmsg) <> YAPI_SUCCESS Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End
    End If

    m = yFindModule(argv(1)) REM use serial or logical name
    If m.isOnline() Then

        newname = argv(2)
        If (Not yCheckLogicalName(newname)) Then
            Console.WriteLine("Invalid name (" + newname + ")")
        End
        End If
        m.set_logicalName(newname)
        m.saveToFlash() REM do not forget this

        Console.WriteLine("Module: serial= " + m.get_serialNumber)
    End If
End Sub

```

```

        Console.Write(" / name= " + m.get_logicalName())
    Else
        Console.Write("not connected (check identification and USB cable)")
    End If

End Sub

End Module

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `Nothing`. Below a short example listing the connected modules.

```

i>>Module Module1

Sub Main()
    Dim M As ymodule
    Dim errmsg As String = ""

    REM Setup the API to use local USB devices
    If yRegisterHub("usb", errmsg) <> YAPI_SUCCESS Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End
    End If

    Console.WriteLine("Device list")
    M = yFirstModule()
    While M IsNot Nothing
        Console.WriteLine(M.get_serialNumber() + " (" + M.get_productName() + ")")
        M = M.nextModule()
    End While

End Sub

End Module

```

2.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.

- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `yDisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the [library reference](#). The name always follows the same logic: a `get_state()` method returns a `Y_STATE_INVALID` value, a `get_currentValue` method returns a `Y_CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

3. Reference

3.1. General functions

These general functions should be used to initialize and configure the Yoctopuce library. In most cases, a simple call to function `yRegisterHub()` should be enough. The module-specific functions `yFind...()` or `yFirst...()` should then be used to retrieve an object that provides interaction with the module.

In order to use the functions described here, you should include:

[yocto_api.vb](#)

Global functions

yCheckLogicalName(name)

Checks if a given string is valid as logical name for a module or a function.

yDisableExceptions()

Disables the use of exceptions to report runtime errors.

yEnableExceptions()

Re-enables the use of exceptions for runtime error handling.

yEnableUSBHost(osContext)

This function is used only on Android.

yFreeAPI()

Frees dynamically allocated memory blocks used by the Yoctopuce library.

yGetAPIVersion()

Returns the version identifier for the Yoctopuce library in use.

yGetTickCount()

Returns the current value of a monotone millisecond-based time counter.

yHandleEvents(errmsg)

Maintains the device-to-library communication channel.

yInitAPI(mode, errmsg)

Initializes the Yoctopuce programming library explicitly.

yRegisterDeviceArrivalCallback(arrivalCallback)

Register a callback function, to be called each time a device is plugged.

yRegisterDeviceRemovalCallback(removalCallback)

Register a callback function, to be called each time a device is unplugged.

yRegisterHub(url, errmsg)

Setup the Yoctopuce library to use modules connected on a given machine.

yRegisterLogFunction(logfun)

Register a log callback function.

ySetDelegate(object)

(Objective-C only) Register an object that must follow the protocol YDeviceHotPlug.

ySetTimeout(callback, ms_timeout, optional_arguments)

Invoke the specified callback function after a given timeout.

ySleep(ms_duration, errmsg)

Pauses the execution flow for a specified duration.

yUnregisterHub(url)

Setup the Yoctopuce library to no more use modules connected on a previously registered machine with RegisterHub.

yUpdateDeviceList(errmsg)

Triggers a (re)detection of connected Yoctopuce modules.

yUpdateDeviceList_async(callback, context)

Triggers a (re)detection of connected Yoctopuce modules.

yCheckLogicalName()

Checks if a given string is valid as logical name for a module or a function.

```
function yCheckLogicalName( ByVal name As String) As Boolean
```

A valid logical name has a maximum of 19 characters, all among A..Z, a..z, 0..9, _, and -. If you try to configure a logical name with an incorrect string, the invalid characters are ignored.

Parameters :

name a string containing the name to check.

Returns :

`true` if the name is valid, `false` otherwise.

yDisableExceptions()

Disables the use of exceptions to report runtime errors.

```
procedure yDisableExceptions( )
```

When exceptions are disabled, every function returns a specific error value which depends on its type and which is documented in this reference manual.

yEnableExceptions()

Re-enables the use of exceptions for runtime error handling.

```
procedure yEnableExceptions( )
```

Be aware than when exceptions are enabled, every function that fails triggers an exception. If the exception is not caught by the user code, it either fires the debugger or aborts (i.e. crash) the program. On failure, throws an exception or returns a negative error code.

This function is used only on Android.

Before calling `yRegisterHub("usb")` you need to activate the USB host port of the system. This function takes as argument, an object of class `android.content.Context` (or any subclass). It is not necessary to call this function to reach modules through the network.

Parameters :

osContext an object of class `android.content.Context` (or any subclass).
On failure, throws an exception.

yFreeAPI()

Frees dynamically allocated memory blocks used by the Yoctopuce library.

procedure **yFreeAPI**()

It is generally not required to call this function, unless you want to free all dynamically allocated memory blocks in order to track a memory leak for instance. You should not call any other library function after calling `yFreeAPI()`, or your program will crash.

yGetAPIVersion()

Returns the version identifier for the Yoctopuce library in use.

function **yGetAPIVersion**() As String

The version is a string in the form "Major.Minor.Build", for instance "1.01.5535". For languages using an external DLL (for instance C#, VisualBasic or Delphi), the character string includes as well the DLL version, for instance "1.01.5535 (1.01.5439)".

If you want to verify in your code that the library version is compatible with the version that you have used during development, verify that the major number is strictly equal and that the minor number is greater or equal. The build number is not relevant with respect to the library compatibility.

Returns :

a character string describing the library version.

yGetTickCount()

Returns the current value of a monotone millisecond-based time counter.

function **yGetTickCount**() As Long

This counter can be used to compute delays in relation with Yoctopuce devices, which also uses the millisecond as timebase.

Returns :

a long integer corresponding to the millisecond counter.

yHandleEvents()

Maintains the device-to-library communication channel.

function **yHandleEvents**(ByRef **errmsg** As String) As YRETCODE

If your program includes significant loops, you may want to include a call to this function to make sure that the library takes care of the information pushed by the modules on the

communication channels. This is not strictly necessary, but it may improve the reactivity of the library for the following commands.

This function may signal an error in case there is a communication problem while contacting a module.

Parameters :

errmsg a string passed by reference to receive any error message.

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

yInitAPI()

Initializes the Yoctopuce programming library explicitly.

```
function yInitAPI( ByVal mode As Integer, ByRef errmsg As String) As Integer
```

It is not strictly needed to call `yInitAPI()`, as the library is automatically initialized when calling `yRegisterHub()` for the first time.

When `Y_DETECT_NONE` is used as detection mode, you must explicitly use `yRegisterHub()` to point the API to the VirtualHub on which your devices are connected before trying to access them.

Parameters :

mode an integer corresponding to the type of automatic device detection to use. Possible values are `Y_DETECT_NONE`, `Y_DETECT_USB`, `Y_DETECT_NET`, and `Y_DETECT_ALL`.

errmsg a string passed by reference to receive any error message.

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

yRegisterDeviceArrivalCallback()

Register a callback function, to be called each time a device is plugged.

```
procedure yRegisterDeviceArrivalCallback( ByVal arrivalCallback As yDeviceUpdateFunc)
```

This callback will be invoked while `yUpdateDeviceList` is running. You will have to call this function on a regular basis.

Parameters :

arrivalCallback a procedure taking a `YModule` parameter, or null to unregister a previously registered callback.

yRegisterDeviceRemovalCallback()

Register a callback function, to be called each time a device is unplugged.

```
procedure yRegisterDeviceRemovalCallback( ByVal removalCallback As yDeviceUpdateFunc)
```

This callback will be invoked while `yUpdateDeviceList` is running. You will have to call this function on a regular basis.

Parameters :

removalCallback a procedure taking a `YModule` parameter, or null to unregister a previously registered callback.

yRegisterHub()

Setup the Yoctopuce library to use modules connected on a given machine.

```
function yRegisterHub( ByVal url As String,  
                      ByRef errmsg As String) As Integer
```

When using Yoctopuce modules through the VirtualHub gateway, you should provide as parameter the address of the machine on which the VirtualHub software is running (typically "http://127.0.0.1:4444", which represents the local machine). When you use a language which has direct access to the USB hardware, you can use the pseudo-URL "usb" instead.

Be aware that only one application can use direct USB access at a given time on a machine. Multiple access would cause conflicts while trying to access the USB modules. In particular, this means that you must stop the VirtualHub software before starting an application that uses direct USB access. The workaround for this limitation is to setup the library to use the VirtualHub rather than direct USB access. If access control has been activated on the VirtualHub you want to reach, the URL parameter should look like: `http://username:password@adresse:port`

Parameters :

- url** a string containing either "usb" or the root URL of the hub to monitor
- errmsg** a string passed by reference to receive any error message.

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

yRegisterLogFunction()

Register a log callback function.

```
procedure yRegisterLogFunction( ByVal logfun As yLogFunc)
```

This callback will be called each time the API have something to say. Quite usefull to debug the API.

Parameters :

- logfun** a procedure taking a string parameter, or null to unregister a previously registered callback.

(Objective-C only) Register an object that must follow the protocol YDeviceHotPlug.

The methodes `yDeviceArrival` and `yDeviceRemoval` will be invoked while `yUpdateDeviceList` is running. You will have to call this function on a regular basis.

Parameters :

- object** an object that must follow the protocol YAPIDelegate, or nil to unregister a previously registered object.

Invoke the specified callback function after a given timeout.

This function behaves more or less like Javascript `setTimeout`, but during the waiting time, it will call `yHandleEvents` and `yUpdateDeviceList` periodically, in order to keep the API up-to-date with current devices.

Parameters :

callback	the function to call after the timeout occurs. On Microsoft Internet Explorer, the callback must be provided as a string to be evaluated.
ms_timeout	an integer corresponding to the duration of the timeout, in milliseconds.
optional_arguments	additional arguments to be passed to the callback function can be provided, if needed (not supported on Microsoft Internet Explorer).

Returns :
YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

ySleep()

Pauses the execution flow for a specified duration.

```
function ySleep( ByVal ms_duration As Integer,
                ByRef errmsg As String) As Integer
```

This function implements a passive waiting loop, meaning that it does not consume CPU cycles significantly. The processor is left available for other threads and processes. During the pause, the library nevertheless reads from time to time information from the Yoctopuce modules by calling `yHandleEvents()`, in order to stay up-to-date.

This function may signal an error in case there is a communication problem while contacting a module.

Parameters :
ms_duration an integer corresponding to the duration of the pause, in milliseconds.
errmsg a string passed by reference to receive any error message.

Returns :
YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

yUnregisterHub()

Setup the Yoctopuce library to no more use modules connected on a previously registered machine with RegisterHub.

```
procedure yUnregisterHub( ByVal url As String)
```

Parameters :
url a string containing either "usb" or the root URL of the hub to monitor

yUpdateDeviceList()

Triggers a (re)detection of connected Yoctopuce modules.

```
function yUpdateDeviceList( ByRef errmsg As String) As YRETCODE
```

The library searches the machines or USB ports previously registered using `yRegisterHub()`, and invokes any user-defined callback function in case a change in the list of connected devices is detected.

This function can be called as frequently as desired to refresh the device list and to make the application aware of hot-plug events.

Parameters :
errmsg a string passed by reference to receive any error message.

Returns :
YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Triggers a (re)detection of connected Yoctopuce modules.

The library searches the machines or USB ports previously registered using `yRegisterHub()`, and invokes any user-defined callback function in case a change in the list of connected devices is detected.

This function can be called as frequently as desired to refresh the device list and to make the application aware of hot-plug events.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives two arguments: the caller-specific context object and the result code (`YAPI_SUCCESS` if the operation completes successfully).

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

3.2. AnButton function interface

Yoctopuce application programming interface allows you to measure the state of a simple button as well as to read an analog potentiometer (variable resistance). This can be use for instance with a continuous rotating knob, a throttle grip or a joystick. The module is capable to calibrate itself on min and max values, in order to compute a calibrated value that varies proportionally with the potentiometer position, regardless of its total resistance.

In order to use the functions described here, you should include:

[yocto_anbutton.vb](#)

Global functions

`yFindAnButton(func)`

Retrieves an analog input for a given identifier.

`yFirstAnButton()`

Starts the enumeration of analog inputs currently accessible.

YAnButton methods

`anbutton→describe()`

Returns a descriptive text that identifies the function.

`anbutton→get_advertisedValue()`

Returns the current value of the analog input (no more than 6 characters).

`anbutton→get_analogCalibration()`

Tells if a calibration process is currently ongoing.

`anbutton→get_calibratedValue()`

Returns the current calibrated input value (between 0 and 1000, included).

`anbutton→get_calibrationMax()`

Returns the maximal value measured during the calibration (between 0 and 4095, included).

`anbutton→get_calibrationMin()`

Returns the minimal value measured during the calibration (between 0 and 4095, included).

`anbutton→get_errorMessage()`

Returns the error message of the latest error with this function.

`anbutton→get_errorType()`

Returns the numerical error code of the latest error with this function.

anbutton→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

anbutton→get_hardwareId()

Returns the unique hardware identifier of the function.

anbutton→get_isPressed()

Returns true if the input (considered as binary) is active (closed contact), and false otherwise.

anbutton→get_lastTimePressed()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitionned from open to closed).

anbutton→get_lastTimeReleased()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open).

anbutton→get_logicalName()

Returns the logical name of the analog input.

anbutton→get_module()

Get the `YModule` object for the device on which the function is located.

anbutton→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

anbutton→get_rawValue()

Returns the current measured input value as-is (between 0 and 4095, included).

anbutton→get_sensitivity()

Returns the sensibility for the input (between 1 and 255, included) for triggering user callbacks.

anbutton→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

anbutton→isOnline()

Checks if the function is currently reachable, without raising any error.

anbutton→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

anbutton→load(msValidity)

Preloads the function cache with a specified validity duration.

anbutton→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

anbutton→nextAnButton()

Continues the enumeration of analog inputs started using `yFirstAnButton()`.

anbutton→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

anbutton→set_analogCalibration(newval)

Starts or stops the calibration process.

anbutton→set_calibrationMax(newval)

Changes the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

anbutton→set_calibrationMin(newval)

Changes the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

anbutton→**set_logicalName**(newval)

Changes the logical name of the analog input.

anbutton→**set_sensitivity**(newval)

Changes the sensibility for the input (between 1 and 255, included) for triggering user callbacks.

anbutton→**set_userData**(data)

Stores a user context provided as argument in the userData attribute of the function.

yFindAnButton()

Retrieves an analog input for a given identifier.

```
function yFindAnButton( ByVal func As String) As YAnButton
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the analog input is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YAnButton.isOnline()` to test if the analog input is indeed online at a given time. In case of ambiguity when looking for an analog input by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the analog input

Returns :

a `YAnButton` object allowing you to drive the analog input.

yFirstAnButton()

Starts the enumeration of analog inputs currently accessible.

```
function yFirstAnButton( ) As YAnButton
```

Use the method `YAnButton.nextAnButton()` to iterate on next analog inputs.

Returns :

a pointer to a `YAnButton` object, corresponding to the first analog input currently online, or a `null` pointer if there are none.

anbutton.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

anbutton.get_advertisedValue()

Returns the current value of the analog input (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the analog input (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

anbutton.get_analogCalibration()

Tells if a calibration process is currently ongoing.

function **get_analogCalibration**() As Integer

Returns :

either Y_ANALOGCALIBRATION_OFF or Y_ANALOGCALIBRATION_ON

On failure, throws an exception or returns Y_ANALOGCALIBRATION_INVALID.

anbutton.get_calibratedValue()

Returns the current calibrated input value (between 0 and 1000, included).

function **get_calibratedValue**() As Integer

Returns :

an integer corresponding to the current calibrated input value (between 0 and 1000, included)

On failure, throws an exception or returns Y_CALIBRATEDVALUE_INVALID.

anbutton.get_calibrationMax()

Returns the maximal value measured during the calibration (between 0 and 4095, included).

function **get_calibrationMax**() As Integer

Returns :

an integer corresponding to the maximal value measured during the calibration (between 0 and 4095, included)

On failure, throws an exception or returns Y_CALIBRATIONMAX_INVALID.

anbutton.get_calibrationMin()

Returns the minimal value measured during the calibration (between 0 and 4095, included).

function **get_calibrationMin**() As Integer

Returns :

an integer corresponding to the minimal value measured during the calibration (between 0 and 4095, included)

On failure, throws an exception or returns Y_CALIBRATIONMIN_INVALID.

anbutton.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

anbutton.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

anbutton.get_anbuttonDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

anbutton.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function. On failure, throws an exception or returns Y_HARDWAREID_INVALID.

anbutton.get_isPressed()

Returns true if the input (considered as binary) is active (closed contact), and false otherwise.

function **get_isPressed**() As Integer

Returns :

either Y_ISPRESSED_FALSE or Y_ISPRESSED_TRUE, according to true if the input (considered as binary) is active (closed contact), and false otherwise

On failure, throws an exception or returns Y_ISPRESSED_INVALID.

anbutton.get_lastTimePressed()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitioned from open to closed).

function **get_lastTimePressed**() As Long

Returns :

an integer corresponding to the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitionned from open to closed)

On failure, throws an exception or returns `Y_LASTTIMEPRESSED_INVALID`.

anbutton.get_lastTimeReleased()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open).

function **get_lastTimeReleased**() As Long

Returns :

an integer corresponding to the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitionned from closed to open)

On failure, throws an exception or returns `Y_LASTTIMERELEASED_INVALID`.

anbutton.get_logicalName()

Returns the logical name of the analog input.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the analog input

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

anbutton.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton.get_rawValue()

Returns the current measured input value as-is (between 0 and 4095, included).

function **get_rawValue**() As Integer

Returns :

an integer corresponding to the current measured input value as-is (between 0 and 4095, included)

On failure, throws an exception or returns `Y_RAWVALUE_INVALID`.

anbutton.get_sensitivity()

Returns the sensibility for the input (between 1 and 255, included) for triggering user callbacks.

function **get_sensitivity**() As Integer

Returns :

an integer corresponding to the sensibility for the input (between 1 and 255, included) for triggering user callbacks

On failure, throws an exception or returns `Y_SENSITIVITY_INVALID`.

anbutton.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

anbutton.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

anbutton.nextAnButton()

Continues the enumeration of analog inputs started using `yFirstAnButton()`.

function **nextAnButton**() As YAnButton

Returns :

a pointer to a YAnButton object, corresponding to an analog input currently online, or a null pointer if there are no more analog inputs to enumerate.

anbutton.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

anbutton.set_analogCalibration()

Starts or stops the calibration process.

```
function set_analogCalibration( ByVal newval As Integer) As Integer
```

Remember to call the `saveToFlash()` method of the module at the end of the calibration if the modification must be kept.

Parameters :

newval either `Y_ANALOGCALIBRATION_OFF` or `Y_ANALOGCALIBRATION_ON`

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton.set_calibrationMax()

Changes the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

```
function set_calibrationMax( ByVal newval As Integer) As Integer
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton.set_calibrationMin()

Changes the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

```
function set_calibrationMin( ByVal newval As Integer) As Integer
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton.set_logicalName()

Changes the logical name of the analog input.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the analog input

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton.set_sensitivity()

Changes the sensibility for the input (between 1 and 255, included) for triggering user callbacks.

```
function set_sensitivity( ByVal newval As Integer) As Integer
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the sensibility for the input (between 1 and 255, included) for triggering user callbacks

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

anbutton.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.3. CarbonDioxide function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_carbondioxide.vb](#)

Global functions

yFindCarbonDioxide(func)

Retrieves a CO2 sensor for a given identifier.

yFirstCarbonDioxide()

Starts the enumeration of CO2 sensors currently accessible.

YCarbonDioxide methods

carbondioxide→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

carbondioxide→describe()

Returns a descriptive text that identifies the function.

carbondioxide→get_advertisedValue()

Returns the current value of the CO2 sensor (no more than 6 characters).

carbondioxide→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

carbondioxide→get_currentValue()

Returns the current measured value.

carbondioxide→get_errorMessage()

Returns the error message of the latest error with this function.

carbondioxide→get_errorType()

Returns the numerical error code of the latest error with this function.

carbondioxide→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

carbondioxide→get_hardwareId()

Returns the unique hardware identifier of the function.

carbondioxide→get_highestValue()

Returns the maximal value observed.

carbondioxide→get_logicalName()

Returns the logical name of the CO2 sensor.

carbondioxide→get_lowestValue()

Returns the minimal value observed.

carbondioxide→get_module()

Get the YModule object for the device on which the function is located.

carbondioxide→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

carbondioxide→get_resolution()

Returns the resolution of the measured values.

carbondioxide→get_unit()

Returns the measuring unit for the measured value.

carbondioxide→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

carbondioxide→isOnline()

Checks if the function is currently reachable, without raising any error.

carbondioxide→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

carbondioxide→load(msValidity)

Preloads the function cache with a specified validity duration.

carbondioxide→**load_async**(**msValidity**, **callback**, **context**)

Preloads the function cache with a specified validity duration (asynchronous version).

carbondioxide→**nextCarbonDioxide**()

Continues the enumeration of CO2 sensors started using `yFirstCarbonDioxide()`.

carbondioxide→**registerValueCallback**(**callback**)

Registers the callback function that is invoked on every change of advertised value.

carbondioxide→**set_highestValue**(**newval**)

Changes the recorded maximal value observed.

carbondioxide→**set_logicalName**(**newval**)

Changes the logical name of the CO2 sensor.

carbondioxide→**set_lowestValue**(**newval**)

Changes the recorded minimal value observed.

carbondioxide→**set_userData**(**data**)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindCarbonDioxide()

Retrieves a CO2 sensor for a given identifier.

```
function yFindCarbonDioxide( ByVal func As String ) As YCarbonDioxide
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the CO2 sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YCarbonDioxide.isOnline()` to test if the CO2 sensor is indeed online at a given time. In case of ambiguity when looking for a CO2 sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the CO2 sensor

Returns :

a `YCarbonDioxide` object allowing you to drive the CO2 sensor.

yFirstCarbonDioxide()

Starts the enumeration of CO2 sensors currently accessible.

```
function yFirstCarbonDioxide( ) As YCarbonDioxide
```

Use the method `YCarbonDioxide.nextCarbonDioxide()` to iterate on next CO2 sensors.

Returns :

a pointer to a `YCarbonDioxide` object, corresponding to the first CO2 sensor currently online, or a `null` pointer if there are none.

carbondioxide.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

procedure **calibrateFromPoints**(ByVal **rawValues** As double)

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a lineat interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

carbondioxide.get_advertisedValue()

Returns the current value of the CO2 sensor (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the CO2 sensor (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

carbondioxide.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

carbondioxide.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

carbondioxide.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

carbondioxide.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

carbondioxide.get_carbondioxideDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

carbondioxide.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns Y_HARDWAREID_INVALID.

carbondioxide.get_highestValue()

Returns the maximal value observed.

function **get_highestValue**() As Double

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

carbondioxide.get_logicalName()

Returns the logical name of the CO2 sensor.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the CO2 sensor

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

carbondioxide.get_lowestValue()

Returns the minimal value observed.

function **get_lowestValue**() As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

carbondioxide.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide.get_resolution()

Returns the resolution of the measured values.

function **get_resolution**() As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

carbondioxide.get_unit()

Returns the measuring unit for the measured value.

function **get_unit**() As String

Returns :

a string corresponding to the measuring unit for the measured value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

carbondioxide.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

carbondioxide.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

carbondioxide.nextCarbonDioxide()

Continues the enumeration of CO2 sensors started using `yFirstCarbonDioxide()`.

function **nextCarbonDioxide**() As YCarbonDioxide

Returns :

a pointer to a YCarbonDioxide object, corresponding to a CO2 sensor currently online, or a null pointer if there are no more CO2 sensors to enumerate.

carbondioxide.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

carbondioxide.set_highestValue()

Changes the recorded maximal value observed.

```
function set_highestValue( ByVal newval As Double) As Integer
```

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide.set_logicalName()

Changes the logical name of the CO2 sensor.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the CO2 sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide.set_lowestValue()

Changes the recorded minimal value observed.

```
function set_lowestValue( ByVal newval As Double) As Integer
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

carbondioxide.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.4. ColorLed function interface

Yoctopuce application programming interface allows you to drive a color led using RGB coordinates as well as HSL coordinates. The module performs all conversions from RGB to HSL automatically. It is then self-evident to turn on a led with a given hue and to progressively vary its saturation or lightness. If needed, you can find more information on the difference between RGB and HSL in the section following this one.

In order to use the functions described here, you should include:

[yocto_colorled.vb](#)

Global functions

yFindColorLed(func)

Retrieves an RGB led for a given identifier.

yFirstColorLed()

Starts the enumeration of RGB leds currently accessible.

YColorLed methods

colorled→describe()

Returns a descriptive text that identifies the function.

colorled→get_advertisedValue()

Returns the current value of the RGB led (no more than 6 characters).

colorled→get_errorMessage()

Returns the error message of the latest error with this function.

colorled→get_errorType()

Returns the numerical error code of the latest error with this function.

colorled→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

colorled→get_hardwareId()

Returns the unique hardware identifier of the function.

colorled→get_hslColor()

Returns the current HSL color of the led.

colorled→get_logicalName()

Returns the logical name of the RGB led.

colorled→get_module()

Get the YModule object for the device on which the function is located.

colorled→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

colorled→get_rgbColor()

Returns the current RGB color of the led.

colorled→get_rgbColorAtPowerOn()

Returns the configured color to be displayed when the module is turned on.

colorled→get_userData()

Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
colorled→hslMove(hsl_target, ms_duration) Performs a smooth transition in the HSL color space between the current color and a target color.
colorled→isOnline() Checks if the function is currently reachable, without raising any error.
colorled→isOnline_async(callback, context) Checks if the function is currently reachable, without raising any error (asynchronous version).
colorled→load(msValidity) Preloads the function cache with a specified validity duration.
colorled→load_async(msValidity, callback, context) Preloads the function cache with a specified validity duration (asynchronous version).
colorled→nextColorLed() Continues the enumeration of RGB leds started using <code>yFirstColorLed()</code> .
colorled→registerValueCallback(callback) Registers the callback function that is invoked on every change of advertised value.
colorled→rgbMove(rgb_target, ms_duration) Performs a smooth transition in the RGB color space between the current color and a target color.
colorled→set_hslColor(newval) Changes the current color of the led, using a color HSL.
colorled→set_logicalName(newval) Changes the logical name of the RGB led.
colorled→set_rgbColor(newval) Changes the current color of the led, using a RGB color.
colorled→set_rgbColorAtPowerOn(newval) Changes the color that the led will display by default when the module is turned on.
colorled→set_userData(data) Stores a user context provided as argument in the <code>userData</code> attribute of the function.

yFindColorLed()

Retrieves an RGB led for a given identifier.

```
function yFindColorLed( ByVal func As String) As YColorLed
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the RGB led is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YColorLed.isOnline()` to test if the RGB led is indeed online at a given time. In case of ambiguity when looking for an RGB led by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the RGB led

Returns :

a `YColorLed` object allowing you to drive the RGB led.

yFirstColorLed()

Starts the enumeration of RGB leds currently accessible.

```
function yFirstColorLed( ) As YColorLed
```

Use the method `YColorLed.nextColorLed()` to iterate on next RGB leds.

Returns :

a pointer to a `YColorLed` object, corresponding to the first RGB led currently online, or a `null` pointer if there are none.

colorled.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

colorled.get_advertisedValue()

Returns the current value of the RGB led (no more than 6 characters).

```
function get_advertisedValue( ) As String
```

Returns :

a string corresponding to the current value of the RGB led (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

colorled.get_errorMessage()

Returns the error message of the latest error with this function.

```
function get_errorMessage( ) As String
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

colorled.get_errorType()

Returns the numerical error code of the latest error with this function.

```
function get_errorType( ) As YRETCODE
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

colorled.get_colorledDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As `YFUN_DESCR`

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

colorled.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

colorled.get_hslColor()

Returns the current HSL color of the led.

function **get_hslColor**() As Integer

Returns :

an integer corresponding to the current HSL color of the led

On failure, throws an exception or returns `Y_HSLCOLOR_INVALID`.

colorled.get_logicalName()

Returns the logical name of the RGB led.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the RGB led

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

colorled.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As `YModule`

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled.get_rgbColor()

Returns the current RGB color of the led.

function **get_rgbColor**() As Integer

Returns :

an integer corresponding to the current RGB color of the led

On failure, throws an exception or returns `Y_RGBCOLOR_INVALID`.

colorled.get_rgbColorAtPowerOn()

Returns the configured color to be displayed when the module is turned on.

function **get_rgbColorAtPowerOn**() As Integer

Returns :

an integer corresponding to the configured color to be displayed when the module is turned on

On failure, throws an exception or returns `Y_RGBCOLORATPOWERON_INVALID`.

colorled.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

colorled.hslMove()

Performs a smooth transition in the HSL color space between the current color and a target color.

function **hslMove**(ByVal **hsl_target** As Integer,
ByVal **ms_duration** As Integer) As Integer

Parameters :

hsl_target desired HSL color at the end of the transition

ms_duration duration of the transition, in millisecond

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

colorled.nextColorLed()

Continues the enumeration of RGB leds started using `yFirstColorLed()`.

function **nextColorLed**() As YColorLed

Returns :

a pointer to a `YColorLed` object, corresponding to an RGB led currently online, or a null pointer if there are no more RGB leds to enumerate.

colorled.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

- callback** the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

colorled.rgbMove()

Performs a smooth transition in the RGB color space between the current color and a target color.

function **rgbMove**(ByVal **rgb_target** As Integer,
ByVal **ms_duration** As Integer) As Integer

Parameters :

- rgb_target** desired RGB color at the end of the transition
- ms_duration** duration of the transition, in millisecond

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled.set_hslColor()

Changes the current color of the led, using a color HSL.

```
function set_hslColor( ByVal newval As Integer) As Integer
```

Encoding is done as follows: 0xHHSSLL.

Parameters :

newval an integer corresponding to the current color of the led, using a color HSL

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled.set_logicalName()

Changes the logical name of the RGB led.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the RGB led

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled.set_rgbColor()

Changes the current color of the led, using a RGB color.

```
function set_rgbColor( ByVal newval As Integer) As Integer
```

Encoding is done as follows: 0xRRGGBB.

Parameters :

newval an integer corresponding to the current color of the led, using a RGB color

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colorled.set_rgbColorAtPowerOn()

Changes the color that the led will display by default when the module is turned on.

```
function set_rgbColorAtPowerOn( ByVal newval As Integer) As Integer
```

This color will be displayed as soon as the module is powered on. Remember to call the `saveToFlash()` method of the module if the change should be kept.

Parameters :

newval an integer corresponding to the color that the led will display by default when the module is turned on

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

colored.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.5. Current function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_current.vb](#)

Global functions**yFindCurrent(func)**

Retrieves a current sensor for a given identifier.

yFirstCurrent()

Starts the enumeration of current sensors currently accessible.

YCurrent methods**current→calibrateFromPoints(rawValues, refValues)**

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

current→describe()

Returns a descriptive text that identifies the function.

current→get_advertisedValue()

Returns the current value of the current sensor (no more than 6 characters).

current→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

current→get_currentValue()

Returns the current measured value.

current→get_errorMessage()

Returns the error message of the latest error with this function.

current→get_errorType()

Returns the numerical error code of the latest error with this function.

current→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

current→get_hardwareId()

Returns the unique hardware identifier of the function.

current→get_highestValue()

Returns the maximal value observed.

current→get_logicalName()	Returns the logical name of the current sensor.
current→get_lowestValue()	Returns the minimal value observed.
current→get_module()	Get the YModule object for the device on which the function is located.
current→get_module_async(callback, context)	Get the YModule object for the device on which the function is located (asynchronous version).
current→get_resolution()	Returns the resolution of the measured values.
current→get_unit()	Returns the measuring unit for the measured value.
current→get_userData()	Returns the value of the userData attribute, as previously stored using method set_userData.
current→isOnline()	Checks if the function is currently reachable, without raising any error.
current→isOnline_async(callback, context)	Checks if the function is currently reachable, without raising any error (asynchronous version).
current→load(msValidity)	Preloads the function cache with a specified validity duration.
current→load_async(msValidity, callback, context)	Preloads the function cache with a specified validity duration (asynchronous version).
current→nextCurrent()	Continues the enumeration of current sensors started using yFirstCurrent().
current→registerValueCallback(callback)	Registers the callback function that is invoked on every change of advertised value.
current→set_highestValue(newval)	Changes the recorded maximal value observed.
current→set_logicalName(newval)	Changes the logical name of the current sensor.
current→set_lowestValue(newval)	Changes the recorded minimal value observed.
current→set_userData(data)	Stores a user context provided as argument in the userData attribute of the function.

yFindCurrent()

Retrieves a current sensor for a given identifier.

```
function yFindCurrent( ByVal func As String) As YCurrent
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier

- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the current sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YCurrent.isOnline()` to test if the current sensor is indeed online at a given time. In case of ambiguity when looking for a current sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the current sensor

Returns :

a `YCurrent` object allowing you to drive the current sensor.

yFirstCurrent()

Starts the enumeration of current sensors currently accessible.

function **yFirstCurrent()** As `YCurrent`

Use the method `YCurrent.nextCurrent()` to iterate on next current sensors.

Returns :

a pointer to a `YCurrent` object, corresponding to the first current sensor currently online, or a `null` pointer if there are none.

current.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

procedure **calibrateFromPoints()** (ByVal **rawValues** As double)

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

current.describe()

Returns a descriptive text that identifies the function.

function **describe()** As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

current.get_advertisedValue()

Returns the current value of the current sensor (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the current sensor (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

current.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

current.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

current.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

current.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

current.get_currentDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

current.get_hardwareId()

Returns the unique hardware identifier of the function.

function `get_hardwareId()` As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

current.get_highestValue()

Returns the maximal value observed.

function `get_highestValue()` As Double

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

current.get_logicalName()

Returns the logical name of the current sensor.

function `get_logicalName()` As String

Returns :

a string corresponding to the logical name of the current sensor

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

current.get_lowestValue()

Returns the minimal value observed.

function `get_lowestValue()` As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

current.get_module()

Get the `YModule` object for the device on which the function is located.

function `get_module()` As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :
an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
- context** caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

current.get_resolution()

Returns the resolution of the measured values.

function **get_resolution()** As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :
a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

current.get_unit()

Returns the measuring unit for the measured value.

function **get_unit()** As String

Returns :
a string corresponding to the measuring unit for the measured value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

current.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **getUserData()** As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

current.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

current.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

current.nextCurrent()

Continues the enumeration of current sensors started using `yFirstCurrent()`.

function **nextCurrent()** As YCurrent

Returns :
a pointer to a YCurrent object, corresponding to a current sensor currently online, or a null pointer if there are no more current sensors to enumerate.

current.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :
callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

current.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :
newval a floating point number corresponding to the recorded maximal value observed

Returns :
`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

current.set_logicalName()

Changes the logical name of the current sensor.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :
newval a string corresponding to the logical name of the current sensor

Returns :
`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

current.set_lowestValue()

Changes the recorded minimal value observed.

function **set_lowestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

current.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.6. DataLogger function interface

Yoctopuce sensors include a non-volatile memory capable of storing ongoing measured data automatically, without requiring a permanent connection to a computer. The Yoctopuce application programming interface includes functions to control how this internal data logger works. Because the sensors do not include a battery, they do not have an absolute time reference. Therefore, measures are simply indexed by the absolute run number and time relative to the start of the run. Every new power up starts a new run. It is however possible to setup an absolute UTC time by software at a given time, so that the data logger keeps track of it until it is next powered off.

In order to use the functions described here, you should include:

[yocto_datalogger.vb](#)

Global functions
yFindDataLogger(func) Retrieves a data logger for a given identifier.
yFirstDataLogger() Starts the enumeration of data loggers currently accessible.
YDataLogger methods
datalogger→describe() Returns a descriptive text that identifies the function.
datalogger→forgetAllDataStreams() Clears the data logger memory and discards all recorded data streams.
datalogger→get_advertisedValue() Returns the current value of the data logger (no more than 6 characters).
datalogger→get_autoStart() Returns the default activation state of the data logger on power up.
datalogger→get_currentRunIndex()

Returns the current run number, corresponding to the number of times the module was powered on with the dataLogger enabled at some point.

dataLogger→get_dataRun(runIdx)

Returns a data run object holding all measured data for a given period during which the module was turned on (a run).

dataLogger→get_dataStreams(v)

Builds a list of all data streams hold by the data logger.

dataLogger→get_errorMessage()

Returns the error message of the latest error with this function.

dataLogger→get_errorType()

Returns the numerical error code of the latest error with this function.

dataLogger→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

dataLogger→get_hardwareId()

Returns the unique hardware identifier of the function.

dataLogger→get_logicalName()

Returns the logical name of the data logger.

dataLogger→get_measureNames()

Returns the names of the measures recorded by the data logger.

dataLogger→get_module()

Get the YModule object for the device on which the function is located.

dataLogger→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

dataLogger→get_oldestRunIndex()

Returns the index of the oldest run for which the non-volatile memory still holds recorded data.

dataLogger→get_recording()

Returns the current activation state of the data logger.

dataLogger→get_timeUTC()

Returns the Unix timestamp for current UTC time, if known.

dataLogger→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

dataLogger→isOnline()

Checks if the function is currently reachable, without raising any error.

dataLogger→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

dataLogger→load(msValidity)

Preloads the function cache with a specified validity duration.

dataLogger→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

dataLogger→nextDataLogger()

Continues the enumeration of data loggers started using yFirstDataLogger().

dataLogger→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

dataLogger→set_autoStart(newval)

Changes the default activation state of the data logger on power up.

datalogger→**set_logicalName**(newval)

Changes the logical name of the data logger.

datalogger→**set_recording**(newval)

Changes the activation state of the data logger to start/stop recording data.

datalogger→**set_timeUTC**(newval)

Changes the current UTC time reference used for recorded data.

datalogger→**set_userData**(data)

Stores a user context provided as argument in the userData attribute of the function.

yFindDataLogger()

Retrieves a data logger for a given identifier.

```
function yFindDataLogger( ByVal func As String) As YDataLogger
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the data logger is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDataLogger.IsOnline()` to test if the data logger is indeed online at a given time. In case of ambiguity when looking for a data logger by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the data logger

Returns :

a `YDataLogger` object allowing you to drive the data logger.

yFirstDataLogger()

Starts the enumeration of data loggers currently accessible.

```
function yFirstDataLogger( ) As YDataLogger
```

Use the method `YDataLogger.NextDataLogger()` to iterate on next data loggers.

Returns :

a pointer to a `YDataLogger` object, corresponding to the first data logger currently online, or a `null` pointer if there are none.

datalogger.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

datalogger.forgetAllDataStreams()

Clears the data logger memory and discards all recorded data streams.

function **forgetAllDataStreams**() As Integer

This method also resets the current run index to zero.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger.get_advertisedValue()

Returns the current value of the data logger (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the data logger (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

datalogger.get_autoStart()

Returns the default activation state of the data logger on power up.

function **get_autoStart**() As Integer

Returns :

either Y_AUTOSTART_OFF or Y_AUTOSTART_ON, according to the default activation state of the data logger on power up

On failure, throws an exception or returns Y_AUTOSTART_INVALID.

datalogger.get_currentRunIndex()

Returns the current run number, corresponding to the number of times the module was powered on with the data logger enabled at some point.

function **get_currentRunIndex**() As Integer

Returns :

an integer corresponding to the current run number, corresponding to the number of times the module was powered on with the data logger enabled at some point

On failure, throws an exception or returns Y_CURRENTRUNINDEX_INVALID.

Returns a data run object holding all measured data for a given period during which the module was turned on (a run).

This object can then be used to retrieve measures (min, average and max) at a desired data rate.

Parameters :

runIdx the index of the desired run

Returns :

an YDataRun object

On failure, throws an exception or returns `null`.

`datalogger.get_dataStreams()`

Builds a list of all data streams hold by the data logger.

procedure **`get_dataStreams`**(ByVal **`v`** As List)

The caller must pass by reference an empty array to hold `YDataStream` objects, and the function fills it with objects describing available data sequences.

Parameters :

`v` an array of `YDataStream` objects to be filled in

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

`datalogger.get_errorMessage()`

Returns the error message of the latest error with this function.

function **`get_errorMessage`**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

`datalogger.get_errorType()`

Returns the numerical error code of the latest error with this function.

function **`get_errorType`**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

`datalogger.get_dataloggerDescriptor()`

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **`get_functionDescriptor`**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

`datalogger.get_hardwareId()`

Returns the unique hardware identifier of the function.

function **`get_hardwareId`**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

datalogger.get_logicalName()

Returns the logical name of the data logger.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the data logger

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

Returns the names of the measures recorded by the data logger.

In most case, the measure names match the hardware identifier of the sensor that produced the data.

Returns :

a list of strings (the measure names) On failure, throws an exception or returns an empty array.

datalogger.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger.get_oldestRunIndex()

Returns the index of the oldest run for which the non-volatile memory still holds recorded data.

function **get_oldestRunIndex**() As Integer

Returns :

an integer corresponding to the index of the oldest run for which the non-volatile memory still holds recorded data

On failure, throws an exception or returns `Y_OLDESTRUNINDEX_INVALID`.

datalogger.get_recording()

Returns the current activation state of the data logger.

function **get_recording**() As Integer

Returns :

either `Y_RECORDING_OFF` or `Y_RECORDING_ON`, according to the current activation state of the data logger

On failure, throws an exception or returns `Y_RECORDING_INVALID`.

datalogger.get_timeUTC()

Returns the Unix timestamp for current UTC time, if known.

function **get_timeUTC**() As Integer

Returns :

an integer corresponding to the Unix timestamp for current UTC time, if known

On failure, throws an exception or returns `Y_TIMEUTC_INVALID`.

datalogger.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

datalogger.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

- msValidity** an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

datalogger.nextDataLogger()

Continues the enumeration of data loggers started using `yFirstDataLogger()`.

function **nextDataLogger**() As YDataLogger

Returns :

a pointer to a YDataLogger object, corresponding to a data logger currently online, or a null pointer if there are no more data loggers to enumerate.

datalogger.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

datalogger.set_autoStart()

Changes the default activation state of the data logger on power up.

function **set_autoStart**(ByVal **newval** As Integer) As Integer

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval either `Y_AUTOSTART_OFF` or `Y_AUTOSTART_ON`, according to the default activation state of the data logger on power up

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger.set_logicalName()

Changes the logical name of the data logger.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the data logger

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger.set_recording()

Changes the activation state of the data logger to start/stop recording data.

function **set_recording**(ByVal **newval** As Integer) As Integer

Parameters :

newval either `Y_RECORDING_OFF` or `Y_RECORDING_ON`, according to the activation state of the data logger to start/stop recording data

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger.set_timeUTC()

Changes the current UTC time reference used for recorded data.

```
function set_timeUTC( ByVal newval As Integer) As Integer
```

Parameters :

newval an integer corresponding to the current UTC time reference used for recorded data

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

datalogger.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.7. Formatted data sequence

A run is a continuous interval of time during which a module was powered on. A data run provides easy access to all data collected during a given run, providing on-the-fly resampling at the desired reporting rate.

In order to use the functions described here, you should include:

[yocto_datalogger.vb](#)

YDataRun methods
datarun→get_averageValue(measureName, pos) Returns the average value of the measure observed at the specified time period.
datarun→get_duration() Returns the duration (in seconds) of the data run.
datarun→get_maxValue(measureName, pos) Returns the maximal value of the measure observed at the specified time period.
datarun→get_measureNames() Returns the names of the measures recorded by the data logger.
datarun→get_minValue(measureName, pos) Returns the minimal value of the measure observed at the specified time period.
datarun→get_startTimeUTC() Returns the start time of the data run, relative to the Jan 1, 1970.
datarun→get_valueCount() Returns the number of values accessible in this run, given the selected data samples interval.
datarun→get_valueInterval()

Returns the number of seconds covered by each value in this run.

dataRun→**set_valueInterval**(**valueInterval**)

Changes the number of seconds covered by each value in this run.

Returns the average value of the measure observed at the specified time period.

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the average value)

On failure, throws an exception or returns `Y_AVERAGEVALUE_INVALID`.

Returns the duration (in seconds) of the data run.

When the datalogger is actively recording and the specified run is the current run, calling this method reloads last sequence(s) from device to make sure it includes the latest recorded data.

Returns :

an unsigned number corresponding to the number of seconds between the beginning of the run (when the module was powered up) and the last recorded measure.

Returns the maximal value of the measure observed at the specified time period.

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the maximal value)

On failure, throws an exception or returns `Y_MAXVALUE_INVALID`.

Returns the names of the measures recorded by the data logger.

In most case, the measure names match the hardware identifier of the sensor that produced the data.

Returns :

a list of strings (the measure names) On failure, throws an exception or returns an empty array.

Returns the minimal value of the measure observed at the specified time period.

Parameters :

measureName the name of the desired measure (one of the names returned by `get_measureNames`)

pos the position index, between 0 and the value returned by `get_valueCount`

Returns :

a floating point number (the minimal value)

On failure, throws an exception or returns Y_MINVALUE_INVALID.

Returns the start time of the data run, relative to the Jan 1, 1970.

If the UTC time was not set in the datalogger at any time during the recording of this data run, and if this is not the current run, this method returns 0.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the beginning of this data run (i.e. Unix time representation of the absolute time).

Returns the number of values accessible in this run, given the selected data samples interval.

When the datalogger is actively recording and the specified run is the current run, calling this method reloads last sequence(s) from device to make sure it includes the latest recorded data.

Returns :

an unsigned number corresponding to the run duration divided by the samples interval.

Returns the number of seconds covered by each value in this run.

By default, the value interval is set to the coarsest data rate archived in the data logger flash for this run. The value interval can however be configured at will to a different rate when desired.

Returns :

an unsigned number corresponding to a number of seconds covered by each data sample in the Run.

Changes the number of seconds covered by each value in this run.

By default, the value interval is set to the coarsest data rate archived in the data logger flash for this run. The value interval can however be configured at will to a different rate when desired.

Parameters :

valueInterval an integer number of seconds.

Returns :

nothing

3.8. Recorded data sequence

DataStream objects represent a recorded measure sequence. They are returned by the data logger present on Yoctopuce sensors.

In order to use the functions described here, you should include:

[yocto_datalogger.vb](#)

YDataStream methods

datastream→get_columnCount()

Returns the number of data columns present in this stream.

datastream→get_columnNames()

Returns the title (or meaning) of each data column present in this stream.

datastream→get_data(row, col)

Returns a single measure from the data stream, specified by its row and column index.

datastream→get_dataRows()

Returns the whole data set contained in the stream, as a bidimensional table of numbers.

datastream→get_dataSamplesInterval()

Returns the number of seconds elapsed between two consecutive rows of this data stream.

datastream→get_rowCount()

Returns the number of data rows present in this stream.

datastream→get_runIndex()

Returns the run index of the data stream.

datastream→get_startTime()

Returns the start time of the data stream, relative to the beginning of the run.

datastream→get_startTimeUTC()

Returns the start time of the data stream, relative to the Jan 1, 1970.

datastream.get_columnCount()

Returns the number of data columns present in this stream.

function get_columnCount() As Integer

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

This method fetches the whole data stream from the device, if not yet done.

Returns :

an unsigned number corresponding to the number of rows. On failure, throws an exception or returns zero.

datastream.get_columnNames()

Returns the title (or meaning) of each data column present in this stream.

function get_columnNames() As List

In most case, the title of the data column is the hardware identifier of the sensor that produced the data. For archived streams created by summarizing a high-resolution data stream, there can be a suffix appended to the sensor identifier, such as `_min` for the minimum value, `_avg` for the average value and `_max` for the maximal value.

This method fetches the whole data stream from the device, if not yet done.

Returns :

a list containing as many strings as there are columns in the data stream. On failure, throws an exception or returns an empty array.

datastream.get_data()

Returns a single measure from the data stream, specified by its row and column index.

function get_data(ByVal row As Integer, ByVal col As Integer) As Double

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

This method fetches the whole data stream from the device, if not yet done.

Parameters :

row row index

col column index

Returns :

a floating-point number On failure, throws an exception or returns Y_DATA_INVALID.

datastream.get_dataRows()

Returns the whole data set contained in the stream, as a bidimensional table of numbers.

function **get_dataRows**() As Array

The meaning of the values present in each column can be obtained using the method `get_columnNames()`.

This method fetches the whole data stream from the device, if not yet done.

Returns :

a list containing as many elements as there are rows in the data stream. Each row itself is a list of floating-point numbers. On failure, throws an exception or returns an empty array.

datastream.get_dataSamplesInterval()

Returns the number of seconds elapsed between two consecutive rows of this data stream.

function **get_dataSamplesInterval**() As Integer

By default, the data logger records one row per second, but there might be alternative streams at lower resolution created by summarizing the original stream for archiving purposes.

This method does not cause any access to the device, as the value is preloaded in the object at instantiation time.

Returns :

an unsigned number corresponding to a number of seconds.

datastream.get_rowCount()

Returns the number of data rows present in this stream.

function **get_rowCount**() As Integer

This method fetches the whole data stream from the device, if not yet done.

Returns :

an unsigned number corresponding to the number of rows. On failure, throws an exception or returns zero.

datastream.get_runIndex()

Returns the run index of the data stream.

function **get_runIndex**() As Integer

A run can be made of multiple datastreams, for different time intervals. This method does not cause any access to the device, as the value is preloaded in the object at instantiation time.

Returns :

an unsigned number corresponding to the run index.

datastream.get_startTime()

Returns the start time of the data stream, relative to the beginning of the run.

function **get_startTime**() As Integer

If you need an absolute time, use `get_startTimeUTC()`.

This method does not cause any access to the device, as the value is preloaded in the object at instantiation time.

Returns :

an unsigned number corresponding to the number of seconds between the start of the run and the beginning of this data stream.

datastream.get_startTimeUTC()

Returns the start time of the data stream, relative to the Jan 1, 1970.

function **get_startTimeUTC**() As Long

If the UTC time was not set in the datalogger at the time of the recording of this data stream, this method returns 0.

This method does not cause any access to the device, as the value is preloaded in the object at instantiation time.

Returns :

an unsigned number corresponding to the number of seconds between the Jan 1, 1970 and the beginning of this data stream (i.e. Unix time representation of the absolute time).

3.9. External power supply control interface

Yoctopuce application programming interface allows you to control the power source to use for module functions that require high current. The module can also automatically disconnect the external power when a voltage drop is observed on the external power source (external battery running out of power).

In order to use the functions described here, you should include:

[yocto_dualpower.vb](#)

Global functions
yFindDualPower(func) Retrieves a dual power control for a given identifier.
yFirstDualPower() Starts the enumeration of dual power controls currently accessible.
YDualPower methods
dualpower→describe() Returns a descriptive text that identifies the function.
dualpower→get_advertisedValue() Returns the current value of the power control (no more than 6 characters).
dualpower→get_errorMessage() Returns the error message of the latest error with this function.
dualpower→get_errorType() Returns the numerical error code of the latest error with this function.
dualpower→get_extVoltage()

Returns the measured voltage on the external power source, in millivolts.

dualpower→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

dualpower→get_hardwareId()

Returns the unique hardware identifier of the function.

dualpower→get_logicalName()

Returns the logical name of the power control.

dualpower→get_module()

Get the `YModule` object for the device on which the function is located.

dualpower→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

dualpower→get_powerControl()

Returns the selected power source for module functions that require lots of current.

dualpower→get_powerState()

Returns the current power source for module functions that require lots of current.

dualpower→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

dualpower→isOnline()

Checks if the function is currently reachable, without raising any error.

dualpower→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

dualpower→load(msValidity)

Preloads the function cache with a specified validity duration.

dualpower→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

dualpower→nextDualPower()

Continues the enumeration of dual power controls started using `yFirstDualPower()`.

dualpower→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

dualpower→set_logicalName(newval)

Changes the logical name of the power control.

dualpower→set_powerControl(newval)

Changes the selected power source for module functions that require lots of current.

dualpower→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindDualPower()

Retrieves a dual power control for a given identifier.

```
function yFindDualPower( ByVal func As String ) As YDualPower
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the power control is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YDualPower.isOnline()` to test if the power control is indeed online at a given time. In case of ambiguity when looking for a dual power control by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the power control

Returns :

a `YDualPower` object allowing you to drive the power control.

yFirstDualPower()

Starts the enumeration of dual power controls currently accessible.

```
function yFirstDualPower( ) As YDualPower
```

Use the method `YDualPower.nextDualPower()` to iterate on next dual power controls.

Returns :

a pointer to a `YDualPower` object, corresponding to the first dual power control currently online, or a `null` pointer if there are none.

dualpower.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

dualpower.get_advertisedValue()

Returns the current value of the power control (no more than 6 characters).

```
function get_advertisedValue( ) As String
```

Returns :

a string corresponding to the current value of the power control (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

dualpower.get_errorMessage()

Returns the error message of the latest error with this function.

```
function get_errorMessage( ) As String
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

dualpower.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

dualpower.get_extVoltage()

Returns the measured voltage on the external power source, in millivolts.

function **get_extVoltage**() As Integer

Returns :

an integer corresponding to the measured voltage on the external power source, in millivolts

On failure, throws an exception or returns `Y_EXTVOLTAGE_INVALID`.

dualpower.get_dualpowerDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

dualpower.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function. On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

dualpower.get_logicalName()

Returns the logical name of the power control.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the power control

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

dualpower.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As `YModule`

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

dualpower.get_powerControl()

Returns the selected power source for module functions that require lots of current.

function **get_powerControl**() As `Integer`

Returns :

a value among `Y_POWERCONTROL_AUTO`, `Y_POWERCONTROL_FROM_USB`, `Y_POWERCONTROL_FROM_EXT` and `Y_POWERCONTROL_OFF` corresponding to the selected power source for module functions that require lots of current

On failure, throws an exception or returns `Y_POWERCONTROL_INVALID`.

dualpower.get_powerState()

Returns the current power source for module functions that require lots of current.

function **get_powerState**() As `Integer`

Returns :

a value among `Y_POWERSTATE_OFF`, `Y_POWERSTATE_FROM_USB` and `Y_POWERSTATE_FROM_EXT` corresponding to the current power source for module functions that require lots of current

On failure, throws an exception or returns `Y_POWERSTATE_INVALID`.

dualpower.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userdata**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

dualpower.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :
`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

dualpower.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :
msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :
`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

dualpower.nextDualPower()

Continues the enumeration of dual power controls started using `yFirstDualPower()`.

function **nextDualPower**() As YDualPower

Returns :

a pointer to a `YDualPower` object, corresponding to a dual power control currently online, or a null pointer if there are no more dual power controls to enumerate.

dualpower.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

- callback** the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

dualpower.set_logicalName()

Changes the logical name of the power control.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

- newval** a string corresponding to the logical name of the power control

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

dualpower.set_powerControl()

Changes the selected power source for module functions that require lots of current.

function **set_powerControl**(ByVal **newval** As Integer) As Integer

Parameters :

newval a value among Y_POWERCONTROL_AUTO, Y_POWERCONTROL_FROM_USB, Y_POWERCONTROL_FROM_EXT and Y_POWERCONTROL_OFF corresponding to the selected power source for module functions that require lots of current

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

dualpower.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.10. Yocto-hub port interface

In order to use the functions described here, you should include:

yocto_hubport.vb

Global functions

yFindHubPort(func)

Retrieves a Yocto-hub port for a given identifier.

yFirstHubPort()

Starts the enumeration of Yocto-hub ports currently accessible.

YHubPort methods

hubport→describe()

Returns a descriptive text that identifies the function.

hubport→get_advertisedValue()

Returns the current value of the Yocto-hub port (no more than 6 characters).

hubport→get_baudRate()

Returns the current baud rate used by this Yocto-hub port, in kbps.

hubport→get_enabled()

Returns true if the Yocto-hub port is powered, false otherwise.

hubport→get_errorMessage()

Returns the error message of the latest error with this function.

hubport→get_errorType()

Returns the numerical error code of the latest error with this function.

hubport→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

hubport→get_hardwareId()

Returns the unique hardware identifier of the function.

hubport→get_logicalName()

Returns the logical name of the Yocto-hub port, which is always the serial number of the connected module.

hubport→get_module()

Get the `YModule` object for the device on which the function is located.

hubport→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

hubport→get_portState()

Returns the current state of the Yocto-hub port.

hubport→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

hubport→isOnline()

Checks if the function is currently reachable, without raising any error.

hubport→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

hubport→load(msValidity)

Preloads the function cache with a specified validity duration.

hubport→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

hubport→nextHubPort()

Continues the enumeration of Yocto-hub ports started using `yFirstHubPort()`.

hubport→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

hubport→set_enabled(newval)

Changes the activation of the Yocto-hub port.

hubport→set_logicalName(newval)

It is not possible to configure the logical name of a Yocto-hub port.

hubport→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindHubPort()

Retrieves a Yocto-hub port for a given identifier.

```
function yFindHubPort( ByVal func As String ) As YHubPort
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the Yocto-hub port is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YHubPort.isOnline()` to test if the Yocto-hub port is indeed online at a given time. In case of ambiguity when looking for a Yocto-

hub port by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the Yocto-hub port

Returns :

a `YHubPort` object allowing you to drive the Yocto-hub port.

yFirstHubPort()

Starts the enumeration of Yocto-hub ports currently accessible.

function **yFirstHubPort**() As YHubPort

Use the method `YHubPort.nextHubPort()` to iterate on next Yocto-hub ports.

Returns :

a pointer to a `YHubPort` object, corresponding to the first Yocto-hub port currently online, or a `null` pointer if there are none.

hubport.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

hubport.get_advertisedValue()

Returns the current value of the Yocto-hub port (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the Yocto-hub port (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

hubport.get_baudRate()

Returns the current baud rate used by this Yocto-hub port, in kbps.

function **get_baudRate**() As Integer

The default value is 1000 kbps, but a slower rate may be used if communication problems are hit.

Returns :

an integer corresponding to the current baud rate used by this Yocto-hub port, in kbps

On failure, throws an exception or returns `Y_BAUDRATE_INVALID`.

hubport.get_enabled()

Returns true if the Yocto-hub port is powered, false otherwise.

function **get_enabled**() As Integer

Returns :

either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to true if the Yocto-hub port is powered, false otherwise

On failure, throws an exception or returns `Y_ENABLED_INVALID`.

hubport.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

hubport.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

hubport.get_hubportDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

hubport.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

hubport.get_logicalName()

Returns the logical name of the Yocto-hub port, which is always the serial number of the connected module.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the Yocto-hub port, which is always the serial number of the connected module

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

hubport.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As `YModule`

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport.get_portState()

Returns the current state of the Yocto-hub port.

function **get_portState**() As `Integer`

Returns :

a value among `Y_PORTSTATE_OFF`, `Y_PORTSTATE_ON` and `Y_PORTSTATE_RUN` corresponding to the current state of the Yocto-hub port

On failure, throws an exception or returns `Y_PORTSTATE_INVALID`.

hubport.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As `Object`

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

hubport.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

hubport.nextHubPort()

Continues the enumeration of Yocto-hub ports started using `yFirstHubPort()`.

function **nextHubPort**() As YHubPort

Returns :

a pointer to a `YHubPort` object, corresponding to a Yocto-hub port currently online, or a `null` pointer if there are no more Yocto-hub ports to enumerate.

hubport.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

hubport.set_enabled()

Changes the activation of the Yocto-hub port.

function **set_enabled**(ByVal **newval** As Integer) As Integer

If the port is enabled, the * connected module will be powered. Otherwise, port power will be shut down.

Parameters :

newval either `Y_ENABLED_FALSE` or `Y_ENABLED_TRUE`, according to the activation of the Yocto-hub port

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

hubport.set_logicalName()

It is not possible to configure the logical name of a Yocto-hub port.

function **set_logicalName**(ByVal **newval** As String) As Integer

The logical name is automatically set to the serial number of the connected module.

Parameters :

newval a string

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

hubport.set_userdata()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userdata**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.11. Humidity function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_humidity.vb](#)

Global functions	
yFindHumidity(func)	Retrieves a humidity sensor for a given identifier.
yFirstHumidity()	Starts the enumeration of humidity sensors currently accessible.
YHumidity methods	
humidity→calibrateFromPoints(rawValues, refValues)	Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.
humidity→describe()	Returns a descriptive text that identifies the function.
humidity→get_advertisedValue()	Returns the current value of the humidity sensor (no more than 6 characters).
humidity→get_currentRawValue()	Returns the unrounded and uncalibrated raw value returned by the sensor.
humidity→get_currentValue()	Returns the current measured value.
humidity→get_errorMessage()	Returns the error message of the latest error with this function.
humidity→get_errorType()	Returns the numerical error code of the latest error with this function.
humidity→get_functionDescriptor()	Returns a unique identifier of type YFUN_DESCR corresponding to the function.
humidity→get_hardwareId()	Returns the unique hardware identifier of the function.
humidity→get_highestValue()	

Returns the maximal value observed.
humidity→get_logicalName() Returns the logical name of the humidity sensor.
humidity→get_lowestValue() Returns the minimal value observed.
humidity→get_module() Get the <code>YModule</code> object for the device on which the function is located.
humidity→get_module_async(callback, context) Get the <code>YModule</code> object for the device on which the function is located (asynchronous version).
humidity→get_resolution() Returns the resolution of the measured values.
humidity→get_unit() Returns the measuring unit for the measured value.
humidity→get_userData() Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
humidity→isOnline() Checks if the function is currently reachable, without raising any error.
humidity→isOnline_async(callback, context) Checks if the function is currently reachable, without raising any error (asynchronous version).
humidity→load(msValidity) Preloads the function cache with a specified validity duration.
humidity→load_async(msValidity, callback, context) Preloads the function cache with a specified validity duration (asynchronous version).
humidity→nextHumidity() Continues the enumeration of humidity sensors started using <code>yFirstHumidity()</code> .
humidity→registerValueCallback(callback) Registers the callback function that is invoked on every change of advertised value.
humidity→set_highestValue(newval) Changes the recorded maximal value observed.
humidity→set_logicalName(newval) Changes the logical name of the humidity sensor.
humidity→set_lowestValue(newval) Changes the recorded minimal value observed.
humidity→set_userData(data) Stores a user context provided as argument in the <code>userData</code> attribute of the function.

yFindHumidity()

Retrieves a humidity sensor for a given identifier.

```
function yFindHumidity( ByVal func As String) As YHumidity
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the humidity sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YHumidity.isOnline()` to test if the humidity sensor is indeed online at a given time. In case of ambiguity when looking for a humidity sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the humidity sensor

Returns :

a `YHumidity` object allowing you to drive the humidity sensor.

yFirstHumidity()

Starts the enumeration of humidity sensors currently accessible.

```
function yFirstHumidity( ) As YHumidity
```

Use the method `YHumidity.nextHumidity()` to iterate on next humidity sensors.

Returns :

a pointer to a `YHumidity` object, corresponding to the first humidity sensor currently online, or a `null` pointer if there are none.

humidity.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
procedure calibrateFromPoints( ByVal rawValues As double)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a lineat interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```


The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

humidity.get_advertisedValue()

Returns the current value of the humidity sensor (no more than 6 characters).

function **get_advertisedValue()** As String

Returns :

a string corresponding to the current value of the humidity sensor (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

humidity.get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

function **get_currentRawValue()** As Double

Returns :

a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

humidity.get_currentValue()

Returns the current measured value.

function **get_currentValue()** As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

humidity.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage()** As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

humidity.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType()** As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

humidity.get_humidityDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function `get_functionDescriptor()` As `YFUN_DESCR`

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

humidity.get_hardwareId()

Returns the unique hardware identifier of the function.

function `get_hardwareId()` As `String`

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

humidity.get_highestValue()

Returns the maximal value observed.

function `get_highestValue()` As `Double`

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

humidity.get_logicalName()

Returns the logical name of the humidity sensor.

function `get_logicalName()` As `String`

Returns :

a string corresponding to the logical name of the humidity sensor

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

humidity.get_lowestValue()

Returns the minimal value observed.

function `get_lowestValue()` As `Double`

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

humidity.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :
an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

humidity.get_resolution()

Returns the resolution of the measured values.

function **get_resolution**() As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :
a floating point number corresponding to the resolution of the measured values
On failure, throws an exception or returns Y_RESOLUTION_INVALID.

humidity.get_unit()

Returns the measuring unit for the measured value.

function **get_unit**() As String

Returns :
a string corresponding to the measuring unit for the measured value
On failure, throws an exception or returns Y_UNIT_INVALID.

humidity.get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

humidity.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :
`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

humidity.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :
msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :
`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox

javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

humidity.nextHumidity()

Continues the enumeration of humidity sensors started using `yFirstHumidity()`.

function **nextHumidity**() As YHumidity

Returns :

a pointer to a `YHumidity` object, corresponding to a humidity sensor currently online, or a null pointer if there are no more humidity sensors to enumerate.

humidity.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

- callback** the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

humidity.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :

- newval** a floating point number corresponding to the recorded maximal value observed

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity.set_logicalName()

Changes the logical name of the humidity sensor.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the humidity sensor

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity.set_lowestValue()

Changes the recorded minimal value observed.

function **set_lowestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

humidity.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.12. Led function interface

Yoctopuce application programming interface allows you not only to drive the intensity of the led, but also to have it blink at various preset frequencies.

In order to use the functions described here, you should include:

[yocto_led.vb](#)

Global functions	
yFindLed(func)	Retrieves a led for a given identifier.
yFirstLed()	Starts the enumeration of leds currently accessible.
YLed methods	
led→describe()	Returns a descriptive text that identifies the function.
led→get_advertisedValue()	Returns the current value of the led (no more than 6 characters).
led→get_blinking()	Returns the current led signaling mode.

led→get_errorMessage()	Returns the error message of the latest error with this function.
led→get_errorType()	Returns the numerical error code of the latest error with this function.
led→get_functionDescriptor()	Returns a unique identifier of type <code>YFUN_DESCR</code> corresponding to the function.
led→get_hardwareId()	Returns the unique hardware identifier of the function.
led→get_logicalName()	Returns the logical name of the led.
led→get_luminosity()	Returns the current led intensity (in per cent).
led→get_module()	Get the <code>YModule</code> object for the device on which the function is located.
led→get_module_async(callback, context)	Get the <code>YModule</code> object for the device on which the function is located (asynchronous version).
led→get_power()	Returns the current led state.
led→get_userData()	Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
led→isOnline()	Checks if the function is currently reachable, without raising any error.
led→isOnline_async(callback, context)	Checks if the function is currently reachable, without raising any error (asynchronous version).
led→load(msValidity)	Preloads the function cache with a specified validity duration.
led→load_async(msValidity, callback, context)	Preloads the function cache with a specified validity duration (asynchronous version).
led→nextLed()	Continues the enumeration of leds started using <code>yFirstLed()</code> .
led→registerValueCallback(callback)	Registers the callback function that is invoked on every change of advertised value.
led→set_blinking(newval)	Changes the current led signaling mode.
led→set_logicalName(newval)	Changes the logical name of the led.
led→set_luminosity(newval)	Changes the current led intensity (in per cent).
led→set_power(newval)	Changes the state of the led.
led→set_userData(data)	Stores a user context provided as argument in the <code>userData</code> attribute of the function.

yFindLed()

Retrieves a led for a given identifier.

```
function yFindLed( ByVal func As String) As YLed
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the led is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YLed.isOnline()` to test if the led is indeed online at a given time. In case of ambiguity when looking for a led by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the led

Returns :

a `YLed` object allowing you to drive the led.

yFirstLed()

Starts the enumeration of leds currently accessible.

```
function yFirstLed( ) As YLed
```

Use the method `YLed.nextLed()` to iterate on next leds.

Returns :

a pointer to a `YLed` object, corresponding to the first led currently online, or a `null` pointer if there are none.

led.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

led.get_advertisedValue()

Returns the current value of the led (no more than 6 characters).

```
function get_advertisedValue( ) As String
```

Returns :

a string corresponding to the current value of the led (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

led.get_blinking()

Returns the current led signaling mode.

function **get_blinking**() As Integer

Returns :

a value among Y_BLINKING_STILL, Y_BLINKING_RELAX, Y_BLINKING_AWARE, Y_BLINKING_RUN, Y_BLINKING_CALL and Y_BLINKING_PANIC corresponding to the current led signaling mode

On failure, throws an exception or returns Y_BLINKING_INVALID.

led.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

led.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

led.get_ledDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

led.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns Y_HARDWAREID_INVALID.

led.get_logicalName()

Returns the logical name of the led.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the led

On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

led.get_luminosity()

Returns the current led intensity (in per cent).

function **get_luminosity**() As Integer

Returns :

an integer corresponding to the current led intensity (in per cent)

On failure, throws an exception or returns Y_LUMINOSITY_INVALID.

led.get_module()

Get the YModule object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

led.get_power()

Returns the current led state.

function **get_power**() As Integer

Returns :

either Y_POWER_OFF or Y_POWER_ON, according to the current led state

On failure, throws an exception or returns `Y_POWER_INVALID`.

led.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **getUserData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

led.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :
`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

led.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :
msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

led.nextLed()

Continues the enumeration of leds started using `yFirstLed()`.

function **nextLed**() As YLed

Returns :

a pointer to a `YLed` object, corresponding to a led currently online, or a `null` pointer if there are no more leds to enumerate.

led.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

- callback** the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

led.set_blinking()

Changes the current led signaling mode.

function **set_blinking**(ByVal **newval** As Integer) As Integer

Parameters :

- newval** a value among `Y_BLINKING_STILL`, `Y_BLINKING_RELAX`, `Y_BLINKING_AWARE`, `Y_BLINKING_RUN`, `Y_BLINKING_CALL` and `Y_BLINKING_PANIC` corresponding to the current led signaling mode

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led.set_logicalName()

Changes the logical name of the led.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the led

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led.set_luminosity()

Changes the current led intensity (in per cent).

```
function set_luminosity( ByVal newval As Integer) As Integer
```

Parameters :

newval an integer corresponding to the current led intensity (in per cent)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led.set_power()

Changes the state of the led.

```
function set_power( ByVal newval As Integer) As Integer
```

Parameters :

newval either Y_POWER_OFF or Y_POWER_ON, according to the state of the led

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

led.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.13. LightSensor function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_lightsensor.vb](#)

Global functions

yFindLightSensor(func)

Retrieves a light sensor for a given identifier.

yFirstLightSensor()

Starts the enumeration of light sensors currently accessible.

YLightSensor methods

lightsensor→calibrate(calibratedVal)

Changes the sensor-specific calibration parameter so that the current value matches a desired target (linear scaling).

lightsensor→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

lightsensor→describe()

Returns a descriptive text that identifies the function.

lightsensor→get_advertisedValue()

Returns the current value of the light sensor (no more than 6 characters).

lightsensor→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

lightsensor→get_currentValue()

Returns the current measured value.

lightsensor→get_errorMessage()

Returns the error message of the latest error with this function.

lightsensor→get_errorType()

Returns the numerical error code of the latest error with this function.

lightsensor→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

lightsensor→get_hardwareId()

Returns the unique hardware identifier of the function.

lightsensor→get_highestValue()

Returns the maximal value observed.

lightsensor→get_logicalName()

Returns the logical name of the light sensor.

lightsensor→get_lowestValue()

Returns the minimal value observed.

lightsensor→get_module()

Get the YModule object for the device on which the function is located.

lightsensor→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

lightsensor→get_resolution()

Returns the resolution of the measured values.
lightsensor→get_unit() Returns the measuring unit for the measured value.
lightsensor→get_userData() Returns the value of the userData attribute, as previously stored using method <code>set_userData</code> .
lightsensor→isOnline() Checks if the function is currently reachable, without raising any error.
lightsensor→isOnline_async(callback, context) Checks if the function is currently reachable, without raising any error (asynchronous version).
lightsensor→load(msValidity) Preloads the function cache with a specified validity duration.
lightsensor→load_async(msValidity, callback, context) Preloads the function cache with a specified validity duration (asynchronous version).
lightsensor→nextLightSensor() Continues the enumeration of light sensors started using <code>yFirstLightSensor()</code> .
lightsensor→registerValueCallback(callback) Registers the callback function that is invoked on every change of advertised value.
lightsensor→set_highestValue(newval) Changes the recorded maximal value observed.
lightsensor→set_logicalName(newval) Changes the logical name of the light sensor.
lightsensor→set_lowestValue(newval) Changes the recorded minimal value observed.
lightsensor→set_userData(data) Stores a user context provided as argument in the userData attribute of the function.

yFindLightSensor()

Retrieves a light sensor for a given identifier.

function yFindLightSensor(ByVal func As String) As YLightSensor

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the light sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YLightSensor.isOnline()` to test if the light sensor is indeed online at a given time. In case of ambiguity when looking for a light sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the light sensor

Returns :

a `YLightSensor` object allowing you to drive the light sensor.

yFirstLightSensor()

Starts the enumeration of light sensors currently accessible.

```
function yFirstLightSensor( ) As YLightSensor
```

Use the method `YLightSensor.nextLightSensor()` to iterate on next light sensors.

Returns :

a pointer to a `YLightSensor` object, corresponding to the first light sensor currently online, or a `null` pointer if there are none.

lightsensor.calibrate()

Changes the sensor-specific calibration parameter so that the current value matches a desired target (linear scaling).

```
function calibrate( ByVal calibratedVal As double) As Integer
```

Parameters :

calibratedVal the desired target value.

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
procedure calibrateFromPoints( ByVal rawValues As double)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :
a string that describes the function

lightsensor.get_advertisedValue()

Returns the current value of the light sensor (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :
a string corresponding to the current value of the light sensor (no more than 6 characters)
On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

lightsensor.get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :
a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor
On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

lightsensor.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :
a floating point number corresponding to the current measured value
On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

lightsensor.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a string corresponding to the latest error message that occurred while using this function object

lightsensor.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a number corresponding to the code of the latest error that occurred while using this function object

lightsensor.get_lightsensorDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

lightsensor.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

lightsensor.get_highestValue()

Returns the maximal value observed.

function **get_highestValue**() As Double

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

lightsensor.get_logicalName()

Returns the logical name of the light sensor.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the light sensor

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

lightsensor.get_lowestValue()

Returns the minimal value observed.

function **get_lowestValue**() As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

lightsensor.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :
an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

lightsensor.get_resolution()

Returns the resolution of the measured values.

function **get_resolution()** As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :
a floating point number corresponding to the resolution of the measured values
On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

lightsensor.get_unit()

Returns the measuring unit for the measured value.

function **get_unit()** As String

Returns :
a string corresponding to the measuring unit for the measured value
On failure, throws an exception or returns `Y_UNIT_INVALID`.

lightsensor.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData()** As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

lightsensor.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

lightsensor.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)

context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

lightsensor.nextLightSensor()

Continues the enumeration of light sensors started using `yFirstLightSensor()`.

function **nextLightSensor**() As YLightSensor

Returns :
a pointer to a `YLightSensor` object, corresponding to a light sensor currently online, or a `null` pointer if there are no more light sensors to enumerate.

lightsensor.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :
callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

lightsensor.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :
newval a floating point number corresponding to the recorded maximal value observed

Returns :
`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor.set_logicalName()

Changes the logical name of the light sensor.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the light sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor.set_lowestValue()

Changes the recorded minimal value observed.

function **set_lowestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

lightsensor.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.14. Module control interface

This interface is identical for all Yoctopuce USB modules. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

In order to use the functions described here, you should include:

[yocto_api.vb](#)

Global functions

yFindModule(func)

Allows you to find a module from its serial number or from its logical name.

yFirstModule()

Starts the enumeration of modules currently accessible.

YModule methods

module→describe()

Returns a descriptive text that identifies the module.

module→functionCount()

Returns the number of functions (beside the "module" interface) available on the module.

module→functionId(functionIndex)

Retrieves the hardware identifier of the *n*th function on the module.

module→functionName(functionIndex)

Retrieves the logical name of the *n*th function on the module.

module→functionValue(functionIndex)

Retrieves the advertised value of the n th function on the module.
module → get_beacon() Returns the state of the localization beacon.
module → get_errorMessage() Returns the error message of the last error with this module object.
module → get_errorType() Returns the numerical error code of the last error with this module object.
module → get_firmwareRelease() Returns the version of the firmware embedded in the module.
module → get_functionDescriptor() Returns a unique identifier of type <code>YFUN_DESCR</code> corresponding to the function.
module → get_hardwareId() Returns the unique hardware identifier of the module.
module → get_icon2d() Returns the icon of the module.
module → get_logicalName() Returns the logical name of the module.
module → get_luminosity() Returns the luminosity of the module informative leds (from 0 to 100).
module → get_persistentSettings() Returns the current state of persistent module settings.
module → get_productId() Returns the USB device identifier of the module.
module → get_productName() Returns the commercial name of the module, as set by the factory.
module → get_productRelease() Returns the hardware release version of the module.
module → get_rebootCountdown() Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.
module → get_serialNumber() Returns the serial number of the module, as set by the factory.
module → get_upTime() Returns the number of milliseconds spent since the module was powered on.
module → get_usbBandwidth() Returns the number of USB interfaces used by the module.
module → get_usbCurrent() Returns the current consumed by the module on the USB bus, in milli-amps.
module → get_userData() Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
module → isOnline() Checks if the module is currently reachable, without raising any error.
module → isOnline_async(callback, context)

Checks if the module is currently reachable, without raising any error.
module→load(msValidity) Preloads the module cache with a specified validity duration.
module→load_async(msValidity, callback, context) Preloads the module cache with a specified validity duration (asynchronous version).
module→nextModule() Continues the module enumeration started using <code>yFirstModule()</code> .
module→reboot(secBeforeReboot) Schedules a simple module reboot after the given number of seconds.
module→revertFromFlash() Reloads the settings stored in the nonvolatile memory, as when the module is powered on.
module→saveToFlash() Saves current settings in the nonvolatile memory of the module.
module→set_beacon(newval) Turns on or off the module localization beacon.
module→set_logicalName(newval) Changes the logical name of the module.
module→set_luminosity(newval) Changes the luminosity of the module informative leds.
module→set_usbBandwidth(newval) Changes the number of USB interfaces used by the module.
module→set_userData(data) Stores a user context provided as argument in the <code>userData</code> attribute of the function.
module→triggerFirmwareUpdate(secBeforeReboot) Schedules a module reboot into special firmware update mode.

yFindModule()

Allows you to find a module from its serial number or from its logical name.

```
function yFindModule( ByVal func As String ) As YModule
```

This function does not require that the module is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YModule.isOnline()` to test if the module is indeed online at a given time. In case of ambiguity when looking for a module by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string containing either the serial number or the logical name of the desired module

Returns :

a `YModule` object allowing you to drive the module or get additional information on the module.

yFirstModule()

Starts the enumeration of modules currently accessible.

```
function yFirstModule( ) As YModule
```


Use the method `YModule.nextModule()` to iterate on the next modules.

Returns :

a pointer to a `YModule` object, corresponding to the first module currently online, or a `null` pointer if there are none.

module.describe()

Returns a descriptive text that identifies the module.

function **describe**() As String

The text may include either the logical name or the serial number of the module.

Returns :

a string that describes the module

module.functionCount()

Returns the number of functions (beside the "module" interface) available on the module.

function **functionCount**() As Integer

Returns :

the number of functions on the module

On failure, throws an exception or returns a negative error code.

module.functionId()

Retrieves the hardware identifier of the *n*th function on the module.

function **functionId**(ByVal **functionIndex** As Integer) As String

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a string corresponding to the unambiguous hardware identifier of the requested module function

On failure, throws an exception or returns an empty string.

module.functionName()

Retrieves the logical name of the *n*th function on the module.

function **functionName**(ByVal **functionIndex** As Integer) As String

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a string corresponding to the logical name of the requested module function

On failure, throws an exception or returns an empty string.

module.functionValue()

Retrieves the advertised value of the *n*th function on the module.

function **functionValue**(ByVal **functionIndex** As Integer) As String

Parameters :

functionIndex the index of the function for which the information is desired, starting at 0 for the first function.

Returns :

a short string (up to 6 characters) corresponding to the advertised value of the requested module function

On failure, throws an exception or returns an empty string.

module.get_beacon()

Returns the state of the localization beacon.

function **get_beacon**() As Integer

Returns :

either Y_BEACON_OFF or Y_BEACON_ON, according to the state of the localization beacon

On failure, throws an exception or returns Y_BEACON_INVALID.

module.get_errorMessage()

Returns the error message of the last error with this module object.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the last error message that occurred while using this module object

module.get_errorType()

Returns the numerical error code of the last error with this module object.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the last error that occurred while using this module object

module.get_firmwareRelease()

Returns the version of the firmware embedded in the module.

function **get_firmwareRelease**() As String

Returns :

a string corresponding to the version of the firmware embedded in the module

On failure, throws an exception or returns Y_FIRMWARERELEASE_INVALID.

module.get_moduleDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

module.get_hardwareId()

Returns the unique hardware identifier of the module.

function `get_hardwareId()` As String

The unique hardware identifier is made of the device serial number followed by string `".module"`.

Returns :

a string that uniquely identifies the module

Returns the icon of the module.

The icon is a png image and does not exceeds 1024 bytes.

Returns :

a binary buffer with module icon, in png format.

module.get_logicalName()

Returns the logical name of the module.

function `get_logicalName()` As String

Returns :

a string corresponding to the logical name of the module

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

module.get_luminosity()

Returns the luminosity of the module informative leds (from 0 to 100).

function `get_luminosity()` As Integer

Returns :

an integer corresponding to the luminosity of the module informative leds (from 0 to 100)

On failure, throws an exception or returns `Y_LUMINOSITY_INVALID`.

module.get_persistentSettings()

Returns the current state of persistent module settings.

function `get_persistentSettings()` As Integer

Returns :

a value among `Y_PERSISTENTSETTINGS_LOADED`, `Y_PERSISTENTSETTINGS_SAVED` and `Y_PERSISTENTSETTINGS_MODIFIED` corresponding to the current state of persistent module settings

On failure, throws an exception or returns `Y_PERSISTENTSETTINGS_INVALID`.

module.get_productId()

Returns the USB device identifier of the module.

function **get_productId**() As Integer

Returns :

an integer corresponding to the USB device identifier of the module

On failure, throws an exception or returns Y_PRODUCTID_INVALID.

module.get_productName()

Returns the commercial name of the module, as set by the factory.

function **get_productName**() As String

Returns :

a string corresponding to the commercial name of the module, as set by the factory

On failure, throws an exception or returns Y_PRODUCTNAME_INVALID.

module.get_productRelease()

Returns the hardware release version of the module.

function **get_productRelease**() As Integer

Returns :

an integer corresponding to the hardware release version of the module

On failure, throws an exception or returns Y_PRODUCTRELEASE_INVALID.

module.get_rebootCountdown()

Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.

function **get_rebootCountdown**() As Integer

Returns :

an integer corresponding to the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled

On failure, throws an exception or returns Y_REBOOTCOUNTDOWN_INVALID.

module.get_serialNumber()

Returns the serial number of the module, as set by the factory.

function **get_serialNumber**() As String

Returns :

a string corresponding to the serial number of the module, as set by the factory

On failure, throws an exception or returns Y_SERIALNUMBER_INVALID.

module.get_upTime()

Returns the number of milliseconds spent since the module was powered on.

function **get_uptime**() As Long

Returns :

an integer corresponding to the number of milliseconds spent since the module was powered on

On failure, throws an exception or returns `Y_UPTIME_INVALID`.

module.get_usbBandwidth()

Returns the number of USB interfaces used by the module.

function **get_usbBandwidth**() As Integer

Returns :

either `Y_USBBANDWIDTH_SIMPLE` or `Y_USBBANDWIDTH_DOUBLE`, according to the number of USB interfaces used by the module

On failure, throws an exception or returns `Y_USBBANDWIDTH_INVALID`.

module.get_usbCurrent()

Returns the current consumed by the module on the USB bus, in milli-amps.

function **get_usbCurrent**() As Integer

Returns :

an integer corresponding to the current consumed by the module on the USB bus, in milli-amps

On failure, throws an exception or returns `Y_USBCURRENT_INVALID`.

module.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

module.isOnline()

Checks if the module is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there are valid cached values for the module, that have not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the requested module.

Returns :

`true` if the module can be reached, and `false` otherwise

Checks if the module is currently reachable, without raising any error.

If there are valid cached values for the module, that have not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the requested module.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving module object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

module.load()

Preloads the module cache with a specified validity duration.

```
function load( ByVal msValidity As Integer) As YRETCODE
```

By default, whenever accessing a device, all module attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

- msValidity** an integer corresponding to the validity attributed to the loaded module parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the module cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all module attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded module parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving module object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

module.nextModule()

Continues the module enumeration started using `yFirstModule()`.

```
function nextModule( ) As YModule
```

Returns :

a pointer to a `YModule` object, corresponding to the next module found, or a `null` pointer if there are no more modules to enumerate.

module.reboot()

Schedules a simple module reboot after the given number of seconds.

function **reboot**(ByVal **secBeforeReboot** As Integer) As Integer

Parameters :

secBeforeReboot number of seconds before rebooting

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.revertFromFlash()

Reloads the settings stored in the nonvolatile memory, as when the module is powered on.

function **revertFromFlash**() As Integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.saveToFlash()

Saves current settings in the nonvolatile memory of the module.

function **saveToFlash**() As Integer

Warning: the number of allowed save operations during a module life is limited (about 100000 cycles). Do not call this function within a loop.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.set_beacon()

Turns on or off the module localization beacon.

function **set_beacon**(ByVal **newval** As Integer) As Integer

Parameters :

newval either Y_BEACON_OFF or Y_BEACON_ON

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.set_logicalName()

Changes the logical name of the module.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.set_luminosity()

Changes the luminosity of the module informative leds.

function **set_luminosity**(ByVal **newval** As Integer) As Integer

The parameter is a value between 0 and 100. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval an integer corresponding to the luminosity of the module informative leds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.set_usbBandwidth()

Changes the number of USB interfaces used by the module.

function **set_usbBandwidth**(ByVal **newval** As Integer) As Integer

Parameters :

newval either Y_USBBANDWIDTH_SIMPLE or Y_USBBANDWIDTH_DOUBLE, according to the number of USB interfaces used by the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

module.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

module.triggerFirmwareUpdate()

Schedules a module reboot into special firmware update mode.

function **triggerFirmwareUpdate**(ByVal **secBeforeReboot** As Integer) As Integer

Parameters :

secBeforeReboot number of seconds before rebooting

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

3.15. Network function interface

YNetwork objects provide access to TCP/IP parameters of Yoctopuce modules that include a built-in network interface.

In order to use the functions described here, you should include:

[yocto_network.vb](#)

Global functions

yFindNetwork(func)

Retrieves a network interface for a given identifier.

yFirstNetwork()

Starts the enumeration of network interfaces currently accessible.

YNetwork methods

network→callbackLogin(username, password)

Connects to the notification callback and saves the credentials required to log in to it.

network→describe()

Returns a descriptive text that identifies the function.

network→get_adminPassword()

Returns a hash string if a password has been set for user "admin", or an empty string otherwise.

network→get_advertisedValue()

Returns the current value of the network interface (no more than 6 characters).

network→get_callbackCredentials()

Returns a hashed version of the notification callback credentials if set, or an empty string otherwise.

network→get_callbackMaxDelay()

Returns the maximum wait time between two callback notifications, in seconds.

network→get_callbackMinDelay()

Returns the minimum wait time between two callback notifications, in seconds.

network→get_callbackUrl()

Returns the callback URL to notify of significant state changes.

network→get_errorMessage()

Returns the error message of the latest error with this function.

network→get_errorType()

Returns the numerical error code of the latest error with this function.

network→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

network→get_hardwareId()

Returns the unique hardware identifier of the function.

network→get_ipAddress()

Returns the IP address currently in use by the device.

network→get_logicalName()

Returns the logical name of the network interface, corresponding to the network name of the module.

network→get_macAddress()

Returns the MAC address of the network interface.

network→get_module()

Get the `YModule` object for the device on which the function is located.

network→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

network→get_primaryDNS()

Returns the IP address of the primary name server to be used by the module.

network→get_readiness()

Returns the current established working mode of the network interface.

network→get_router()

Returns the IP address of the router on the device subnet (default gateway).

network→get_secondaryDNS()

Returns the IP address of the secondary name server to be used by the module.

network→get_subnetMask()

Returns the subnet mask currently used by the device.

network→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

network→get_userPassword()

Returns a hash string if a password has been set for user "user", or an empty string otherwise.

network→isOnline()

Checks if the function is currently reachable, without raising any error.

network→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

network→load(msValidity)

Preloads the function cache with a specified validity duration.

network→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

network→nextNetwork()

Continues the enumeration of network interfaces started using `yFirstNetwork()`.

network→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

network→set_adminPassword(newval)

Changes the password for the "admin" user.

network→set_callbackCredentials(newval)

Changes the credentials required to connect to the callback address.

network→set_callbackMaxDelay(newval)

Changes the maximum wait time between two callback notifications, in seconds.

network→set_callbackMinDelay(newval)

Changes the minimum wait time between two callback notifications, in seconds.

network→set_callbackUrl(newval)

Changes the callback URL to notify of significant state changes.

network→set_logicalName(newval)

Changes the logical name of the network interface, corresponding to the network name of the module.

network→set_primaryDNS(newval)

Changes the IP address of the primary name server to be used by the module.

network→**set_secondaryDNS**(**newval**)

Changes the IP address of the secondary name server to be used by the module.

network→**set_userData**(**data**)

Stores a user context provided as argument in the `userData` attribute of the function.

network→**set_userPassword**(**newval**)

Changes the password for the "user" user.

network→**useDHCP**(**fallbackIpAddr**, **fallbackSubnetMaskLen**, **fallbackRouter**)

Changes the configuration of the network interface to enable the use of an IP address received from a DHCP server.

network→**useStaticIP**(**ipAddress**, **subnetMaskLen**, **router**)

Changes the configuration of the network interface to use a static IP address.

yFindNetwork()

Retrieves a network interface for a given identifier.

```
function yFindNetwork( ByVal func As String ) As YNetwork
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the network interface is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YNetwork.IsOnline()` to test if the network interface is indeed online at a given time. In case of ambiguity when looking for a network interface by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the network interface

Returns :

a `YNetwork` object allowing you to drive the network interface.

yFirstNetwork()

Starts the enumeration of network interfaces currently accessible.

```
function yFirstNetwork( ) As YNetwork
```

Use the method `YNetwork.NextNetwork()` to iterate on next network interfaces.

Returns :

a pointer to a `YNetwork` object, corresponding to the first network interface currently online, or a `null` pointer if there are none.

network.callbackLogin()

Connects to the notification callback and saves the credentials required to log in to it.

```
function callbackLogin( ByVal username As String,  
                        ByVal password As String ) As Integer
```

The password will not be stored into the module, only a hashed copy of the credentials will be saved. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

username username required to log to the callback

password password required to log to the callback

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.describe()

Returns a descriptive text that identifies the function.

function **describe()** As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

network.get_adminPassword()

Returns a hash string if a password has been set for user "admin", or an empty string otherwise.

function **get_adminPassword()** As String

Returns :

a string corresponding to a hash string if a password has been set for user "admin", or an empty string otherwise

On failure, throws an exception or returns `Y_ADMINPASSWORD_INVALID`.

network.get_advertisedValue()

Returns the current value of the network interface (no more than 6 characters).

function **get_advertisedValue()** As String

Returns :

a string corresponding to the current value of the network interface (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

network.get_callbackCredentials()

Returns a hashed version of the notification callback credentials if set, or an empty string otherwise.

function **get_callbackCredentials()** As String

Returns :

a string corresponding to a hashed version of the notification callback credentials if set, or an empty string otherwise

On failure, throws an exception or returns `Y_CALLBACKCREDENTIALS_INVALID`.

network.get_callbackMaxDelay()

Returns the maximum wait time between two callback notifications, in seconds.

function **get_callbackMaxDelay**() As Integer

Returns :

an integer corresponding to the maximum wait time between two callback notifications, in seconds

On failure, throws an exception or returns Y_CALLBACKMAXDELAY_INVALID.

network.get_callbackMinDelay()

Returns the minimum wait time between two callback notifications, in seconds.

function **get_callbackMinDelay**() As Integer

Returns :

an integer corresponding to the minimum wait time between two callback notifications, in seconds

On failure, throws an exception or returns Y_CALLBACKMINDELAY_INVALID.

network.get_callbackUrl()

Returns the callback URL to notify of significant state changes.

function **get_callbackUrl**() As String

Returns :

a string corresponding to the callback URL to notify of significant state changes

On failure, throws an exception or returns Y_CALLBACKURL_INVALID.

network.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

network.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

network.get_networkDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

network.get_hardwareId()

Returns the unique hardware identifier of the function.

function `get_hardwareId()` As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

network.get_ipAddress()

Returns the IP address currently in use by the device.

function `get_ipAddress()` As String

The address may have been configured statically, or provided by a DHCP server.

Returns :

a string corresponding to the IP address currently in use by the device

On failure, throws an exception or returns `Y_IPADDRESS_INVALID`.

network.get_logicalName()

Returns the logical name of the network interface, corresponding to the network name of the module.

function `get_logicalName()` As String

Returns :

a string corresponding to the logical name of the network interface, corresponding to the network name of the module

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

network.get_macAddress()

Returns the MAC address of the network interface.

function `get_macAddress()` As String

The MAC address is also available on a sticker on the module, in both numeric and barcode forms.

Returns :

a string corresponding to the MAC address of the network interface

On failure, throws an exception or returns `Y_MACADDRESS_INVALID`.

network.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network.get_primaryDNS()

Returns the IP address of the primary name server to be used by the module.

function **get_primaryDNS**() As String

Returns :

a string corresponding to the IP address of the primary name server to be used by the module

On failure, throws an exception or returns Y_PRIMARYDNS_INVALID.

network.get_readiness()

Returns the current established working mode of the network interface.

function **get_readiness**() As Integer

Level zero (DOWN_0) means that no hardware link has been detected. Either there is no signal on the network cable, or the selected wireless access point cannot be detected. Level 1 (LIVE_1) is reached when the network is detected, but is not yet connected, For a wireless network, this shows that the requested SSID is present. Level 2 (LINK_2) is reached when the hardware connection is established. For a wired network connection, level 2 means that the cable is attached on both ends. For a connection to a wireless access point, it shows that the security parameters are properly configured. For an ad-hoc wireless connection, it means that there is at least one other device connected on the ad-hoc network. Level 3 (DHCP_3) is reached when an IP address has been obtained using DHCP. Level 4 (DNS_4) is reached when the DNS server is reachable on the network. Level 5 (WWW_5) is reached when global connectivity is demonstrated by properly loading current time from an NTP server.

Returns :

a value among Y_READINESS_DOWN, Y_READINESS_EXISTS, Y_READINESS_LINKED, Y_READINESS_LINK_OK and Y_READINESS_WWW_OK corresponding to the current established working mode of the network interface

On failure, throws an exception or returns Y_READINESS_INVALID.

network.get_router()

Returns the IP address of the router on the device subnet (default gateway).

function **get_router**() As String

Returns :

a string corresponding to the IP address of the router on the device subnet (default gateway)

On failure, throws an exception or returns `Y_ROUTER_INVALID`.

network.get_secondaryDNS()

Returns the IP address of the secondary name server to be used by the module.

function **get_secondaryDNS**() As String

Returns :

a string corresponding to the IP address of the secondary name server to be used by the module

On failure, throws an exception or returns `Y_SECONDARYDNS_INVALID`.

network.get_subnetMask()

Returns the subnet mask currently used by the device.

function **get_subnetMask**() As String

Returns :

a string corresponding to the subnet mask currently used by the device

On failure, throws an exception or returns `Y_SUBNETMASK_INVALID`.

network.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

network.get_userPassword()

Returns a hash string if a password has been set for user "user", or an empty string otherwise.

function **get_userPassword**() As String

Returns :

a string corresponding to a hash string if a password has been set for user "user", or an empty string otherwise

On failure, throws an exception or returns `Y_USERPASSWORD_INVALID`.

network.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

network.nextNetwork()

Continues the enumeration of network interfaces started using `yFirstNetwork()`.

function **nextNetwork**() As YNetwork

Returns :

a pointer to a `YNetwork` object, corresponding to a network interface currently online, or a null pointer if there are no more network interfaces to enumerate.

network.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

network.set_adminPassword()

Changes the password for the "admin" user.

function **set_adminPassword**(ByVal **newval** As String) As Integer

This password becomes instantly required to perform any change of the module state. If the specified value is an empty string, a password is not required anymore. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the password for the "admin" user

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_callbackCredentials()

Changes the credentials required to connect to the callback address.

function **set_callbackCredentials**(ByVal **newval** As String) As Integer

The credentials must be provided as returned by function `get_callbackCredentials`, in the form `username:hash`. The method used to compute the hash varies according to the authentication scheme implemented by the callback. For Basic authentication, the hash is the MD5 of the string `username:password`. For Digest authentication, the hash is the MD5 of

the string `username:realm:password`. For a simpler way to configure callback credentials, use function `callbackLogin` instead. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the credentials required to connect to the callback address

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_callbackMaxDelay()

Changes the maximum wait time between two callback notifications, in seconds.

```
function set_callbackMaxDelay( ByVal newval As Integer) As Integer
```

Parameters :

newval an integer corresponding to the maximum wait time between two callback notifications, in seconds

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_callbackMinDelay()

Changes the minimum wait time between two callback notifications, in seconds.

```
function set_callbackMinDelay( ByVal newval As Integer) As Integer
```

Parameters :

newval an integer corresponding to the minimum wait time between two callback notifications, in seconds

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_callbackUrl()

Changes the callback URL to notify of significant state changes.

```
function set_callbackUrl( ByVal newval As String) As Integer
```

Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the callback URL to notify of significant state changes

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_logicalName()

Changes the logical name of the network interface, corresponding to the network name of the module.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the network interface, corresponding to the network name of the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_primaryDNS()

Changes the IP address of the primary name server to be used by the module.

```
function set_primaryDNS( ByVal newval As String) As Integer
```

When using DHCP, if a value is specified, it will override the value received from the DHCP server. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

newval a string corresponding to the IP address of the primary name server to be used by the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_secondaryDNS()

Changes the IP address of the secondary name server to be used by the module.

```
function set_secondaryDNS( ByVal newval As String) As Integer
```

When using DHCP, if a value is specified, it will override the value received from the DHCP server. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

newval a string corresponding to the IP address of the secondary name server to be used by the module

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

network.setUserPassword()

Changes the password for the "user" user.

```
function setUserPassword( ByVal newval As String ) As Integer
```

This password becomes instantly required to perform any use of the module. If the specified value is an empty string, a password is not required anymore. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the password for the "user" user

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.useDHCP()

Changes the configuration of the network interface to enable the use of an IP address received from a DHCP server.

```
function useDHCP( ByVal fallbackIpAddr As String,  
                 ByVal fallbackSubnetMaskLen As Integer,  
                 ByVal fallbackRouter As String ) As Integer
```

Until an address is received from a DHCP server, the module will use the IP parameters specified to this function. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

fallbackIpAddr fallback IP address, to be used when no DHCP reply is received

fallbackSubnetMaskLen fallback subnet mask length when no DHCP reply is received, as an integer (eg. 24 means 255.255.255.0)

fallbackRouter fallback router IP address, to be used when no DHCP reply is received

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

network.useStaticIP()

Changes the configuration of the network interface to use a static IP address.

```
function useStaticIP( ByVal ipAddress As String,  
                    ByVal subnetMaskLen As Integer,  
                    ByVal router As String ) As Integer
```

Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ipAddress device IP address

subnetMaskLen subnet mask length, as an integer (eg. 24 means 255.255.255.0)

router router IP address (default gateway)

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

3.16. Pressure function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_pressure.vb](#)

Global functions

yFindPressure(func)

Retrieves a pressure sensor for a given identifier.

yFirstPressure()

Starts the enumeration of pressure sensors currently accessible.

YPressure methods

pressure→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

pressure→describe()

Returns a descriptive text that identifies the function.

pressure→get_advertisedValue()

Returns the current value of the pressure sensor (no more than 6 characters).

pressure→get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

pressure→get_currentValue()

Returns the current measured value.

pressure→get_errorMessage()

Returns the error message of the latest error with this function.

pressure→get_errorType()

Returns the numerical error code of the latest error with this function.

pressure→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

pressure→get_hardwareId()

Returns the unique hardware identifier of the function.

pressure→get_highestValue()

Returns the maximal value observed.

pressure→get_logicalName()

Returns the logical name of the pressure sensor.

pressure→get_lowestValue()

Returns the minimal value observed.

pressure→get_module()

Get the YModule object for the device on which the function is located.

pressure→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

pressure→get_resolution()

Returns the resolution of the measured values.

pressure→get_unit()
Returns the measuring unit for the measured value.
pressure→get_userData()
Returns the value of the userData attribute, as previously stored using method <code>set_userData</code> .
pressure→isOnline()
Checks if the function is currently reachable, without raising any error.
pressure→isOnline_async(callback, context)
Checks if the function is currently reachable, without raising any error (asynchronous version).
pressure→load(msValidity)
Preloads the function cache with a specified validity duration.
pressure→load_async(msValidity, callback, context)
Preloads the function cache with a specified validity duration (asynchronous version).
pressure→nextPressure()
Continues the enumeration of pressure sensors started using <code>yFirstPressure()</code> .
pressure→registerValueCallback(callback)
Registers the callback function that is invoked on every change of advertised value.
pressure→set_highestValue(newval)
Changes the recorded maximal value observed.
pressure→set_logicalName(newval)
Changes the logical name of the pressure sensor.
pressure→set_lowestValue(newval)
Changes the recorded minimal value observed.
pressure→set_userData(data)
Stores a user context provided as argument in the userData attribute of the function.

yFindPressure()

Retrieves a pressure sensor for a given identifier.

```
function yFindPressure( ByVal func As String) As YPressure
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the pressure sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YPressure.isOnline()` to test if the pressure sensor is indeed online at a given time. In case of ambiguity when looking for a pressure sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the pressure sensor

Returns :

a `YPressure` object allowing you to drive the pressure sensor.

yFirstPressure()

Starts the enumeration of pressure sensors currently accessible.

```
function yFirstPressure( ) As YPressure
```

Use the method `YPressure.nextPressure()` to iterate on next pressure sensors.

Returns :

a pointer to a `YPressure` object, corresponding to the first pressure sensor currently online, or a `null` pointer if there are none.

pressure.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
procedure calibrateFromPoints( ByVal rawValues As double)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a lineat interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure.describe()

Returns a descriptive text that identifies the function.

```
function describe( ) As String
```

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

pressure.get_advertisedValue()

Returns the current value of the pressure sensor (no more than 6 characters).

```
function get_advertisedValue( ) As String
```

Returns :

a string corresponding to the current value of the pressure sensor (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

pressure.get_currentRawValue()

Returns the unrounded and uncalibrated raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :

a floating point number corresponding to the unrounded and uncalibrated raw value returned by the sensor

On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

pressure.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

pressure.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

pressure.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

pressure.get_pressureDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

pressure.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns Y_HARDWAREID_INVALID.

pressure.get_highestValue()

Returns the maximal value observed.

function **get_highestValue**() As Double

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns Y_HIGHESTVALUE_INVALID.

pressure.get_logicalName()

Returns the logical name of the pressure sensor.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the pressure sensor

On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

pressure.get_lowestValue()

Returns the minimal value observed.

function **get_lowestValue**() As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns Y_LOWESTVALUE_INVALID.

pressure.get_module()

Get the YModule object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context

switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure.get_resolution()

Returns the resolution of the measured values.

function **get_resolution**() As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

pressure.get_unit()

Returns the measuring unit for the measured value.

function **get_unit**() As String

Returns :

a string corresponding to the measuring unit for the measured value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

pressure.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **getUserData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

pressure.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure.load()

Preloads the function cache with a specified validity duration.

```
function load( ByVal msValidity As Integer) As YRETCODE
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

pressure.nextPressure()

Continues the enumeration of pressure sensors started using `yFirstPressure()`.

function **nextPressure**() As YPressure

Returns :

a pointer to a YPressure object, corresponding to a pressure sensor currently online, or a null pointer if there are no more pressure sensors to enumerate.

pressure.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of ySleep or yHandleEvents. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

pressure.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure.set_logicalName()

Changes the logical name of the pressure sensor.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use yCheckLogicalName() prior to this call to make sure that your parameter is valid. Remember to call the saveToFlash() method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the pressure sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure.set_lowestValue()

Changes the recorded minimal value observed.

function **set_lowestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

pressure.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.17. Relay function interface

The Yoctopuce application programming interface allows you to switch the relay state. This change is not persistent: the relay will automatically return to its idle position whenever power is lost or if the module is restarted. The library can also generate automatically short pulses of determined duration. On devices with two output for each relay (double throw), the two outputs are named A and B, with output A corresponding to the idle position (at power off) and the output B corresponding to the active state. If you prefer the alternate default state, simply switch your cables on the board.

In order to use the functions described here, you should include:

[yocto_relay.vb](#)

Global functions

yFindRelay(func)

Retrieves a relay for a given identifier.

yFirstRelay()

Starts the enumeration of relays currently accessible.

YRelay methods

relay→describe()

Returns a descriptive text that identifies the function.

relay→get_advertisedValue()

Returns the current value of the relay (no more than 6 characters).

relay→get_errorMessage()

Returns the error message of the latest error with this function.

relay→get_errorType()

Returns the numerical error code of the latest error with this function.

relay→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

relay→get_hardwareId()

Returns the unique hardware identifier of the function.

relay→get_logicalName()

Returns the logical name of the relay.

relay→get_module()

Get the YModule object for the device on which the function is located.

relay→get_module_async(callback, context)	Get the YModule object for the device on which the function is located (asynchronous version).
relay→get_output()	Returns the output state of the relay, when used as a simple switch (single throw).
relay→get_pulseTimer()	Returns the number of milliseconds remaining before the relay is returned to idle position (state A), during a measured pulse generation.
relay→get_state()	Returns the state of the relay (A for the idle position, B for the active position).
relay→get_userData()	Returns the value of the userData attribute, as previously stored using method set_userData.
relay→isOnline()	Checks if the function is currently reachable, without raising any error.
relay→isOnline_async(callback, context)	Checks if the function is currently reachable, without raising any error (asynchronous version).
relay→load(msValidity)	Preloads the function cache with a specified validity duration.
relay→load_async(msValidity, callback, context)	Preloads the function cache with a specified validity duration (asynchronous version).
relay→nextRelay()	Continues the enumeration of relays started using yFirstRelay().
relay→pulse(ms_duration)	Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).
relay→registerValueCallback(callback)	Registers the callback function that is invoked on every change of advertised value.
relay→set_logicalName(newval)	Changes the logical name of the relay.
relay→set_output(newval)	Changes the output state of the relay, when used as a simple switch (single throw).
relay→set_state(newval)	Changes the state of the relay (A for the idle position, B for the active position).
relay→set_userData(data)	Stores a user context provided as argument in the userData attribute of the function.

yFindRelay()

Retrieves a relay for a given identifier.

function **yFindRelay**(ByVal **func** As String) As YRelay

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier

- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the relay is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YRelay.isOnline()` to test if the relay is indeed online at a given time. In case of ambiguity when looking for a relay by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the relay

Returns :

a `YRelay` object allowing you to drive the relay.

yFirstRelay()

Starts the enumeration of relays currently accessible.

function **yFirstRelay**() As `YRelay`

Use the method `YRelay.nextRelay()` to iterate on next relays.

Returns :

a pointer to a `YRelay` object, corresponding to the first relay currently online, or a `null` pointer if there are none.

relay.describe()

Returns a descriptive text that identifies the function.

function **describe**() As `String`

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

relay.get_advertisedValue()

Returns the current value of the relay (no more than 6 characters).

function **get_advertisedValue**() As `String`

Returns :

a string corresponding to the current value of the relay (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

relay.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As `String`

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

relay.getErrorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

relay.get_relayDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

relay.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function. On failure, throws an exception or returns Y_HARDWAREID_INVALID.

relay.get_logicalName()

Returns the logical name of the relay.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the relay

On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

relay.get_module()

Get the YModule object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

relay.get_output()

Returns the output state of the relay, when used as a simple switch (single throw).

function **get_output**() As Integer

Returns :

either `Y_OUTPUT_OFF` or `Y_OUTPUT_ON`, according to the output state of the relay, when used as a simple switch (single throw)

On failure, throws an exception or returns `Y_OUTPUT_INVALID`.

relay.get_pulseTimer()

Returns the number of milliseconds remaining before the relay is returned to idle position (state A), during a measured pulse generation.

function **get_pulseTimer**() As Long

When there is no ongoing pulse, returns zero.

Returns :

an integer corresponding to the number of milliseconds remaining before the relay is returned to idle position (state A), during a measured pulse generation

On failure, throws an exception or returns `Y_PULSETIMER_INVALID`.

relay.get_state()

Returns the state of the relay (A for the idle position, B for the active position).

function **get_state**() As Integer

Returns :

either `Y_STATE_A` or `Y_STATE_B`, according to the state of the relay (A for the idle position, B for the active position)

On failure, throws an exception or returns `Y_STATE_INVALID`.

relay.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :
the object stored previously by the caller.

relay.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :
`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :
callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
context caller-specific object that is passed as-is to the callback function

Returns :
nothing : the result is provided to the callback.

relay.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :
msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :
`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox

javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

relay.nextRelay()

Continues the enumeration of relays started using `yFirstRelay()`.

function **nextRelay**() As YRelay

Returns :

a pointer to a `YRelay` object, corresponding to a relay currently online, or a `null` pointer if there are no more relays to enumerate.

relay.pulse()

Sets the relay to output B (active) for a specified duration, then brings it automatically back to output A (idle state).

function **pulse**(ByVal **ms_duration** As Integer) As Integer

Parameters :

ms_duration pulse duration, in milliseconds

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

relay.set_logicalName()

Changes the logical name of the relay.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the relay

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay.set_output()

Changes the output state of the relay, when used as a simple switch (single throw).

function **set_output**(ByVal **newval** As Integer) As Integer

Parameters :

newval either `Y_OUTPUT_OFF` or `Y_OUTPUT_ON`, according to the output state of the relay, when used as a simple switch (single throw)

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay.set_state()

Changes the state of the relay (A for the idle position, B for the active position).

function **set_state**(ByVal **newval** As Integer) As Integer

Parameters :

newval either `Y_STATE_A` or `Y_STATE_B`, according to the state of the relay (A for the idle position, B for the active position)

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

relay.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.18. Servo function interface

Yoctopuce application programming interface allows you not only to move a servo to a given position, but also to specify the time interval in which the move should be performed. This makes it possible to synchronize two servos involved in a same move.

In order to use the functions described here, you should include:

[yocto_servo.vb](#)

Global functions

yFindServo(func)

Retrieves a servo for a given identifier.

yFirstServo()

Starts the enumeration of servos currently accessible.

YServo methods

servo→describe()

Returns a descriptive text that identifies the function.

servo→get_advertisedValue()

Returns the current value of the servo (no more than 6 characters).

servo→get_errorMessage()

Returns the error message of the latest error with this function.

servo→get_errorType()

Returns the numerical error code of the latest error with this function.

servo→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

servo→get_hardwareId()

Returns the unique hardware identifier of the function.

servo→get_logicalName()

Returns the logical name of the servo.

servo→get_module()

Get the YModule object for the device on which the function is located.

servo→get_module_async(callback, context)

Get the YModule object for the device on which the function is located (asynchronous version).

servo→get_neutral()

Returns the duration in microseconds of a neutral pulse for the servo.

servo→get_position()

Returns the current servo position.

servo→get_range()

Returns the current range of use of the servo.

servo→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

servo→isOnline()

Checks if the function is currently reachable, without raising any error.

servo→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

servo→load(msValidity)

Preloads the function cache with a specified validity duration.

servo→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

servo→move(target, ms_duration)

Performs a smooth move at constant speed toward a given position.

servo→nextServo()

Continues the enumeration of servos started using `yFirstServo()`.

`servo→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

`servo→set_logicalName(newval)`

Changes the logical name of the servo.

`servo→set_neutral(newval)`

Changes the duration of the pulse corresponding to the neutral position of the servo.

`servo→set_position(newval)`

Changes immediately the servo driving position.

`servo→set_range(newval)`

Changes the range of use of the servo, specified in per cents.

`servo→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

yFindServo()

Retrieves a servo for a given identifier.

```
function yFindServo( ByVal func As String ) As YServo
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the servo is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YServo.isOnline()` to test if the servo is indeed online at a given time. In case of ambiguity when looking for a servo by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the servo

Returns :

a `YServo` object allowing you to drive the servo.

yFirstServo()

Starts the enumeration of servos currently accessible.

```
function yFirstServo( ) As YServo
```

Use the method `YServo.nextServo()` to iterate on next servos.

Returns :

a pointer to a `YServo` object, corresponding to the first servo currently online, or a `null` pointer if there are none.

servo.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :
a string that describes the function

servo.get_advertisedValue()

Returns the current value of the servo (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :
a string corresponding to the current value of the servo (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

servo.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a string corresponding to the latest error message that occurred while using this function object

servo.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a number corresponding to the code of the latest error that occurred while using this function object

servo.get_servoDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :
an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

servo.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

servo.get_logicalName()

Returns the logical name of the servo.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the servo

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

servo.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo.get_neutral()

Returns the duration in microseconds of a neutral pulse for the servo.

function **get_neutral**() As Integer

Returns :

an integer corresponding to the duration in microseconds of a neutral pulse for the servo

On failure, throws an exception or returns `Y_NEUTRAL_INVALID`.

servo.get_position()

Returns the current servo position.

function **get_position**() As Integer

Returns :

an integer corresponding to the current servo position

On failure, throws an exception or returns `Y_POSITION_INVALID`.

servo.get_range()

Returns the current range of use of the servo.

function **get_range**() As Integer

Returns :

an integer corresponding to the current range of use of the servo

On failure, throws an exception or returns `Y_RANGE_INVALID`.

servo.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **get_userdata**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

servo.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo.load()

Preloads the function cache with a specified validity duration.

```
function load( ByVal msValidity As Integer) As YRETCODE
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

servo.move()

Performs a smooth move at constant speed toward a given position.

```
function move( ByVal target As Integer,  
              ByVal ms_duration As Integer) As Integer
```

Parameters :

target new position at the end of the move

ms_duration total duration of the move, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo.nextServo()

Continues the enumeration of servos started using `yFirstServo()`.

```
function nextServo( ) As YServo
```

Returns :

a pointer to a `YServo` object, corresponding to a servo currently online, or a `null` pointer if there are no more servos to enumerate.

servo.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

servo.set_logicalName()

Changes the logical name of the servo.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the servo

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo.set_neutral()

Changes the duration of the pulse corresponding to the neutral position of the servo.

function **set_neutral**(ByVal **newval** As Integer) As Integer

The duration is specified in microseconds, and the standard value is 1500 [us]. This setting makes it possible to shift the range of use of the servo. Be aware that using a range higher than what is supported by the servo is likely to damage the servo.

Parameters :

newval an integer corresponding to the duration of the pulse corresponding to the neutral position of the servo

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo.set_position()

Changes immediately the servo driving position.

function **set_position**(ByVal **newval** As Integer) As Integer

Parameters :

newval an integer corresponding to immediately the servo driving position

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo.set_range()

Changes the range of use of the servo, specified in per cents.

function **set_range**(ByVal **newval** As Integer) As Integer

A range of 100% corresponds to a standard control signal, that varies from 1 [ms] to 2 [ms], When using a servo that supports a double range, from 0.5 [ms] to 2.5 [ms], you can select a range of 200%. Be aware that using a range higher than what is supported by the servo is likely to damage the servo.

Parameters :

newval an integer corresponding to the range of use of the servo, specified in per cents

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

servo.set_userData()

Stores a user context provided as argument in the userData attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.19. Temperature function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

[yocto_temperature.vb](#)

Global functions
yFindTemperature(func) Retrieves a temperature sensor for a given identifier.
yFirstTemperature() Starts the enumeration of temperature sensors currently accessible.
YTemperature methods
temperature→calibrateFromPoints(rawValues, refValues) Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.
temperature→describe() Returns a descriptive text that identifies the function.
temperature→get_advertisedValue()

Returns the current value of the temperature sensor (no more than 6 characters).
temperature→get_currentRawValue() Returns the uncalibrated, unrounded raw value returned by the sensor.
temperature→get_currentValue() Returns the current measured value.
temperature→get_errorMessage() Returns the error message of the latest error with this function.
temperature→get_errorType() Returns the numerical error code of the latest error with this function.
temperature→get_functionDescriptor() Returns a unique identifier of type <code>YFUN_DESCR</code> corresponding to the function.
temperature→get_hardwareId() Returns the unique hardware identifier of the function.
temperature→get_highestValue() Returns the maximal value observed.
temperature→get_logicalName() Returns the logical name of the temperature sensor.
temperature→get_lowestValue() Returns the minimal value observed.
temperature→get_module() Get the <code>YModule</code> object for the device on which the function is located.
temperature→get_module_async(callback, context) Get the <code>YModule</code> object for the device on which the function is located (asynchronous version).
temperature→get_resolution() Returns the resolution of the measured values.
temperature→get_sensorType() Returns the temperature sensor type.
temperature→get_unit() Returns the measuring unit for the measured value.
temperature→get_userData() Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
temperature→isOnline() Checks if the function is currently reachable, without raising any error.
temperature→isOnline_async(callback, context) Checks if the function is currently reachable, without raising any error (asynchronous version).
temperature→load(msValidity) Preloads the function cache with a specified validity duration.
temperature→load_async(msValidity, callback, context) Preloads the function cache with a specified validity duration (asynchronous version).
temperature→nextTemperature() Continues the enumeration of temperature sensors started using <code>yFirstTemperature()</code> .
temperature→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

temperature→**set_highestValue**(**newval**)

Changes the recorded maximal value observed.

temperature→**set_logicalName**(**newval**)

Changes the logical name of the temperature sensor.

temperature→**set_lowestValue**(**newval**)

Changes the recorded minimal value observed.

temperature→**set_sensorType**(**newval**)

Modify the temperature sensor type.

temperature→**set_userData**(**data**)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindTemperature()

Retrieves a temperature sensor for a given identifier.

```
function yFindTemperature( ByVal func As String) As YTemperature
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the temperature sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YTemperature.IsOnline()` to test if the temperature sensor is indeed online at a given time. In case of ambiguity when looking for a temperature sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the temperature sensor

Returns :

a `YTemperature` object allowing you to drive the temperature sensor.

yFirstTemperature()

Starts the enumeration of temperature sensors currently accessible.

```
function yFirstTemperature( ) As YTemperature
```

Use the method `YTemperature.NextTemperature()` to iterate on next temperature sensors.

Returns :

a pointer to a `YTemperature` object, corresponding to the first temperature sensor currently online, or a `null` pointer if there are none.

temperature.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
procedure calibrateFromPoints( ByVal rawValues As double)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

temperature.get_advertisedValue()

Returns the current value of the temperature sensor (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the temperature sensor (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

temperature.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns `Y_CURRENTRAWVALUE_INVALID`.

temperature.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns `Y_CURRENTVALUE_INVALID`.

temperature.get_errorMessage()

Returns the error message of the latest error with this function.

```
function get_errorMessage( ) As String
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

temperature.get_errorType()

Returns the numerical error code of the latest error with this function.

```
function get_errorType( ) As YRETCODE
```

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

temperature.get_temperatureDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

```
function get_functionDescriptor( ) As YFUN_DESCR
```

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

temperature.get_hardwareId()

Returns the unique hardware identifier of the function.

```
function get_hardwareId( ) As String
```

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function. On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

temperature.get_highestValue()

Returns the maximal value observed.

```
function get_highestValue( ) As Double
```

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns `Y_HIGHESTVALUE_INVALID`.

temperature.get_logicalName()

Returns the logical name of the temperature sensor.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the temperature sensor

On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

temperature.get_lowestValue()

Returns the minimal value observed.

function **get_lowestValue**() As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns Y_LOWESTVALUE_INVALID.

temperature.get_module()

Get the YModule object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of YModule is not shown as on-line.

Returns :

an instance of YModule

Get the YModule object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned YModule object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested YModule object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature.get_resolution()

Returns the resolution of the measured values.

function **get_resolution**() As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

temperature.get_sensorType()

Returns the temperature sensor type.

function **get_sensorType**() As Integer

Returns :

a value among `Y_SENSORTYPE_DIGITAL`, `Y_SENSORTYPE_TYPE_K`, `Y_SENSORTYPE_TYPE_E`, `Y_SENSORTYPE_TYPE_J`, `Y_SENSORTYPE_TYPE_N`, `Y_SENSORTYPE_TYPE_R`, `Y_SENSORTYPE_TYPE_S` and `Y_SENSORTYPE_TYPE_T` corresponding to the temperature sensor type

On failure, throws an exception or returns `Y_SENSORTYPE_INVALID`.

temperature.get_unit()

Returns the measuring unit for the measured value.

function **get_unit**() As String

Returns :

a string corresponding to the measuring unit for the measured value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

temperature.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **getUserData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

temperature.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature.load()

Preloads the function cache with a specified validity duration.

```
function load( ByVal msValidity As Integer) As YRETCODE
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

- msValidity** an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

temperature.nextTemperature()

Continues the enumeration of temperature sensors started using `yFirstTemperature()`.

```
function nextTemperature( ) As YTemperature
```

Returns :

a pointer to a `YTemperature` object, corresponding to a temperature sensor currently online, or a `null` pointer if there are no more temperature sensors to enumerate.

temperature.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

temperature.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature.set_logicalName()

Changes the logical name of the temperature sensor.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the temperature sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature.set_lowestValue()

Changes the recorded minimal value observed.

function **set_lowestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature.set_sensorType()

Modify the temperature sensor type.

```
function set_sensorType( ByVal newval As Integer) As Integer
```

This function is used to to define the type of thermo couple (K,E...) used with the device. This will have no effect if module is using a digital sensor. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

```
newval a value among Y_SENSORTYPE_DIGITAL, Y_SENSORTYPE_TYPE_K,  
Y_SENSORTYPE_TYPE_E, Y_SENSORTYPE_TYPE_J,  
Y_SENSORTYPE_TYPE_N, Y_SENSORTYPE_TYPE_R,  
Y_SENSORTYPE_TYPE_S and Y_SENSORTYPE_TYPE_T
```

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

temperature.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.20. Voltage function interface

The Yoctopuce application programming interface allows you to read an instant measure of the sensor, as well as the minimal and maximal values observed.

In order to use the functions described here, you should include:

```
yocto_voltage.vb
```

Global functions

yFindVoltage(func)

Retrieves a voltage sensor for a given identifier.

yFirstVoltage()

Starts the enumeration of voltage sensors currently accessible.

YVoltage methods

voltage→calibrateFromPoints(rawValues, refValues)

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

voltage→describe()

Returns a descriptive text that identifies the function.

voltage→get_advertisedValue()

Returns the current value of the voltage sensor (no more than 6 characters).

voltage→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

voltage→get_currentValue()

Returns the current measured value.
voltage→get_errorMessage() Returns the error message of the latest error with this function.
voltage→get_errorType() Returns the numerical error code of the latest error with this function.
voltage→get_functionDescriptor() Returns a unique identifier of type <code>YFUN_DESCR</code> corresponding to the function.
voltage→get_hardwareId() Returns the unique hardware identifier of the function.
voltage→get_highestValue() Returns the maximal value observed.
voltage→get_logicalName() Returns the logical name of the voltage sensor.
voltage→get_lowestValue() Returns the minimal value observed.
voltage→get_module() Get the <code>YModule</code> object for the device on which the function is located.
voltage→get_module_async(callback, context) Get the <code>YModule</code> object for the device on which the function is located (asynchronous version).
voltage→get_resolution() Returns the resolution of the measured values.
voltage→get_unit() Returns the measuring unit for the measured value.
voltage→get_userData() Returns the value of the <code>userData</code> attribute, as previously stored using method <code>set_userData</code> .
voltage→isOnline() Checks if the function is currently reachable, without raising any error.
voltage→isOnline_async(callback, context) Checks if the function is currently reachable, without raising any error (asynchronous version).
voltage→load(msValidity) Preloads the function cache with a specified validity duration.
voltage→load_async(msValidity, callback, context) Preloads the function cache with a specified validity duration (asynchronous version).
voltage→nextVoltage() Continues the enumeration of voltage sensors started using <code>yFirstVoltage()</code> .
voltage→registerValueCallback(callback) Registers the callback function that is invoked on every change of advertised value.
voltage→set_highestValue(newval) Changes the recorded maximal value observed.
voltage→set_logicalName(newval) Changes the logical name of the voltage sensor.
voltage→set_lowestValue(newval)

Changes the recorded minimal value observed.

voltage→**set_userData**(**data**)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindVoltage()

Retrieves a voltage sensor for a given identifier.

```
function yFindVoltage( ByVal func As String) As YVoltage
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the voltage sensor is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YVoltage.IsOnline()` to test if the voltage sensor is indeed online at a given time. In case of ambiguity when looking for a voltage sensor by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the voltage sensor

Returns :

a `YVoltage` object allowing you to drive the voltage sensor.

yFirstVoltage()

Starts the enumeration of voltage sensors currently accessible.

```
function yFirstVoltage( ) As YVoltage
```

Use the method `YVoltage.NextVoltage()` to iterate on next voltage sensors.

Returns :

a pointer to a `YVoltage` object, corresponding to the first voltage sensor currently online, or a `null` pointer if there are none.

voltage.calibrateFromPoints()

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

```
procedure calibrateFromPoints( ByVal rawValues As double)
```

It is possible to configure up to five correction points. Correction points must be provided in ascending order, and be in the range of the sensor. The device will automatically perform a linear interpolation of the error correction between specified points. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

For more information on advanced capabilities to refine the calibration of sensors, please contact support@yoctopuce.com.

Parameters :

rawValues array of floating point numbers, corresponding to the raw values returned by the sensor for the correction points.

refValues array of floating point numbers, corresponding to the corrected values for the correction points.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

voltage.get_advertisedValue()

Returns the current value of the voltage sensor (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :

a string corresponding to the current value of the voltage sensor (no more than 6 characters)

On failure, throws an exception or returns Y_ADVERTISEDVALUE_INVALID.

voltage.get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor.

function **get_currentRawValue**() As Double

Returns :

a floating point number corresponding to the uncalibrated, unrounded raw value returned by the sensor

On failure, throws an exception or returns Y_CURRENTRAWVALUE_INVALID.

voltage.get_currentValue()

Returns the current measured value.

function **get_currentValue**() As Double

Returns :

a floating point number corresponding to the current measured value

On failure, throws an exception or returns Y_CURRENTVALUE_INVALID.

voltage.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

voltage.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

voltage.get_voltageDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of YFunction reference the same physical function on the same physical device.

Returns :

an identifier of type YFUN_DESCR. If the function has never been contacted, the returned value is Y_FUNCTIONDESCRIPTOR_INVALID.

voltage.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns Y_HARDWAREID_INVALID.

voltage.get_highestValue()

Returns the maximal value observed.

function **get_highestValue**() As Double

Returns :

a floating point number corresponding to the maximal value observed

On failure, throws an exception or returns Y_HIGHESTVALUE_INVALID.

voltage.get_logicalName()

Returns the logical name of the voltage sensor.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the voltage sensor

On failure, throws an exception or returns Y_LOGICALNAME_INVALID.

voltage.get_lowestValue()

Returns the minimal value observed.

function **get_lowestValue**() As Double

Returns :

a floating point number corresponding to the minimal value observed

On failure, throws an exception or returns `Y_LOWESTVALUE_INVALID`.

voltage.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage.get_resolution()

Returns the resolution of the measured values.

function **get_resolution**() As Double

The resolution corresponds to the numerical precision of the values, which is not always the same as the actual precision of the sensor.

Returns :

a floating point number corresponding to the resolution of the measured values

On failure, throws an exception or returns `Y_RESOLUTION_INVALID`.

voltage.get_unit()

Returns the measuring unit for the measured value.

function **get_unit**() As String

Returns :

a string corresponding to the measuring unit for the measured value

On failure, throws an exception or returns `Y_UNIT_INVALID`.

voltage.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function `getUserData()` As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

voltage.isOnline()

Checks if the function is currently reachable, without raising any error.

function `isOnline()` As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage.load()

Preloads the function cache with a specified validity duration.

function `load(ByVal msValidity As Integer) As YRETCODE`

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

`YAPI_SUCCESS` when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

voltage.nextVoltage()

Continues the enumeration of voltage sensors started using `yFirstVoltage()`.

function **nextVoltage**() As YVoltage

Returns :

a pointer to a `YVoltage` object, corresponding to a voltage sensor currently online, or a `null` pointer if there are no more voltage sensors to enumerate.

voltage.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

voltage.set_highestValue()

Changes the recorded maximal value observed.

function **set_highestValue**(ByVal **newval** As Double) As Integer

Parameters :

newval a floating point number corresponding to the recorded maximal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage.set_logicalName()

Changes the logical name of the voltage sensor.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the voltage sensor

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage.set_lowestValue()

Changes the recorded minimal value observed.

```
function set_lowestValue( ByVal newval As Double) As Integer
```

Parameters :

newval a floating point number corresponding to the recorded minimal value observed

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

voltage.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

```
procedure set_userData( ByVal data As Object)
```

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

3.21. Voltage source function interface

Yoctopuce application programming interface allows you to control the module voltage output. You affect absolute output values or make transitions

In order to use the functions described here, you should include:

[yocto_vsource.vb](#)

Global functions**yFindVSource(func)**

Retrieves a voltage source for a given identifier.

yFirstVSource()

Starts the enumeration of voltage sources currently accessible.

YVSource methods

vsource→describe()

Returns a descriptive text that identifies the function.

vsource→get_advertisedValue()

Returns the current value of the voltage source (no more than 6 characters).

vsource→get_errorMessage()

Returns the error message of the latest error with this function.

vsource→get_errorType()

Returns the numerical error code of the latest error with this function.

vsource→get_extPowerFailure()

Return true if external power supply voltage is too low.

vsource→get_failure()

Return true if the module is in failure mode.

vsource→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

vsource→get_hardwareId()

Returns the unique hardware identifier of the function.

vsource→get_logicalName()

Returns the logical name of the voltage source.

vsource→get_module()

Get the `YModule` object for the device on which the function is located.

vsource→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

vsource→get_overCurrent()

Return true if the appliance connected to the device is too greedy .

vsource→get_overHeat()

Return TRUE if the module is overheating.

vsource→get_overLoad()

Return true if the device is not able to maintain the requested voltage output .

vsource→get_regulationFailure()

Return true if the voltage output is too high regarding the requested voltage .

vsource→get_unit()

Returns the measuring unit for the voltage.

vsource→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

vsource→get_voltage()

Returns the voltage output command (mV)

vsource→isOnline()

Checks if the function is currently reachable, without raising any error.

vsource→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

vsource→load(msValidity)

	Preloads the function cache with a specified validity duration.
<code>vsource→load_async(msValidity, callback, context)</code>	Preloads the function cache with a specified validity duration (asynchronous version).
<code>vsource→nextVSource()</code>	Continues the enumeration of voltage sources started using <code>yFirstVSource()</code> .
<code>vsource→pulse(voltage, ms_duration)</code>	Sets device output to a specific voltage, for a specified duration, then brings it automatically to 0V.
<code>vsource→registerValueCallback(callback)</code>	Registers the callback function that is invoked on every change of advertised value.
<code>vsource→reset()</code>	Resets the device Output.
<code>vsource→set_logicalName(newval)</code>	Changes the logical name of the voltage source.
<code>vsource→set_userData(data)</code>	Stores a user context provided as argument in the <code>userData</code> attribute of the function.
<code>vsource→set_voltage(newval)</code>	Tunes the device output voltage (milliVolts).
<code>vsource→voltageMove(target, ms_duration)</code>	Performs a smooth move at constant speed toward a given value.

yFindVSource()

Retrieves a voltage source for a given identifier.

```
function yFindVSource( ByVal func As String ) As YVSource
```

The identifier can be specified using several formats:

- `FunctionLogicalName`
- `ModuleSerialNumber.FunctionIdentifier`
- `ModuleSerialNumber.FunctionLogicalName`
- `ModuleLogicalName.FunctionIdentifier`
- `ModuleLogicalName.FunctionLogicalName`

This function does not require that the voltage source is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YVSource.isOnline()` to test if the voltage source is indeed online at a given time. In case of ambiguity when looking for a voltage source by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the voltage source

Returns :

a `YVSource` object allowing you to drive the voltage source.

yFirstVSource()

Starts the enumeration of voltage sources currently accessible.

```
function yFirstVSource( ) As YVSource
```

Use the method `YVSource.nextVSource()` to iterate on next voltage sources.

Returns :

a pointer to a `YVSource` object, corresponding to the first voltage source currently online, or a `null` pointer if there are none.

`vsource.describe()`

Returns a descriptive text that identifies the function.

function **`describe()`** As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :

a string that describes the function

`vsource.get_advertisedValue()`

Returns the current value of the voltage source (no more than 6 characters).

function **`get_advertisedValue()`** As String

Returns :

a string corresponding to the current value of the voltage source (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

`vsource.get_errorMessage()`

Returns the error message of the latest error with this function.

function **`get_errorMessage()`** As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a string corresponding to the latest error message that occurred while using this function object

`vsource.get_errorType()`

Returns the numerical error code of the latest error with this function.

function **`get_errorType()`** As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :

a number corresponding to the code of the latest error that occurred while using this function object

`vsource.get_extPowerFailure()`

Return true if external power supply voltage is too low.

function **`get_extPowerFailure()`** As Integer

Returns :

either `Y_EXTPOWERFAILURE_FALSE` or `Y_EXTPOWERFAILURE_TRUE`

On failure, throws an exception or returns `Y_EXTPOWERFAILURE_INVALID`.

vsource.get_failure()

Return true if the module is in failure mode.

function **get_failure**() As Integer

More information can be obtained by testing `get_overheat`, `get_overcurrent` etc... When a error condition is met, the output voltage is set to zéro and cannot be changed until the `reset()` function is called.

Returns :

either `Y_FAILURE_FALSE` or `Y_FAILURE_TRUE`

On failure, throws an exception or returns `Y_FAILURE_INVALID`.

vsource.get_vsourceDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

vsource.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

vsource.get_logicalName()

Returns the logical name of the voltage source.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the voltage source

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

vsource.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

`vsources.get_overCurrent()`

Return true if the appliance connected to the device is too greedy .

function **`get_overCurrent()`** As Integer

Returns :

either `Y_OVERCURRENT_FALSE` or `Y_OVERCURRENT_TRUE`

On failure, throws an exception or returns `Y_OVERCURRENT_INVALID`.

`vsources.get_overHeat()`

Return TRUE if the module is overheating.

function **`get_overHeat()`** As Integer

Returns :

either `Y_OVERHEAT_FALSE` or `Y_OVERHEAT_TRUE`

On failure, throws an exception or returns `Y_OVERHEAT_INVALID`.

`vsources.get_overLoad()`

Return true if the device is not able to maintain the requested voltage output .

function **`get_overLoad()`** As Integer

Returns :

either `Y_OVERLOAD_FALSE` or `Y_OVERLOAD_TRUE`

On failure, throws an exception or returns `Y_OVERLOAD_INVALID`.

`vsources.get_regulationFailure()`

Return true if the voltage output is too high regarding the requested voltage .

function **`get_regulationFailure()`** As Integer

Returns :

either `Y_REGULATIONFAILURE_FALSE` or `Y_REGULATIONFAILURE_TRUE`

On failure, throws an exception or returns `Y_REGULATIONFAILURE_INVALID`.

vsource.get_unit()

Returns the measuring unit for the voltage.

function **get_unit**() As String

Returns :

a string corresponding to the measuring unit for the voltage

On failure, throws an exception or returns `Y_UNIT_INVALID`.

vsource.get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

function **get_userData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

vsource.get_voltage()

Returns the voltage output command (mV)

function **get_voltage**() As Integer

Returns :

an integer corresponding to the voltage output command (mV)

On failure, throws an exception or returns `Y_VOLTAGE_INVALID`.

vsource.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

vsource.load()

Preloads the function cache with a specified validity duration.

function **load**(ByVal **msValidity** As Integer) As YRETCODE

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

msValidity an integer corresponding to the validity of the loaded function parameters, in milliseconds

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or YAPI_SUCCESS)

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

vsource.nextVSource()

Continues the enumeration of voltage sources started using `yFirstVSource()`.

function **nextVSource**() As YVSource

Returns :

a pointer to a YVSource object, corresponding to a voltage source currently online, or a null pointer if there are no more voltage sources to enumerate.

vsource.pulse()

Sets device output to a specific voltage, for a specified duration, then brings it automatically to 0V.

```
function pulse( ByVal voltage As Integer,  
                ByVal ms_duration As Integer) As Integer
```

Parameters :

voltage pulse voltage, in millivolts
ms_duration pulse duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

```
procedure registerValueCallback( ByVal callback As GenericUpdateCallback)
```

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

callback the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

vsource.reset()

Resets the device Output.

```
function reset( ) As Integer
```

This function must be called after any error condition. After an error condition, voltage output will be set to none and cannot be changed until this function is called.

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource.set_logicalName()

Changes the logical name of the voltage source.

```
function set_logicalName( ByVal newval As String) As Integer
```

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

newval a string corresponding to the logical name of the voltage source

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsource.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

procedure **set_userdata**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

vsourceset_voltage()

Tunes the device output voltage (milliVolts).

function **set_voltage**(ByVal **newval** As Integer) As Integer

Parameters :

newval an integer

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

vsources.voltageMove()

Performs a smooth move at constant speed toward a given value.

function **voltageMove**(ByVal **target** As Integer,
ByVal **ms_duration** As Integer) As Integer

Parameters :

target new output value at end of transition, in milliVolts.

ms_duration transition duration, in milliseconds

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

3.22. Wireless function interface

In order to use the functions described here, you should include:

yocto_wireless.vb

Global functions
yFindWireless(func) Retrieves a wireless lan interface for a given identifier.
yFirstWireless() Starts the enumeration of wireless lan interfaces currently accessible.
YWireless methods
wireless→adhocNetwork(ssid, securityKey) Changes the configuration of the wireless lan interface to create an ad-hoc wireless network, without using an access point.
wireless→describe() Returns a descriptive text that identifies the function.
wireless→get_advertisedValue() Returns the current value of the wireless lan interface (no more than 6 characters).
wireless→get_channel()

Returns the 802.

wireless→get_errorMessage()

Returns the error message of the latest error with this function.

wireless→get_errorType()

Returns the numerical error code of the latest error with this function.

wireless→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

wireless→get_hardwareId()

Returns the unique hardware identifier of the function.

wireless→get_linkQuality()

Returns the link quality, expressed in per cents.

wireless→get_logicalName()

Returns the logical name of the wireless lan interface.

wireless→get_module()

Get the `YModule` object for the device on which the function is located.

wireless→get_module_async(callback, context)

Get the `YModule` object for the device on which the function is located (asynchronous version).

wireless→get_security()

Returns the security algorithm used by the selected wireless network.

wireless→get_ssid()

Returns the wireless network name (SSID).

wireless→get_userData()

Returns the value of the `userData` attribute, as previously stored using method `set_userData`.

wireless→isOnline()

Checks if the function is currently reachable, without raising any error.

wireless→isOnline_async(callback, context)

Checks if the function is currently reachable, without raising any error (asynchronous version).

wireless→joinNetwork(ssid, securityKey)

Changes the configuration of the wireless lan interface to connect to an existing access point (infrastructure mode).

wireless→load(msValidity)

Preloads the function cache with a specified validity duration.

wireless→load_async(msValidity, callback, context)

Preloads the function cache with a specified validity duration (asynchronous version).

wireless→nextWireless()

Continues the enumeration of wireless lan interfaces started using `yFirstWireless()`.

wireless→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

wireless→set_logicalName(newval)

Changes the logical name of the wireless lan interface.

wireless→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

yFindWireless()

Retrieves a wireless lan interface for a given identifier.

```
function yFindWireless( ByVal func As String) As YWireless
```

The identifier can be specified using several formats:

- FunctionLogicalName
- ModuleSerialNumber.FunctionIdentifier
- ModuleSerialNumber.FunctionLogicalName
- ModuleLogicalName.FunctionIdentifier
- ModuleLogicalName.FunctionLogicalName

This function does not require that the wireless lan interface is online at the time it is invoked. The returned object is nevertheless valid. Use the method `YWireless.isOnline()` to test if the wireless lan interface is indeed online at a given time. In case of ambiguity when looking for a wireless lan interface by logical name, no error is notified: the first instance found is returned. The search is performed first by hardware name, then by logical name.

Parameters :

func a string that uniquely characterizes the wireless lan interface

Returns :

a `YWireless` object allowing you to drive the wireless lan interface.

yFirstWireless()

Starts the enumeration of wireless lan interfaces currently accessible.

```
function yFirstWireless( ) As YWireless
```

Use the method `YWireless.nextWireless()` to iterate on next wireless lan interfaces.

Returns :

a pointer to a `YWireless` object, corresponding to the first wireless lan interface currently online, or a `null` pointer if there are none.

wireless.adhocNetwork()

Changes the configuration of the wireless lan interface to create an ad-hoc wireless network, without using an access point.

```
function adhocNetwork( ByVal ssid As String,  
                      ByVal securityKey As String) As Integer
```

If a security key is specified, the network will be protected by WEP128, since WPA is not standardized for ad-hoc networks. Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ssid the name of the network to connect to
securityKey the network key, as a character string

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

wireless.describe()

Returns a descriptive text that identifies the function.

function **describe**() As String

The text always includes the class name, and may include as well either the logical name of the function or its hardware identifier.

Returns :
a string that describes the function

wireless.get_advertisedValue()

Returns the current value of the wireless lan interface (no more than 6 characters).

function **get_advertisedValue**() As String

Returns :
a string corresponding to the current value of the wireless lan interface (no more than 6 characters)

On failure, throws an exception or returns `Y_ADVERTISEDVALUE_INVALID`.

wireless.get_channel()

Returns the 802.

function **get_channel**() As Integer

11 channel currently used, or 0 when the selected network has not been found.

Returns :
an integer corresponding to the 802

On failure, throws an exception or returns `Y_CHANNEL_INVALID`.

wireless.get_errorMessage()

Returns the error message of the latest error with this function.

function **get_errorMessage**() As String

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a string corresponding to the latest error message that occurred while using this function object

wireless.get_errorType()

Returns the numerical error code of the latest error with this function.

function **get_errorType**() As YRETCODE

This method is mostly useful when using the Yoctopuce library with exceptions disabled.

Returns :
a number corresponding to the code of the latest error that occurred while using this function object

wireless.get_wirelessDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

function **get_functionDescriptor**() As YFUN_DESCR

This identifier can be used to test if two instances of `YFunction` reference the same physical function on the same physical device.

Returns :

an identifier of type `YFUN_DESCR`. If the function has never been contacted, the returned value is `Y_FUNCTIONDESCRIPTOR_INVALID`.

wireless.get_hardwareId()

Returns the unique hardware identifier of the function.

function **get_hardwareId**() As String

The unique hardware identifier is made of the device serial number and of the hardware identifier of the function.

Returns :

a string that uniquely identifies the function On failure, throws an exception or returns `Y_HARDWAREID_INVALID`.

wireless.get_linkQuality()

Returns the link quality, expressed in per cents.

function **get_linkQuality**() As Integer

Returns :

an integer corresponding to the link quality, expressed in per cents

On failure, throws an exception or returns `Y_LINKQUALITY_INVALID`.

wireless.get_logicalName()

Returns the logical name of the wireless lan interface.

function **get_logicalName**() As String

Returns :

a string corresponding to the logical name of the wireless lan interface

On failure, throws an exception or returns `Y_LOGICALNAME_INVALID`.

wireless.get_module()

Get the `YModule` object for the device on which the function is located.

function **get_module**() As YModule

If the function cannot be located on any module, the returned instance of `YModule` is not shown as on-line.

Returns :

an instance of `YModule`

Get the `YModule` object for the device on which the function is located (asynchronous version).

If the function cannot be located on any module, the returned `YModule` object does not show as on-line. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the requested `YModule` object

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless.get_security()

Returns the security algorithm used by the selected wireless network.

function **get_security**() As Integer

Returns :

a value among `Y_SECURITY_UNKNOWN`, `Y_SECURITY_OPEN`, `Y_SECURITY_WEP`, `Y_SECURITY_WPA` and `Y_SECURITY_WPA2` corresponding to the security algorithm used by the selected wireless network

On failure, throws an exception or returns `Y_SECURITY_INVALID`.

wireless.get_ssid()

Returns the wireless network name (SSID).

function **get_ssid**() As String

Returns :

a string corresponding to the wireless network name (SSID)

On failure, throws an exception or returns `Y_SSID_INVALID`.

wireless.getUserData()

Returns the value of the `userData` attribute, as previously stored using method `set_userdata`.

function **getUserData**() As Object

This attribute is never touched directly by the API, and is at disposal of the caller to store a context.

Returns :

the object stored previously by the caller.

wireless.isOnline()

Checks if the function is currently reachable, without raising any error.

function **isOnline**() As Boolean

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

Returns :

`true` if the function can be reached, and `false` otherwise

Checks if the function is currently reachable, without raising any error (asynchronous version).

If there is a cached value for the function in cache, that has not yet expired, the device is considered reachable. No exception is raised if there is an error while trying to contact the device hosting the requested function.

This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox Javascript VM that does not implement context switching during blocking I/O calls.

Parameters :

callback callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the boolean result

context caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless.joinNetwork()

Changes the configuration of the wireless lan interface to connect to an existing access point (infrastructure mode).

```
function joinNetwork( ByVal ssid As String,  
                     ByVal securityKey As String) As Integer
```

Remember to call the `saveToFlash()` method and then to reboot the module to apply this setting.

Parameters :

ssid the name of the network to connect to

securityKey the network key, as a character string

Returns :

YAPI_SUCCESS if the call succeeds.

On failure, throws an exception or returns a negative error code.

wireless.load()

Preloads the function cache with a specified validity duration.

```
function load( ByVal msValidity As Integer) As YRETCODE
```

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance.

Parameters :

msValidity an integer corresponding to the validity attributed to the loaded function parameters, in milliseconds

Returns :

YAPI_SUCCESS when the call succeeds. On failure, throws an exception or returns a negative error code.

Preloads the function cache with a specified validity duration (asynchronous version).

By default, whenever accessing a device, all function attributes are kept in cache for the standard duration (5 ms). This method can be used to temporarily mark the cache as valid for a longer period, in order to reduce network traffic for instance. This asynchronous version exists only in Javascript. It uses a callback instead of a return value in order to avoid blocking Firefox

javascript VM that does not implement context switching during blocking I/O calls. See the documentation section on asynchronous Javascript calls for more details.

Parameters :

- msValidity** an integer corresponding to the validity of the loaded function parameters, in milliseconds
- callback** callback function that is invoked when the result is known. The callback function receives three arguments: the caller-specific context object, the receiving function object and the error code (or `YAPI_SUCCESS`)
- context** caller-specific object that is passed as-is to the callback function

Returns :

nothing : the result is provided to the callback.

wireless.nextWireless()

Continues the enumeration of wireless lan interfaces started using `yFirstWireless()`.

function **nextWireless()** As YWireless

Returns :

a pointer to a `YWireless` object, corresponding to a wireless lan interface currently online, or a null pointer if there are no more wireless lan interfaces to enumerate.

wireless.registerValueCallback()

Registers the callback function that is invoked on every change of advertised value.

procedure **registerValueCallback**(ByVal **callback** As GenericUpdateCallback)

The callback is invoked only during the execution of `ySleep` or `yHandleEvents`. This provides control over the time when the callback is triggered. For good responsiveness, remember to call one of these two functions periodically. To unregister a callback, pass a null pointer as argument.

Parameters :

- callback** the callback function to call, or a null pointer. The callback function should take two arguments: the function object of which the value has changed, and the character string describing the new advertised value.

wireless.set_logicalName()

Changes the logical name of the wireless lan interface.

function **set_logicalName**(ByVal **newval** As String) As Integer

You can use `yCheckLogicalName()` prior to this call to make sure that your parameter is valid. Remember to call the `saveToFlash()` method of the module if the modification must be kept.

Parameters :

- newval** a string corresponding to the logical name of the wireless lan interface

Returns :

`YAPI_SUCCESS` if the call succeeds.

On failure, throws an exception or returns a negative error code.

wireless.set_userData()

Stores a user context provided as argument in the `userData` attribute of the function.

procedure **set_userData**(ByVal **data** As Object)

This attribute is never touched by the API, and is at disposal of the caller to store a context.

Parameters :

data any kind of object to be stored

4. Index

A	
adhocNetwork	177
API	10
C	
calibrate	96
calibrateFromPoints	27
callbackLogin	115
CheckLogicalName	11
D	
describe	18
DisableExceptions	11
E	
EnableExceptions	11
EnableUSBHost	12
F	
FindAnButton	18
FindCarbonDioxide	27
FindColorLed	35
FindCurrent	43
FindDataLogger	52
FindDualPower	65
FindHubPort	72
FindHumidity	79
FindLed	87
FindLightSensor	95
FindModule	104
FindNetwork	115
FindPressure	127
FindRelay	135
FindServo	143
FindTemperature	151
FindVoltage	160
FindVSource	168
FindWireless	176
FirstAnButton	18
FirstCarbonDioxide	27
FirstColorLed	36
FirstCurrent	44
FirstDataLogger	52
FirstDualPower	66
FirstHubPort	73
FirstHumidity	80
FirstLed	88

FirstLightSensor	96
FirstModule	104
FirstNetwork	115
FirstPressure	127
FirstRelay	136
FirstServo	143
FirstTemperature	151
FirstVoltage	160
FirstVSource	168
FirstWireless	177
forgetAllDataStreams	53
FreeAPI	12
functionCount	105
functionId	105
functionName	105
functionValue	105
G	
get_adminPassword	116
get_advertisedValue	18
get_analogCalibration	19
get_autoStart	53
get_averageValue	60
get_baudRate	73
get_beacon	106
get_blinking	88
get_calibratedValue	19
get_calibrationMax	19
get_calibrationMin	19
get_callbackCredentials	116
get_callbackMaxDelay	117
get_callbackMinDelay	117
get_callbackUrl	117
get_channel	178
get_columnCount	62
get_columnNames	62
get_currentRawValue	28
get_currentRunIndex	53
get_currentValue	28
get_data	62
get_dataRows	63
get_dataRun	53
get_dataSamplesInterval	63
get_dataStreams	54
get_duration	60
get_enabled	73
get_errorMessage	19
get_errorType	20
get_extPowerFailure	169
get_extVoltage	67
get_failure	169
get_firmwareRelease	106
get_functionDescriptor	20
get_hardwareId	20
get_highestValue	29
get_hslColor	37
get_icon2d	107
get_ipAddress	118
get_isPressed	20
get_lastTimePressed	20
get_lastTimeReleased	21
get_linkQuality	179
get_logicalName	21
get_lowestValue	30
get_luminosity	90

get_macAddress	118
get_maxValue	60
get_measureNames	55
get_minValue	60
get_module	21
get_module_async	21
get_neutral	145
get_oldestRunIndex	55
get_output	138
get_overCurrent	171
get_overHeat	171
get_overLoad	171
get_persistentSettings	107
get_portState	75
get_position	145
get_power	90
get_powerControl	68
get_powerState	68
get_primaryDNS	119
get_productId	107
get_productName	108
get_productRelease	108
get_pulseTimer	138
get_range	146
get_rawValue	22
get_readiness	119
get_rebootCountdown	108
get_recording	56
get_regulationFailure	171
get_resolution	30
get_rgbColor	38
get_rgbColorAtPowerOn	38
get_router	119
get_rowCount	63
get_runIndex	63
get_secondaryDNS	120
get_security	180
get_sensitivity	22
get_sensorType	155
get_serialNumber	108
get_ssid	180
get_startTime	63
get_startTimeUTC	61
get_state	138
get_subnetMask	120
get_timeUTC	56
get_unit	31
get_upTime	108
get_usbBandwidth	109
get_usbCurrent	109
get_userData	22
get_userPassword	120
get_valueCount	61
get_valueInterval	61
get_voltage	172
GetAPIVersion	12
GetTickCount	12
H	
HandleEvents	12
hslMove	38
I	
InitAPI	13
isOnline	22
isOnline_async	22

J	
joinNetwork	181
L	
load	23
load_async	23
M	
move	147
N	
nextAnButton	23
nextCarbonDioxide	32
nextColorLed	40
nextCurrent	49
nextDataLogger	57
nextDualPower	70
nextHubPort	77
nextHumidity	85
nextLed	92
nextLightSensor	101
nextModule	110
nextNetwork	122
nextPressure	132
nextRelay	140
nextServo	147
nextTemperature	156
nextVoltage	165
nextVSource	173
nextWireless	182
P	
pulse	140
R	
reboot	110
RegisterDeviceArrivalCallback	13
RegisterDeviceRemovalCallback	13
RegisterHub	14
RegisterLogFunction	14
registerValueCallback	23
reset	174
revertFromFlash	111
rgbMove	40
S	
saveToFlash	111
set_adminPassword	122
set_analogCalibration	24
set_autoStart	58
set_beacon	111
set_blinking	92
set_calibrationMax	24
set_calibrationMin	24
set_callbackCredentials	122
set_callbackMaxDelay	123
set_callbackMinDelay	123
set_callbackUrl	123
set_enabled	77
set_highestValue	33
set_hslColor	40
set_logicalName	25
set_lowestValue	33
set_luminosity	93
set_neutral	148
set_output	141
set_position	148
set_power	93
set_powerControl	70
set_primaryDNS	124

set_range	149
set_recording	58
set_rgbColor	41
set_rgbColorAtPowerOn	41
set_secondaryDNS	124
set_sensitivity	25
set_sensorType	157
set_state	141
set_timeUTC	59
set_usbBandwidth	112
set_userData	25
set_userPassword	125
set_valueInterval	61
set_voltage	175
SetDelegate	14
SetTimeout	14
Sleep	15
T	
triggerFirmwareUpdate	112
U	
UnregisterHub	15
UpdateDeviceList	15
UpdateDeviceList_async	16
useDHCP	125
useStaticIP	125
V	
voltageMove	175
Y	
YAnButton	16
YCarbonDioxide	25
YColorLed	34
YCurrent	42
YDataLogger	50
YDataRun	59
YDataStream	61
YDualPower	64
YHubPort	71
YHumidity	78
YLed	86
YLightSensor	94
YModule	102
YNetwork	113
YPressure	126
YRelay	134
YServo	141
YTemperature	149
YVoltage	158
YVSource	166
YWireless	175