


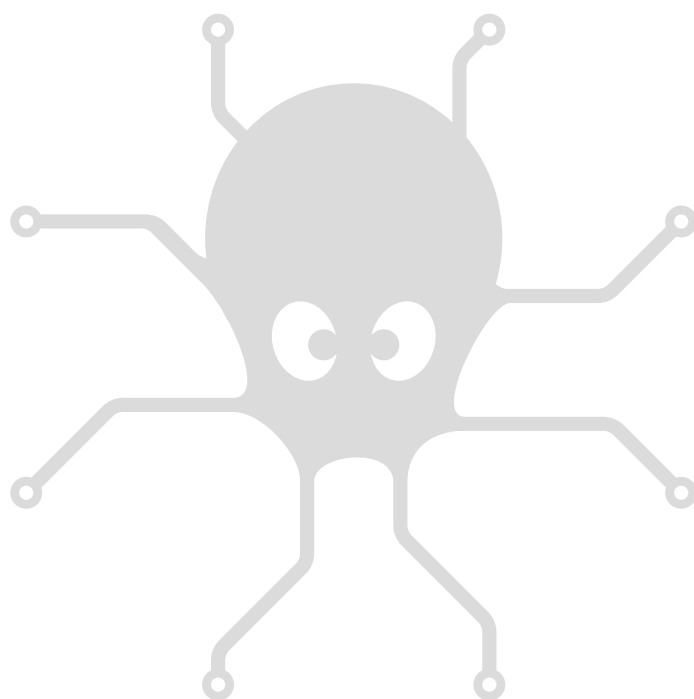

Yocto-Watt-V2-C

User's guide

Table of contents

1. Introduction	1
1.1. Safety Information	2
1.2. Electrocution Prevention Advice	3
1.3. Environmental conditions	4
2. Presentation	5
2.1. Common elements	5
2.2. Specific elements	7
2.3. Safety isolation	8
2.4. Optional accessories	9
3. Direct current vs. alternating current	11
3.1. Measure of the voltage	11
3.2. Measure of the current	12
3.3. Measure of the power	12
3.4. Accuracy	14
3.5. Periodic consumption profile	14
3.6. Capturing transient events	14
4. First steps	15
4.1. Prerequisites	15
4.2. Testing USB connectivity	16
4.3. Localization	17
4.4. Test of the module	17
4.5. Configuration	18
5. Assembly and connections	21
5.1. Fixing	21
5.2. USB power distribution	21
5.3. Electromagnetic compatibility (EMI)	22
6. Programming, general concepts	23
6.1. Programming paradigm	23
6.2. The Yocto-Watt-V2-C module	25

6.3. Module	26
6.4. Power	28
6.5. Voltage	29
6.6. Current	30
6.7. InputCapture	31
6.8. DataLogger	32
6.9. What interface: Native, DLL or Service ?	33
6.10. Accessing modules through a hub	36
6.11. Programming, where to start?	36
7. Using the Yocto-Watt-V2-C in command line	37
7.1. Installing	37
7.2. Use: general description	37
7.3. Control of the Power function	38
7.4. Control of the module part	38
7.5. Limitations	39
8. Using the Yocto-Watt-V2-C with Python	41
8.1. Source files	41
8.2. Dynamic library	41
8.3. Control of the Power function	41
8.4. Control of the module part	43
8.5. Error handling	45
9. Using Yocto-Watt-V2-C with C++	47
9.1. Control of the Power function	47
9.2. Control of the module part	49
9.3. Error handling	52
9.4. Integration variants for the C++ Yoctopuce library	52
10. Using Yocto-Watt-V2-C with C#	55
10.1. Installation	55
10.2. Using the Yoctopuce API in a Visual C# project	55
10.3. Control of the Power function	56
10.4. Control of the module part	58
10.5. Error handling	60
11. Using the Yocto-Watt-V2-C with LabVIEW	63
11.1. Architecture	63
11.2. Compatibility	64
11.3. Installation	64
11.4. Presentation of Yoctopuce VIs	69
11.5. Functioning and use of VIs	72
11.6. Using	74
11.7. Managing the data logger	76
11.8. Function list	77
11.9. A word on performances	78
11.10. A full example of a LabVIEW program	78
11.11. Differences from other Yoctopuce APIs	79
12. Using the Yocto-Watt-V2-C with Java	81
12.1. Getting ready	81

12.2. Control of the Power function	81
12.3. Control of the module part	83
12.4. Error handling	85
13. Using the Yocto-Watt-V2-C with Android	87
13.1. Native access and VirtualHub	87
13.2. Getting ready	87
13.3. Compatibility	87
13.4. Activating the USB port under Android	88
13.5. Control of the Power function	89
13.6. Control of the module part	92
13.7. Error handling	96
14. Using Yocto-Watt-V2-C with TypeScript	97
14.1. Using the Yoctopuce library for TypeScript	98
14.2. Refresher on asynchronous I/O in JavaScript	98
14.3. Control of the Power function	99
14.4. Control of the module part	102
14.5. Error handling	104
15. Using Yocto-Watt-V2-C with JavaScript / EcmaScript	105
15.1. Blocking I/O versus Asynchronous I/O in JavaScript	105
15.2. Using Yoctopuce library for JavaScript / EcmaScript 2017	106
15.3. Control of the Power function	108
15.4. Control of the module part	111
15.5. Error handling	114
16. Using Yocto-Watt-V2-C with PHP	115
16.1. Getting ready	115
16.2. Control of the Power function	116
16.3. Control of the module part	118
16.4. HTTP callback API and NAT filters	120
16.5. Error handling	123
17. Using Yocto-Watt-V2-C with Visual Basic .NET	125
17.1. Installation	125
17.2. Using the Yoctopuce API in a Visual Basic project	125
17.3. Control of the Power function	126
17.4. Control of the module part	128
17.5. Error handling	130
18. Using Yocto-Watt-V2-C with Delphi or Lazarus	131
18.1. Preparation	131
18.2. About examples	132
18.3. Control of the Power function	132
18.4. Control of the module part	134
18.5. Error handling	136
19. Using the Yocto-Watt-V2-C with Universal Windows Platform	139
19.1. Blocking and asynchronous functions	139
19.2. Installation	140
19.3. Using the Yoctopuce API in a Visual Studio project	140

19.4. Control of the Power function	141
19.5. A real example	142
19.6. Control of the module part	142
19.7. Error handling	145
20. Using Yocto-Watt-V2-C with Objective-C	147
20.1. Control of the Power function	147
20.2. Control of the module part	149
20.3. Error handling	151
21. Using with unsupported languages	153
21.1. Command line	153
21.2. .NET Assembly	153
21.3. VirtualHub and HTTP GET	155
21.4. Using dynamic libraries	157
21.5. Porting the high level library	160
22. Advanced programming	161
22.1. Event programming	161
22.2. The data logger	164
22.3. Sensor calibration	166
23. Firmware Update	171
23.1. VirtualHub or the YoctoHub	171
23.2. The command line library	171
23.3. The Android application Yocto-Firmware	171
23.4. Updating the firmware with the programming library	172
23.5. The "update" mode	174
24. High-level API Reference	175
24.1. Class YAPI	176
24.2. Class YModule	180
24.3. Class YPower	187
24.4. Class YVoltage	194
24.5. Class YCurrent	200
24.6. Class YInputCapture	206
24.7. Class YDataLogger	212
24.8. Class YDataSet	217
24.9. Class YMeasure	220
25. Troubleshooting	221
25.1. Where to start?	221
25.2. Programming examples don't seem to work	221
25.3. Linux and USB	221
25.4. ARM Platforms: HF and EL	222
25.5. Powered module but invisible for the OS	222
25.6. Another process named xxx is already using yAPI	222
25.7. Disconnections, erratic behavior	222
25.8. After a failed firmware update, the device stopped working	223
25.9. Registering VirtualHub disconnects another instance	223
25.10. Dropped commands	223
25.11. Damaged device	223

26. Characteristics	225
<i>Blueprint</i>	228

1. Introduction


The Yocto-Watt-V2-C is a 58x50mm electronic module which allows you to measure by USB the power consumed by an electrical appliance. This tool is commonly called a wattmeter. It is also able to measure the voltage between two electric wires as well as the current going through a wire. It can also integrate the instantaneous consumption (in Watt) of an appliance to compute its hourly consumption (in Watt * hour).

The Yocto-Watt-V2-C works with both DC and AC voltages. In the latter case, the Yocto-Watt-V2-C can calculate the voltage/current offset ($\cos \Phi$) and the ratio between the effective power consumed and the apparent power (load factor). Used as a power analyzer, it can provide the periodic profile of current consumption with a resolution of 5.3kHz. It can also capture transient events such as consumption peaks.

The module precision is of 1mW / 1% when measuring direct current and of 0.1W / 1% when measuring alternating current.

An important specificity of this module is to be an isolated wattmeter: the measuring part is electrically isolated from the USB part. This makes it possible to measure electric loads that do not share the same ground reference as the computer USB bus.

When mounted in a proper protective enclosure, the Yocto-Watt-V2-C can even be used to measure the power consumption on appliances connected directly to the mains, because it features a safety isolation of 3kV between the USB interface and the measuring part. Caution, make sure to carefully read the safety recommendations below and the section describing the electric isolation before connecting the Yocto-Watt-V2-C to a mains powered appliance.

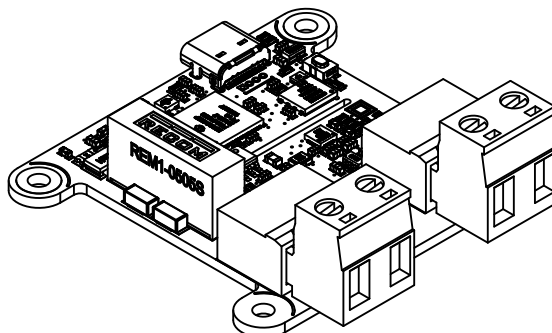

The Yocto-Watt-V2-C module

The Yocto-Watt-V2-C is not in itself a complete product. It is a component intended to be integrated into a solution used in laboratory equipments, or in industrial process-control equipments, or for

similar applications in domestic and commercial environments. In order to use it, you must at least install it in a protective enclosure and connect it to a host computer.

Yoctopuce thanks you for buying this Yocto-Watt-V2-C and sincerely hopes that you will be satisfied with it. The Yoctopuce engineers have put a large amount of effort to ensure that your Yocto-Watt-V2-C is easy to install anywhere and easy to drive from a maximum of programming languages. If you are nevertheless disappointed with this module, or if you need additional information, do not hesitate to contact Yoctopuce support:

E-mail address:	support@yoctopuce.com
Web site:	www.yoctopuce.com
Postal address:	Route de Cartigny 33
ZIP code, city:	1236 Cartigny
Country:	Switzerland

1.1. Safety Information

The Yocto-Watt-V2-C is designed to meet the requirements of IEC 61010-1:2010 safety standard. It does not create any serious hazards to the operator and surrounding area, even in single fault condition, as long as it is integrated and used according to the instructions contained in this documentation, and in this section in particular.

Protective enclosure


The Yocto-Watt-V2-C should not be used without a protective enclosure, because of the accessible bare electronic components. For optimal safety, it should be put into a non-metallic, non-inflammable enclosure, resistant to a mechanical stress level of 5 J. For instance, use a polycarbonate (e.g. LEXAN) enclosure rated IK08 with a IEC 60695-11-10 flammability rating of V-1 or better. Using a lower quality enclosure may require specific warnings for the operator and/or compromise conformity with the safety standard.

Maintenance

If a damage is observed on the electronic board or on the enclosure, it should be replaced in order to ensure continued safety of the equipment, and to prevent damaging other parts of the system due to overload that a short circuit could cause.

Identification

In order to ease the maintenance and the identification of risks during maintenance, you should stick the water-resistant identification label provided together with the electronic board as close as possible to the device. If the device is put in a dedicated enclosure, the identification label should be affixed on the outside of the enclosure. This label is resistant to humidity and to the usual rubbing that can occur during normal maintenance.

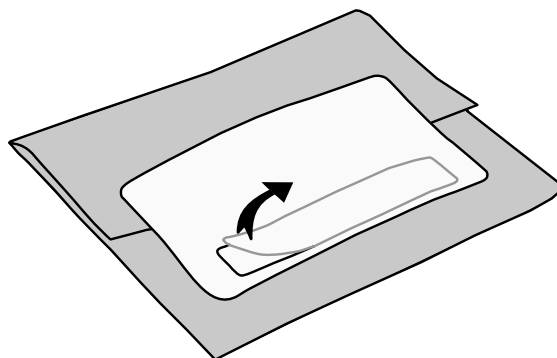

Identification label is integrated in the package label.

Application

The safety standard applied is intended to cover laboratory equipment, industrial process-control equipment and similar applications in residential or commercial environment. If you intend to use the Yocto-Watt-V2-C for another kind of application, you should check the safety regulations according to the standard applicable to your application.

In particular, the Yocto-Watt-V2-C is *not* certified for use in medical environments or for life-support applications.

Environment

The Yocto-Watt-V2-C is *not* certified for use in hazardous locations, explosive environments, or life-threatening applications. Environmental ratings are provided below.


Hot surface and fire risk



When strong currents flow through the device, the PCB and some components may become hot, exceeding 60°C. A direct contact with the skin would result in bodily injury, and an inappropriate enclosure could create a serious fire hazard. When continuous exposure to strong currents is expected, pay attention to burns and fire hazard prevention. A fan is a good way to help with cooling, but in order to ensure that the system remains safe even if the fan is inoperative, it is essential to use an enclosure rated V-1 or V-0 according to IEC 60695-11-10 standard. Make sure that the enclosure openings are facing sideways or top, not bottom.


If you intend to use strong currents, make sure to use a power cable rated for high temperature, because the heat will propagate through the terminal blocks to the power cable.

IEC 61140 Protection Class II

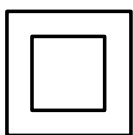

This equipment is protected throughout by a double insulation or a reinforced insulation. The electronics on the side of USB connector are designed for safety extra-low voltages, while the electronics on the opposite side may carry hazardous voltages.

Electrical shock

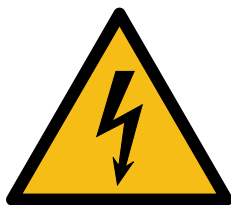

Voltages above 60 V DC, 30 V AC r.m.s. or 42.4 V peak create electrocution and fire hazards. Since the Yocto-Watt-V2-C has bare contacts, you should not connect it to hazardous voltage without using a proper enclosure, electrically insulated, non-flammable and shock-proof as described previously. A few extra precautions are required, that we have summarized in the paragraph below. Make sure to include these advices in the most adequate wording in the installation and maintenance manuals of your final product.

1.2. Electrocution Prevention Advice

The Yocto-Watt-V2-C can be used without major risk with voltages up to 250 V AC r.m.s., as long as you adhere to a few safety guidelines and apply common sense. In order to help you to avoid an embarrassing nomination to the [Darwin Awards](#) or a charge of negligent homicide, we have summarized a few recommendations below:

- To attach the device, use **non-conductive plastic screw and spacers**. Fixing holes are under the safety clearance distance, so metal screw would be dangerous.
- Put the Yocto-Watt-V2-C in a proper **insulated enclosure** *before* applying hazardous voltage. Doing so afterwards is no more possible. Conversely, make sure all hazardous wires are not live *before* opening the enclosure.
- Ensure that no object or liquid may accidentally enter into the enclosure.
- Ensure that all wires hold firmly in the terminal block, and that no thread escapes from the terminal block in case you use threaded cable.

- Check that all circuit connections are in accordance to the isolation voltage levels described in the Yocto-Watt-V2-C description (see next chapter). USB and Ethernet wires should be well separated from any wire with a hazardous voltage.
- Do not work if you are tired. Brilliant decisions taken at 2 a.m. tend to lose their shine at first light.
- Do not work alone. If things go bad, you can then hope to be rescued fast enough.
- Use your head, your luck will not last forever.
- Hazardous voltage wiring is subject to local electrical standards. Some tasks may only be performed by qualified personnel.

1.3. Environmental conditions


The Yocto-Watt-V2-C is designed to avoid electrocution hazards caused by temporary overvoltage expected on wall outlets (**Overvoltage Category II**). It has not been designed for use in fixed installation and for industrial use with permanent connection to the fixed distribution circuit.

The safety insulation of the Yocto-Watt-V2-C has been designed for **indoor** use in a standard office or laboratory environment (IEC 60664 **pollution degree 2**): air pollution is expected to be limited and mainly non-conductive. Relative humidity is expected to be **between 10% and 80% RH, non condensing**. Use in an environment with significant solid pollution or conductive pollution is not safe, unless the device is protected from such pollution using an IP67 or IP68 enclosure, which should only be opened in an unpolluted environment. The Yocto-Watt-V2-C safety insulation was designed for use **up to altitude 2000m**. Usage at higher altitude require a thorough analysis of safety impacts based on the application.

The Yocto-Watt-V2-C can be used on the whole specified voltage and current range without risk under normal temperature conditions according to IEC61010-1, i.e. 5°C to 40°C. The Yocto-Watt-V2-C is also designed to be usable on an extended temperature range, but only when specific conditions are met to ensure safety: when the temperature sinks, there must be no condensing humidity on the device; when the temperature rises, in case the device is used with strong voltages, the ambient temperature around heat dissipating elements must stay stable to prevent thermal runaway.

The extended operating temperature range for the Yocto-Watt-V2-C is -30...85°C. This temperature range has been determined based on the recommendations of the components manufacturers, and on controlled environment tests performed during a limited duration (1h). If you plan to use the Yocto-Watt-V2-C in harsh environments for a long period of time, we strongly advise you to run extensive tests before going into production.

2. Presentation

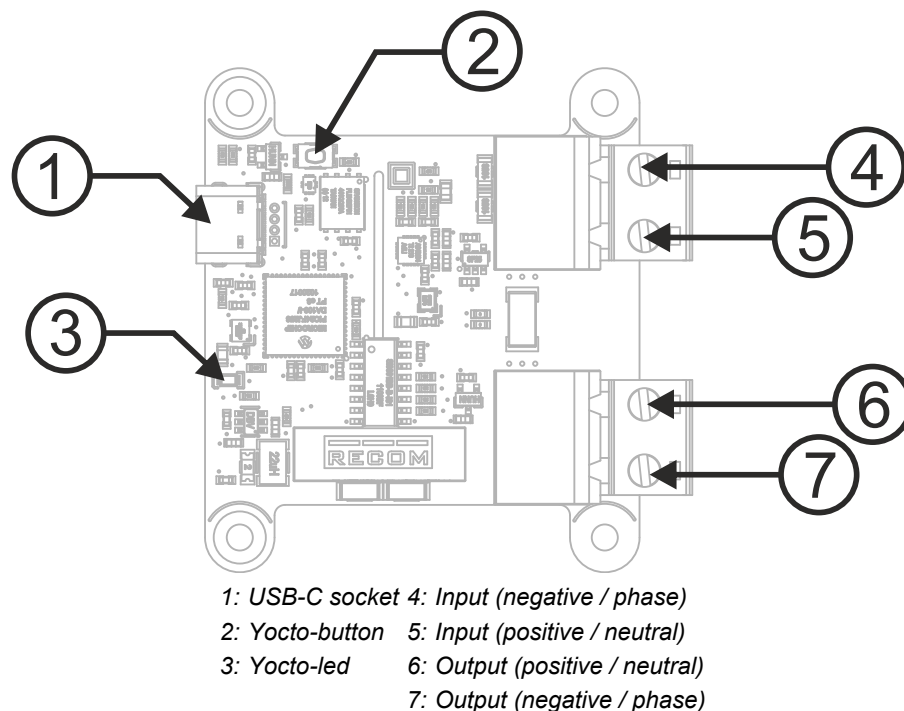

2.1. Common elements

All Yocto-modules share a number of common functionalities.

USB connector

The Yocto-Watt-V2-C features an USB Type-C socket and uses USB 1.1 protocol which makes it compatible with any USB host port. Alternatively USB wires or a 1.27mm connector can be soldered on the footprint right behind the USB socket.

If, when you plug your Yocto-Watt-V2-C into a USB-C cable, your module lights up but is not detected by your computer, check that the USB-C plug is fully inserted and that you're using a regular USB cable, not a charging cable with no data lines.

If you plan to use a power source other than a standard USB host port to power the device through the USB connector, that power source must respect the assigned values of USB 2.0 specifications:

- **Voltage min.:** 4.75 V DC
- **Voltage max.:** 5.25 V DC
- **Over-current protection:** 5.0 A max.

A higher voltage is likely to destroy the device. The behaviour with a lower voltage is not specified, but it can result firmware corruption.

Yocto-button

The Yocto-button has two functionalities. First, it can activate the Yocto-beacon mode (see below under Yocto-led). Second, if you plug in a Yocto-module while keeping this button pressed, you can then reprogram its firmware with a new version. Note that there is a simpler UI-based method to update the firmware, but this one works even in case of severely damaged firmware.

Yocto-led

Normally, the Yocto-led is used to indicate that the module is working smoothly. The Yocto-led then emits a low blue light which varies slowly, mimicking breathing. The Yocto-led stops breathing when the module is not communicating any more, as for instance when powered by a USB hub which is disconnected from any active computer.

When you press the Yocto-button, the Yocto-led switches to Yocto-beacon mode. It starts flashing faster with a stronger light, in order to facilitate the localization of a module when you have several identical ones. It is indeed possible to trigger off the Yocto-beacon by software, as it is possible to detect by software that a Yocto-beacon is on.

The Yocto-led has a third functionality, which is less pleasant: when the internal software which controls the module encounters a fatal error, the Yocto-led starts emitting an SOS in morse ¹. If this happens, unplug and re-plug the module. If it happens again, check that the module contains the latest version of the firmware, and, if it is the case, contact Yoctopuce support².

Current sensor

Each Yocto-module is able to measure its own current consumption on the USB bus. Current supply on a USB bus being quite critical, this functionality can be of great help. You can only view the current consumption of a module by software.

Serial number

Each Yocto-module has a unique serial number assigned to it at the factory. For Yocto-Watt-V2-C modules, this number starts with YWATMK2C. The module can be software driven using this serial number. The serial number cannot be modified.

Logical name

The logical name is similar to the serial number: it is a supposedly unique character string which allows you to reference your module by software. However, in the opposite of the serial number, the logical name can be modified at will. The benefit is to enable you to build several copies of the same project without needing to modify the driving software. You only need to program the same logical name in each copy. Warning: the behavior of a project becomes unpredictable when it contains several modules with the same logical name and when the driving software tries to access one of these modules through its logical name. When leaving the factory, modules do not have an assigned logical name. It is yours to define.


¹ short-short-short long-long-long short-short-short

² support@yoctopuce.com

2.2. Specific elements


The terminal blocks

The terminal blocks of the Yocto-Watt-V2-C can be separated into two parts, allowing you to easily fix plugs on the electric cables to then connect them in the Yocto-Watt-V2-C.

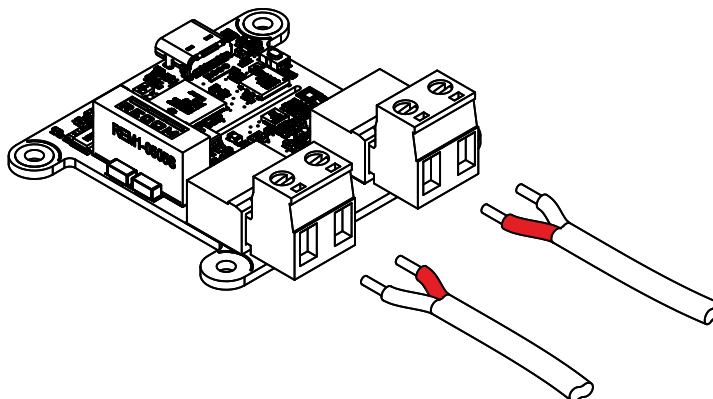

The terminals can be split into two parts. Note the symmetry in the polarity.

The Yocto-Watt-V2-C must be located between the power source and the power consumer, current is measured between the two poles at the center of the device. Note that the two sockets are symmetrical: if you get the polarity wrong, the Yocto-Watt-V2-C will still work, but with direct current you will obtain negative voltage and current values. In the same way, if you connect the source on the output connector and the load on the input connector, with direct current you will obtain a negative current value.

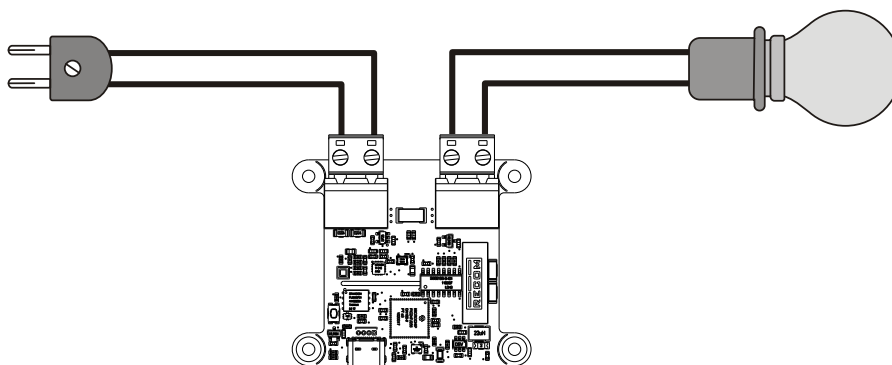

The Yocto-Watt-V2-C must be located between the source and the consumer.

Before making any connection, make sure to fully read the safety advices at the beginning of the manual, and the chapter named *Assembly and connections*.

The terminal block can hold solid or stranded wires between 24 AWG and 12 AWG, meaning 0.2 mm² to 3.31 mm². The wire must be stripped on 6mm, and the recommended tightening torque is 0.56 Nm.

If you intend to use strong currents or hazardous live voltages, make sure to use a power cable wire with a flammability RATING of UL 2556 VW-1 or equivalent, to prevent any risk of flame propagation.

The safety isolation of the Yocto-Watt-V2-C makes it possible to perform measurements directly on mains circuits of measurement category II up to 250 V AC r.m.s. for the product rated environmental specifications.

The sensor


The Yocto-Watt-V2-C is based on an ADS131M04 analog/digital converter produced by [Texas Instruments](https://www.ti.com), specifically designed for power monitoring and energy metering.

The input impedance for the voltage measurement is 331.2 KOhm. A voltage divider reduces the voltage to be measured.

To measure the current, the Yocto-Watt-V2-C uses a metal shunt (a 5 mOhm resistor), located between the two connectors. As the current increases, the temperature of the shunt rises as well. The shunt is designed to be self-cooled by convective heat transfer. At 10 Amps, the PCB temperature near the shunt is typically 15°C above ambient temperature. At 16 Amps, the PCB temperature near the shunt is typically 35°C above ambient temperature. This is the expected behaviour for the shunt to dissipate power. However, for the convective heat transfer to work properly with high amperage, you should make sure that the Yocto-Watt-V2-C is kept in a position such that air can easily flow. If you use the device in an enclosure, make sure the enclosure is properly vented, to ensure proper operation of the device and prevent fire hazards. For a continuous use over 10 Amps, the use of a small fan is recommended. But don't forget that in any case your system should be designed to prevent any fire risk even in case of failure of the fan (single abnormal condition). Use an enclosure rated V-1 or V-0 according to IEC 60695-11-10 standard, and make sure that the enclosure openings are facing sideways or top, not bottom.

2.3. Safety isolation

The Yocto-Watt-V2-C is designed as two distinct electrical circuits, separated by a reinforced isolation. This isolation plays an essential role for the safety of system users.

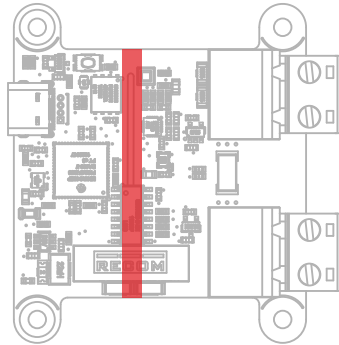

Yocto-Watt-V2-C safety isolation

On the one side of the isolation where the USB connector can be found, components connectors and cables connected to the system are accessible to the user without risk: the circuit power supply is floating, protected by a double isolation or a reinforced isolation, and voltage levels are below 6V (*Safety Extra Low Voltage*).

On the side with the terminal blocks, connected cables may carry hazardous live voltage, depending on the application. So unless you are only connecting to non-hazardous voltage, make sure that **no conductive object is brought nearer than 3mm from the hazardous side of the device**, even accidentally. Pay attention to the following items:

- To fix the Yocto-Watt-V2-C on the hazardous side, **use isolating plastic screw and spacers only**. You will find PPS / PEEK screws and spacers in the Yoctopuce shop, that are resistant to high temperatures.
- If you intend to use a metal enclosure, make sure that it does not come nearer than 3mm from the hazardous side of the Yocto-Watt-V2-C, and that it prevents any access to the hazardous side.
- In order to properly protect from hazardous voltages, a solid isolation should be at least 0.4mm thick.

The specifications of the safety isolation are as follows:

- **Test voltage:** 3kV
- **Clearance distance:** 3.8mm
- **Creepage distance:** 3.8 / 6mm
- **Material group:** Cat. I / IIIa

The specifications of the isolation between terminal block contacts are as follow:

- **Dielectric strength:** 1.5kV
- **Clearance distance:** 3mm
- **Creepage distance:** 3mm
- **Material group:** Cat IIIa

2.4. Optional accessories

The accessories below are not necessary to use the Yocto-Watt-V2-C module but might be useful depending on your project. These are mostly common products that you can buy from your favorite DIY store. To save you the tedious job of looking for them, most of them are also available on the Yoctopuce shop.

Screws and spacers

In order to mount the Yocto-Watt-V2-C module, you can put small screws in the 3mm assembly holes, with a screw head no larger than 8mm. The best way is to use threaded spacers, which you can then mount wherever you want. You can find more details on this topic in the chapter about assembly and connections.

Micro-USB hub

If you intend to put several Yoctopuce modules in a very small space, you can connect them directly to a micro-USB hub. Yoctopuce builds a multi-TT USB hub particularly small for this purpose (down to 20mmx36mm), on which you can directly solder a USB cable instead of using a USB plug. For more details, see the micro-USB hub information sheet.

YoctoHub-Ethernet, YoctoHub-Wireless and YoctoHub-GSM

You can add network connectivity to your Yocto-Watt-V2-C, thanks to the YoctoHub-Ethernet, the YoctoHub-Wireless and the YoctoHub-GSM which provides respectively Ethernet, WiFi and GSM connectivity. All of them can drive up to three devices and behave exactly like a regular computer running the VirtualHub application³.

1.27mm (or 1.25mm) connectors

In case you wish to connect your Yocto-Watt-V2-C to a Micro-hub USB or a YoctoHub without using a bulky USB connector, you can use the four 1.27mm pads just behind the USB connector. There are two options.

You can mount the Yocto-Watt-V2-C directly on the hub using screw and spacers, and connect it using 1.27mm board-to-board connectors. To prevent shortcuts, it is best to solder the female connector on the hub and the male connector on the Yocto-Watt-V2-C.


You can also use a small 4-wires cable with a 1.27mm connector. 1.25mm works as well, it does not make a difference for 4 pins. This makes it possible to move the device a few inches away. Don't put it too far away if you use that type of cable, because as the cable is not shielded, it may cause undesirable electromagnetic emissions.

Enclosure

Your Yocto-Watt-V2-C has been designed to be installed as is in your project. Nevertheless, Yoctopuce sells enclosures specifically designed for Yoctopuce devices. More details are available on the Yoctopuce web site ⁴. The suggested enclosure model for your Yocto-Watt-V2-C is the YoctoBox-Watt-Transp.

³ <http://www.yoctopuce.com/EN/virtualhub.php>

⁴ <http://www.yoctopuce.com/EN/products/category/enclosures>

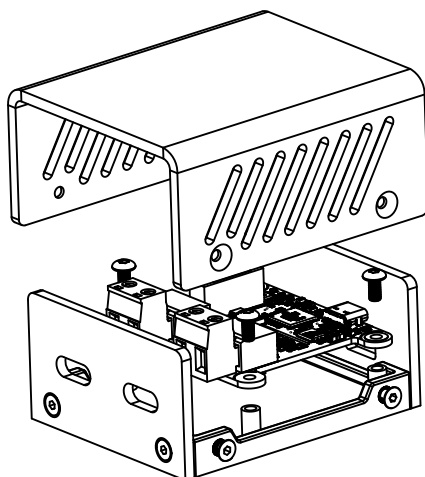


You can install your Yocto-Watt-V2-C in an optional enclosure

3. Direct current vs. alternating current


3.1. Measure of the voltage

The Yocto-Watt-V2-C module is able to measure a direct voltage as well as an alternating voltage. You can typically measure a direct voltage on the terminals of a battery or at the output of a stabilized power supply for electronic equipment. It is supposed to stay relatively stable over time.

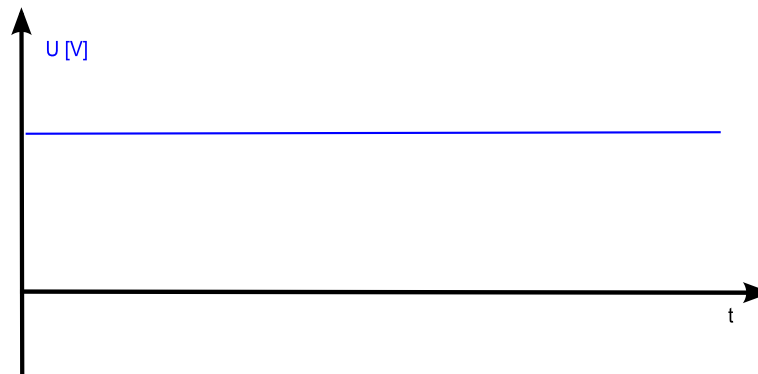

Direct voltage, stable over time


An alternating voltage is a voltage which periodically varies over time. The most usual example is the voltage of the mains. In Europe, the voltage of the mains varies between $-325V$ and $+325V$ about fifty times per second, for an effective voltage¹ of $230V$. A dynamo such as the one on your bike also produces alternating current.

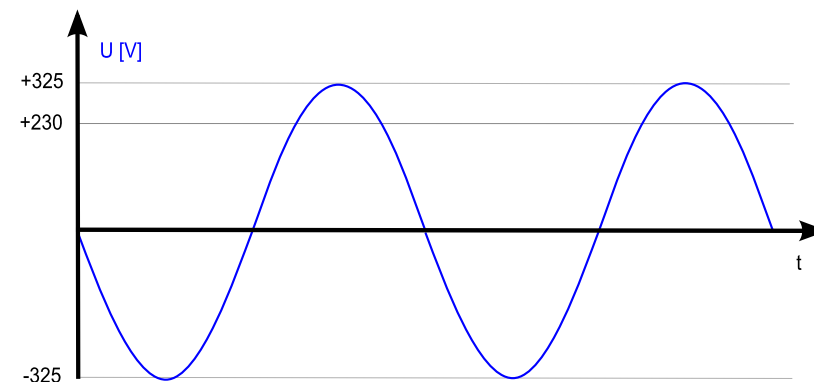

Alternating voltage, for example the voltage of the mains: it varies periodically.

¹ Also known as "RMS voltage", where RMS stands for *Root Mean Square*.

Note that in some exceptional cases, an alternating voltage may not be symmetrical with respect to neutral. It can then be described as the sum of a DC voltage and a symmetrical AC voltage.

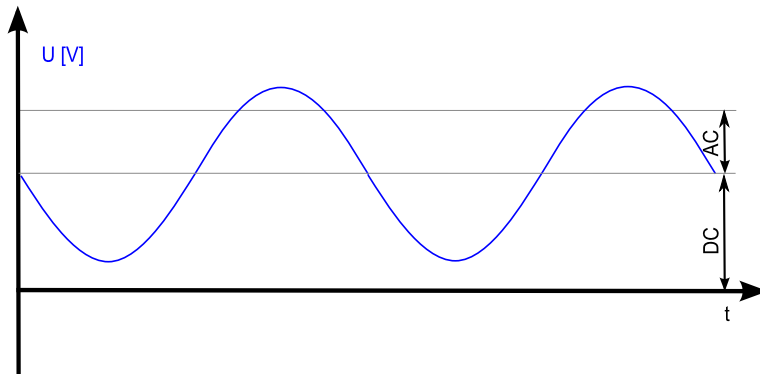

Asymmetrical alternating voltage. It is the sum of a direct voltage and of an alternating voltage.

For this reason, the Yocto-Watt-V2-C provides voltage measures in the shape of a measure of the direct voltage (DC) coupled with a measure of the alternating voltage (AC). When you measure a voltage with a Yocto-Watt-V2-C, several distinct cases can occur:

- A non null DC value and a null AC value: you are measuring a direct voltage.
- A non null AC value and an almost null DC value: you are measuring a symmetrical alternating voltage.
- A non null AC value and a non null DC value: you are measuring an alternating voltage which is not symmetrical.
- A non null stable DC value and a completely random AC value: you are measuring a voltage which is not stabilized, typically a (somewhat too) cheap AC adapter.

The Yocto-Watt-V2-C's *voltage1* channel measures DC voltage, the *voltage2* channel measures AC voltage. You can also differentiate between them by checking their units (resp. "V DC" and "V AC"). Note that the AC voltage and current AC measure given by the Yocto-Watt-V2-C corresponds to the [RMS value](#) of the AC component (and not to the peak amplitude).

3.2. Measure of the current

The Yocto-Watt-V2-C measure of the current is performed in a way similar to the voltage measure. When the voltage measured is direct, the Yocto-Watt-V2-C does a DC current measure only. With an alternating voltage (AC), the Yocto-Watt-V2-C performs an AC current measure with a DC component (usually null) and an AC component, given as an [RMS value](#).

The Yocto-Watt-V2-C *current1* channel measures the DC component of the current, while the *current2* channel measures the AC component. as with voltage, you can differentiate them by checking their units ("mA DC" and "mA AC"). Like for AC voltage, the AC current measure given by the Yocto-Watt-V2-C corresponds to the [RMS value](#) of the AC component (and not to the peak amplitude).

3.3. Measure of the power

Power is usually computed as the product of the voltage at the terminals of an appliance and the current going through it. With direct current, it is enough to multiply the DC voltage measure by the DC current measure to compute the consumed power.


With alternating current, it is not as simple. Multiplying the AC voltage by the AC current enables you to compute the **apparent power** of the appliance (in VA), but not the **active power** which indicates the power actually consumed by an appliance. When measuring active power, it's essential to bear in mind that current consumption is not necessarily proportional to voltage. To calculate active power correctly, we need to integrate the product *current* * *voltage* on the basis of samples measured several hundred or several thousand times per second.

The ratio between active power and apparent power is measured and called the **power factor**. For electricity suppliers, a consumer with a low power factor is an inefficient consumer, as they require a higher power distribution capacity (apparent power) than the power they will actually use. From an energy-saving point of view, however, the picture is different: to achieve low power consumption, the most efficient modern appliances generally have a rather low power factor.

Depending on the type of current consumption throughout the periodic voltage evolution, we can distinguish several load types .

Resistive load


A *resistive load* is an electrical consumer whose instantaneous current consumption is always proportional to voltage. Typical examples of resistive loads include the the traditional filament bulb, or the resistance-heated toaster. This is the simplest type of load to measure: for a resistive load, the *active power* equals the *apparent power*.

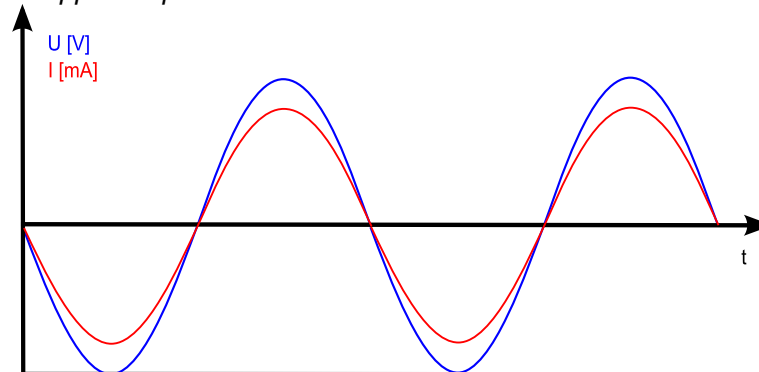

Consumption profile of a purely resistive load supplied from the mains.

Inductive load

An inductive load, in the opposite to a purely resistive load, is a load which has the specificity of inducing a shift between voltage and current. During each period, it releases part of the energy previously absorbed. The *active power* is therefore lower than the *apparent power* and we thus have the *power factor* lower than 1. In the case of purely inductive loads, we can compute the *power factor* as the cosine of the phase shift between voltage and current: it is called $\cos(\Phi)$.

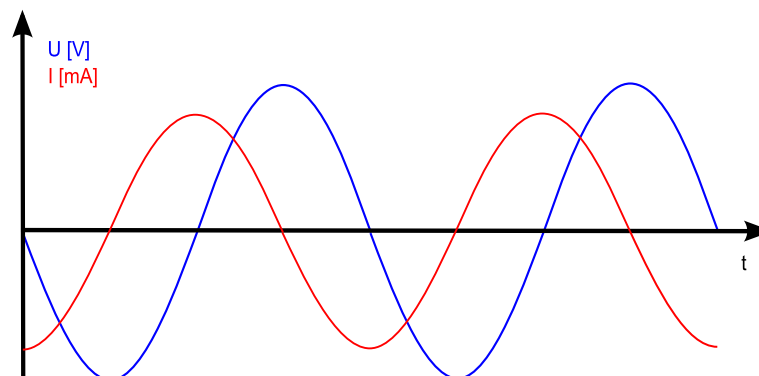


Consumption profile of a purely inductive, mains-powered load.

Devices representing inductive loads are often characterized by the presence of windings (transformers, motors, solenoids), and it is the inductance of this winding that causes the phase shift between voltage and current.

Loads with harmonic distortions

Nowadays, modern electronic devices that are connected to the mains are generally neither resistive loads nor simple inductive loads: they use a *switch-mode* power supply, which draws current intermittently during each phase, usually just when voltage is at its highest. For the rest of the time, current consumption is zero. *Active power* is again less than *apparent power*, and the *power factor* is less than 1. However, as the current is not sinusoidal, interpretation of the Φ phase shift between

voltage and current is no longer as intuitive, as the rapid changes in current consumption at each phase add an infinite number of harmonics, hence the name of this type of load.

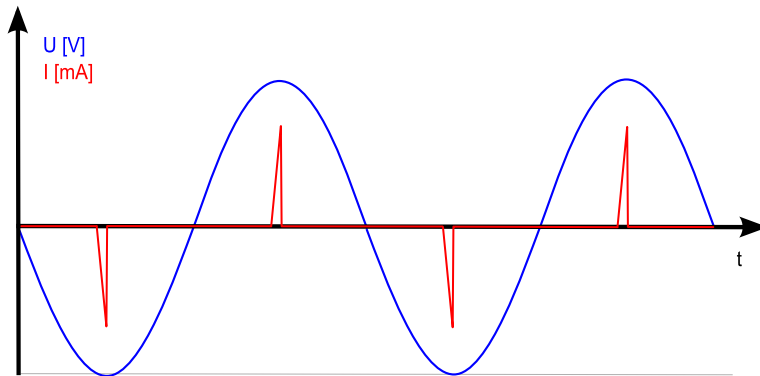

Example of consumption profile for a load with harmonic distortion.

Accurately measuring of the active power and the $\cos(\Phi)$ for loads with harmonic distortions requires much faster sampling than for resistive and inductive loads, otherwise, active power is significantly underestimated.

3.4. Accuracy

In the presence of a direct current source, the power measure performed by the Yocto-Watt-V2-C is accurate to $\pm 1\text{mW} / 1\%$. Voltage measure is accurate to $\pm 10\text{mV} / 1\%$, while current measure is accurate to $\pm 1\text{mA} / 1\%$.

The Yocto-Watt-V2-C is slightly less accurate for AC sources, with a margin of error of $\pm 0.1\text{W} / 1\%$. Thanks to its 5.3 kHz sampling, this typical margin of error is also applicable for loads with high harmonic distortion and for frequencies up to 400 Hz². Voltage measure is accurate to $\pm 50\text{mV} / 1\%$, while current measure is accurate to $\pm 2\text{mA} / 1\%$.

The average noise level on instantaneous measurements at 5.3 kHz is $\pm 50\text{mV}$ on the voltage measurement and $\pm 2\text{mA}$ on the current measurement.

3.5. Periodic consumption profile

To enable detailed analysis of power supply and consumer behavior, the Yocto-Watt-V2-C captures the voltage and current variation profile over a few periods in real time, rather like an oscilloscope. This makes it possible to check the regularity of the sinusoidal input voltage, and to observe the current consumption profile over the period for loads with high harmonic distortion.

The maximum capture time is limited to just under one second. Due to data transfer times, it is not possible to chain captures end-to-end to obtain a continuous capture longer than this.

3.6. Capturing transient events

You can also use the Yocto-Watt-V2-C to make short recordings of the instantaneous evolution of voltage and current, automatically triggered on the basis of particular events detected in the measures, such as a consumption peak, for example. You must configure the trigger criterion (type of maximum or minimum sought) in the module, which then updates the capture each time the previous maximum or minimum sought is exceeded. This makes it easy to measure short-duration events such as an ignition peak.

² The previous version, the Yocto-Watt, was limited to 50 or 60 Hz and severely underestimated loads with high harmonic distortion.

4. First steps

By design, all Yoctopuce modules are driven the same way. Therefore, user's guides for all the modules of the range are very similar. If you have already carefully read through the user's guide of another Yoctopuce module, you can jump directly to the description of the module functions.

4.1. Prerequisites

In order to use your Yocto-Watt-V2-C module, you should have the following items at hand.

A computer

Yoctopuce modules are intended to be driven by a computer (or possibly an embedded microprocessor). You will write the control software yourself, according to your needs, using the information provided in this manual.

Yoctopuce provides software libraries to drive its modules for the following operating systems: **Windows, Linux, macOS, and Android**. Yoctopuce modules do not require the installation of specific drivers, as they use the HID driver¹ standardly supplied in all operating systems.

The general rule regarding supported operating system versions is as follows: Yoctopuce development tools are supported for all versions covered by the operating system vendor's support, including the duration of extended support (*long term support* or LTS). Yoctopuce pays particular attention to long-term support, and whenever possible with reasonable effort, our tools are designed so that they can be used on older systems even several years after the end of the manufacturer's extended support.

Moreover, the programming libraries used to drive our modules being available in source code, you can generally recompile them to run on even older operating systems. To date, our programming library can still be compiled to run on operating systems released in 2008, such as Windows XP SP3 or Linux Debian Squeeze.

The architectures supported by Yoctopuce software libraries are as follows:

- Windows: Intel 64 bits and 32 bits
- Linux: Intel 64 bits and 32 bits, ARM 64 bits and 32 bits, including Raspberry Pi OS.
- macOS: Intel 64 bits and Apple Silicon (ARM)

Under Linux, communication with our USB modules requires the libusb library, version 1.0 or higher, which is available on all common distributions. Libraries and command-line tools should be easy to


¹ The HID driver is manages peripheral devices such as mouse, keyboard, and so on.

recompile on any UNIX variant (Linux, FreeBSD, ...) from the last fifteen years for which libusb-1.0 is available and functional.

Under Android, the ability to connect a USB module depends on whether the tablet or phone supports the *USB Host mode*.


An USB cable, type A - Type-C

USB connectors come in several shapes. The "standard" size is the one you probably use to connect your printer. The "mini" size has more or less disappeared. The "micro" size was the smallest when the first Yoctopuce modules were designed. Over the last few years, USB-C connectors have appeared and are about to replace all other types. That is why, since 2024 Yoctopuce, is progressively migrating its product line to USB-C².

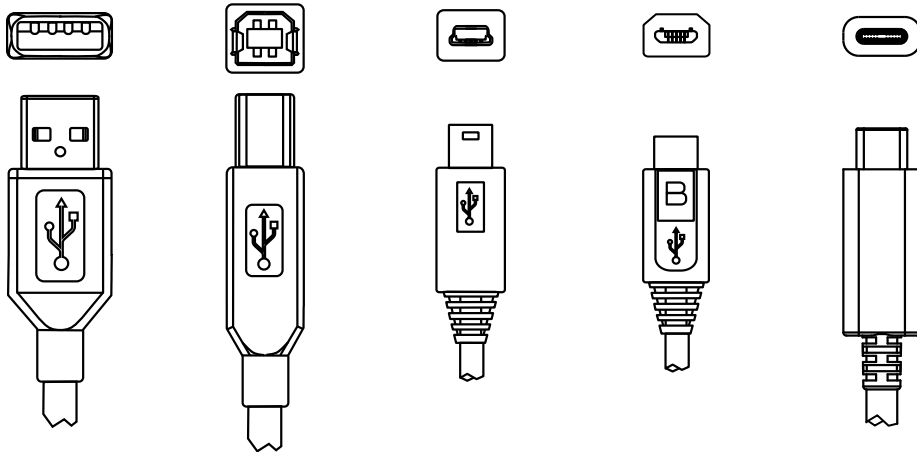

The most common USB 2.0 connectors: A, B, Mini B, Micro B and USB-C.

To connect your Yocto-Watt-V2-C module to a computer, you need an USB cable of type A-Type-C or type C-Type-C. The price of this cable may vary a lot depending on the source, look for it under the name *USB A to Type-C Data cable*. Make sure not to buy a simple USB charging cable without data connectivity. The correct type of cable is available on the Yoctopuce shop.

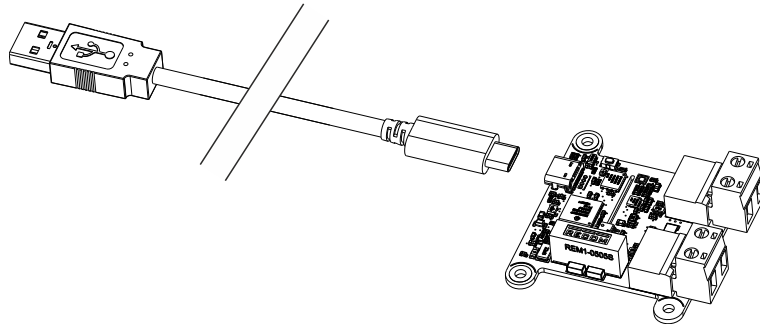

You must plug in your Yocto-Watt-V2-C module with a USB 2.0 cable of type A-Type-C

If you insert a USB hub between the computer and the Yocto-Watt-V2-C module, make sure to take into account the USB current limits. If you do not, be prepared to face unstable behaviors and unpredictable failures. You can find more details on this topic in the chapter about assembly and connections.

4.2. Testing USB connectivity

At this point, your Yocto-Watt-V2-C should be connected to your computer, which should have recognized it. It is time to make it work.

² www.yoctopuce.com/EN/article/would-you-like-usb-c-devices

Go to the Yoctopuce web site and download the *VirtualHub* software³. It is available for Windows, Linux, and macOS. Normally, VirtualHub serves as an abstraction layer for languages which cannot access the hardware layers of your computer. However, it also offers a succinct interface to configure your modules and to test their basic functions. You access this interface with a simple web browser⁴. Start VirtualHub in a command line, open your preferred web browser and enter the URL `http://127.0.0.1:4444`. The list of the Yoctopuce modules connected to your computer is displayed.

Serial	Logical Name	Description	Action
VIRTHUB2-3880db7f12		VirtualHub-V2	configure view log file
└─YWATMK2C-2CD189		Yocto-Watt-V2-C	configure view log file beacon

Module list as displayed in your web browser

4.3. Localization

You can then physically localize each of the displayed modules by clicking on the **beacon** button. This puts the Yocto-led of the corresponding module in Yocto-beacon mode. It starts flashing, which allows you to easily localize it. The second effect is to display a little blue circle on the screen. You obtain the same behavior when pressing the Yocto-button of the module.

4.4. Test of the module

The first item to check is that your module is working well: click on the serial number corresponding to your module. This displays a window summarizing the properties of your Yocto-Watt-V2-C.

YWATMK2C-2CD189



YWATMK2C-2CD189 is a 58x50mm board featuring a wattmeter, a voltmeter and an ammeter for DC and AC. It can also capture the load periodic consumption profile and peak transients.

Module

Serial # YWATMK2C-2CD189
 Product name: Yocto-Watt-V2-C
 Logical name:
 Firmware: 67645
 Consumption: 64 mA
 Beacon: Inactive [turn on](#)
 Luminosity: 50%

Sensors [live view](#)

Voltage	DC	AC
Current	0 V	236.3 V
	0 mA	144 mA

Power 26.726 W
 Power factor 0.79
 Cos Φ 0.78
 Energy [reset](#) for 2m 17s 1.019 Wh

Power event capture

Capture type none [change](#)
 Threshold value 0 [reset](#)
 Last capture never [view](#)

Misc

[Open API browser](#)
[Get user manual from yoctopuce.com](#)


Close

Properties of the Yocto-Watt-V2-C module

This window allows you, among other things, to play with your module to check that it is working correctly, as measured values are displayed in real time. By clicking on button **live view**, you can get an instant view of the periodic current profile of the load:

³ www.yoctopuce.com/EN/virtualhub.php

⁴ The interface is tested on Chrome, FireFox, Safari, Edge et IE 11.

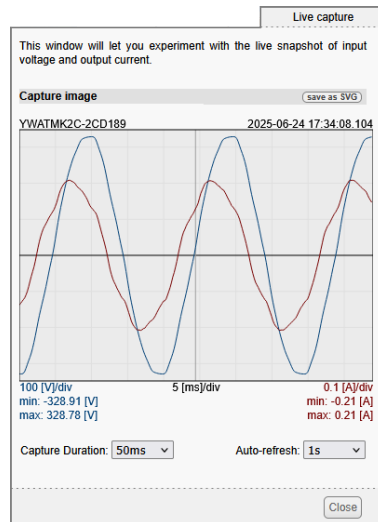

Real-time current consumption profile.

You can also activate the automatic capture of transient events, for example to measure an occasional current peak. The value of the last maximum detected is then displayed in this window, and it is then possible to observe the capture of the consumption profile at the time when the event occurred.

4.5. Configuration

When, in the module list, you click on the **configure** button corresponding to your module, the configuration window is displayed.

YWATMK2C-2CD189

Edit parameters for device YWATMK2C-2CD189, and click on the **Save** button.

Serial #: YWATMK2C-2CD189
 Product name: Yocto-Watt-V2-C
 Firmware: 67645 (upgrade)

(Export Settings) (Import Settings)

Logical name:
 Luminosity: (signal leds only)

Device functions

Each function of the device has a physical name and a logical name. You can change the logical name using the **rename** button.

YWATMK2C-2CD189.current1 / (rename)
 YWATMK2C-2CD189.current2 / (rename)
 YWATMK2C-2CD189.inputCapture / (rename)
 Automatic capture trigger at power on: none
 Initial threshold value at power on: 0
 YWATMK2C-2CD189.power / (rename)
 YWATMK2C-2CD189.voltage1 / (rename)
 Zero calibration: 0 [mV] (zero)
 YWATMK2C-2CD189.voltage2 / (rename)
 YWATMK2C-2CD189.dataLogger / (rename)

Datalogger and Timed reports (configure)

Timed reports are disabled
 Recording to flash memory is disabled
 no recorded data

(Save) (Cancel)

Yocto-Watt-V2-C module configuration

Firmware

The module firmware can easily be updated with the help of the interface. Firmware destined for Yoctopuce modules are available as .byn files and can be downloaded from the Yoctopuce web site.

To update a firmware, simply click on the **upgrade** button on the configuration window and follow the instructions. If the update fails for one reason or another, unplug and re-plug the module and start the update process again. This solves the issue in most cases. If the module was unplugged while it was being reprogrammed, it does probably not work anymore and is not listed in the interface.

However, it is always possible to reprogram the module correctly by using VirtualHub ⁵ in command line ⁶.

Logical name of the module

The logical name is a name that you choose, which allows you to access your module, in the same way a file name allows you to access its content. A logical name has a maximum length of 19 characters. Authorized characters are A..Z, a..z, 0..9, `_`, and `-`. If you assign the same logical name to two modules connected to the same computer and you try to access one of them through this logical name, behavior is undetermined: you have no way of knowing which of the two modules answers.

Luminosity

This parameter allows you to act on the maximal intensity of the leds of the module. This enables you, if necessary, to make it a little more discreet, while limiting its power consumption. Note that this parameter acts on all the signposting leds of the module, including the Yocto-led. If you connect a module and no led turns on, it may mean that its luminosity was set to zero.

Logical names of functions

Each Yoctopuce module has a serial number and a logical name. In the same way, each function on each Yoctopuce module has a hardware name and a logical name, the latter can be freely chosen by the user. Using logical names for functions provides a greater flexibility when programming modules.

The eight functions provided by the Yocto-Watt-V2-C module are *power*, *current1* and *current2*, *voltage1* and *voltage2*, *inputCapture* and *dataLogger*. *current1* and *current2* correspond to the functions measuring DC and AC current respectively. *voltage1* and *voltage2* correspond to the voltage measures for DC and AC respectively. *inputCapture* is used to setup automatic capture of transient events. *dataLogger* is used to control data recording. Simply click on the corresponding "rename" button to assign a new logical name to one of the functions.

If you want the Yocto-Watt-V2-C to automatically store a consumption profile on power-up in the presence of particular events, such as a consumption peak, you can configure the desired capture criterion in this window.

If you wish to improve measure accuracy, you can also perform a zero calibration in this window.

⁵ www.yoctopuce.com/EN/virtualhub.php


⁶ More information available in the VirtualHub documentation

5. Assembly and connections

This chapter provides important information regarding the use of the Yocto-Watt-V2-C module in real-world situations. Make sure to read it carefully before going too far into your project if you want to avoid pitfalls.

5.1. Fixing

While developing your project, you can simply let the module hang at the end of its cable. Check only that it does not come in contact with any conducting material (such as your tools). When your project is almost at an end, you need to find a way for your modules to stop moving around.

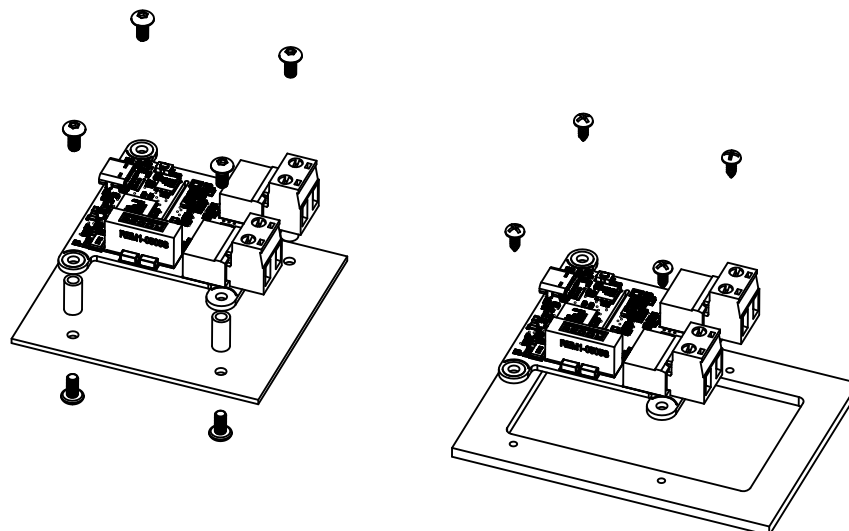

Examples of assembly on supports

The Yocto-Watt-V2-C module contains 3mm assembly holes. You can use these holes for screws. The screw head diameter must not be larger than 8mm or they will damage the module circuits. Make sure that the lower surface of the module is not in contact with the support. We recommend using spacers, but other methods are possible. Nothing prevents you from fixing the module with a glue gun; it will not be good-looking, but it will hold.

5.2. USB power distribution

Although USB means *Universal Serial BUS*, USB devices are not physically organized as a flat bus but as a tree, using point-to-point connections. This has consequences on power distribution: to

make it simple, every USB port must supply power to all devices directly or indirectly connected to it. And USB puts some limits.

In theory, a USB port provides 100mA, and may provide up to 500mA if available and requested by the device. In the case of a hub without external power supply, 100mA are available for the hub itself, and the hub should distribute no more than 100mA to each of its ports. This is it, and this is not much. In particular, it means that in theory, it is not possible to connect USB devices through two cascaded hubs without external power supply. In order to cascade hubs, it is necessary to use self-powered USB hubs, that provide a full 500mA to each subport.

In practice, USB would not have been as successful if it was really so picky about power distribution. As it happens, most USB hub manufacturers have been doing savings by not implementing current limitation on ports: they simply connect the computer power supply to every port, and declare themselves as *self-powered hub* even when they are taking all their power from the USB bus (in order to prevent any power consumption check in the operating system). This looks a bit dirty, but given the fact that computer USB ports are usually well protected by a hardware current limitation around 2000mA, it actually works in every day life, and seldom makes hardware damage.

What you should remember: if you connect Yoctopuce modules through one, or more, USB hub without external power supply, you have no safe-guard and you depend entirely on your computer manufacturer attention to provide as much current as possible on the USB ports, and to detect overloads before they lead to problems or to hardware damages. When modules are not provided enough current, they may work erratically and create unpredictable bugs. If you want to prevent any risk, do not cascade hubs without external power supply, and do not connect peripherals requiring more than 100mA behind a bus-powered hub.

In order to help you controlling and planning overall power consumption for your project, all Yoctopuce modules include a built-in current sensor that indicates (with 5mA precision) the consumption of the module on the USB bus.

Note also that the USB cable itself may also cause power supply issues, in particular when the wires are too thin or when the cable is too long ¹. Good cables are usually made using AWG 26 or AWG 28 wires for data lines and AWG 24 wires for power.

5.3. Electromagnetic compatibility (EMI)

Connection methods to integrate the Yocto-Watt-V2-C obviously have an impact on the system overall electromagnetic emissions, and therefore also impact the conformity with international standards.

When we perform reference measurements to validate the conformity of our products with IEC CISPR 11, we do not use any enclosure but connect the devices using a shielded USB cable, compliant with USB 2.0 specifications: the cable shield is connected to both connector shells, and the total resistance from shell to shell is under 0.6Ω. The USB cable length is 3m, in order to expose one meter horizontally, one meter vertically and keep the last meter close to the host computer within a ferrite bead.

If you use a non-shielded USB cable, or an improperly shielded cable, your system will work perfectly well but you may not remain in conformity with the emission standard. If you are building a system made of multiple devices connected using 1.27mm pitch connectors, or with a sensor moved away from the device CPU, you can generally recover the conformity by using a metallic enclosure acting as an external shield.

Still on the topic of electromagnetic compatibility, the maximum supported length of the USB cable is 3m. In addition to the voltage drop issue mentioned above, using longer wires would require to run extra tests to assert compatibility with the electromagnetic immunity standards.

¹ www.yoctopuce.com/EN/article/usb-cables-size-matters


6. Programming, general concepts

The Yoctopuce API was designed to be at the same time simple to use and sufficiently generic for the concepts used to be valid for all the modules in the Yoctopuce range, and this in all the available programming languages. Therefore, when you have understood how to drive your Yocto-Watt-V2-C with your favorite programming language, learning to use another module, even with a different language, will most likely take you only a minimum of time.

6.1. Programming paradigm

The Yoctopuce API is object oriented. However, for simplicity's sake, only the basics of object programming were used. Even if you are not familiar with object programming, it is unlikely that this will be a hinderance for using Yoctopuce products. Note that you will never need to allocate or deallocate an object linked to the Yoctopuce API: it is automatically managed.

There is one class per Yoctopuce function type. The name of these classes always starts with a Y followed by the name of the function, for example *YTemperature*, *YRelay*, *YPressure*, and so on. There is also a *YModule* class, dedicated to managing the modules themselves, and finally there is the static *YAPI* class, that supervises the global workings of the API and manages low level communications.

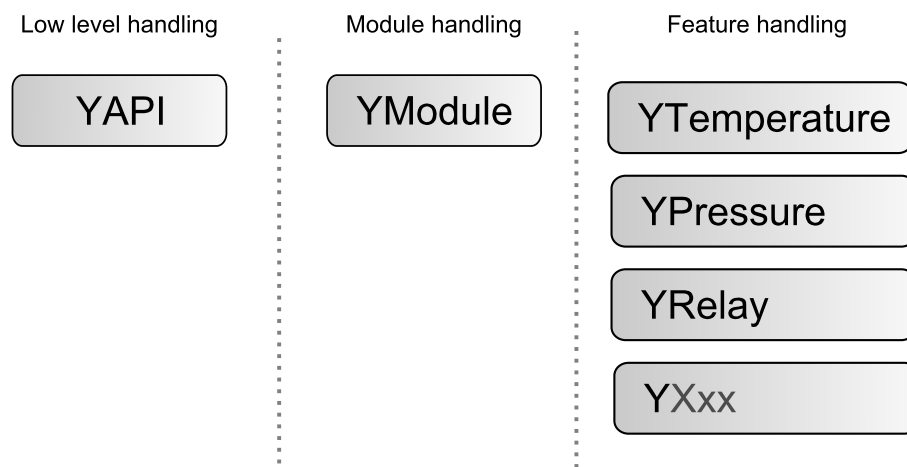

Structure of the Yoctopuce API

The YSensor class

Each Yoctopuce sensor function has its dedicated class: *YTemperature* to measure the temperature, *YVoltage* to measure a voltage, *YRelay* to drive a relay, etc. However there is a special class that can do more: *YSensor*.

The YSensor class is the parent class for all Yoctopuce sensors, and can provide access to any sensor, regardless of its type. It includes methods to access all common functions. This makes it easier to create applications that use many different sensors. Moreover, if you create an application based on YSensor, it will work with all Yoctopuce sensors, even those which do not yet exist.

Programmation

In the Yoctopuce API, priority was put on the ease of access to the module functions by offering the possibility to make abstractions of the modules implementing them. Therefore, it is quite possible to work with a set of functions without ever knowing exactly which module are hosting them at the hardware level. This tremendously simplifies programming projects with a large number of modules.

From the programming stand point, your Yocto-Watt-V2-C is viewed as a module hosting a given number of functions. In the API, these functions are objects which can be found independently, in several ways.

Access to the functions of a module

Access by logical name

Each function can be assigned an arbitrary and persistent logical name: this logical name is stored in the flash memory of the module, even if this module is disconnected. An object corresponding to an Xxx function to which a logical name has been assigned can then be directly found with this logical name and the *YXxx.FindXxx* method. Note however that a logical name must be unique among all the connected modules.

Access by enumeration

You can enumerate all the functions of the same type on all the connected modules with the help of the classic enumeration functions *FirstXxx* and *nextXxxx* available for each *YXxx* class.

Access by hardware name

Each module function has a hardware name, assigned at the factory and which cannot be modified. The functions of a module can also be found directly with this hardware name and the *YXxx.FindXxx* function of the corresponding class.

Difference between *Find* and *First*

The *YXxx.FindXxxx* and *YXxx.FirstXxxx* methods do not work exactly the same way. If there is no available module, *YXxx.FirstXxxx* returns a null value. On the opposite, even if there is no corresponding module, *YXxx.FindXxxx* returns a valid object, which is not online but which could become so if the corresponding module is later connected.

Function handling

When the object corresponding to a function is found, its methods are available in a classic way. Note that most of these subfunctions require the module hosting the function to be connected in order to be handled. This is generally not guaranteed, as a USB module can be disconnected after the control software has started. The *isOnline* method, available in all the classes, is then very helpful.

Access to the modules

Even if it is perfectly possible to build a complete project while making a total abstraction of which function is hosted on which module, the modules themselves are also accessible from the API. In fact, they can be handled in a way quite similar to the functions. They are assigned a serial number at the factory which allows you to find the corresponding object with *YModule.Find()*. You can also assign arbitrary logical names to the modules to make finding them easier. Finally, the *YModule* class contains the *YModule.FirstModule()* and *nextModule()* enumeration methods allowing you to list the connected modules.

Functions/Module interaction

From the API standpoint, the modules and their functions are strongly uncorrelated by design. Nevertheless, the API provides the possibility to go from one to the other. Thus, the `get_module()` method, available for each function class, allows you to find the object corresponding to the module hosting this function. Inversely, the `YModule` class provides several methods allowing you to enumerate the functions available on a module.

6.2. The Yocto-Watt-V2-C module

module : Module

attribute	type	modifiable ?
productName	String	read-only
serialNumber	String	read-only
logicalName	String	modifiable
productId	Hexadecimal number	read-only
productRelease	Hexadecimal number	read-only
firmwareRelease	String	read-only
persistentSettings	Enumerated	modifiable
luminosity	0..100%	modifiable
beacon	On/Off	modifiable
upTime	Time	read-only
usbCurrent	Used current (mA)	read-only
rebootCountdown	Integer	modifiable
userVar	Integer	modifiable

power : Power

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
unit	String	read-only
currentValue	Fixed-point number	read-only
lowestValue	Fixed-point number	modifiable
highestValue	Fixed-point number	modifiable
currentRawValue	Fixed-point number	read-only
logFrequency	Frequency	modifiable
reportFrequency	Frequency	modifiable
advMode	Enumerated	modifiable
calibrationParam	Calibration parameters	modifiable
resolution	Fixed-point number	modifiable
sensorState	Integer	read-only
powerFactor	Fixed-point number	read-only
cosPhi	Fixed-point number	read-only
meter	Fixed-point number	modifiable
deliveredEnergyMeter	Fixed-point number	read-only
receivedEnergyMeter	Fixed-point number	read-only
meterTimer	Integer	read-only

voltage1 : Voltage

voltage2 : Voltage

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
unit	String	read-only
currentValue	Fixed-point number	read-only
lowestValue	Fixed-point number	modifiable

highestValue	Fixed-point number	modifiable
currentRawValue	Fixed-point number	read-only
logFrequency	Frequency	modifiable
reportFrequency	Frequency	modifiable
advMode	Enumerated	modifiable
calibrationParam	Calibration parameters	modifiable
resolution	Fixed-point number	modifiable
sensorState	Integer	read-only
enabled	Boolean	modifiable

current1 : Current**current2 : Current**

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
unit	String	read-only
currentValue	Fixed-point number	read-only
lowestValue	Fixed-point number	modifiable
highestValue	Fixed-point number	modifiable
currentRawValue	Fixed-point number	read-only
logFrequency	Frequency	modifiable
reportFrequency	Frequency	modifiable
advMode	Enumerated	modifiable
calibrationParam	Calibration parameters	modifiable
resolution	Fixed-point number	modifiable
sensorState	Integer	read-only
enabled	Boolean	modifiable

inputCapture : InputCapture

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
lastCaptureTime	Time	read-only
nSamples	Integer	modifiable
samplingRate	Integer	read-only
captureType	Enumerated	modifiable
condValue	Fixed-point number	modifiable
condAlign	0..100%	modifiable
captureTypeAtStartup	Enumerated	modifiable
condValueAtStartup	Fixed-point number	modifiable

dataLogger : DataLogger

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
currentRunIndex	Integer	read-only
timeUTC	UTC time	modifiable
recording	Enumerated	modifiable
autoStart	On/Off	modifiable
beaconDriven	On/Off	modifiable
usage	0..100%	read-only
clearHistory	Boolean	modifiable

6.3. Module

Global parameters control interface for all Yoctopuce devices

The `YModule` class can be used with all Yoctopuce USB devices. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

productName

Character string containing the commercial name of the module, as set by the factory.

serialNumber

Character string containing the serial number, unique and programmed at the factory. For a Yocto-Watt-V2-C module, this serial number always starts with YWATMK2C. You can use the serial number to access a given module by software.

logicalName

Character string containing the logical name of the module, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access a given module. If two modules with the same logical name are in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, _, and -.

productId

USB device identifier of the module, preprogrammed to 228 at the factory.

productRelease

Release number of the module hardware, preprogrammed at the factory. The original hardware release returns value 1, revision B returns value 2, and so on.

firmwareRelease

Release version of the embedded firmware, changes each time the embedded software is updated.

persistentSettings

State of persistent module settings: loaded from flash memory, modified by the user or saved to flash memory.

luminosity

Lighting strength of the informative leds (e.g. the Yocto-Led) contained in the module. It is an integer value which varies between 0 (LEDs turned off) and 100 (maximum led intensity). The default value is 50. To change the strength of the module LEDs, or to turn them off completely, you only need to change this value.

beacon

Activity of the localization beacon of the module.

upTime

Time elapsed since the last time the module was powered on.

usbCurrent

Current consumed by the module on the USB bus, in milli-amps.

rebootCountdown

Countdown to use for triggering a reboot of the module.

userVar

32bit integer variable available for user storage.

6.4. Power

electrical power sensor control interface, available for instance in the Yocto-Watt

The `YPower` class allows you to read and configure Yoctopuce electrical power sensors. It inherits from `YSensor` class the core functions to read measures, to register callback functions, and to access the autonomous datalogger. This class adds the ability to access the energy counter and the power factor.

logicalName

Character string containing the logical name of the electrical power sensor, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the electrical power sensor directly. If two electrical power sensors with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, `_`, and `-`.

advertisedValue

Short character string summarizing the current state of the electrical power sensor, that is automatically advertised up to the parent hub. For a electrical power sensor, the advertised value is the current value of the electrical power.

unit

Short character string representing the measuring unit for the electrical power.

currentValue

Current value of the electrical power, in Watt, as a floating point number.

lowestValue

Minimal value of the electrical power, in Watt, as a floating point number.

highestValue

Maximal value of the electrical power, in Watt, as a floating point number.

currentRawValue

Uncalibrated, unrounded raw value returned by the sensor, as a floating point number.

logFrequency

Datalogger recording frequency, or "OFF" when measures should not be stored in the data logger flash memory.

reportFrequency

Timed value notification frequency, or "OFF" when timed value notifications are disabled for this function.

advMode

Measuring mode for the advertised value pushed to the parent hub.

calibrationParam

Extra calibration parameters (for instance to compensate for the effects of an enclosure), as an array of 16 bit words.

resolution

Measure resolution (i.e. precision of the numeric representation, not necessarily of the measure itself).

sensorState

Sensor state (zero when a current measure is available).

powerFactor

Power factor (PF), i.e. ratio between the active power consumed (in W) and the apparent power provided (VA).

cosPhi

Displacement Power factor (DPF), i.e. cosine of the phase shift between the voltage and current fundamentals.

meter

Energy counter, maintained by the wattmeter by integrating the power consumption over time. Note that this counter is reset at each start of the device.

deliveredEnergyMeter

Delivered energy counter, maintained by the wattmeter by integrating the power consumption over time when positive only. Note that this counter is reset at each start of the device.

receivedEnergyMeter

Received energy counter, maintained by the wattmeter by integrating the power consumption over time when negative only. Note that this counter is reset at each start of the device.

meterTimer

Elapsed time since last energy counter reset, in seconds.

6.5. Voltage

voltage sensor control interface, available for instance in the Yocto-Motor-DC, the Yocto-Volt or the Yocto-Watt

The `YVoltage` class allows you to read and configure Yoctopuce voltage sensors. It inherits from `YSensor` class the core functions to read measures, to register callback functions, and to access the autonomous datalogger.

logicalName

Character string containing the logical name of the voltage sensor, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the voltage sensor directly. If two voltage sensors with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among `A..Z,a..z,0..9,_`, and `-`.

advertisedValue

Short character string summarizing the current state of the voltage sensor, that is automatically advertised up to the parent hub. For a voltage sensor, the advertised value is the current value of the voltage.

unit

Short character string representing the measuring unit for the voltage.

currentValue

Current value of the voltage, in Volt, as a floating point number.

lowestValue

Minimal value of the voltage, in Volt, as a floating point number.

highestValue

Maximal value of the voltage, in Volt, as a floating point number.

currentRawValue

Uncalibrated, unrounded raw value returned by the sensor, as a floating point number.

logFrequency

Datalogger recording frequency, or "OFF" when measures should not be stored in the data logger flash memory.

reportFrequency

Timed value notification frequency, or "OFF" when timed value notifications are disabled for this function.

advMode

Measuring mode for the advertised value pushed to the parent hub.

calibrationParam

Extra calibration parameters (for instance to compensate for the effects of an enclosure), as an array of 16 bit words.

resolution

Measure resolution (i.e. precision of the numeric representation, not necessarily of the measure itself).

sensorState

Sensor state (zero when a current measure is available).

enabled

Activation state of the input.

6.6. Current

current sensor control interface, available for instance in the Yocto-Amp, the Yocto-Motor-DC or the Yocto-Watt

The `YCurrent` class allows you to read and configure Yoctopuce current sensors. It inherits from `YSensor` class the core functions to read measures, to register callback functions, and to access the autonomous datalogger.

logicalName

Character string containing the logical name of the current sensor, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the current sensor directly. If two current sensors with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among `A..Z`, `a..z`, `0..9`, `_`, and `-`.

advertisedValue

Short character string summarizing the current state of the current sensor, that is automatically advertised up to the parent hub. For a current sensor, the advertised value is the current value of the current.

unit

Short character string representing the measuring unit for the current.

currentValue

Current value of the current, in mA, as a floating point number.

lowestValue

Minimal value of the current, in mA, as a floating point number.

highestValue

Maximal value of the current, in mA, as a floating point number.

currentRawValue

Uncalibrated, unrounded raw value returned by the sensor, as a floating point number.

logFrequency

Datalogger recording frequency, or "OFF" when measures should not be stored in the data logger flash memory.

reportFrequency

Timed value notification frequency, or "OFF" when timed value notifications are disabled for this function.

advMode

Measuring mode for the advertised value pushed to the parent hub.

calibrationParam

Extra calibration parameters (for instance to compensate for the effects of an enclosure), as an array of 16 bit words.

resolution

Measure resolution (i.e. precision of the numeric representation, not necessarily of the measure itself).

sensorState

Sensor state (zero when a current measure is available).

enabled

Activation state of the input.

6.7. InputCapture

instant snapshot trigger control interface

The `YInputCapture` class allows you to access data samples measured by a Yoctopuce electrical sensor. The data capture can be triggered manually, or be configured to detect specific events.

logicalName

Character string containing the logical name of the instant snapshot trigger, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the instant snapshot trigger directly. If two instant snapshot triggers with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, `_`, and `-`.

advertisedValue

Short character string summarizing the current state of the instant snapshot trigger, that is automatically advertised up to the parent hub. For an instant snapshot trigger, the advertised value is the time of the last capture (`lastCapture` attribute in hexadecimal format).

lastCaptureTime

Absolute time of the last input capture (time of trigger). The time reference is the same as the `upTime` attribute, i.e. the elapsed time since the module was turned on.

nSamples

Number of samples that will be captured.

samplingRate

Sampling frequency, in Hz.

captureType

Type of automatic conditional capture.

condValue

Current threshold value for automatic conditional capture.

condAlign

Relative position of the trigger event within the capture window.

captureTypeAtStartup

Type of automatic conditional capture applied at device power on.

condValueAtStartup

Threshold for automatic conditional capture at device power on.

6.8. DataLogger

DataLogger control interface, available on most Yoctopuce sensors.

A non-volatile memory for storing ongoing measured data is available on most Yoctopuce sensors. Recording can happen automatically, without requiring a permanent connection to a computer. The `YDataLogger` class controls the global parameters of the internal data logger. Recording control (start/stop) as well as data retrieval is done at sensor objects level.

logicalName

Character string containing the logical name of the data logger, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the data logger directly. If two data loggers with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, `_`, and `-`.

advertisedValue

Short character string summarizing the current state of the data logger, that is automatically advertised up to the parent hub. For a data logger, the advertised value is its recording state (ON or OFF).

currentRunIndex

Current run number, corresponding to the number of time the module was powered on with the dataLogger enabled at some point.

timeUTC

Current UTC time, in case it is desirable to bind an absolute time reference to the data stored by the data logger. This time must be set up by software.

recording

Activation state of the data logger. The data logger can be enabled and disabled at will, using this attribute, but its state on power on is determined by the **autoStart** persistent attribute. When the datalogger is enabled but not yet ready to record data, its state is set to PENDING.

autoStart

Automatic start of the data logger on power on. Setting this attribute ensures that the data logger is always turned on when the device is powered up, without need for a software command. Note: if the device doesn't have any time source at his disposal, it will wait for ~8 seconds before automatically starting to record.

beaconDriven

Synchronize the state of the localization beacon and the state of the data logger. If this attribute is set, it is possible to start the recording with the Yocto-button or the attribute `beacon` of the function YModule. In the same way, if the attribute `recording` is changed, the state of the localization beacon is updated. Note: when this attribute is set the localization beacon pulses at a slower rate than usual.

usage

Percentage of datalogger memory in use.

clearHistory


Attribute that can be set to true to clear recorded data.

6.9. What interface: Native, DLL or Service ?

There are several methods to control you Yoctopuce module by software.

Native control


In this case, the software driving your project is compiled directly with a library which provides control of the modules. Objectively, it is the simplest and most elegant solution for the end user. The end user then only needs to plug the USB cable and run your software for everything to work. Unfortunately, this method is not always available or even possible.

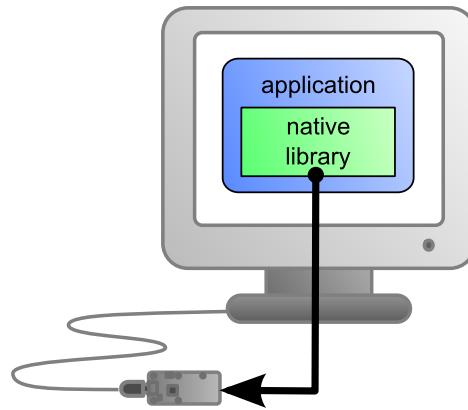

The application uses the native library to control the locally connected module

Native control by DLL

Here, the main part of the code controlling the modules is located in a DLL. The software is compiled with a small library which provides control of the DLL. It is the fastest method to code module support in a given language. Indeed, the "useful" part of the control code is located in the DLL which is the same for all languages: the effort to support a new language is limited to coding the small library which controls the DLL. From the end user stand point, there are few differences: one must simply make sure that the DLL is installed on the end user's computer at the same time as the main software.

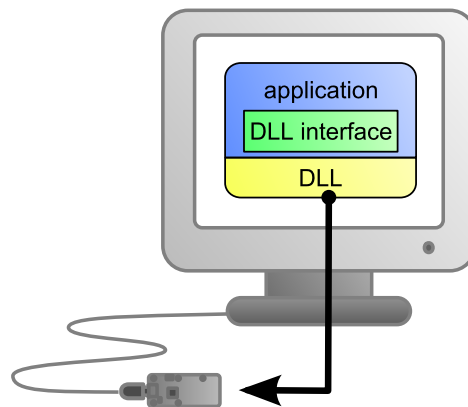


The application uses the DLL to natively control the locally connected module

Control by service


Some languages do simply not allow you to easily gain access to the hardware layers of the machine. It is the case for Javascript, for instance. To deal with this case, Yoctopuce provides a solution in the form of a small piece of software called *VirtualHub*¹. It can access the modules, and your application only needs to use a library which offers all necessary functions to control the modules via this VirtualHub. The end users will have to start VirtualHub before running the project control software itself, unless they decide to install the hub as a service/daemon, in which case VirtualHub starts automatically when the machine starts up.

¹ www.yoctopuce.com/EN/virtualhub.php

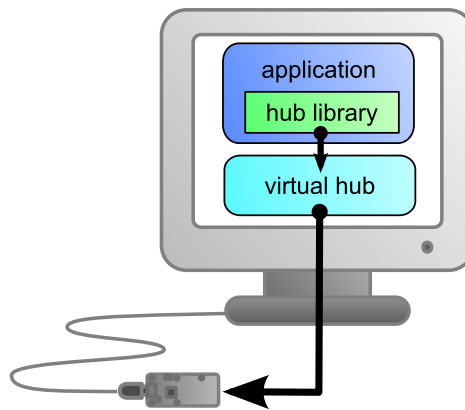

The application connects itself to VirtualHub to gain access to the module

The service control method comes with a non-negligible advantage: the application does not need to run on the machine on which the modules are connected. The application can very well be located on another machine which connects itself to the service to drive the modules. Moreover, the native libraries and DLL mentioned above are also able to connect themselves remotely to one or several machines running VirtualHub.

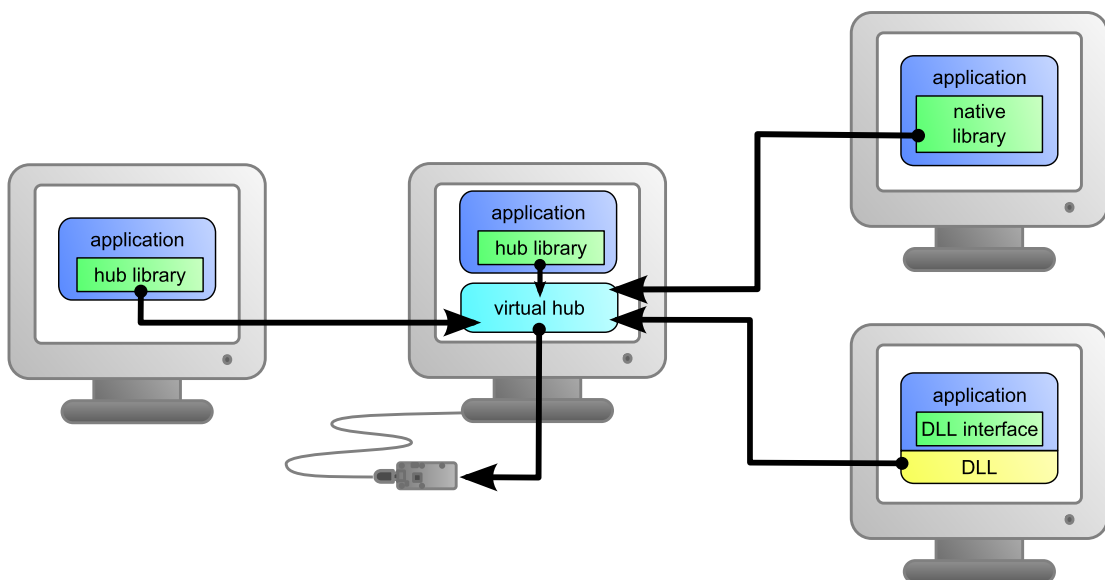

When VirtualHub is used, the control application does not need to reside on the same machine as the module.

Whatever the selected programming language and the control paradigm used, programming itself stays strictly identical. From one language to another, functions bear exactly the same name, and have the same parameters. The only differences are linked to the constraints of the languages themselves.

Language	Native	Native with DLL	VirtualHub
Command line	✓	-	✓
Python	-	✓	✓
C++	✓	✓	✓
C# .Net	-	✓	✓
C# UWP	✓	-	✓
LabVIEW	-	✓	✓
Java	-	✓	✓
Java for Android	✓	-	✓
TypeScript	-	-	✓
JavaScript / ECMAScript	-	-	✓
PHP	-	-	✓
VisualBasic .Net	-	✓	✓
Delphi	-	✓	✓
Objective-C	✓	-	✓

Support methods for different languages

6.10. Accessing modules through a hub

VirtualHub to work around USB access limitation

Only one application at a given time can have native access to Yoctopuce devices. This limitation is related to the fact that two different processes cannot talk to a USB device at the same time. Usually, this kind of problem is solved by a driver that takes care of the police work to prevent multiple processes fighting over the same device. But Yoctopuce products do not use drivers. Therefore, the first process that manages to access the native mode keeps it for itself until `UnregisterHub` or `FreeApi` is called.

If your application tries to communicate in native mode with Yoctopuce devices, but that another application prevents you from accessing them, you receive the following error message:

```
Another process is already using yAPI
```

The solution is to use VirtualHub locally on your machine and to use it as a gateway for your applications. In this way, if all your applications use VirtualHub, you do not have conflicts anymore and you can access all your devices all the time.

With a YoctoHub

A YoctoHub behaves itself exactly like a computer running VirtualHub. The only difference between a program using the Yoctopuce API with modules in native USB and the same program with Yoctopuce modules connected to a YoctoHub is located at the level of the `RegisterHub` function call. To use USB modules connected natively, the `RegisterHub` parameter is `usb`. To use modules connected to a YoctoHub, you must simply replace this parameter by the IP address of the YoctoHub.

So there are three possible modes: native mode, network mode via VirtualHub on your local machine, or via a YoctoHub. To switch from native to network mode on your local machine, you only need to change the parameter when calling `YAPI.RegisterHub`, as shown in the examples below:

```
YAPI.RegisterHub("usb",errmsg); // native USB mode

YAPI.RegisterHub("127.0.0.1",errmsg); // local network mode with VirtualHub

YAPI.RegisterHub("192.168.0.10",errmsg); // YoctoHub mode, with 192.168.0.10 as YoctoHub IP address
```

6.11. Programming, where to start?

At this point of the user's guide, you should know the main theoretical points of your Yocto-Watt-V2-C. It is now time to practice. You must download the Yoctopuce library for your favorite programming language from the Yoctopuce web site². Then skip directly to the chapter corresponding to the chosen programming language.

All the examples described in this guide are available in the programming libraries. For some languages, the libraries also include some complete graphical applications, with their source code.

When you have mastered the basic programming of your module, you can turn to the chapter on advanced programming that describes some techniques that will help you make the most of your Yocto-Watt-V2-C.

² <http://www.yoctopuce.com/EN/libraries.php>

7. Using the Yocto-Watt-V2-C in command line

When you want to perform a punctual operation on your Yocto-Watt-V2-C, such as reading a value, assigning a logical name, and so on, you can obviously use VirtualHub, but there is a simpler, faster, and more efficient method: the command line API.

The command line API is a set of executables, one by type of functionality offered by the range of Yoctopuce products. These executables are provided pre-compiled for all the Yoctopuce officially supported platforms/OS. Naturally, the executable sources are also provided¹.

7.1. Installing

Download the command line API². You do not need to run any setup, simply copy the executables corresponding to your platform/OS in a directory of your choice. You may add this directory to your PATH variable to be able to access these executables from anywhere. You are all set, you only need to connect your Yocto-Watt-V2-C, open a shell, and start working by typing for example:

```
C:\>YPower any get_currentValue
```

To use the command line API on Linux, you need either have root privileges or to define an *udev* rule for your system. See the *Troubleshooting* chapter for more details.

7.2. Use: general description

All the command line API executables work on the same principle. They must be called the following way

```
C:\>Executable [options] [target] command [parameter]
```

[options] manage the global workings of the commands, they allow you, for instance, to pilot a module remotely through the network, or to force the module to save its configuration after executing the command.

[target] is the name of the module or of the function to which the command applies. Some very generic commands do not need a target. You can also use the aliases "*any*" and "*all*", or a list of names separated by comas without space.

¹ If you want to recompile the command line API, you also need the C++ API.

² <http://www.yoctopuce.com/EN/libraries.php>

`command` is the command you want to run. Almost all the functions available in the classic programming APIs are available as commands. You need to respect neither the case nor the underlined characters in the command name.

[`parameters`] are logically the parameters needed by the command.

At any time, the command line API executables can provide a rather detailed help. Use for instance:

```
C:\>executable /help
```

to know the list of available commands for a given command line API executable, or even:

```
C:\>executable command /help
```

to obtain a detailed description of the parameters of a command.

7.3. Control of the Power function

To control the Power function of your Yocto-Watt-V2-C, you need the YPower executable file.

For instance, you can launch:

```
C:\>YPower any get_currentValue
```

This example uses the "*any*" target to indicate that we want to work on the first Power function found among all those available on the connected Yoctopuce modules when running. This prevents you from having to know the exact names of your function and of your module.

But you can use logical names as well, as long as you have configured them beforehand. Let us imagine a Yocto-Watt-V2-C module with the *YWATMK2C-123456* serial number which you have called "*MyModule*", and its power function which you have renamed "*MyFunction*". The five following calls are strictly equivalent (as long as *MyFunction* is defined only once, to avoid any ambiguity).

```
C:\>YPower YWATMK2C-123456.power describe
C:\>YPower YWATMK2C-123456.MyFunction describe
C:\>YPower MyModule.power describe
C:\>YPower MyModule.MyFunction describe
C:\>YPower MyFunction describe
```

To work on all the Power functions at the same time, use the "*all*" target.

```
C:\>YPower all describe
```

For more details on the possibilities of the YPower executable, use:

```
C:\>YPower /help
```

7.4. Control of the module part

Each module can be controlled in a similar way with the help of the YModule executable. For example, to obtain the list of all the connected modules, use:

```
C:\>YModule inventory
```

You can also use the following command to obtain an even more detailed list of the connected modules:

```
C:\>YModule all describe
```

Each `xxx` property of the module can be obtained thanks to a command of the `get_xxxx()` type, and the properties which are not read only can be modified with the `set_xxx()` command. For example:

```
C:\>YModule YWATMK2C-12346 set_logicalName MonPremierModule
C:\>YModule YWATMK2C-12346 get_logicalName
```

Changing the settings of the module

When you want to change the settings of a module, simply use the corresponding `set_xxx` command. However, this change happens only in the module RAM: if the module restarts, the changes are lost. To store them permanently, you must tell the module to save its current configuration in its nonvolatile memory. To do so, use the `saveToFlash` command. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash` method. For example:

```
C:\>YModule YWATMK2C-12346 set_logicalName MonPremierModule
C:\>YModule YWATMK2C-12346 saveToFlash
```

Note that you can do the same thing in a single command with the `-s` option.

```
C:\>YModule -s YWATMK2C-12346 set_logicalName MonPremierModule
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

7.5. Limitations

The command line API has the same limitation than the other APIs: there can be only one application at a given time which can access the modules natively. By default, the command line API works in native mode.

You can easily work around this limitation by using a Virtual Hub: run `VirtualHub3` on the concerned machine, and use the executables of the command line API with the `-r` option. For example, if you use:

```
C:\>YModule inventory
```

you obtain a list of the modules connected by USB, using a native access. If another command which accesses the modules natively is already running, this does not work. But if you run `VirtualHub`, and you give your command in the form:

```
C:\>YModule -r 127.0.0.1 inventory
```

it works because the command is not executed natively anymore, but through `VirtualHub`. Note that `VirtualHub` counts as a native application.

³ <http://www.yoctopuce.com/EN/virtualhub.php>

8. Using the Yocto-Watt-V2-C with Python

Python is an interpreted object oriented language developed by Guido van Rossum. Among its advantages is the fact that it is free, and the fact that it is available for most platforms, Windows as well as UNIX. It is an ideal language to write small scripts on a napkin. The Yoctopuce library is compatible with Python 2.7 and 3.x up to the latest official versions. It works under Windows, macOS, and Linux, Intel as well as ARM. Python interpreters are available on the Python web site¹.

8.1. Source files

The Yoctopuce library classes² for Python that you will use are provided as source files. Copy all the content of the *Sources* directory in the directory of your choice and add this directory to the *PYTHONPATH* environment variable. If you use an IDE to program in Python, refer to its documentation to configure it so that it automatically finds the API source files.

8.2. Dynamic library

A section of the low-level library is written in C, but you should not need to interact directly with it: it is provided as a DLL under Windows, as a *.so* files under UNIX, and as a *.dylib* file under macOS. Everything was done to ensure the simplest possible interaction from Python: the distinct versions of the dynamic library corresponding to the distinct operating systems and architectures are stored in the *cdll* directory. The API automatically loads the correct file during its initialization. You should not have to worry about it.

If you ever need to recompile the dynamic library, its complete source code is located in the Yoctopuce C++ library.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

8.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Python code snippet to use the Power function.

¹ <http://www.python.org/download/>

² www.yoctopuce.com/EN/libraries.php

```
[...]
# Enable detection of USB devices
errmsg=YRefParam()
YAPI.RegisterHub("usb",errmsg)
[...]

# Retrieve the object used to interact with the device
power = YPower.FindPower("YWATMK2C-123456.power")

# Hot-plug is easy: just check that the device is online
if power.isOnline():
    # Use power.get_currentValue()
    [...]

[...]
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter "usb", it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI.SUCCESS` and `errmsg` contains the error message.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named "*MyModule*", and for which you have given the *power* function the name "*MyFunction*". The following five calls are strictly equivalent, as long as "*MyFunction*" is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MyFunction")
power = YPower.FindPower("MyModule.power")
power = YPower.FindPower("MyModule.MyFunction")
power = YPower.FindPower("MyFunction")
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

About python imports

This documentation assumes that you are using the Python library downloaded directly from the Yoctopuce website, but if you are using the library installed with PIP, then you will need to prefix all imports with `yoctopuce..` Meaning all the import examples shown in the documentation, such as:

```
from yocto_api import *
```

need to be converted , when the yoctopuce library was installed by PIP, to:

```
from yoctopuce.yocto_api import *
```

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch Python and open the corresponding sample script provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *
from yocto_power import *

def usage():
    scriptname = os.path.basename(sys.argv[0])
    print("Usage:")
    print(scriptname + ' <serial_number>')
    print(scriptname + ' <logical_name>')
    print(scriptname + ' any ')
    sys.exit()

def die(msg):
    sys.exit(msg + ' (check USB cable)')

errmsg = YRefParam()

if len(sys.argv) < 2:
    usage()

target = sys.argv[1]

# Setup the API to use local USB devices
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("init error" + errmsg.value)

if target == 'any':
    # retrieve any Power sensor
    sensor = YPower.FirstPower()
    if sensor is None:
        die('No module connected')
else:
    sensor = YPower.FindPower(target + '.power')

if not (sensor.isOnline()):
    die('device not connected')
while sensor.isOnline():
    print("Power : " + "%2.1f" % sensor.get_currentValue() + "W (Ctrl-C to stop)")
    YAPI.Sleep(1000)
YAPI.FreeAPI()
```

8.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *
```

```

def usage():
    sys.exit("usage: demo <serial or logical name> [ON/OFF]")

errmsg = YRefParam()
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("RegisterHub error: " + str(errmsg))

if len(sys.argv) < 2:
    usage()

m = YModule.FindModule(sys.argv[1]) # use serial or logical name

if m.isOnline():
    if len(sys.argv) > 2:
        if sys.argv[2].upper() == "ON":
            m.set_beacon(YModule.BEACON_ON)
        if sys.argv[2].upper() == "OFF":
            m.set_beacon(YModule.BEACON_OFF)

        print("serial:      " + m.get_serialNumber())
        print("logical name: " + m.get_logicalName())
        print("luminosity:   " + str(m.get_luminosity()))
        if m.get_beacon() == YModule.BEACON_ON:
            print("beacon:      ON")
        else:
            print("beacon:      OFF")
        print("upTime:      " + str(m.get_upTime() / 1000) + " sec")
        print("USB current: " + str(m.get_usbCurrent()) + " mA")
        print("logs:\n" + m.get_lastLogs())
    else:
        print(sys.argv[1] + " not connected (check identification and USB cable)")
YAPI.FreeAPI()

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *

def usage():
    sys.exit("usage: demo <serial or logical name> <new logical name>")

if len(sys.argv) != 3:
    usage()

errmsg = YRefParam()
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("RegisterHub error: " + str(errmsg))

m = YModule.FindModule(sys.argv[1]) # use serial or logical name
if m.isOnline():
    newname = sys.argv[2]
    if not YAPI.CheckLogicalName(newname):
        sys.exit("Invalid name (" + newname + ")")
    m.set_logicalName(newname)
    m.saveToFlash() # do not forget this

```

```

print("Module: serial= " + m.get_serialNumber() + " / name= " + m.get_logicalName())
else:
    sys.exit("not connected (check identification and USB cable)")
YAPI.FreeAPI()

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *

errmsg = YRefParam()

# Setup the API to use local USB devices
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("init error" + str(errmsg))

print('Device list')

module = YModule.FirstModule()
while module is not None:
    print(module.get_serialNumber() + ' (' + module.get_productName() + ')')
    module = module.nextModule()
YAPI.FreeAPI()

```

8.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every

line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

9. Using Yocto-Watt-V2-C with C++

C++ is not the simplest language to master. However, if you take care to limit yourself to its essential functionalities, this language can very well be used for short programs quickly coded, and it has the advantage of being easily ported from one operating system to another. Under Windows, C++ is supported with Microsoft Visual Studio 2017 and more recent versions. Under macOS, we support the XCode versions supported by Apple. And under Linux, we support all GCC version published since 2008. Moreover, under Max OS X and under Linux, you can compile the examples using a command line with GCC using the provided `GNUmakefile`. In the same manner under Windows, a `Makefile` allows you to compile examples using a command line, fully knowing the compilation and linking arguments.

Yoctopuce C++ libraries¹ are integrally provided as source files. A section of the low-level library is written in pure C, but you should not need to interact directly with it: everything was done to ensure the simplest possible interaction from C++. The library is naturally also available as binary files, so that you can link it directly if you prefer.

You will soon notice that the C++ API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface. You will find in the last section of this chapter all the information needed to create a wholly new project linked with the Yoctopuce libraries.

9.1. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a C++ code snippet to use the Power function.

```
#include "yocto_api.h"
#include "yocto_power.h"

[...]
// Enable detection of USB devices
String errmsg;
YAPI::RegisterHub("usb", errmsg);
[...]

// Retrieve the object used to interact with the device
YPower *power;
```

¹ www.yoctopuce.com/EN/libraries.php

```
power = YPower::FindPower("YWATMK2C-123456.power");

// Hot-plug is easy: just check that the device is online
if(power->isOnline())
{
    // Use power->get_currentValue()
    [...]
}
```

Let's look at these lines in more details.

yocto_api.h et yocto_power.h

These two include files provide access to the functions allowing you to manage Yoctopuce modules. `yocto_api.h` must always be used, `yocto_power.h` is necessary to manage modules containing a electrical power sensor, such as Yocto-Watt-V2-C.

YAPI::RegisterHub

The `YAPI::RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

YPower::FindPower

The `YPower::FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
YPower *power = YPower::FindPower("YWATMK2C-123456.power");
YPower *power = YPower::FindPower("YWATMK2C-123456.MyFunction");
YPower *power = YPower::FindPower("MyModule.power");
YPower *power = YPower::FindPower("MyModule.MyFunction");
YPower *power = YPower::FindPower("MyFunction");
```

`YPower::FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower::FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `yFindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch your C++ environment and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library. If you prefer to work with your favorite text editor, open the file `main.cpp`, and type `make` to build the example when you are done.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#include "yocto_api.h"
#include "yocto_power.h"
#include <iostream>
#include <stdlib.h>
```

```

using namespace std;

static void usage(void)
{
    cout << "usage: demo <serial_number> " << endl;
    cout << "          demo <logical_name>" << endl;
    cout << "          demo any" << endl;
    u64 now = YAPI::GetTickCount();
    while (YAPI::GetTickCount() - now < 3000) {
        // wait 3 sec to show the message
    }
    exit(1);
}

int main(int argc, const char * argv[])
{
    string errmsg, target;
    YPower *psensor;

    if (argc < 2) {
        usage();
    }
    target = (string) argv[1];

    // Setup the API to use local USB devices
    if (YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    if (target == "any") {
        psensor = YPower::FirstPower();
        if (psensor == NULL) {
            cout << "No module connected (check USB cable)" << endl;
            return 1;
        }
    } else {
        psensor = YPower::FindPower(target + ".Power");
    }

    while (1) {
        if (!psensor->isOnline()) {
            cout << "Module not connected (check identification and USB cable)";
            break;
        }
        cout << "Current Power: " << psensor->get_currentValue() << " W" << endl;
        cout << " (press Ctrl-C to exit)" << endl;
        YAPI::Sleep(1000, errmsg);
    };
    YAPI::FreeAPI();

    return 0;
}

```

9.2. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

#include <iostream>
#include <stdlib.h>

#include "yocto_api.h"

using namespace std;

static void usage(const char *exe)
{
    cout << "usage: " << exe << " <serial or logical name> [ON/OFF]" << endl;
    exit(1);
}

```

```

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices
    if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    if(argc < 2)
        usage(argv[0]);

    YModule *module = YModule::FindModule(argv[1]); // use serial or logical name

    if (module->isOnline()) {
        if (argc > 2) {
            if (string(argv[2]) == "ON")
                module->set_beacon(Y_BEACON_ON);
            else
                module->set_beacon(Y_BEACON_OFF);
        }
        cout << "serial:      " << module->get_serialNumber() << endl;
        cout << "logical name: " << module->get_logicalName() << endl;
        cout << "luminosity:  " << module->get_luminosity() << endl;
        cout << "beacon:      ";
        if (module->get_beacon() == Y_BEACON_ON)
            cout << "ON" << endl;
        else
            cout << "OFF" << endl;
        cout << "upTime:      " << module->get_upTime() / 1000 << " sec" << endl;
        cout << "USB current: " << module->get_usbCurrent() << " mA" << endl;
        cout << "Logs:" << endl << module->get_lastLogs() << endl;
    } else {
        cout << argv[1] << " not connected (check identification and USB cable)"
            << endl;
    }
    YAPI::FreeAPI();
    return 0;
}

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

#include <iostream>
#include <stdlib.h>

#include "yocto_api.h"

using namespace std;

static void usage(const char *exe)
{
    cerr << "usage: " << exe << " <serial> <newLogicalName>" << endl;
    exit(1);
}

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices

```

```

if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
    cerr << "RegisterHub error: " << errmsg << endl;
    return 1;
}

if(argc < 2)
    usage(argv[0]);

YModule *module = YModule::FindModule(argv[1]); // use serial or logical name

if (module->isOnline()) {
    if (argc >= 3) {
        string newname = argv[2];
        if (!yCheckLogicalName(newname)) {
            cerr << "Invalid name (" << newname << ")" << endl;
            usage(argv[0]);
        }
        module->set_logicalName(newname);
        module->saveToFlash();
    }
    cout << "Current name: " << module->get_logicalName() << endl;
} else {
    cout << argv[1] << " not connected (check identification and USB cable)"
        << endl;
}
YAPI::FreeAPI();
return 0;
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.

```

#include <iostream>

#include "yocto_api.h"

using namespace std;

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices
    if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    cout << "Device list: " << endl;

    YModule *module = YModule::FirstModule();
    while (module != NULL) {
        cout << module->get_serialNumber() << " ";
        cout << module->get_productName() << endl;
        module = module->nextModule();
    }
    YAPI::FreeAPI();
    return 0;
}

```

9.3. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

9.4. Integration variants for the C++ Yoctopuce library

Depending on your needs and on your preferences, you can integrate the library into your projects in several distinct manners. This section explains how to implement the different options.

Integration in source format (recommended)

Integrating all the sources of the library into your projects has several advantages:

- It guaranties the respect of the compilation conventions of your project (32/64 bits, inclusion of debugging symbols, unicode or ASCII characters, etc.);
- It facilitates debugging if you are looking for the cause of a problem linked to the Yoctopuce library;
- It reduces the dependencies on third party components, for example in the case where you would need to recompile this project for another architecture in many years;

- It does not require the installation of a dynamic library specific to Yoctopuce on the final system, everything is in the executable.

To integrate the source code, the easiest way is to simply include the `Sources` directory of your Yoctopuce library into your **IncludePath**, and to add all the files of this directory (including the sub-directory `yapi`) to your project.

For your project to build correctly, you need to link with your project the prerequisite system libraries, that is:

- For Windows: the libraries are added automatically
- For macOS: **IOKit.framework** and **CoreFoundation.framework**
- For Linux: **libm**, **libpthread**, **libusb1.0**, and **libstdc++**

Integration as a static library

With the integration of the Yoctopuce library as a static library, you do not need to install a dynamic library specific to Yoctopuce, everything is in the executable.

To use the static library, you must first compile it using the shell script `build.sh` on UNIX, or `build.bat` on Windows. This script, located in the root directory of the library, detects the OS and recompiles all the corresponding libraries as well as the examples.

Then, to integrate the static Yoctopuce library to your project, you must include the `Sources` directory of the Yoctopuce library into your **IncludePath**, and add the sub-directory `Binaries/...` corresponding to your operating system into your **libPath**.

Finally, for your project to build correctly, you need to link with your project the Yoctopuce library and the prerequisite system libraries:

- For Windows: **yocto-static.lib**
- For macOS: **libyocto-static.a**, **IOKit.framework**, and **CoreFoundation.framework**
- For Linux: **libyocto-static.a**, **libm**, **libpthread**, **libusb1.0**, and **libstdc++**.

Note, under Linux, if you wish to compile in command line with GCC, it is generally advisable to link system libraries as dynamic libraries, rather than as static ones. To mix static and dynamic libraries on the same command line, you must pass the following arguments:

```
gcc (...) -Wl,-Bstatic -lyocto-static -Wl,-Bdynamic -lm -lpthread -libusb-1.0 -lstdc++
```

Integration as a dynamic library

Integration of the Yoctopuce library as a dynamic library allows you to produce an executable smaller than with the two previous methods, and to possibly update this library, if a patch reveals itself necessary, without needing to recompile the source code of the application. On the other hand, it is an integration mode which systematically requires you to copy the dynamic library on the target machine where the application will run (**yocto.dll** for Windows, **libyocto.so.1.0.1** for macOS and Linux).

To use the dynamic library, you must first compile it using the shell script `build.sh` on UNIX, or `build.bat` on Windows. This script, located in the root directory of the library, detects the OS and recompiles all the corresponding libraries as well as the examples.

Then, To integrate the dynamic Yoctopuce library to your project, you must include the `Sources` directory of the Yoctopuce library into your **IncludePath**, and add the sub-directory `Binaries/...` corresponding to your operating system into your **LibPath**.

Finally, for your project to build correctly, you need to link with your project the dynamic Yoctopuce library and the prerequisite system libraries:

- For Windows: **yocto.lib**

- For macOS: **libyocto**, **IOKit.framework**, and **CoreFoundation.framework**
- For Linux: **libyocto**, **libm**, **libpthread**, **libusb1.0**, and **libstdc++**.

With GCC, the command line to compile is simply:

```
gcc (...) -lyocto -lm -lpthread -lusb-1.0 -lstdc++
```

10. Using Yocto-Watt-V2-C with C#

C# (pronounced C-Sharp) is an object-oriented programming language promoted by Microsoft, it is somewhat similar to Java. Like Visual-Basic and Delphi, it allows you to create Windows applications quite easily. C# is supported under Windows Visual Studio 2017 and its more recent versions.

Our programming library is also compatible with *Mono*, the open source version of C# that also works on Linux and macOS. Under Linux, use Mono version 5.20 or more recent. Under macOS, support is limited to 32bit systems, which makes it virtually useless nowadays. You will find on our web site various articles that describe how to configure Mono to use our library.

10.1. Installation

Download the Visual C# Yoctopuce library from the Yoctopuce web site¹. There is no setup program, simply copy the content of the zip file into the directory of your choice. You mostly need the content of the `Sources` directory. The other directories contain the documentation and a few sample programs. All sample projects are Visual C# 2010, projects, if you are using a previous version, you may have to recreate the projects structure from scratch.

10.2. Using the Yoctopuce API in a Visual C# project

The Visual C#.NET Yoctopuce library is composed of a DLL and of source files in Visual C#. The DLL is not a .NET DLL, but a classic DLL, written in C, which manages the low level communications with the modules². The source files in Visual C# manage the high level part of the API. Therefore, you need both this DLL and the .cs files of the `sources` directory to create a project managing Yoctopuce modules.

Configuring a Visual C# project

The following indications are provided for Visual Studio Express 2010, but the process is similar for other versions. Start by creating your project. Then, on the *Solution Explorer* panel, right click on your project, and select "Add" and then "Add an existing item".

A file selection window opens. Select the `yocto_api.cs` file and the files corresponding to the functions of the Yoctopuce modules that your project is going to manage. If in doubt, select all the files.

¹ www.yoctopuce.com/EN/libraries.php

² The sources of this DLL are available in the C++ API

You then have the choice between simply adding these files to your project, or to add them as links (the **Add** button is in fact a scroll-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply keeps a link on the original files. We recommend you to use links, which makes updates of the library much easier.

Then add in the same manner the `yapi.dll` DLL, located in the `Sources/dll` directory³. Then, from the **Solution Explorer** window, right click on the DLL, select **Properties** and in the **Properties** panel, set the **Copy to output folder** to **always**. You are now ready to use your Yoctopuce modules from Visual Studio.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

10.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a C# code snippet to use the Power function.

```
[...]
// Enable detection of USB devices
string errmsg = "";
YAPI.RegisterHub("usb", errmsg);
[...]

// Retrieve the object used to interact with the device
YPower power = YPower.FindPower("YWATMK2C-123456.power");

// Hot-plug is easy: just check that the device is online
if (power.isOnline())
{
    // Use power.get_currentValue()
    [...]
}
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI.SUCCESS` and `errmsg` contains the error message.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the *power* function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power");
power = YPower.FindPower("YWATMK2C-123456.MyFunction");
power = YPower.FindPower("MyModule.power");
power = YPower.FindPower("MyModule.MyFunction");
power = YPower.FindPower("MyFunction");
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

³ Remember to change the filter of the selection window, otherwise the DLL will not show.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch Microsoft Visual C# and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string exename = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine("Usage:");
            Console.WriteLine(exename + " <serial_number>");
            Console.WriteLine(exename + " <logical_name>");
            Console.WriteLine(exename + " any ");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }

        static void Main(string[] args)
        {
            string errormsg = "";
            string target;

            YPower psensor;

            if (args.Length < 1) usage();
            target = args[0].ToUpper();

            // Setup the API to use local USB devices
            if (YAPI.RegisterHub("usb", ref errormsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errormsg);
                Environment.Exit(0);
            }

            if (target == "ANY") {
                psensor = YPower.FirstPower();

                if (psensor == null) {
                    Console.WriteLine("No module connected (check USB cable) ");
                    Environment.Exit(0);
                }
            } else {
                psensor = YPower.FindPower(target + ".power");
            }

            if (!psensor.isOnline()) {
                Console.WriteLine("Module not connected");
                Console.WriteLine("check identification and USB cable");
                Environment.Exit(0);
            }

            while (psensor.isOnline()) {
                Console.WriteLine("Current power: " + psensor.get_currentValue().ToString())
            }
        }
    }
}
```

```

        + " W");
    Console.WriteLine("    (press Ctrl-C to exit)");

    YAPI.Sleep(1000, ref errormsg);
}
YAPI.FreeAPI();
}
}
}

```

10.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string execname = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine("Usage:");
            Console.WriteLine(execname + " <serial or logical name> [ON/OFF]");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }

        static void Main(string[] args)
        {
            YModule m;
            string errormsg = "";

            if (YAPI.RegisterHub("usb", ref errormsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errormsg);
                Environment.Exit(0);
            }

            if (args.Length < 1) usage();

            m = YModule.FindModule(args[0]); // use serial or logical name

            if (m.isOnline()) {
                if (args.Length >= 2) {
                    if (args[1].ToUpper() == "ON") {
                        m.set_beacon(YModule.BEACON_ON);
                    }
                    if (args[1].ToUpper() == "OFF") {
                        m.set_beacon(YModule.BEACON_OFF);
                    }
                }

                Console.WriteLine("serial:      " + m.get_serialNumber());
                Console.WriteLine("logical name: " + m.get_logicalName());
                Console.WriteLine("luminosity:  " + m.get_luminosity().ToString());
                Console.WriteLine("beacon:      ");
                if (m.get_beacon() == YModule.BEACON_ON)
                    Console.WriteLine("ON");
                else
                    Console.WriteLine("OFF");
                Console.WriteLine("upTime:      " + (m.get_upTime() / 1000).ToString() + " sec");
                Console.WriteLine("USB current:  " + m.get_usbCurrent().ToString() + " mA");
                Console.WriteLine("Logs:\r\n" + m.get_lastLogs());
            }
            else {
                Console.WriteLine(args[0] + " not connected (check identification and USB cable)");
            }
        }
    }
}

```

```

        YAPI.FreeAPI();
    }
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string execname = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine("Usage:");
            Console.WriteLine("usage: demo <serial or logical name> <new logical name>");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }

        static void Main(string[] args)
        {
            YModule m;
            string errmsg = "";
            string newname;

            if (args.Length != 2) usage();

            if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errmsg);
                Environment.Exit(0);
            }

            m = YModule.FindModule(args[0]); // use serial or logical name

            if (m.isOnline()) {
                newname = args[1];
                if (!YAPI.CheckLogicalName(newname)) {
                    Console.WriteLine("Invalid name (" + newname + ")");
                    Environment.Exit(0);
                }

                m.set_logicalName(newname);
                m.saveToFlash(); // do not forget this

                Console.Write("Module: serial= " + m.get_serialNumber());
                Console.WriteLine(" / name= " + m.get_logicalName());
            } else {
                Console.WriteLine("not connected (check identification and USB cable)");
            }
            YAPI.FreeAPI();
        }
    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `null`. Below a short example listing the connected modules.

```
using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void Main(string[] args)
        {
            YModule m;
            string errmsg = "";

            if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errmsg);
                Environment.Exit(0);
            }

            Console.WriteLine("Device list");
            m = YModule.FirstModule();
            while (m != null) {
                Console.WriteLine(m.get_serialNumber() + " (" + m.get_productName() + ")");
                m = m.nextModule();
            }
            YAPI.FreeAPI();
        }
    }
}
```

10.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.

- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.


When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

11. Using the Yocto-Watt-V2-C with LabVIEW

LabVIEW is edited by National Instruments since 1986. It is a graphic development environment: rather than writing lines of code, the users draw their programs, somewhat like a flow chart. LabVIEW was designed mostly to interface measuring tools, hence the *Virtual Instruments* name for LabVIEW programs. With visual programming, drawing complex algorithms becomes quickly fastidious. The LabVIEW Yoctopuce library was thus designed to make it as easy to use as possible. In other words, LabVIEW being an environment extremely different from other languages supported by Yoctopuce, there are major differences between the LabVIEW API and the other APIs.

11.1. Architecture

The LabVIEW library is based on the Yoctopuce DotNetProxy library contained in the `DotNetProxyLibrary.dll` DLL. In fact, it is this DotNetProxy library which takes care of most of the work by relying on the C# library which, in turn, uses the low level library coded in `yapi.dll` (32bits) and `amd64\yapi.dll` (64bits).

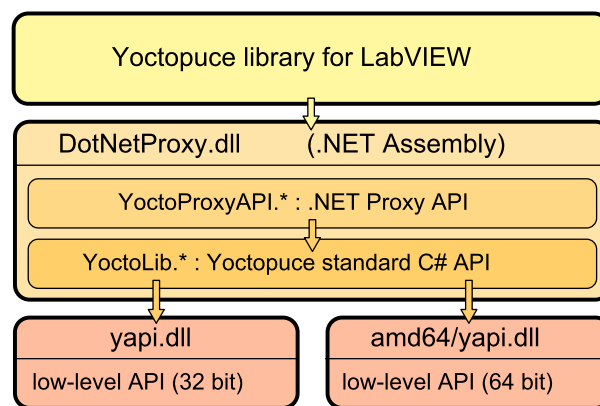

LabVIEW Yoctopuce API architecture

You must therefore imperatively distribute the `DotNetProxyLibrary.dll`, `yapi.dll`, and `amd64\yapi.dll` with your LabVIEW applications using the Yoctopuce API.

If need be, you can find the low level API sources in the C# library and the `DotNetProxyLibrary.dll` sources in the `DotNetProxy` library.

11.2. Compatibility

Firmware

For the LabVIEW Yoctopuce library to work correctly with your Yoctopuce modules, these modules need to have firmware 37120, or higher.

LabVIEW for Linux and MacOS

At the time of writing, the LabVIEW Yoctopuce API has been tested under Windows only. It is therefore most likely that it simply does not work with the Linux and MacOS versions of LabVIEW.

LabVIEW NXG

The LabVIEW Yoctopuce library uses many techniques which are not yet available in the new generation of LabVIEW. The library is therefore absolutely not compatible with LabVIEW NXG.

About DotNetProxyLibrary.dll

In order to be compatible with as many versions of Windows as possible, including Windows XP, the *DotNetProxyLibrary.dll* library is compiled in .NET 3.5, which is available by default on all the Windows versions since XP.


11.3. Installation

Download the LabVIEW library from the Yoctopuce web site¹. It is a ZIP file in which there is a distinct directory for each version of LabVIEW. Each of these directories contains two subdirectories: the first one contains programming examples for each Yoctopuce product; the second one, called *VIs*, contains all the VIs of the API and the required DLLs.

Depending on Windows configuration and the method used to copy the *DotNetProxyLibrary.dll* on your system, Windows may block it because it comes from an other computer. This may happen when the library zip file is uncompressed with Window's file explorer. If the DLL is blocked, LabVIEW will not be able to load it and an error 1386 will occur whenever any of the Yoctopuce VIs is executed.

There are two ways to fix this. The simplest is to unblock the file with the Windows file explorer: *right click / properties* on the *DotNetProxyLibrary.dll* file, and click on the *unblock* button. But this has to be done each time a new version of the DLL is copied on your system.

¹ <http://www.yoctopuce.com/EN/libraries.php>

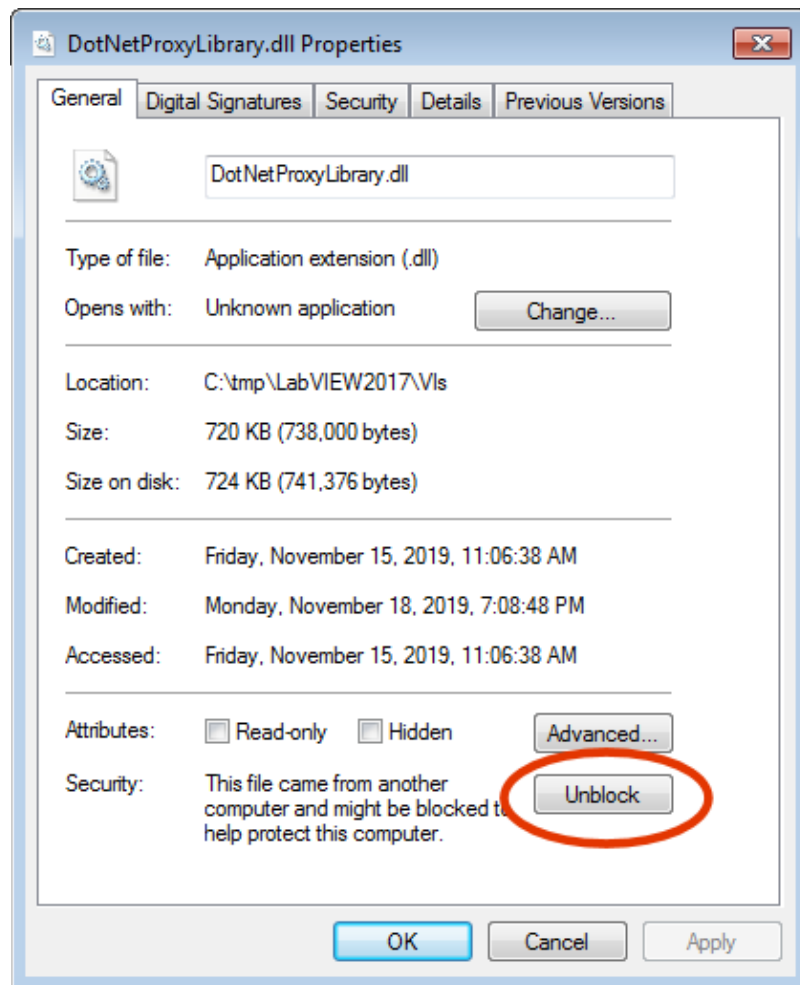

Unblock the DotNetProxyLibrary DLL.

Alternatively, one can modify the LabVIEW configuration by creating, in the same directory as the labview.exe executable, an XML file called *labview.exe.config* containing the following code:

```
<?xml version="1.0"?>
<configuration>
  <runtime>
    <loadFromRemoteSources enabled="true" />
  </runtime>
</configuration>
```

Make sure to select the correct directory depending on the LabVIEW version you are using (32 bits vs. 64 bits). You can find more information about this file on the National Instruments web site.²


To install the LabVIEW Yoctopuce API, there are several methods.

Method 1 : "Take-out" installation

The simplest way to use the Yoctopuce library is to copy the content of the *VIs* directory wherever you want and to use the VIs in LabVIEW with a simple drag-n-drop operation.

To use the examples provided with the API, it is simpler if you add the directory of Yoctopuce VIs into the list of where LabVIEW must look for VIs that it has not found. You can access this list through the *Tools > Options > Paths > VI Search Path* menu.


² <https://knowledge.ni.com/KnowledgeArticleDetails?id=kA00Z000000P8XnSAK>

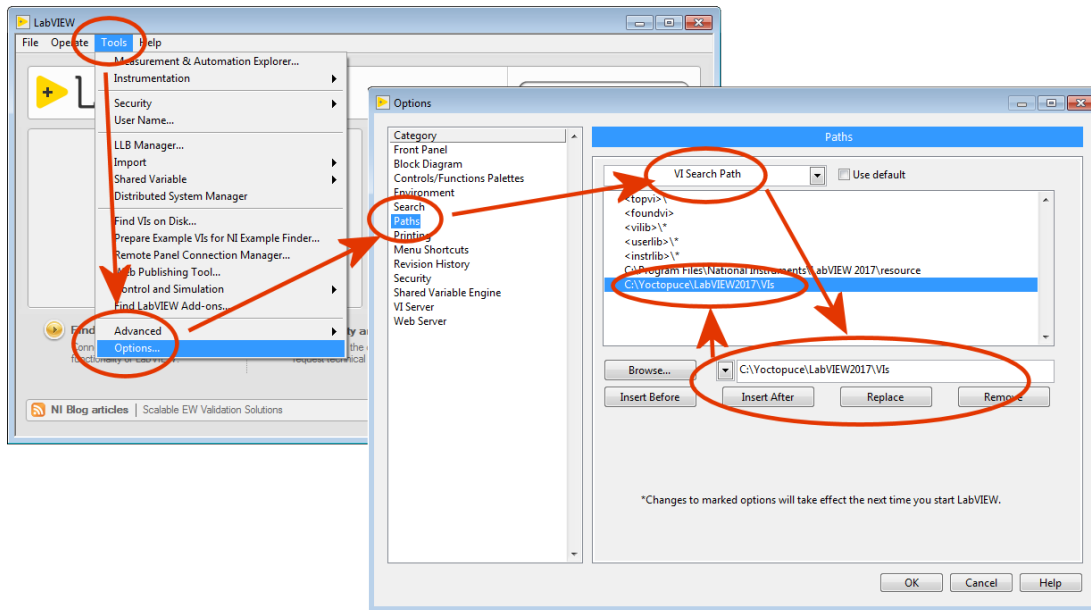

Configuring the "VI Search Path"

Method 2 : Provided installer

In each LabVIEW folder of the Library, you will find a VI named "*Install.vi*", just open the one matching your LabVIEW version.

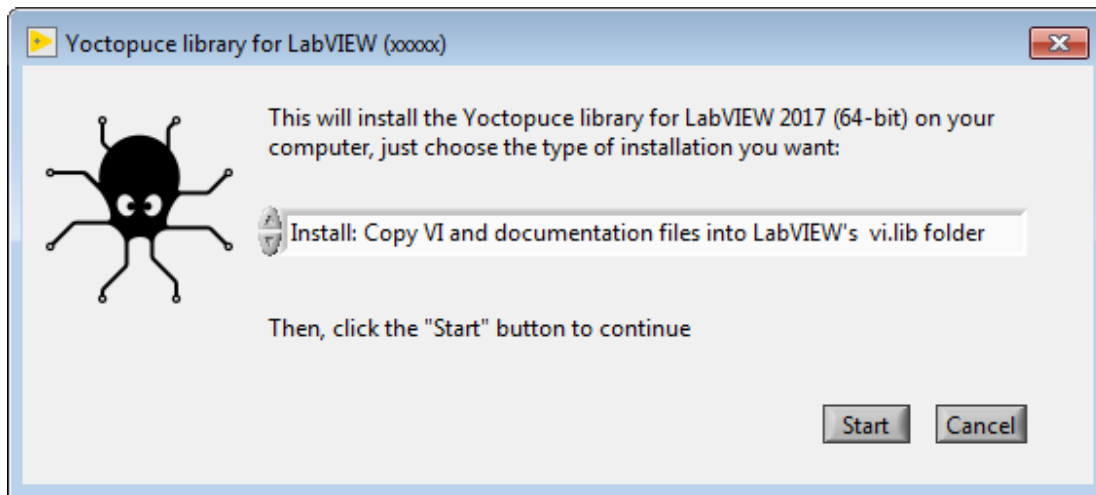

The provider installer

This installer provide 3 installation options:

Install: Keep VI and documentation files where they are.

With this option, VI files are keep in the place where the library has been unzipped. So you will have to make sure these files are not deleted as long as you need them. Here is what the installer will do if that option is chosen:

- All references to Yoctopuce any library paths will be removed from the *viSearchPath* option in the *labview.ini* file.
- A dir.mnu palette file referring to VIs in the install folder will be created in *C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce*
- A reference to the VIs source install path will inserted into the *viSearchPath* option in the *labview.ini* file.

Install: Copy VI and documentation files into LabVIEW's vi.lib folder

In that case all required files are copied inside the LabVIEW's installation folder, so you will be able to delete the installation folder once the original installation is complete. Note that programming examples won't be copied. Here is the exact behaviour of the installer in that case:

- All references to Yoctopuce library paths will be removed from *viSearchPath* in *labview.ini* file
- All VIs, DLLs, and documentation files will be copied into:
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\Yoctopuce
- VIs will be patched with the path to copied documentation files
- A dir.mnu palette file referring to copied VIs will be created in
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce

Uninstall Yoctopuce Library

this option is meant to remove the LabVIEW library from your LabVIEW installation, here is how it is done:

- All references to Yoctopuce library paths will be removed from *viSearchPath* in *labview.ini* file
- Following folders, if exists, will be removed:
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\Yoctopuce

In any case, if the *labview.ini* file needs to be modified, a backup copy will be made beforehand.


The installer identifies Yoctopuce VIs library folders by checking the presence of the *YRegisterHub.vi* file in said folders.

Once the installation is complete, a Yoctopuce palette will appear in *Functions/Addons* menu.

Method 3 : Installation in a LabVIEW palette (ancillary method)

The steps to manually install the VIs directly in the LabVIEW palette are somewhat more complex. You can find the detailed procedure on the National Instruments web site ³, but here is a summary:


1. Create a *Yoctopuce/API* directory in the *C:\Program Files\National Instruments\LabVIEW xxxx\vi.lib* directory and copy all the VIs and DLLs of the *VIs* directory into it.
2. Create a *Yoctopuce* directory in the *C:\Program Files\National Instruments\LabVIEW xxxx\menus\Categories* directory.
3. Run LabVIEW and select the option *Tools>Advanced>Edit Palette Set*

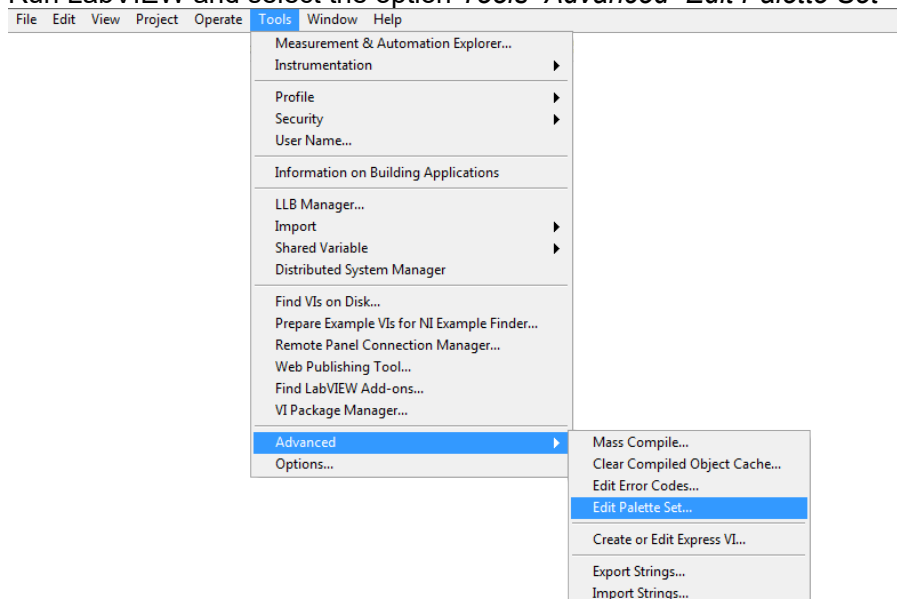

³ <https://forums.ni.com/t5/Developer-Center-Resources/Creating-a-LabVIEW-Palette/ta-p/3520557>


Three windows pop up:

- "Edit Controls and Functions Palette Set"
- "Functions"
- "Controls"

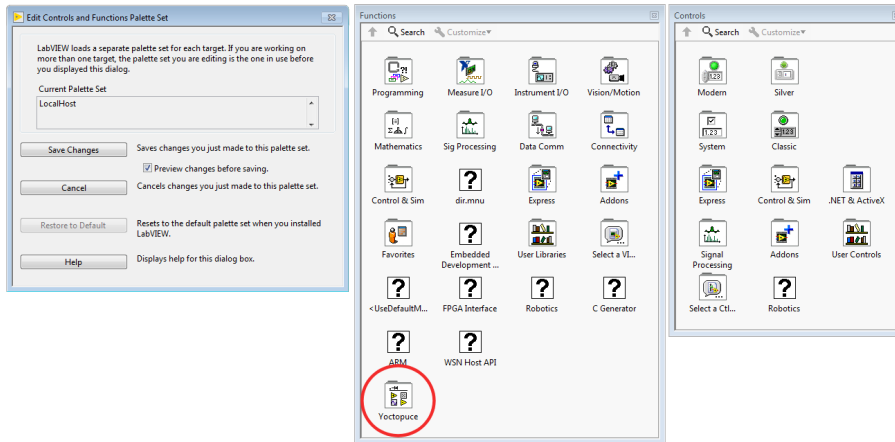


In the *Function* window, there is a *Yoctopuce* icon. Double-click it to create an empty "Yoctopuce" window.

4. In the Yoctopuce window, perform a *Right click>Insert>Vi(s)..*

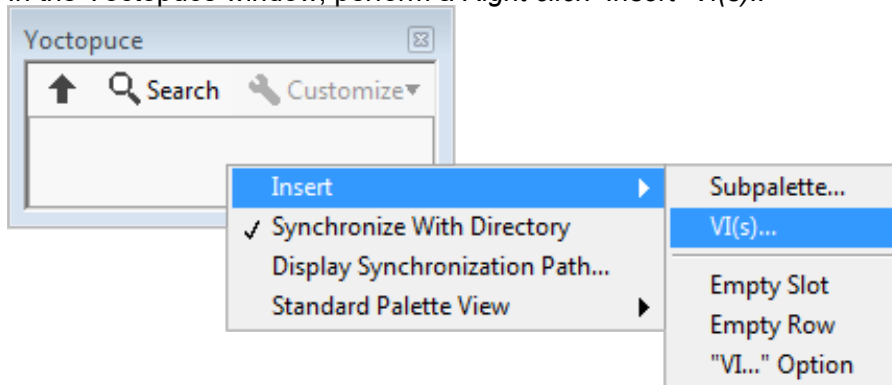


in order to open a file chooser. Put the file chooser in the *vi.lib\Yoctopuce\API* directory that you have created in step 1 and click on *Current Folder*

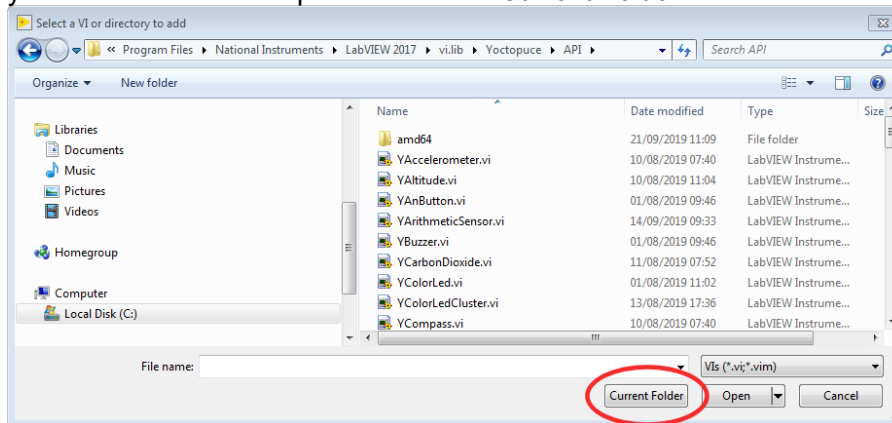


All the Yoctopuce VIs now appear in the Yoctopuce window. By default, they are sorted by alphabetical order, but you can arrange them as you see fit by moving them around with the mouse. For the palette to be easy to use, we recommend to reorganize the icons over 8 columns.

5. In the "Edit Controls and Functions Palette Set" window, click on the "Save Changes" button, the window indicates that it has created a *dir.mnu* file in your *Documents* directory.

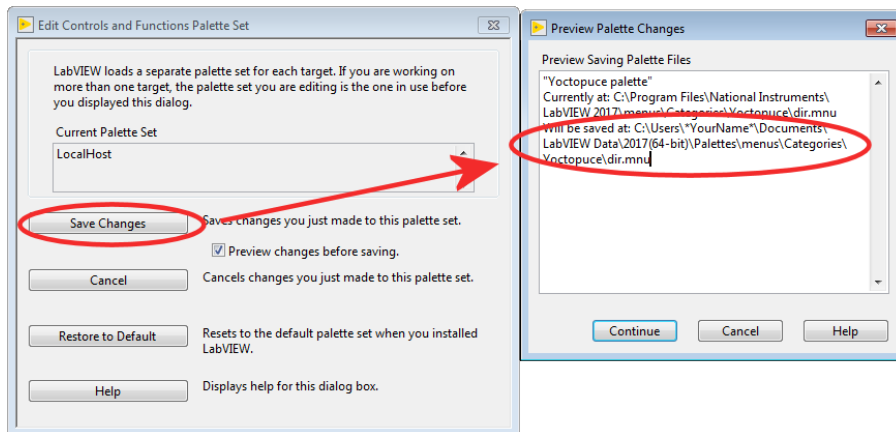

Copy this file in the "menus\Categories\Yoctopuce" directory that you have created in step 2.

- Restart LabVIEW, the LabVIEW palette now contains a Yoctopuce sub-palette with all the VIs of the API.

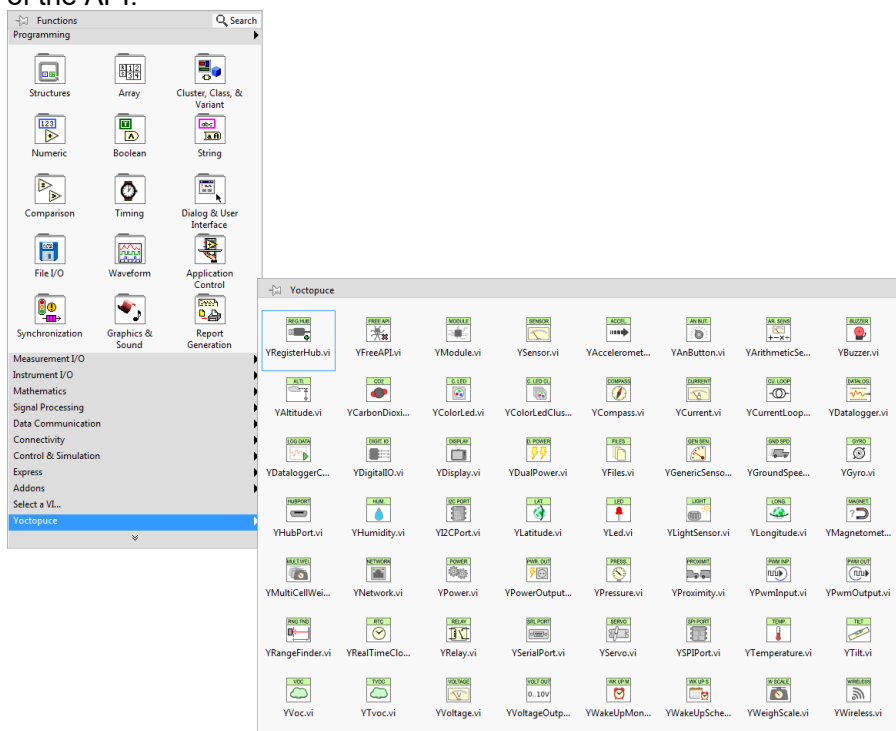


11.4. Presentation of Yoctopuce VIs

The LabVIEW Yoctopuce library contains one VI per class of the Yoctopuce API, as well as a few special VIs. All the VIs have the traditional connectors *Error IN* and *Error Out*.

YRegisterHub

The YRegisterHub VI is used to initialize the API. You must imperatively call this VI once before you do anything in relation with Yoctopuce modules.

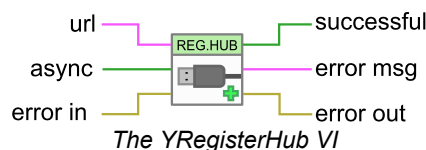

The YRegisterHub VI takes a *url* parameter which can be:

- The "usb" character string to indicated that you wish to work with local modules, directly connected by USB
- An IP address to indicate that you wish to work with modules which are available through a network connection. This IP address can be that of a YoctoHub⁴ or even that of a machine on which the VirtualHub⁵ application is running.


In the case of an IP address, the YRegisterHub VI tries to contact this address and generates an error if it does not succeed, unless the *async* parameter is set to TRUE. If *async* is set to TRUE, no error is generated and Yoctopuce modules corresponding to that IP address become automatically available as soon as the said machine can be reached.

If everything went well, the *successful* output contains the value TRUE. In the opposite case, it contains the value FALSE and the *error msg* output contains a string of characters with a description of the error.

You can use several YRegisterHub VIs with distinct URLs if you so wish. However, on the same machine, there can be only one process accessing local Yoctopuce modules directly by USB (*url* set to "usb"). You can easily work around this limitation by running the VirtualHub software on the local machine and using the "127.0.0.1" url.

YFreeAPI


The YFreeAPI VI enables you to free resources allocated by the Yoctopuce API.



You must call the YFreeAPI VI when your code is done with the Yoctopuce API. Otherwise, direct USB access (*url* set to "usb") could stay locked after the execution of your VI, and stay so for as long as LabVIEW is not completely closed.

Structure of the VIs corresponding to a class

The other VIs correspond to each function/class of the Yoctopuce API, they all have the same structure:

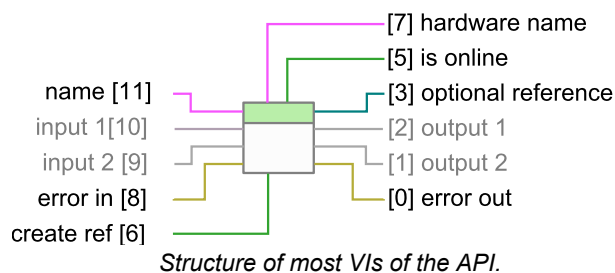

- Connector [11]: *name* must contain the hardware name or the logical name of the intended function.
- Connectors [10] and [9]: input parameters depending on the nature of the VI.
- Connectors [8] and [0] : *error in* and *error out*.
- Connector [7] : Unique hardware name of the found function.
- Connector [5] : *is online* contains TRUE if the function is available, FALSE otherwise.
- Connectors [2] and [1]: output values depending on the nature of the VI.
- Connector [6]: If this input is set to TRUE, connector [3] contains a reference to the *Proxy* objects implemented by the VI⁶. This input is initialized to FALSE by default.

⁴ www.yoctopuce.com/EN/products/category/extensions-and-networking

⁵ <http://www.yoctopuce.com/EN/virtualhub.php>

⁶ see section *Using Proxy objects*

- Connector [3]: Reference on the *Proxy* object implemented by the VI if input [6] is TRUE. This object enables you to access additional features.


You can find the list of functions available on your Yocto-Watt-V2-C in chapter *Programming, general concepts*.

If the desired function (parameter *name*) is not available, this does not generate an error, but the *is online* output contains FALSE and all the other outputs contain the value "N/A" whenever possible. If the desired function becomes available later in the life of your program, *is online* switches to TRUE automatically.


If the *name* parameter contains an empty string, the VI targets the first available function of the same type. If no function is available, *is online* is set to FALSE.

The YModule VI

The `YModule` VI enables you to interface with the "module" section of each Yoctopuce module. It enables you to drive the module led and to know the serial number of the module.

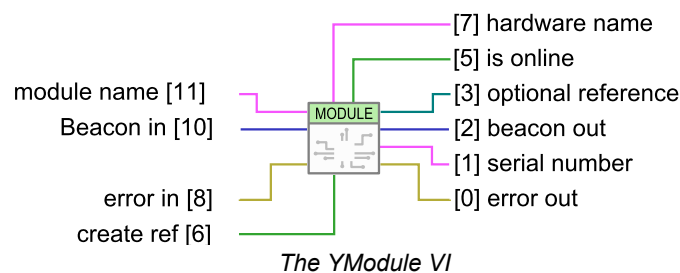


The *name* input works slightly differently from other VIs. If it is called with a *name* parameter corresponding to a function name, the `YModule` VI finds the *Module* function of the module hosting the function. You can therefore easily find the serial number of the module of any function. This enables you to build the name of other functions which are located on the same module. The following example finds the first available *YHumidity* function and builds the name of the *YTemperature* function located on the same module. The examples provided with the Yoctopuce API make extensive use of this technique.

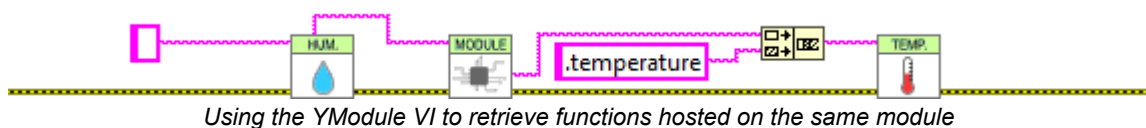

The sensor VIs

All the VIs corresponding to Yoctopuce sensors have exactly the same geometry. Both outputs enable you to retrieve the value measured by the corresponding sensor as well the unit used.

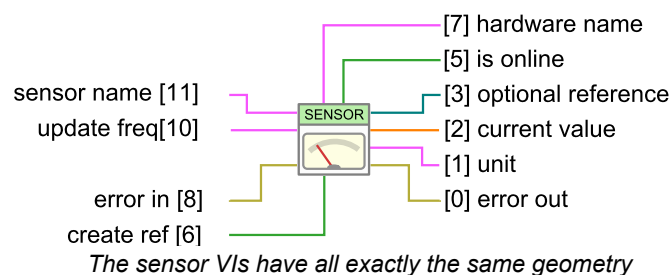


The *update freq* input parameter is a character string enabling you to configure the way in which the output value is updated:

- "auto" : The VI value is updated as soon as the sensor detects a significant modification of the value. It is the default behavior.
- "x/s" : The VI value is updated x times per second with the current value of the sensor.

- "x/m","x/h": The VI value is updated x times per minute (resp. hour) with the average value over the latest period. Note, maximum frequencies are (60/m) and (3600/h), for higher frequencies use the (x/s) syntax.

The update frequency of the VI is a parameter managed by the physical Yoctopuce module. If several VIs try to change the frequency of the same sensor, the valid configuration is that of the latest call. It is however possible to set different update frequencies to different sensors on the same Yoctopuce module.

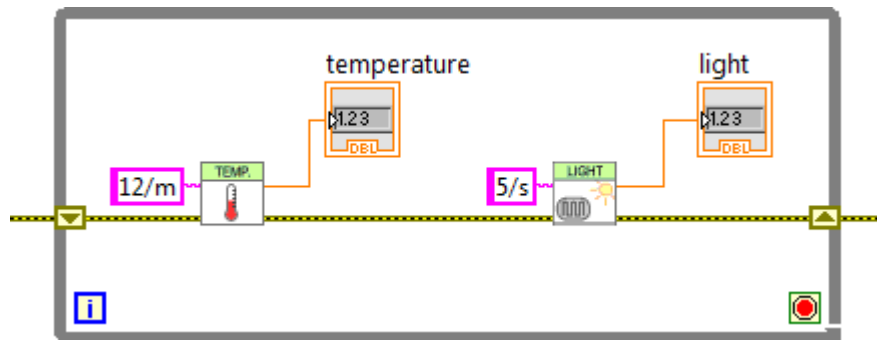


Changing the update frequency of the same module

The update frequency of the VI is completely independent from the sampling frequency of the sensor, which you usually cannot modify. It is useless and counterproductive to define an update frequency higher than the sensor sampling frequency.

11.5. Functioning and use of VIs

Here is one of the simplest example of VIs using the Yoctopuce API.

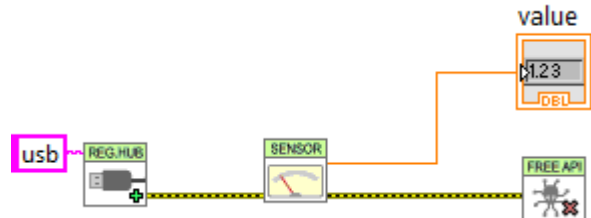


Minimal example of use of the LabVIEW Yoctopuce API

This example is based on the `YSensor` VI which is a generic VI enabling you to interface any sensor function of a Yoctopuce module. You can replace this VI by any other from the Yoctopuce API, they all have the same geometry and work in the same way. This example is limited to three actions:


1. It initializes the API in native ("usb") mode with the `YRegisterHub` VI.
2. It displays the value of the first Yoctopuce sensor it finds thanks to the `YSensor` VI.
3. It frees the API thanks to the `YFreeAPI` VI.

This example automatically looks for an available sensor. If there is such a sensor, we can retrieve its name through the *hardware name* output and the *isOnline* output equals TRUE. If there is no available sensor, the VI does not generate an error but emulates a ghost sensor which is "offline". However, if later in the life of the application, a sensor becomes available because it has been connected, *isOnline* switches to TRUE and the *hardware name* contains the name of the sensor. We can therefore easily add a few indicators in the previous example to know how the executions goes.

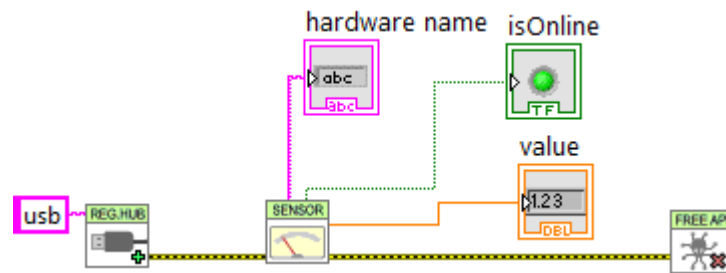

Use of the hardware name and isOnline outputs


The VIs of the Yoctopuce API are actually an entry door into the library. Internally, this mechanism works independently of the Yoctopuce VIs. Indeed, most communications with electronic modules are managed automatically as background tasks. Therefore, you do not necessarily need to take any specific care to use Yoctopuce VIs, you can for example use them in a non-delayed loop without creating any specific problem for the API.

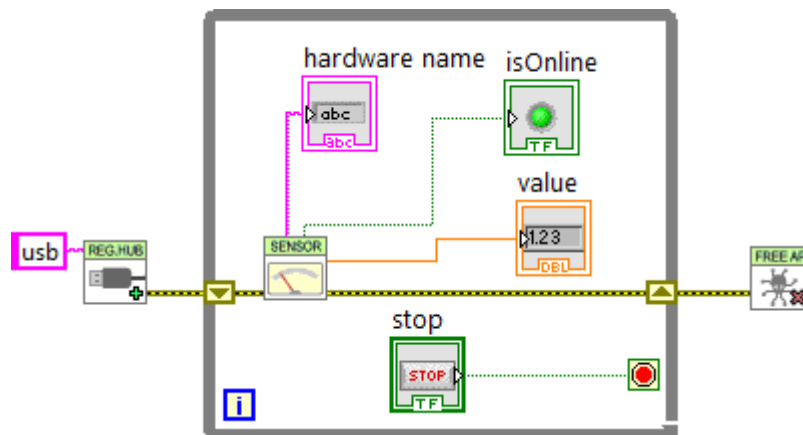

The Yoctopuce VIs can be used in a non-delayed loop

Note that the YRegisterHub VI is not inside the loop. The YRegisterHub VI is used to initialize the API. Unless you have several URLs that you need to register, it is better to call the YRegisterHub VI only once.

When the *name* parameter is initialized to an empty string, the Yoctopuce VIs automatically look for a function they can work with. This is very handy when you know that there is only one function of the same type available and when you do not want to manage its name. If the *name* parameter contains a hardware name or a logical name, the VI looks for the corresponding function. If it does not find it, it emulates an *offline* function while it waits for the true function to become available.

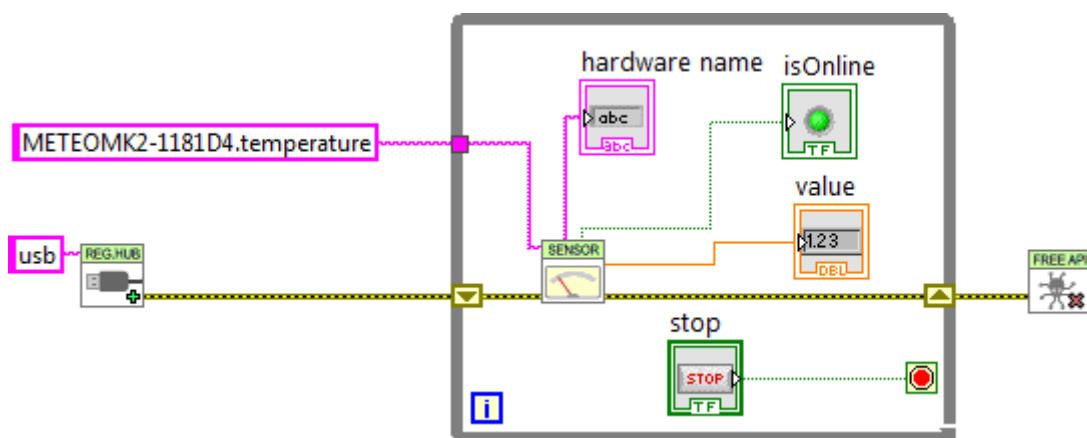


Using names to identify the functions to be used

Error handling

The LabVIEW Yoctopuce API is coded to handle errors as smoothly as possible: for example, if you use a VI to access a function which does not exist, the *isOnline* output is set to FALSE, the other outputs are set to *NaN*, and thus the inputs do not have any impact. Fatal errors are propagated through the traditional *error in*, *error out* channel.

However, the YRegisterHub VI manages connection errors slightly differently. In order to make them easier to manage, connection errors are signaled with *Success* and *error msg* outputs. If there is an issue during a call to the YRegisterHub VI, *Success* contains FALSE and *error msg* contains a description of the error.

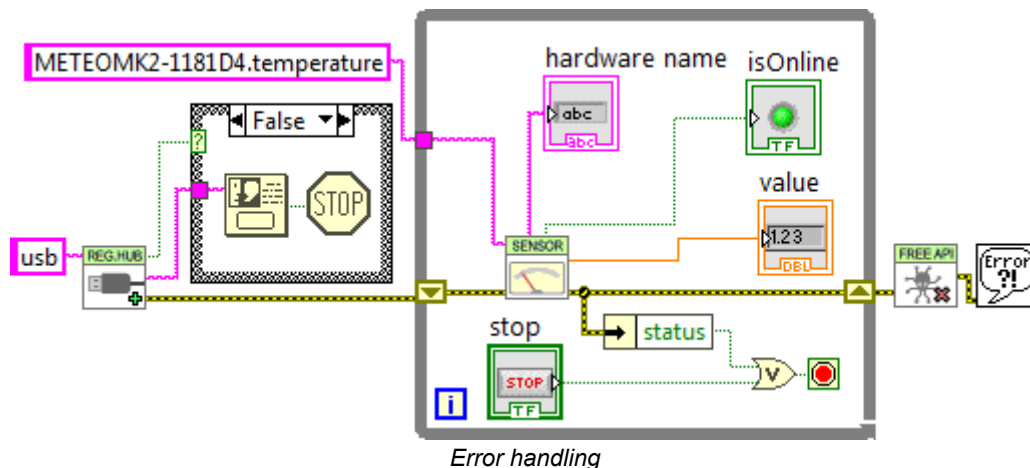


The most common error message is "Another process is already using yAPI". It means that another application, LabVIEW or other, already uses the API in native USB mode. For technical reasons, the native USB API can be used by only one application at the same time on the same machine. You can easily work around this limitation by using the network mode.

11.6. Using Proxy objects

The Yoctopuce API contains hundreds of methods, functions, and properties. It was not possible, or desirable, to create a VI for each of them. Therefore, there is a VI per class that shows the two properties that Yoctopuce deemed the most useful, but this does not mean that the rest is not available.


Each VI corresponding to a class has two connectors *create ref* and *optional ref* which enable you to obtain a reference on the Proxy object of the .NET Proxy API on which the LabVIEW library is built.

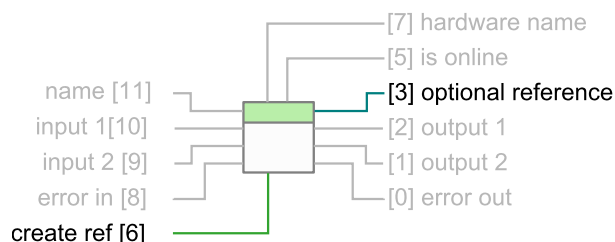

The connectors to obtain a reference on the Proxy object corresponding to the VI


To obtain this reference, you only need to set *optional ref* to TRUE. Note, it is essential to close all references created in this way, otherwise you risk to quickly saturate the computer memory.

Here is an example which uses this technique to change the luminosity of the leds of a Yoctopuce module.

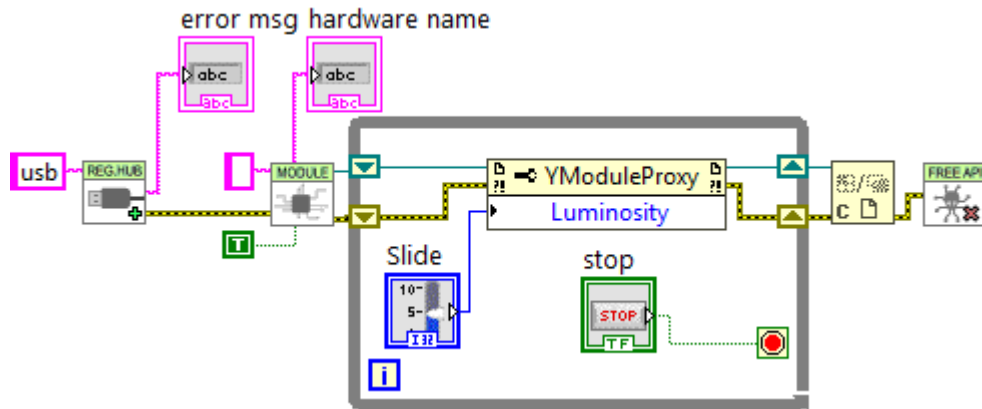

Regulating the luminosity of the leds of a module

Note that each reference allows you to obtain properties (*property nodes*) as well as methods (*invoke nodes*). By convention, properties are optimized to generate a minimum of communication with the modules. Therefore, we recommend to use them rather than the corresponding *get_xxx* and *set_xxx* methods which might seem equivalent but which are not optimized. Properties also enable you to retrieve the various constants of the API, prefixed with the "_" character. For technical reasons, the *get_xxx* and *set_xxx* methods are not all available as properties.

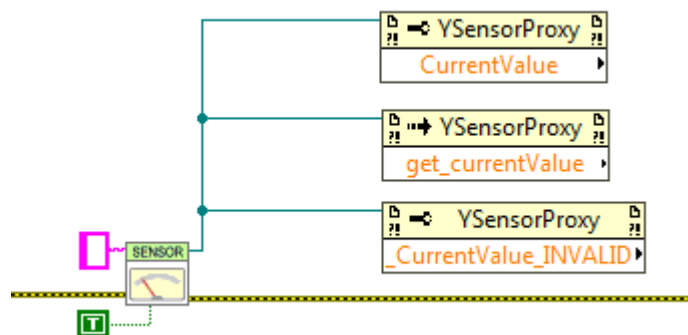


Property and Invoke nodes: Using properties, methods and constants

You can find a description of all the available properties, functions, and methods in the documentation of the *.NET Proxy API*.

Network mode

On a given machine, there can be only one process accessing local Yoctopuce modules directly by USB (url set to "usb"). It is however possible that multiple process connect in parallel to YoctoHubs⁷ or to a machine on which *VirtualHub*⁸ is running, including the local machine. Therefore, if you use the local address of your machine (127.0.0.1) and if a VirtualHub runs on it, you can work around the limitation which prevents using the native USB API in parallel.

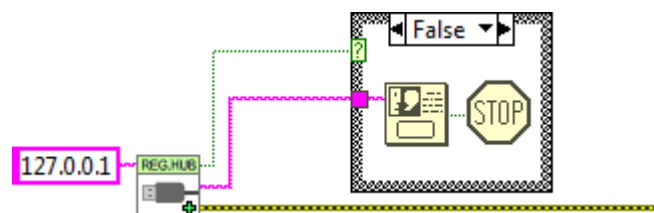


Network mode


⁷ <https://www.yoctopuce.com/EN/products/category/extensions-and-networking>

⁸ www.yoctopuce.com/EN/virtualhub.php

In the same way, there is no limitation on the number of network interfaces to which the API can connect itself in parallel. This means that it is quite possible to make multiple calls to the YRegisterHub VI. This is the only case where it is useful to call the YRegisterHub VI several times in the life of the application.

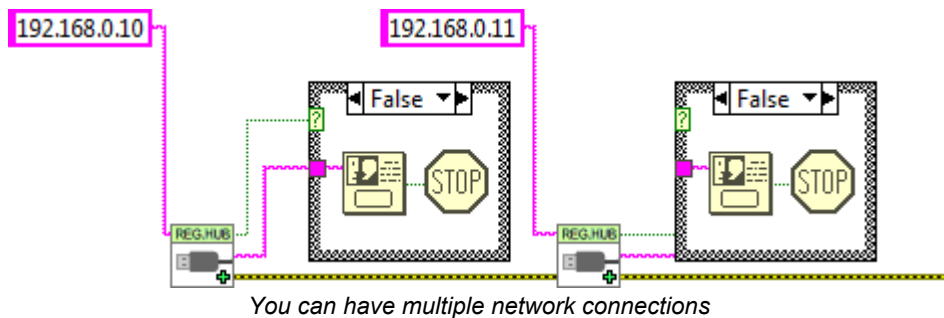

By default, the YRegisterHub VI tries to connect itself on the address given as parameter and generates an error (*success=FALSE*) when it cannot do so because nobody answers. But if the *async* parameter is initialized to *TRUE*, no error is generated when the connection does not succeed. If the connection becomes possible later in the life of the application, the corresponding modules are automatically made available.

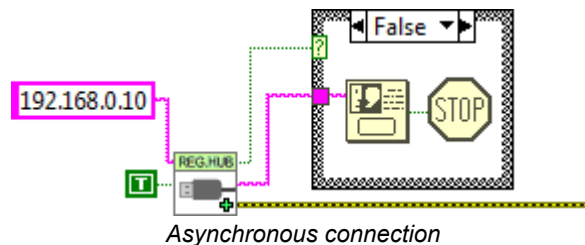


11.7. Managing the data logger

Almost all the Yoctopuce sensors have a data logger which enables you to store the measures of the sensors in the non-volatile memory of the module. You can configure the data logger with the VirtualHub, but also with a little bit of LabVIEW code.


Logging

To do so, you must configure the logging frequency by using the "LogFrequency" property which you can reach with a reference on the *Proxy* object of the sensor you are using. Then, you must turn the data logger on thanks to the YDataLogger VI. Note that, like with the YModule VI, you can obtain the YDataLogger VI corresponding to a module with its own name, but also with the name of any of the functions available on the same module.

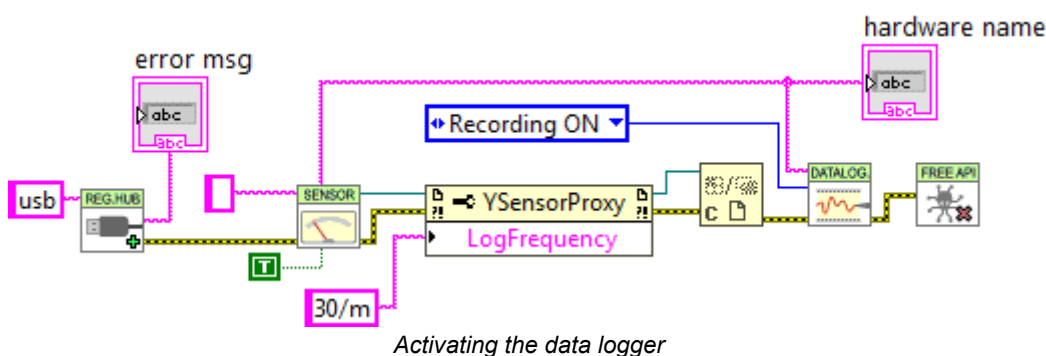

Reading

You can retrieve the data in the data logger with the YDataLoggerContents VI.

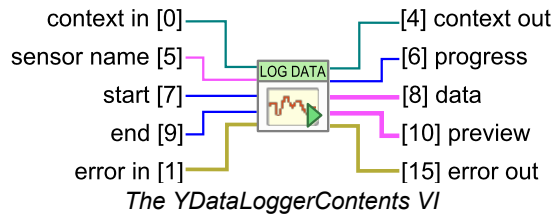


The YDataLoggerContents VI

Retrieving the data from the logger of a Yoctopuce module is a slow process which can take up to several tens of seconds. Therefore, we designed the VI enabling this operation to work iteratively.

As a first step, you must call the VI with a sensor name, a start date, and an end date (UTC UNIX timestamp). The (0,0) pair enables you to obtain the complete content of the data logger. This first call enables you to obtain a summary of the data logger content and a context.

As a second step, you must call the *YDataLoggerContents* VI in a loop with the context parameter, until the *progress* output reaches the 100 value. At this time, the data output represents the content of the data logger.

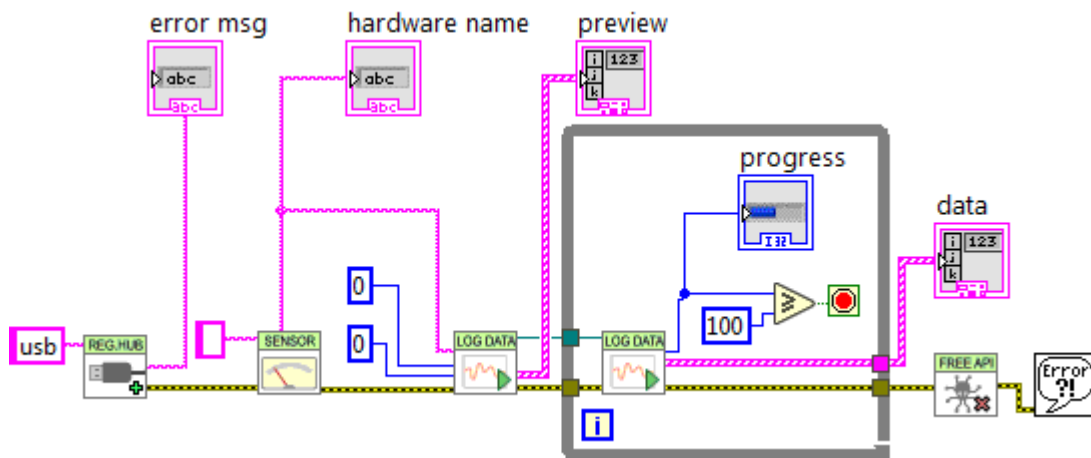

Retrieving the content of the data logger


The results and the summary are returned as an array of structures containing the following fields:

- *startTime*: beginning of the measuring period
- *endTime*: end of the measuring period
- *averageValue*: average value for the period
- *minValue*: minimum value over the period
- *maxValue*: maximum value over the period

Note that if the logging frequency is superior to 1Hz, the data logger stores only current values. In this case, *averageValue*, *minValue*, and *maxValue* share the same value.

11.8. Function list


Each VI corresponding to an object of the *Proxy API* enables you to list all the functions of the same class with the *getSimilarFunctions()* method of the corresponding *Proxy* object. Thus, you can easily perform an inventory of all the connected modules, of all the connected sensors, of all the connected relays, and so on.

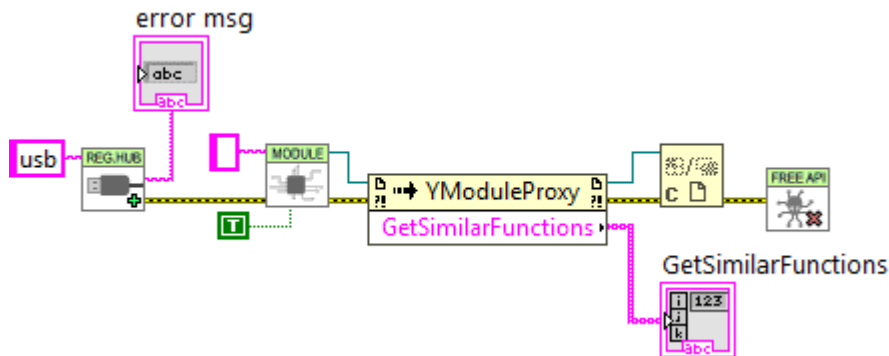

Retrieving the list of all the modules which are connected


11.9. A word on performances

The LabVIEW Yoctopuce API is optimized so that all the VIs and *.NET Proxy* API object properties generate a minimum of communication with Yoctopuce modules. Thus, you can use them in loops without taking any specific precaution: you *do not have to* slow down the loops with a timer.

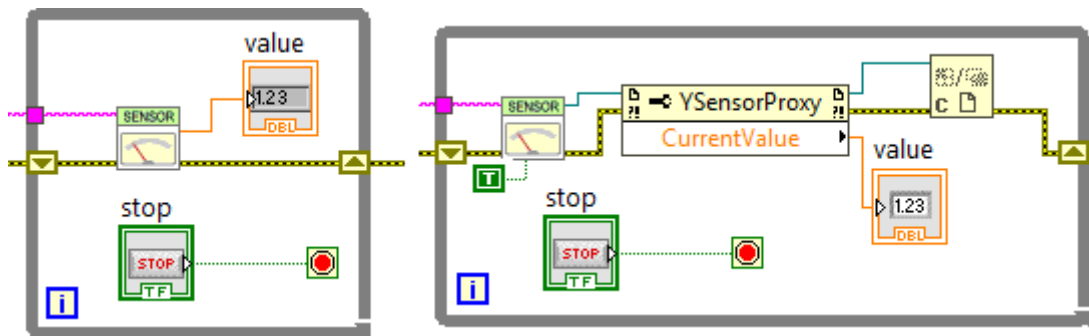

These two loops generate little USB communication and do not need to be slowed down


However, almost all the methods of the available Proxy objects initiate a communication with the Yoctopuce modules each time they are called. You should therefore avoid calling them too often without purpose.

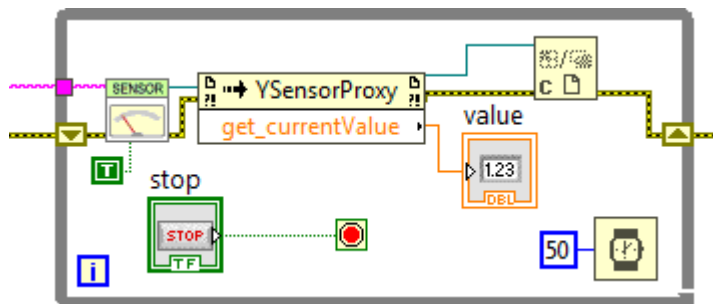

This loop, using a method, must be slowed down

11.10. A full example of a LabVIEW program

Here is a short example of how to use the Yocto-Watt-V2-C in LabVIEW. After a call to the *RegisterHub* VI, the *YPower* VI finds the first power sensor available, then use the *YModule* VI to find out the device serial number. This number is used to build the name of all sensors present on the device. These names are used to initialize one VI per sensor. This technique avoids ambiguities when several Yocto-Watt-V2-C are connected at the same time. Once every VI is initialized, the sensor value can be displayed. When the application is about to exit, it frees the Yoctopuce API, thanks to the *YFreeAPI* VI.

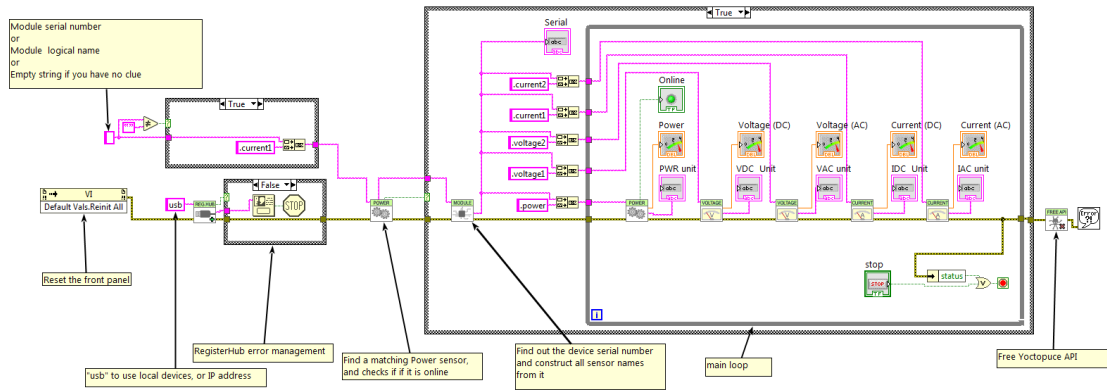

Example of Yocto-Watt-V2-C usage in LabVIEW

If you read this documentation on screen, you can zoom on the image above. You can also find this example in the LabVIEW Yoctopuce library.

11.11. Differences from other Yoctopuce APIs

Yoctopuce does everything it can to maintain a strong coherence between its different programming libraries. However, LabVIEW being clearly apart as an environment, there are, as a consequence, important differences from the other libraries.

These differences were introduced to make the use of modules as easy as possible and requiring a minimum of LabVIEW code.

YFreeAPI

In the opposite to other languages, you must absolutely free the native API by calling the `YFreeAPI` VI when your code does not need to use the API anymore. If you forget this call, the native API risks to stay locked for the other applications until LabVIEW is completely closed.

Properties

In the opposite to classes of the other APIs, classes available in LabVIEW implement *properties*. By convention, these properties are optimized to generate a minimum of communication with the modules while automatically refreshing. By contrast, methods of type `get_xxx` and `set_xxx` systematically generate communications with the Yoctopuce modules and must be called sparingly.

Callback vs. Properties

There is no callback in the LabVIEW Yoctopuce API, the VIs automatically refresh: they are based on the properties of the *.NET Proxy* API objects.

12. Using the Yocto-Watt-V2-C with Java

Java is an object oriented language created by Sun Microsystem. Beside being free, its main strength is its portability. Unfortunately, this portability has an excruciating price. In Java, hardware abstraction is so high that it is almost impossible to work directly with the hardware. Therefore, the Yoctopuce API does not support native mode in regular Java. The Java API needs VirtualHub to communicate with Yoctopuce devices.

12.1. Getting ready

Go to the Yoctopuce web site and download the following items:

- The Java programming library¹
- VirtualHub² for Windows, macOS or Linux, depending on your OS

The library is available as source files as well as a *jar* file. Decompress the library files in a folder of your choice, connect your modules, run VirtualHub, and you are ready to start your first tests. You do not need to install any driver.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

12.2. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Java code snippet to use the Power function.

```
[...]
// Get access to your device, through the VirtualHub running locally
YAPI.RegisterHub("127.0.0.1");
[...]

// Retrieve the object used to interact with the device
power = YPower.FindPower("YWATMK2C-123456.power");

// Hot-plug is easy: just check that the device is online
if (power.isOnline())
{
```

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

```
// Use power.get_currentValue()
[...]
```

Let us look at these lines in more details.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the Virtual Hub able to see the devices. If the initialization does not succeed, an exception is thrown.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MyFunction")
power = YPower.FindPower("MyModule.power")
power = YPower.FindPower("MyModule.MyFunction")
power = YPower.FindPower("MyFunction")
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch your Java environment and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
import com.yoctopuce.YoctoAPI.*;

public class Demo {

    public static void main(String[] args) {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }
        YPower psensor;

        if (args.length == 0) {
            psensor = YPower.FirstPower();
        }
    }
}
```

```

        if (psensor == null) {
            System.out.println("No module connected (check USB cable)");
            System.exit(1);
        }
    } else {
        psensor = YPower.FindPower(args[0] + ".power");
    }

    while (true) {
        try {
            System.out.println("Current power: " + psensor.get_currentValue() + " W" +
psensor.get_powerFactor() + " ?");
            System.out.println("  (press Ctrl-C to exit)");
            YAPI.Sleep(1000);
        } catch (YAPI_Exception ex) {
            System.out.println("Module not connected (check identification and USB
cable)");
            break;
        }
    }

    YAPI.FreeAPI();
}

```

12.3. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

import com.yoctopuce.YoctoAPI.*;
import java.util.logging.Level;
import java.util.logging.Logger;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }
        System.out.println("usage: demo [serial or logical name] [ON/OFF]");

        YModule module;
        if (args.length == 0) {
            module = YModule.FirstModule();
            if (module == null) {
                System.out.println("No module connected (check USB cable)");
                System.exit(1);
            }
        } else {
            module = YModule.FindModule(args[0]); // use serial or logical name
        }

        try {
            if (args.length > 1) {
                if (args[1].equalsIgnoreCase("ON")) {
                    module.setBeacon(YModule.BEACON_ON);
                } else {
                    module.setBeacon(YModule.BEACON_OFF);
                }
            }
            System.out.println("serial:      " + module.get_serialNumber());
            System.out.println("logical name: " + module.get_logicalName());
            System.out.println("luminosity:  " + module.get_luminosity());
            if (module.get_beacon() == YModule.BEACON_ON) {

```

```

        System.out.println("beacon:      ON");
    } else {
        System.out.println("beacon:      OFF");
    }
    System.out.println("upTime:      " + module.get_upTime() / 1000 + " sec");
    System.out.println("USB current:  " + module.get_usbCurrent() + " mA");
    System.out.println("logs:\n" + module.get_lastLogs());
} catch (YAPI_Exception ex) {
    System.out.println(args[1] + " not connected (check identification and USB
cable)");
}
YAPI.FreeAPI();
}
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

import com.yoctopuce.YoctoAPI.*;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }

        if (args.length != 2) {
            System.out.println("usage: demo <serial or logical name> <new logical name>");
            System.exit(1);
        }

        YModule m;
        String newname;

        m = YModule.FindModule(args[0]); // use serial or logical name

        try {
            newname = args[1];
            if (!YAPI.CheckLogicalName(newname))
            {
                System.out.println("Invalid name (" + newname + ")");
                System.exit(1);
            }

            m.set_logicalName(newname);
            m.saveToFlash(); // do not forget this

            System.out.println("Module: serial= " + m.get_serialNumber());
            System.out.println(" / name= " + m.get_logicalName());
        } catch (YAPI_Exception ex) {
            System.out.println("Module " + args[0] + " not connected (check identification
and USB cable)");
            System.out.println(ex.getMessage());
            System.exit(1);
        }
    }
}

```

```

        YAPI.FreeAPI();
    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

import com.yoctopuce.YoctoAPI.*;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }

        System.out.println("Device list");
        YModule module = YModule.FirstModule();
        while (module != null) {
            try {
                System.out.println(module.get_serialNumber() + " (" +
module.get_productName() + ")");
            } catch (YAPI_Exception ex) {
                break;
            }
            module = module.nextModule();
        }
        YAPI.FreeAPI();
    }
}

```

12.4. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Java API, error handling is implemented with exceptions. Therefore you must catch and handle correctly all exceptions that might be thrown by the API if you do not want your software to crash as soon as you unplug a device.

13. Using the Yocto-Watt-V2-C with Android

To tell the truth, Android is not a programming language, it is an operating system developed by Google for mobile appliances such as smart phones and tablets. But it so happens that under Android everything is programmed with the same programming language: Java. Nevertheless, the programming paradigms and the possibilities to access the hardware are slightly different from classical Java, and this justifies a separate chapter on Android programming.

13.1. Native access and VirtualHub

In the opposite to the classical Java API, the Java for Android API can access USB modules natively. However, as there is no VirtualHub running under Android, it is not possible to remotely control Yoctopuce modules connected to a machine under Android. Naturally, the Java for Android API remains perfectly able to connect itself to VirtualHub running on another OS.

13.2. Getting ready

Go to the Yoctopuce web site and download the Java for Android programming library¹. The library is available as source files, and also as a jar file. Connect your modules, decompress the library files in the directory of your choice, and configure your Android programming environment so that it can find them.

To keep them simple, all the examples provided in this documentation are snippets of Android applications. You must integrate them in your own Android applications to make them work. However, you can find complete applications in the examples provided with the Java for Android library.

13.3. Compatibility

In an ideal world, you would only need to have a smart phone running under Android to be able to make Yoctopuce modules work. Unfortunately, it is not quite so in the real world. A machine running under Android must fulfil to a few requirements to be able to manage Yoctopuce USB modules natively.

Android version

Our library can be compiled to work with older versions, as long as the Android tools allow us to support them, i.e. approximately versions of the last ten years.

¹ www.yoctopuce.com/EN/libraries.php

USB host support

Naturally, not only must your machine have a USB port, this port must also be able to run in *host* mode. In *host* mode, the machine literally takes control of the devices which are connected to it. The USB ports of a desktop computer, for example, work in *host* mode. The opposite of the *host* mode is the *device* mode. USB keys, for instance, work in *device* mode: they must be controlled by a *host*. Some USB ports are able to work in both modes, they are *OTG (On The Go)* ports. It so happens that many mobile devices can only work in *device* mode: they are designed to be connected to a charger or a desktop computer, and nothing else. It is therefore highly recommended to pay careful attention to the technical specifications of a product working under Android before hoping to make Yoctopuce modules work with it.

Unfortunately, having a correct version of Android and USB ports working in *host* mode is not enough to guaranty that Yoctopuce modules will work well under Android. Indeed, some manufacturers configure their Android image so that devices other than keyboard and mass storage are ignored, and this configuration is hard to detect. As things currently stand, the best way to know if a given Android machine works with Yoctopuce modules consists in trying.

13.4. Activating the USB port under Android

By default, Android does not allow an application to access the devices connected to the USB port. To enable your application to interact with a Yoctopuce module directly connected on your tablet on a USB port, a few additional steps are required. If you intend to interact only with modules connected on another machine through the network, you can ignore this section.

In your `AndroidManifest.xml`, you must declare using the "USB Host" functionality by adding the `<uses-feature android:name="android.hardware.usb.host" />` tag in the manifest section.

```
<manifest ...>
  ...
  <uses-feature android:name="android.hardware.usb.host" />;
  ...
</manifest>
```

When first accessing a Yoctopuce module, Android opens a window to inform the user that the application is going to access the connected module. The user can deny or authorize access to the device. If the user authorizes the access, the application can access the connected device as long as it stays connected. To enable the Yoctopuce library to correctly manage these authorizations, your must provide a pointer on the application context by calling the `EnableUSBHost` method of the `YAPI` class before the first USB access. This function takes as arguments an object of the `android.content.Context` class (or of a subclass). As the `Activity` class is a subclass of `Context`, it is simpler to call `YAPI.EnableUSBHost(this)` ; in the method `onCreate` of your application. If the object passed as parameter is not of the correct type, a `YAPI_Exception` exception is generated.

```
...
@Override
public void onCreate(Bundle savedInstanceState) {
    super.onCreate(savedInstanceState);
    try {
        // Pass the application Context to the Yoctopuce Library
        YAPI.EnableUSBHost(this);
    } catch (YAPI_Exception e) {
        Log.e("Yocto", e.getLocalizedMessage());
    }
}
...
```

Autorun

It is possible to register your application as a default application for a USB module. In this case, as soon as a module is connected to the system, the application is automatically launched. You must

add `<action android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED"/>` in the section `<intent-filter>` of the main activity. The section `<activity>` must have a pointer to an XML file containing the list of USB modules which can run the application.

```
<manifest xmlns:android="http://schemas.android.com/apk/res/android"
...
<uses-feature android:name="android.hardware.usb.host" />
...
<application ... >
    <activity
        android:name=".MainActivity" >
        <intent-filter>
            <action android:name="android.intent.action.MAIN" />
            <action android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED" />
            <category android:name="android.intent.category.LAUNCHER" />
        </intent-filter>

        <meta-data
            android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED"
            android:resource="@xml/device_filter" />
        </activity>
    </application>

</manifest>
```

The XML file containing the list of modules allowed to run the application must be saved in the `res/xml` directory. This file contains a list of USB *vendorId* and *deviceId* in decimal. The following example runs the application as soon as a Yocto-Relay or a YoctoPowerRelay is connected. You can find the *vendorID* and the *deviceId* of Yoctopuce modules in the characteristics section of the documentation.

```
<?xml version="1.0" encoding="utf-8"?>

<resources>
    <usb-device vendor-id="9440" product-id="12" />
    <usb-device vendor-id="9440" product-id="13" />
</resources>
```

13.5. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Java code snippet to use the Power function.

```
[...]
// Enable detection of USB devices
YAPI.EnableUSBHost(this);
YAPI.RegisterHub("usb");
[...]
// Retrieve the object used to interact with the device
power = YPower.FindPower("YWATMK2C-123456.power");

// Hot-plug is easy: just check that the device is online
if (power.isOnline()) {
    // Use power.get_currentValue()
    [...]
}

[...]
```

Let us look at these lines in more details.

YAPI.EnableUSBHost

The `YAPI.EnableUSBHost` function initializes the API with the Context of the current application. This function takes as argument an object of the `android.content.Context` class (or of a subclass). If you intend to connect your application only to other machines through the network, this function is facultative.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the virtual hub able to see the devices. If the string "usb" is passed as parameter, the API works with modules locally connected to the machine. If the initialization does not succeed, an exception is thrown.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named "MyModule", and for which you have given the power function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MyFunction")
power = YPower.FindPower("MyModule.power")
power = YPower.FindPower("MyModule.MyFunction")
power = YPower.FindPower("MyFunction")
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch your Java environment and open the corresponding sample project provided in the directory **Examples//Doc-Examples** of the Yoctopuce library.

In this example, you can recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.os.Handler;
import android.view.View;
import android.widget.AdapterView;
import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.Spinner;
import android.widget.TextView;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;
import com.yoctopuce.YoctoAPI.YPower;

public class GettingStarted_Yocto_Watt extends Activity implements OnItemClickListener
{
    private ArrayAdapter<String> aa;
    private String serial = "";
    private Handler handler = null;

    @Override
```

```

public void onCreate(Bundle savedInstanceState)
{
    super.onCreate(savedInstanceState);
    setContentView(R.layout.gettingstarted_yocto_watt);
    Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
    my_spin.setOnItemSelectedListener(this);
    aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
    aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
    my_spin.setAdapter(aa);
    handler = new Handler();
}

@Override
protected void onStart()
{
    super.onStart();
    try {
        aa.clear();
        YAPI.EnableUSBHost(this);
        YAPI.RegisterHub("usb");
        YModule module = YModule.FirstModule();
        while (module != null) {
            if (module.get_productName().equals("Yocto-Watt")) {
                String serial = module.get_serialNumber();
                aa.add(serial);
            }
            module = module.nextModule();
        }
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
    aa.notifyDataSetChanged();
    handler.postDelayed(r, 500);
}

@Override
protected void onStop()
{
    super.onStop();
    handler.removeCallbacks(r);
    YAPI.FreeAPI();
}

@Override
public void onItemSelected(AdapterView<?> parent, View view, int pos, long id)
{
    serial = parent.getItemAtPosition(pos).toString();
}

@Override
public void onNothingSelected(AdapterView<?> arg0)
{
}

final Runnable r = new Runnable()
{
    public void run()
    {
        if (serial != null) {
            YPower power_sensor = YPower.FindPower(serial + ".power");
            try {
                TextView view = (TextView) findViewById(R.id.powerfield);
                view.setText(String.format("%.1f %s", power_sensor.getCurrentValue(),
                    power_sensor.getUnit()));
            } catch (YAPI_Exception e) {
                e.printStackTrace();
            }
        }
        handler.postDelayed(this, 1000);
    }
};
}

```

13.6. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.view.View;
import android.widget.AdapterView;
import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.Spinner;
import android.widget.Switch;
import android.widget.TextView;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

public class ModuleControl extends Activity implements OnItemClickListener
{
    private ArrayAdapter<String> aa;
    private YModule module = null;

    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.modulecontrol);
        Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
        my_spin.setOnItemClickListener(this);
        aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
        aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
        my_spin.setAdapter(aa);
    }

    @Override
    protected void onStart()
    {
        super.onStart();

        try {
            aa.clear();
            YAPI.EnableUSBHost(this);
            YAPI.RegisterHub("usb");
            YModule r = YModule.FirstModule();
            while (r != null) {
                String hwid = r.get_hardwareId();
                aa.add(hwid);
                r = r.nextModule();
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
        // refresh Spinner with detected relay
        aa.notifyDataSetChanged();
    }

    @Override
    protected void onStop()
    {
        super.onStop();
        YAPI.FreeAPI();
    }

    private void DisplayModuleInfo()
    {
        TextView field;
        if (module == null)
            return;
        try {
            field = (TextView) findViewById(R.id.serialfield);
            field.setText(module.getSerialNumber());
        }
    }
}
```

```

        field = (TextView) findViewById(R.id.logicalnamefield);
        field.setText(module.getLogicalName());
        field = (TextView) findViewById(R.id.luminosityfield);
        field.setText(String.format("%d%%", module.getLuminosity()));
        field = (TextView) findViewById(R.id.uptimefield);
        field.setText(module.getUpTime() / 1000 + " sec");
        field = (TextView) findViewById(R.id.usbcurrentfield);
        field.setText(module.getUsbCurrent() + " mA");
        Switch sw = (Switch) findViewById(R.id.beaconswitch);
        sw.setChecked(module.getBeacon() == YModule.BEACON_ON);
        field = (TextView) findViewById(R.id.logs);
        field.setText(module.get_lastLogs());

    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
}

@Override
public void onItemClick(AdapterView<?> parent, View view, int pos, long id)
{
    String hwid = parent.getItemAtPosition(pos).toString();
    module = YModule.FindModule(hwid);
    DisplayModuleInfo();
}

@Override
public void onNothingSelected(AdapterView<?> arg0)
{
}

public void refreshInfo(View view)
{
    DisplayModuleInfo();
}

public void toggleBeacon(View view)
{
    if (module == null)
        return;
    boolean on = ((Switch) view).isChecked();

    try {
        if (on) {
            module.setBeacon(YModule.BEACON_ON);
        } else {
            module.setBeacon(YModule.BEACON_OFF);
        }
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
}
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.view.View;
import android.widget.AdapterView;

```

```

import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.EditText;
import android.widget.Spinner;
import android.widget.TextView;
import android.widget.Toast;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

public class SaveSettings extends Activity implements OnItemSelectedListener
{
    private ArrayAdapter<String> aa;
    private YModule module = null;

    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.savesettings);
        Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
        my_spin.setOnItemSelectedListener(this);
        aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
        aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
        my_spin.setAdapter(aa);
    }

    @Override
    protected void onStart()
    {
        super.onStart();

        try {
            aa.clear();
            YAPI.EnableUSBHost(this);
            YAPI.RegisterHub("usb");
            YModule r = YModule.FirstModule();
            while (r != null) {
                String hwid = r.get_hardwareId();
                aa.add(hwid);
                r = r.nextModule();
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
        // refresh Spinner with detected relay
        aa.notifyDataSetChanged();
    }

    @Override
    protected void onStop()
    {
        super.onStop();
        YAPI.FreeAPI();
    }

    private void DisplayModuleInfo()
    {
        TextView field;
        if (module == null)
            return;
        try {
            YAPI.UpdateDeviceList(); // fixme
            field = (TextView) findViewById(R.id.logicalnamefield);
            field.setText(module.getLogicalName());
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
    }

    @Override
    public void onItemClick(AdapterView<?> parent, View view, int pos, long id)
    {
        String hwid = parent.getItemAtPosition(pos).toString();
        module = YModule.FindModule(hwid);
        DisplayModuleInfo();
    }
}

```

```

    }

    @Override
    public void onNothingSelected(AdapterView<?> arg0)
    {
    }

    public void saveName(View view)
    {
        if (module == null)
            return;

        EditText edit = (EditText) findViewById(R.id.newname);
        String newname = edit.getText().toString();
        try {
            if (!YAPI.CheckLogicalName(newname)) {
                Toast.makeText(getApplicationContext(), "Invalid name (" + newname + ")",
                    Toast.LENGTH_LONG).show();
                return;
            }
            module.set_logicalName(newname);
            module.saveToFlash(); // do not forget this
            edit.setText("");
        } catch (YAPI_Exception ex) {
            ex.printStackTrace();
        }
        DisplayModuleInfo();
    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.util.TypedValue;
import android.view.View;
import android.widget.LinearLayout;
import android.widget.TextView;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

public class Inventory extends Activity
{
    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.inventory);
    }

    public void refreshInventory(View view)
    {
        LinearLayout layout = (LinearLayout) findViewById(R.id.inventoryList);
        layout.removeAllViews();

        try {
            YAPI.UpdateDeviceList();

```

```

        YModule module = YModule.FirstModule();
        while (module != null) {
            String line = module.get_serialNumber() + " (" + module.get_productName() +
            ")";

            TextView tx = new TextView(this);
            tx.setText(line);
            tx.setTextSize(TypedValue.COMPLEX_UNIT_SP, 20);
            layout.addView(tx);
            module = module.nextModule();
        }
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
}

@Override
protected void onStart()
{
    super.onStart();
    try {
        YAPI.EnableUSBHost(this);
        YAPI.RegisterHub("usb");
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
    refreshInventory(null);
}

@Override
protected void onStop()
{
    super.onStop();
    YAPI.FreeAPI();
}
}

```

13.7. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Java API for Android, error handling is implemented with exceptions. Therefore you must catch and handle correctly all exceptions that might be thrown by the API if you do not want your software to crash soon as you unplug a device.

14. Using Yocto-Watt-V2-C with TypeScript

TypeScript is an enhanced version of the JavaScript programming language. It is a syntactic superset with strong typing, therefore increasing the code reliability, but transpiled - aka compiled - into JavaScript for execution in any standard Web browser or Node.js environment.

This Yoctopuce library therefore makes it possible to implement JavaScript applications using strong typing. Similarly to our EcmaScript library, it uses the new asynchronous features introduced in ECMAScript 2017, which are now available in all modern JavaScript environments. Note however that at the time of writing, Web browsers and Node.JS cannot use TypeScript code directly, so you must first compile your TypeScript into JavaScript before running it.

The library works both in a Web browser and in Node.js. In order to allow for a static resolution of dependencies, and to avoid ambiguities that can arise when using hybrid environments such as Electron, the choice of the runtime environment must be done explicitly upon import of the library, by referencing in the project either `yocto_api_nodejs.js` or `yocto_api_html.js`.

The library can be integrated in your projects in multiple ways, depending on what best fits your requirements:

- by directly copying the TypeScript library source files into your project, and by adding them to your build script. Only a few files are usually needed to handle most use-cases. You will find TypeScript source files in the `src` subdirectory of our library.
- by using CommonJS module resolution, natively supported by TypeScript, with a package manager such as `npm`. You will find a version of the library transpiled according to CommonJS module standard in the `dist/cjs` subdirectory, including all type definition files (with extension `.d.ts`) and source maps (with extension `.js.map`) enabling source-level error reporting and debugging. We have also published these files on `npmjs` under the name `yoctolib-cjs`.
- by using ECMAScript standard module resolution, also supported by TypeScript, usually referenced by relative path. You will find a version of the library transpiled as an ECMAScript 2015 module in the `dist/esm` subdirectory, including all type definition files (with extension `.d.ts`) and source maps (with extension `.js.map`) enabling source-level error reporting and debugging. We have also published these files on `npmjs` under the name `yoctolib-esm`.

14.1. Using the Yoctopuce library for TypeScript

1. Start by installing TypeScript on your machine if this is not yet done. In order to do so:

- Install on your development machine the official version of Node.js (version 10 or more recent). You can download it for free from the official web site: <http://nodejs.org>. Make sure to install it fully, including `npm`, and add it to the system path.
- Then install TypeScript on your machine using the command line:

```
npm install -g typescript
```

2. Go to the Yoctopuce web site and download the following items:

- The TypeScript programming library¹
- The VirtualHub software² for Windows, macOS, or Linux, depending on your OS. TypeScript and JavaScript are part of those languages which do not generally allow you to directly access to USB peripherals. Therefore the library can only be used to access network-enabled devices (connected through a YoctoHub), or USB devices accessible through Yoctopuce TCP/IP to USB gateway, named *VirtualHub*. No extra driver will be needed, though.

3. Extract the library files in a folder of your choice, and open a command window in the directory where you have installed it. In order to install the few dependencies which are necessary to start the examples, run this command:

```
npm install
```

When the command has run without error, you are ready to explore the examples. They are available in two different trees, depending on the environment that you need to use: `example_html` for running the Yoctopuce library within a Web browser, or `example_nodejs` if you plan to use the library in a Node.js environment.

The method to use for launching the examples depends on the environment. You will find more about it below.

14.2. Refresher on asynchronous I/O in JavaScript

JavaScript is single-threaded by design. In order to handle time-consuming I/O operations, JavaScript relies on asynchronous operations: the I/O call is only triggered but then the code execution flow is suspended. The JavaScript engine is therefore free to handle other pending tasks, such as user interface. Whenever the pending I/O call is completed, the system invokes a callback function with the result of the I/O call to resume execution of the original execution flow.

When used with plain callback functions, as pervasive in Node.js libraries, asynchronous I/O tend to produce code with poor readability, as the execution flow is broken into many disconnected callback functions. Fortunately, the ECMAScript 2015 standard came in with *Promise* objects and a new `async / await` syntax to abstract calls to asynchronous calls:

- a function declared *async* automatically encapsulates its result as a *Promise*
- within an *async* function, any function call prefixed with *await* chains the *Promise* returned by the function with a promise to resume execution of the caller
- any exception during the execution of an *async* function automatically invokes the *Promise* failure continuation

To make a long story short, *async* and *await* make it possible to write TypeScript code with all the benefits of asynchronous I/O, but without breaking the code flow. It is almost like multi-threaded

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

execution, except that control switch between pending tasks only happens at places where the *await* keyword appears.

This TypeScript library uses the *Promise* objects and *async* methods, to allow you to use the *await* syntax. To keep it easy to remember, all public methods of the TypeScript library are *async*, i.e. return a *Promise* object, except:

- `GetTickCount()`, because returning a time stamp asynchronously does not make sense...
- `FindModule()`, `FirstModule()`, `nextModule()`, ... because device detection and enumeration always works on internal device lists handled in background, and does not require immediate asynchronous I/O.

In most cases, TypeScript strong typing will remind you to use *await* when calling an asynchronous method.

14.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a TypeScript code snippet to use the Power function.

```
// For Node.js, the library is referenced through the NPM package
// For HTML, we would use instead a relative path (depending on the build environment)
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';
import { YPower } from 'yoctolib-cjs/yocto_power.js';

[...]
```

// Get access to your device, through the VirtualHub running locally

```
await YAPI.RegisterHub('127.0.0.1');
[...]
```

// Retrieve the object used to interact with the device

```
var power: YPower = YPower.FindPower("YWATMK2C-123456.power");
```

// Check that the module is online to handle hot-plug

```
if(await power.isOnline())
{
    // Use power.get_currentValue()
    [...]
```

Let us look at these lines in more details.

yocto_api and yocto_power import

These two imports provide access to functions allowing you to manage Yoctopuce modules. `yocto_api` is always needed, `yocto_power` is necessary to manage modules containing an electrical power sensor, such as Yocto-Watt-V2-C. Other imports can be useful in other cases, such as `YModule` which can let you enumerate any type of Yoctopuce device.

In order to properly bind `yocto_api` to the proper network libraries (provided either by Node.js or by the web browser for an HTML application), you must import at least once in your project one of the two variants `yocto_api_nodejs.js` or `yocto_api_html.js`.

Note that this example imports the Yoctopuce library as a CommonJS module, which is the most frequently used with Node.JS, but if your project is designed around EcmaScript native modules, you can also replace in the import directive the prefix `yoctolib-cjs` by `yoctolib-esm`.

YAPI.RegisterHub

The `RegisterHub` method allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port 4444 (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running, or of a YoctoHub. If the host cannot be reached, this function will trigger an exception.

As explained above, using `RegisterHub("usb")` is not supported in TypeScript, because the JavaScript engine has no direct access to USB devices. It needs to go through the VirtualHub via a localhost connection.

YPower.FindPower

The `FindPower` method allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MaFonction")
power = YPower.FindPower("MonModule.power")
power = YPower.FindPower("MonModule.MaFonction")
power = YPower.FindPower("MaFonction")
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example, for Node.js

Open a command window (a terminal, a shell...) and go into the directory **example_nodejs/Doc-GettingStarted-Yocto-Watt-V2-C** within Yoctopuce library for TypeScript. In there, you will find a file named `demo.ts` with the sample code below, which uses the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

If your Yocto-Watt-V2-C is not connected on the host running the browser, replace in the example the address `127.0.0.1` by the IP address of the host on which the Yocto-Watt-V2-C is connected and where you run the VirtualHub.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';
import { YPower } from 'yoctolib-cjs/yocto_power.js'

let power: YPower;

async function startDemo(): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select specified device, or use first available one
    let serial: string = process.argv[process.argv.length-1];
    if(serial[8] !== '-') {
        // by default use any connected module suitable for the demo
        let anysensor = YPower.FirstPower();
        if(anysensor) {
            let module: YModule = await anysensor.get_module();
            serial = await module.get_serialNumber();
        } else {
```

```

        console.log('No matching sensor connected, check cable !');
        await YAPI.FreeAPI();
        return;
    }
}
console.log('Using device '+serial);
power = YPower.FindPower(serial+".power");

refresh();
}

async function refresh(): Promise<void>
{
    if (await power.isOnline()) {
        console.log('Power : '+ (await power.get_currentValue()) + (await power.get_unit()));
    } else {
        console.log('Module not connected');
    }
    setTimeout(refresh, 500);
}

startDemo();

```

As explained at the beginning of this chapter, you need to have installed the TypeScript compiler on your machine to test these examples, and to install the typescript library dependencies. If you have done that, you can now type the following two commands in the example directory, to finalize the resolution of the example-specific dependencies:

```
npm install
```

You are now ready to start the sample code with Node.js. The easiest way to do it is to use the following command, replacing the [...] by the arguments that you want to pass to the demo code:

```
npm run demo [...]
```

This command, defined in `package.json`, will first start the TypeScript compiler using the simple `tsc` command, then run the transpiled code in Node.js.

The compilation uses the parameters specified in the file `tsconfig.json`, and produces

- a JavaScript file named `demo.js`, that Node.js can run
- a debug file named `demo.js.map`, that will help Node.js to locate the source of errors in the original TypeScript source file rather than reporting them in the JavaScript compiled file.

Note that the `package.json` file in our examples uses a relative reference to the local copy of the library, to avoid duplicating the library in each example. But of course, for your application, you can refer to the package directly in npm repository, by adding it to your project using the command:

```
npm install yoctolib-cjs
```

Same example, but this time running in a browser

If you want to see how to use the library within a browser rather than with Node.js, switch to the directory **example_html/Doc-GettingStarted-Yocto-Watt-V2-C**. You will find there an HTML file named `app.html`, and a TypeScript file `app.ts` similar to the code above, but with a few changes since it has to interact through an HTML page rather than through the JavaScript console.

No installation is needed to run this example, as the TypeScript library is referenced using a relative path. However, in order to allow the browser to run the code, the HTML page must be served by a Web server. We therefore provide a simple test server for this purpose, that you can start with the command:

```
npm run app-server
```

This command will compile the TypeScript sample code, make it available via an HTTP server on port 3000 and open a Web browser on this example. If you change the example source code, the TypeScript compiler will automatically be triggered to update the transpiled code and a simple page reload on the browser will make it possible to test the change.

As for the Node.js example, the compilation process will create a source map file which makes it possible to debug the example code in TypeScript source form within the browser debugger. Note that as of the writing of this document, this works on Chromium-based browsers but not yet in Firefox.

14.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(args: string[]): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: ' + errmsg.msg);
        return;
    }

    // Select the device to use
    let module: YModule = YModule.FindModule(args[0]);
    if(await module.isOnline()) {
        if(args.length > 1) {
            if(args[1] === 'ON') {
                await module.set_beacon(YModule.BEACON_ON);
            } else {
                await module.set_beacon(YModule.BEACON_OFF);
            }
        }
        console.log('serial:      ' + await module.get_serialNumber());
        console.log('logical name: ' + await module.get_logicalName());
        console.log('luminosity:   ' + await module.get_luminosity() + '%');
        console.log('beacon:      ' +
            (await module.get_beacon() === YModule.BEACON_ON ? 'ON' : 'OFF'));
        console.log('upTime:      ' +
            ((await module.get_upTime())/1000)>>0) + ' sec');
        console.log('USB current: ' + await module.get_usbCurrent() + ' mA');
        console.log('logs:');
        console.log(await module.get_lastLogs());
    } else {
        console.log("Module not connected (check identification and USB cable)\n");
    }
    await YAPI.FreeAPI();
}

if(process.argv.length < 3) {
    console.log("usage: npm run demo <serial or logicalname> [ ON | OFF ]");
} else {
    startDemo(process.argv.slice(2));
}
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used methods, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` method. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent

memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(args: string[]): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select the device to use
    let module: YModule = YModule.FindModule(args[0]);
    if(await module.isOnline()) {
        if(args.length > 1) {
            let newname: string = args[1];
            if (!await YAPI.CheckLogicalName(newname)) {
                console.log("Invalid name (" + newname + ")");
                process.exit(1);
            }
            await module.set_logicalName(newname);
            await module.saveToFlash();
        }
        console.log('Current name: '+await module.get_logicalName());
    } else {
        console.log("Module not connected (check identification and USB cable)\n");
    }
    await YAPI.FreeAPI();
}

if(process.argv.length < 3) {
    console.log("usage: npm run demo <serial> [newLogicalName]");
} else {
    startDemo(process.argv.slice(2));
}
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` method only 100000 times in the life of the module. Make sure you do not call this method within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.FirstModule()` method which returns the first module found. Then, you only need to call the `nextModule()` method of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1');
        return;
    }
    refresh();
}

async function refresh(): Promise<void>
{
    try {
```

```

let errmsg: YErrorMsg = new YErrorMsg();
await YAPI.UpdateDeviceList(errmsg);

let module = YModule.FirstModule();
while(module) {
    let line: string = await module.get_serialNumber();
    line += '(' + (await module.get_productName()) + ')';
    console.log(line);
    module = module.nextModule();
}
setTimeout(refresh, 500);
} catch(e) {
    console.log(e);
}
}

startDemo();

```

14.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

15. Using Yocto-Watt-V2-C with JavaScript / EcmaScript

EcmaScript is the official name of the standardized version of the web-oriented programming language commonly referred to as *JavaScript*. This Yoctopuce library take advantages of advanced features introduced in EcmaScript 2017. It has therefore been named *Library for JavaScript / EcmaScript 2017* to differentiate it from the previous *Library for JavaScript*, now deprecated in favor of this new version.

This library provides access to Yoctopuce devices for modern JavaScript engines. It can be used within a browser as well as with Node.js. The library will automatically detect upon initialization whether the runtime environment is a browser or a Node.js virtual machine, and use the most appropriate system libraries accordingly.

Asynchronous communication with the devices is handled across the whole library using Promise objects, leveraging the new EcmaScript 2017 `async / await` non-blocking syntax for asynchronous I/O (see below). This syntax is now available out-of-the-box in most Javascript engines. No transpilation is needed: no Babel, no jspm, just plain Javascript. Here is your favorite engines minimum version needed to run this code. All of them are officially released at the time we write this document.

- Node.js v7.6 and later
- Firefox 52
- Opera 42 (incl. Android version)
- Chrome 55 (incl. Android version)
- Safari 10.1 (incl. iOS version)
- Android WebView 55
- Google V8 Javascript engine v5.5

If you need backward-compatibility with older releases, you can always run Babel to transpile your code and the library to older standards, as described a few paragraphs below.

We don't suggest using jspm anymore now that `async / await` are part of the standard.

15.1. Blocking I/O versus Asynchronous I/O in JavaScript

JavaScript is single-threaded by design. That means, if a program is actively waiting for the result of a network-based operation such as reading from a sensor, the whole program is blocked. In browser environments, this can even completely freeze the user interface. For this reason, the use of blocking I/O in JavaScript is strongly discouraged nowadays, and blocking network APIs are getting deprecated everywhere.

Instead of using parallel threads, JavaScript relies on asynchronous I/O to handle operations with a possible long timeout: whenever a long I/O call needs to be performed, it is only triggered and but then the code execution flow is terminated. The JavaScript engine is therefore free to handle other pending tasks, such as UI. Whenever the pending I/O call is completed, the system invokes a callback function with the result of the I/O call to resume execution of the original execution flow.

When used with plain callback functions, as pervasive in Node.js libraries, asynchronous I/O tend to produce code with poor readability, as the execution flow is broken into many disconnected callback functions. Fortunately, new methods have emerged recently to improve that situation. In particular, the use of *Promise* objects to abstract and work with asynchronous tasks helps a lot. Any function that makes a long I/O operation can return a *Promise*, which can be used by the caller to chain subsequent operations in the same flow. Promises are part of EcmaScript 2015 standard.

Promise objects are good, but what makes them even better is the new `async / await` keywords to handle asynchronous I/O:

- a function declared `async` will automatically encapsulate its result as a Promise
- within an `async` function, any function call prefixed with `await` will chain the Promise returned by the function with a promise to resume execution of the caller
- any exception during the execution of an `async` function will automatically invoke the Promise failure continuation

Long story made short, `async` and `await` make it possible to write EcmaScript code with all benefits of asynchronous I/O, but without breaking the code flow. It is almost like multi-threaded execution, except that control switch between pending tasks only happens at places where the `await` keyword appears.

We have therefore chosen to write our new EcmaScript library using Promises and `async` functions, so that you can use the friendly `await` syntax. To keep it easy to remember, **all public methods** of the EcmaScript library **are `async`**, i.e. return a Promise object, **except**:

- `GetTickCount()`, because returning a time stamp asynchronously does not make sense...
- `FindModule()`, `FirstModule()`, `nextModule()`, ... because device detection and enumeration always work on internal device lists handled in background, and does not require immediate asynchronous I/O.

15.2. Using Yoctopuce library for JavaScript / EcmaScript 2017

JavaScript is one of those languages which do not generally allow you to directly access the hardware layers of your computer. Therefore the library can only be used to access network-enabled devices (connected through a YoctoHub), or USB devices accessible through Yoctopuce TCP/IP to USB gateway, named *VirtualHub*.

Go to the Yoctopuce web site and download the following items:

- The Javascript / EcmaScript 2017 programming library¹
- VirtualHub² for Windows, macOS or Linux, depending on your OS

Extract the library files in a folder of your choice, you will find many of examples in it. Connect your modules and start the VirtualHub software. You do not need to install any driver.

Using the official Yoctopuce library for node.js

Start by installing the latest Node.js version (v7.6 or later) on your system. It is very easy. You can download it from the official web site: <http://nodejs.org>. Make sure to install it fully, including npm, and add it to the system path.

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

To give it a try, go into one of the example directory (for instance `example_nodejs/Doc-Inventory`). You will see that it include an application description file (`package.json`) and a source file (`demo.js`). To download and setup the libraries needed by this example, just run:

```
npm install
```

Once done, you can start the example file using:

```
node demo.js
```

Using a local copy of the Yoctopuce library with node.js

If for some reason you need to make changes to the Yoctopuce library, you can easily configure your project to use the local copy in the `lib/` subdirectory rather than the official npm package. In order to do so, simply type the following command in your project directory:

```
npm link ../../lib
```

Using the Yoctopuce library within a browser (HTML)

For HTML examples, it is even simpler: there is nothing to install. Each example is a single HTML file that you can open in a browser to try it. In this context, loading the Yoctopuce library is no different from any standard HTML script include tag.

Using the Yoctopuce library on older JavaScript engines

If you need to run this library on older JavaScript engines, you can use Babel³ to transpile your code and the library into older JavaScript standards. To install Babel with typical settings, simply use:

```
npm instal -g babel-cli
npm instal babel-preset-env
```

You would typically ask Babel to put the transpiled files in another directory, named `compat` for instance. Your files and all files of the Yoctopuce library should be transpiled, as follow:

```
babel --presets env demo.js --out-dir compat/
babel --presets env ../../lib --out-dir compat/
```

Although this approach is based on node.js toolchain, it actually works as well for transpiling JavaScript files for use in a browser. The only thing that you cannot do so easily is transpiling JavaScript code embedded directly in an HTML page. You have to use an external script file for using EcmaScript 2017 syntax with Babel.

Babel has many smart features, such as a watch mode that will automatically refresh transpiled files whenever the source file is changed, but this is beyond the scope of this note. You will find more in Babel documentation.

Backward-compatibility with the old JavaScript library

This new library is not fully backward-compatible with the old JavaScript library, because there is no way to transparently map the old blocking API to the new asynchronous API. The method names however are the same, and old synchronous code can easily be made asynchronous just by adding the proper `await` keywords before the method calls. For instance, simply replace:

```
beaconState = module.get_beacon();
```

by

³ <http://babeljs.io>

```
beaconState = await module.get_beacon();
```

Apart from a few exceptions, most XXX_async redundant methods have been removed as well, as they would have introduced confusion on the proper way of handling asynchronous behaviors. It is however very simple to get an *async* method to invoke a callback upon completion, using the returned Promise object. For instance, you can replace:

```
module.get_beacon_async(callback, myContext);
```

by

```
module.get_beacon().then(function(res) { callback(myContext, module, res); });
```

In some cases, it might be desirable to get a sensor value using a method identical to the old synchronous methods (without using Promises), even if it returns a slightly outdated cached value since I/O is not possible. For this purpose, the EcmaScript library introduce new classes called *synchronous proxies*. A synchronous proxy is an object that mirrors the most recent state of the connected class, but can be read using regular synchronous function calls. For instance, instead of writing:

```
async function logInfo(module)
{
    console.log('Name: '+await module.get_logicalName());
    console.log('Beacon: '+await module.get_beacon());
}

...
logInfo(myModule);
...
```

you can use:

```
function logInfoProxy(moduleSyncProxy)
{
    console.log('Name: '+moduleProxy.get_logicalName());
    console.log('Beacon: '+moduleProxy.get_beacon());
}

logInfoSync(await myModule.get_syncProxy());
```

You can also rewrite this last asynchronous call as:

```
myModule.get_syncProxy().then(logInfoProxy);
```

15.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a JavaScript code snippet to use the Power function.

```
// For Node.js, we use function require()
// For HTML, we would use <script src="...">
require('yoctolib-es2017/yocto_api.js');
require('yoctolib-es2017/yocto_power.js');

[...]
// Get access to your device, through the VirtualHub running locally
await YAPI.RegisterHub('127.0.0.1');
[...]

// Retrieve the object used to interact with the device
var power = YPower.FindPower("YWATMK2C-123456.power");

// Check that the module is online to handle hot-plug
```

```

if(await power.isOnline())
{
    // Use power.get_currentValue()
    [...]
}

```

Let us look at these lines in more details.

yocto_api and yocto_power import

These two import provide access to functions allowing you to manage Yoctopuce modules. `yocto_api` is always needed, `yocto_power` is necessary to manage modules containing a electrical power sensor, such as Yocto-Watt-V2-C. Other imports can be useful in other cases, such as `YModule` which can let you enumerate any type of Yoctopuce device.

YAPI.RegisterHub

The `RegisterHub` method allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port `4444` (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running, or of a YoctoHub. If the host cannot be reached, this function will trigger an exception.

YPower.FindPower

The `FindPower` method allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```

power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MaFonction")
power = YPower.FindPower("MonModule.power")
power = YPower.FindPower("MonModule.MaFonction")
power = YPower.FindPower("MaFonction")

```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example, for Node.js

Open a command window (a terminal, a shell...) and go into the directory **example_nodejs/Doc-GettingStarted-Yocto-Watt-V2-C** within Yoctopuce library for JavaScript / EcmaScript 2017. In there, you will find a file named `demo.js` with the sample code below, which uses the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

If your Yocto-Watt-V2-C is not connected on the host running the browser, replace in the example the address `127.0.0.1` with the IP address of the host on which the Yocto-Watt-V2-C is connected and where you run the VirtualHub.

```

"use strict";

require('yoctolib-es2017/yocto_api.js');
require('yoctolib-es2017/yocto_power.js');

let power;

async function startDemo()
{
    await YAPI.LogUnhandledPromiseRejections();
    await YAPI.DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select specified device, or use first available one
    let serial = process.argv[process.argv.length-1];
    if(serial[8] !== '-') {
        // by default use any connected module suitable for the demo
        let anysensor = YPower.FirstPower();
        if(anysensor) {
            let module = await anysensor.module();
            serial = await module.get_serialNumber();
        } else {
            console.log('No matching sensor connected, check cable !');
            return;
        }
    }
    console.log('Using device '+serial);
    power = YPower.FindPower(serial+".power");

    refresh();
}

async function refresh()
{
    if (await power.isOnline()) {
        console.log('Power : '+ (await power.get_currentValue()) + (await power.get_unit()));
    } else {
        console.log('Module not connected');
    }
    setTimeout(refresh, 500);
}

startDemo();

```

As explained at the beginning of this chapter, you need to have Node.js v7.6 or later installed to try this example. When done, you can type the following two commands to automatically download and install the dependencies for building this example:

```
npm install
```

You can then start the sample code within Node.js using the following command, replacing the [...] by the arguments that you want to pass to the demo code:

```
node demo.js [...]
```

Same example, but this time running in a browser

If you want to see how to use the library within a browser rather than with Node.js, switch to the directory **example_html/Doc-GettingStarted-Yocto-Watt-V2-C**. You will find there a single HTML file, with a JavaScript section similar to the code above, but with a few changes since it has to interact through an HTML page rather than through the JavaScript console.

```

<!DOCTYPE html>
<html>
<head>

```

```

<meta charset="UTF-8">
<title>Hello World</title>
<script src="../../lib/yocto_api.js"></script>
<script src="../../lib/yocto_power.js"></script>
<script>
  async function startDemo()
  {
    await YAPI.LogUnhandledPromiseRejections();
    await YAPI.DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) != YAPI.SUCCESS) {
      alert('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
    }
    refresh();
  }

  async function refresh()
  {
    let serial = document.getElementById('serial').value;
    if(serial == '') {
      // by default use any connected module suitable for the demo
      let anysensor = YPower.FirstPower();
      if(anysensor) {
        let module = await anysensor.module();
        serial = await module.get_serialNumber();
        document.getElementById('serial').value = serial;
      }
    }
    let power = YPower.FindPower(serial+".power");

    if (await power.isOnline()) {
      document.getElementById('msg').value = '';
      document.getElementById("power").value = (await power.get_currentValue()) + (await
power.get_unit());
    } else {
      document.getElementById('msg').value = 'Module not connected';
    }
    setTimeout(refresh, 500);
  }

  startDemo(); </script>
</head>
<body>
Module to use: <input id='serial'>
<input id='msg' style='color:red;border:none;' readonly><br>
Power : <input id='power' readonly><br>
</body>
</html>

```

No installation is needed to run this example, all you have to do is open the HTML file using a web browser,

15.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo(args)
{
  await YAPI.LogUnhandledPromiseRejections();

  // Setup the API to use the VirtualHub on local machine
  let errmsg = new YErrorMsg();
  if(await YAPI.RegisterHub('127.0.0.1', errmsg) != YAPI.SUCCESS) {
    console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
    return;
  }
}

```

```
// Select the relay to use
let module = YModule.FindModule(args[0]);
if(await module.isOnline()) {
    if(args.length > 1) {
        if(args[1] == 'ON') {
            await module.set_beacon(YModule.BEACON_ON);
        } else {
            await module.set_beacon(YModule.BEACON_OFF);
        }
    }
    console.log('serial:      '+await module.get_serialNumber());
    console.log('logical name: '+await module.get_logicalName());
    console.log('luminosity:  '+await module.get_luminosity()+'%');
    console.log('beacon:      '+ (await module.get_beacon() == YModule.BEACON_ON
?'ON':'OFF'));
    console.log('upTime:      '+parseInt(await module.get_upTime()/1000)+' sec');
    console.log('USB current:  '+await module.get_usbCurrent()+' mA');
    console.log('logs:');
    console.log(await module.get_lastLogs());
} else {
    console.log("Module not connected (check identification and USB cable)\n");
}
await YAPI.FreeAPI();
}

if(process.argv.length < 2) {
    console.log("usage: node demo.js <serial or logicalname> [ ON | OFF ]");
} else {
    startDemo(process.argv.slice(2));
}
}
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo(args)
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) != YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select the relay to use
    let module = YModule.FindModule(args[0]);
    if(await module.isOnline()) {
        if(args.length > 1) {
            let newname = args[1];
            if (!await YAPI.CheckLogicalName(newname)) {
                console.log("Invalid name (" + newname + ")");
                process.exit(1);
            }
            await module.set_logicalName(newname);
            await module.saveToFlash();
        }
        console.log('Current name: '+await module.get_logicalName());
    } else {

```

```

        console.log("Module not connected (check identification and USB cable)\n");
    }
    await YAPI.FreeAPI();
}

if(process.argv.length < 2) {
    console.log("usage: node demo.js <serial> [newLogicalName]");
} else {
    startDemo(process.argv.slice(2));
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.FirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo()
{
    await YAPI.LogUnhandledPromiseRejections();
    await YAPI.DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1');
        return;
    }
    refresh();
}

async function refresh()
{
    try {
        let errmsg = new YErrorMsg();
        await YAPI.UpdateDeviceList(errmsg);

        let module = YModule.FirstModule();
        while(module) {
            let line = await module.get_serialNumber();
            line += '(' + (await module.get_productName()) + ')';
            console.log(line);
            module = module.nextModule();
        }
        setTimeout(refresh, 500);
    } catch(e) {
        console.log(e);
    }
}

try {
    startDemo();
} catch(e) {
    console.log(e);
}

```

15.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

16. Using Yocto-Watt-V2-C with PHP

PHP is, like Javascript, an atypical language when interfacing with hardware is at stakes. Nevertheless, using PHP with Yoctopuce modules provides you with the opportunity to very easily create web sites which are able to interact with their physical environment, and this is not available to every web server. This technique has a direct application in home automation: a few Yoctopuce modules, a PHP server, and you can interact with your home from anywhere on the planet, as long as you have an internet connection.

PHP is one of those languages which do not allow you to directly access the hardware layers of your computer. Therefore you need to run VirtualHub on the machine on which your modules are connected.

To start your tests with PHP, you need a PHP 7.1 (or more recent) server¹, preferably locally on you machine. If you wish to use the PHP server of your internet provider, it is possible, but you will probably need to configure your ADSL router for it to accept and forward TCP request on the 4444 port.

16.1. Getting ready

Go to the Yoctopuce web site and download the following items:

- The PHP programming library²
- VirtualHub³ for Windows, macOS, or Linux, depending on your OS

Our PHP library is based on PHP 8.x. In other words, our library works perfectly with any version of PHP currently still supported. However, in order not to abandon our customers with older installations, we maintain a version compatible with PHP 7.1. which dates back to 2016.

We also offer a version of the library that follows PSR's recommendations. For simplicity's sake, this version uses the same code as the php8 version, but each class is stored in a separate file. In addition, this version uses a `Yoctopuce\YoctoAPI` namespace. These changes make our library much easier to use with autoload installations.

Note that the examples in the documentation do not use the PSR version.

¹ A couple of free PHP servers: easyPHP for Windows, MAMP for macOS.

² www.yoctopuce.com/EN/libraries.php

³ www.yoctopuce.com/EN/virtualhub.php

In the library archive, there are thus three subdirectories:

- php7
- php8
- phpPSR

Choose the right directory according to the version of the library you wish to use, unzip the files of this directory into a directory of your choice accessible to your web server, plug in your modules, launch VirtualHub, and you are ready to start testing. You do not need to install any driver.

16.2. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a PHP code snippet to use the Power function.

```
include('yocto_api.php');
include('yocto_power.php');

[...]
// Get access to your device, through the VirtualHub running locally
YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg);
[...]

// Retrieve the object used to interact with the device
$power = YPower::FindPower("YWATMK2C-123456.power");

// Check that the module is online to handle hot-plug
if($power->isOnline())
{
    // Use $power->get_currentValue()
    [...]
}
```

Let's look at these lines in more details.

yocto_api.php and yocto_power.php

These two PHP includes provides access to the functions allowing you to manage Yoctopuce modules. `yocto_api.php` must always be included, `yocto_power.php` is necessary to manage modules containing a electrical power sensor, such as Yocto-Watt-V2-C.

YAPI::RegisterHub

The `YAPI::RegisterHub` function allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port 4444 (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running.

YPower::FindPower

The `YPower::FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the power function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
$power = YPower::FindPower("YWATMK2C-123456.power");
$power = YPower::FindPower("YWATMK2C-123456.MyFunction");
$power = YPower::FindPower("MyModule.power");
$power = YPower::FindPower("MyModule.MyFunction");
$power = YPower::FindPower("MyFunction");
```

`YPower::FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower::FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `yFindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Open your preferred text editor⁴, copy the code sample below, save it with the Yoctopuce library files in a location which is accessible to your web server, then use your preferred web browser to access this page. The code is also provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
<HTML>
<HEAD>
  <TITLE>Hello World</TITLE>
</HEAD>
<BODY>
<?php
  include('../..//php8/yocto_api.php');
  include('../..//php8/yocto_power.php');

  // Use explicit error handling rather than exceptions
  YAPI::DisableExceptions();

  // Setup the API to use the VirtualHub on local machine
  if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
    die("Cannot contact VirtualHub on 127.0.0.1");
  }

  @$serial = $_GET['serial'];
  if ($serial != '') {
    // Check if a specified module is available online
    $powersensor = YPower::FindPower("$serial.Power");
    if (!$powersensor->isOnline()) {
      die("Module not connected (check serial and USB cable)");
    }
  } else {
    // or use any connected module suitable for the demo
    $powersensor = YPower::FirstPower();
    if(is_null($powersensor)) {
      die("No module connected (check USB cable)");
    } else {
      $serial = $powersensor->module()->get_serialnumber();
    }
  }
  Print("Module to use: <input name='serial' value='$serial'><br>");

  $tvalue = $powersensor->get_currentValue();
  Print("Power: $tvalue W<br>");
  YAPI::FreeAPI();

  // trigger auto-refresh after one second
  Print("<script language='javascript1.5' type='text/JavaScript'>\n");
  Print("setTimeout('window.location.reload()',1000);");
  Print("</script>\n");
?>
</BODY>
</HTML>
```

⁴ If you do not have a text editor, use Notepad rather than Microsoft Word.

16.3. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
<HTML>
<HEAD>
  <TITLE>Module Control</TITLE>
</HEAD>
<BODY>
<FORM method='get'>
<?php
  include('../..../php8/yocto_api.php');

  // Use explicit error handling rather than exceptions
  YAPI::DisableExceptions();

  // Setup the API to use the VirtualHub on local machine
  if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
    die("Cannot contact VirtualHub on 127.0.0.1 : ".$errmsg);
  }

  @$serial = $_GET['serial'];
  if ($serial != '') {
    // Check if a specified module is available online
    $module = YModule::FindModule("$serial");
    if (!$module->isOnline()) {
      die("Module not connected (check serial and USB cable)");
    }
  } else {
    // or use any connected module suitable for the demo
    $module = YModule::FirstModule();
    if($module) { // skip VirtualHub
      $module = $module->nextModule();
    }
    if(is_null($module)) {
      die("No module connected (check USB cable)");
    } else {
      $serial = $module->get_serialnumber();
    }
  }
  Print("Module to use: <input name='serial' value='$serial'><br>");

  if (isset($_GET['beacon'])) {
    if ($_GET['beacon']=='ON')
      $module->set_beacon(Y_BEACON_ON);
    else
      $module->set_beacon(Y_BEACON_OFF);
  }
  printf('serial: %s<br>', $module->get_serialNumber());
  printf('logical name: %s<br>', $module->get_logicalName());
  printf('luminosity: %s<br>', $module->get_luminosity());
  print('beacon: ');
  if($module->get_beacon() == Y_BEACON_ON) {
    printf("<input type='radio' name='beacon' value='ON' checked>ON ");
    printf("<input type='radio' name='beacon' value='OFF'>OFF<br>");
  } else {
    printf("<input type='radio' name='beacon' value='ON'>ON ");
    printf("<input type='radio' name='beacon' value='OFF' checked>OFF<br>");
  }
  printf('upTime: %s sec<br>', intval($module->get_upTime()/1000));
  printf('USB current: %smA<br>', $module->get_usbCurrent());
  printf('logs:<br><pre>%s</pre>', $module->get_lastLogs());
  YAPI::FreeAPI();
?>
<input type='submit' value='refresh'>
</FORM>
</BODY>
</HTML>
```

Each property xxx of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
<HTML>
<HEAD>
<TITLE>save settings</TITLE>
<BODY>
<FORM method='get'>
<?php
    include('../php8/yocto_api.php');

    // Use explicit error handling rather than exceptions
    YAPI::DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
        die("Cannot contact VirtualHub on 127.0.0.1");
    }

    @$serial = $_GET['serial'];
    if ($serial != '') {
        // Check if a specified module is available online
        $module = YModule::FindModule("$serial");
        if (!$module->isOnline()) {
            die("Module not connected (check serial and USB cable)");
        }
    } else {
        // or use any connected module suitable for the demo
        $module = YModule::FirstModule();
        if($module) { // skip VirtualHub
            $module = $module->nextModule();
        }
        if(is_null($module)) {
            die("No module connected (check USB cable)");
        } else {
            $serial = $module->get_serialnumber();
        }
    }
    Print("Module to use: <input name='serial' value='$serial'><br>");

    if (isset($_GET['newname'])) {
        $newname = $_GET['newname'];
        if (!YCheckLogicalName($newname))
            die('Invalid name');
        $module->set_logicalName($newname);
        $module->saveToFlash();
    }
    printf("Current name: %s<br>", $module->get_logicalName());
    print("New name: <input name='newname' value='' maxlength=19><br>");
    YAPI::FreeAPI();
?>
<input type='submit'>
</FORM>
</BODY>
</HTML>
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.


```
<HTML>
<HEAD>
  <TITLE>inventory</TITLE>
</HEAD>
<BODY>
  <H1>Device list</H1>
  <TT>
    <?php
      include('../php8/yocto_api.php');
      YAPI::RegisterHub("http://127.0.0.1:4444/");
      $module = YModule::FirstModule();
      while (!is_null($module)) {
        printf("%s (%s)<br>\n", $module->get_serialNumber(),
              $module->get_productName());
        $module=$module->nextModule();
      }
      YAPI::FreeAPI();
    ?>
  </TT>
</BODY>
</HTML>
```

16.4. HTTP callback API and NAT filters

The PHP library is able to work in a specific mode called *HTTP callback Yocto-API*. With this mode, you can control Yoctopuce devices installed behind a NAT filter, such as a DSL router for example, and this without needing to open a port. The typical application is to control Yoctopuce devices, located on a private network, from a public web site.

The NAT filter: advantages and disadvantages



A DSL router which translates network addresses (NAT) works somewhat like a private phone switchboard (a PBX): internal extensions can call each other and call the outside; but seen from the outside, there is only one official phone number, that of the switchboard itself. You cannot reach the internal extensions from the outside.

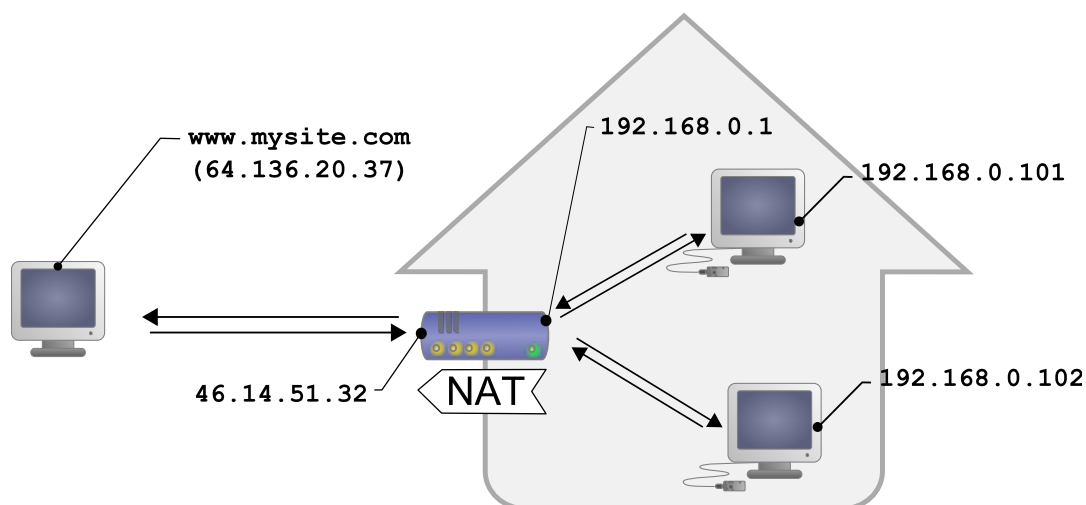

Typical DSL configuration: LAN machines are isolated from the outside by the DSL router


Transposed to the network, we have the following: appliances connected to your home automation network can communicate with one another using a local IP address (of the 192.168.xxx.yyy type), and contact Internet servers through their public address. However, seen from the outside, you have

only one official IP address, assigned to the DSL router only, and you cannot reach your network appliances directly from the outside. It is rather restrictive, but it is a relatively efficient protection against intrusions.

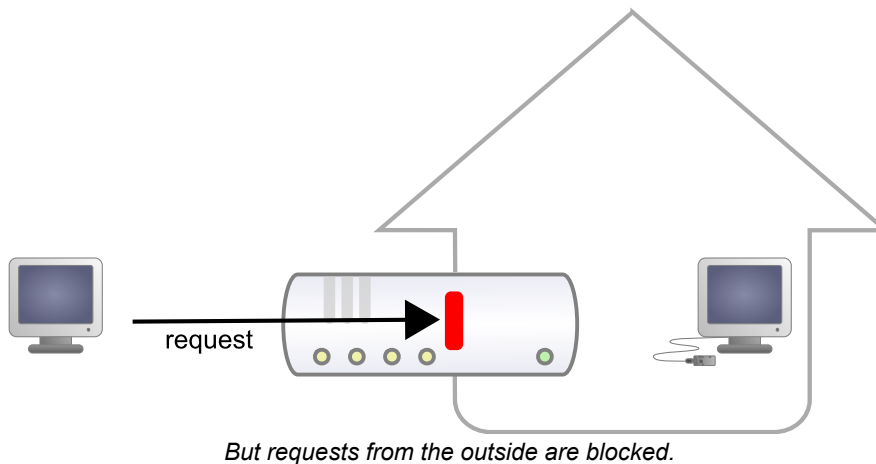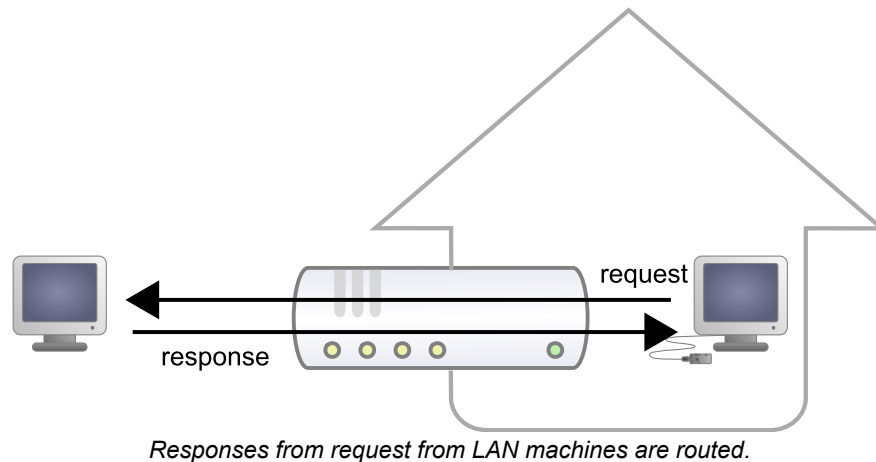

Seeing Internet without being seen provides an enormous security advantage. However, this signifies that you cannot, a priori, set up your own web server at home to control a home automation installation from the outside. A solution to this problem, advised by numerous home automation system dealers, consists in providing outside visibility to your home automation server itself, by adding a routing rule in the NAT configuration of the DSL router. The issue of this solution is that it exposes the home automation server to external attacks.

The HTTP callback API solves this issue without having to modify the DSL router configuration. The module control script is located on an external site, and it is the *VirtualHub* which is in charge of calling it a regular intervals.

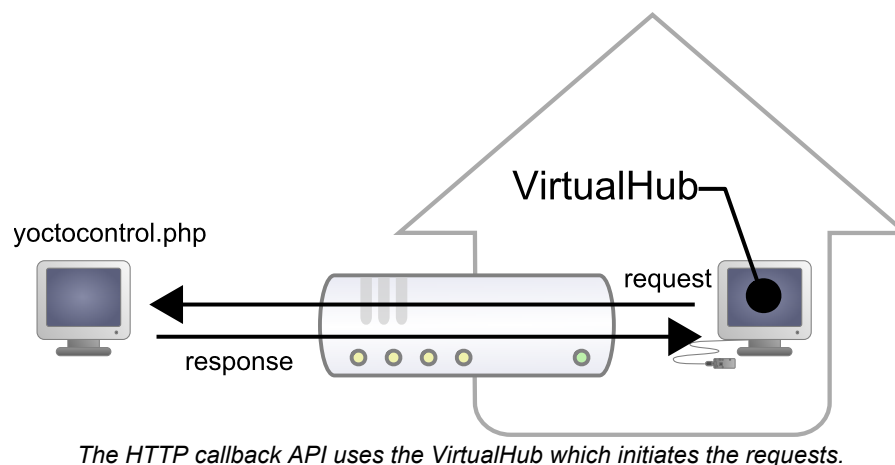

Configuration

The callback API thus uses the *VirtualHub* as a gateway. All the communications are initiated by the *VirtualHub*. They are thus outgoing communications and therefore perfectly authorized by the DSL router.

You must configure the *VirtualHub* so that it calls the PHP script on a regular basis. To do so:

1. Launch a *VirtualHub*
2. Access its interface, usually 127.0.0.1:4444
3. Click on the **configure** button of the line corresponding to the *VirtualHub* itself
4. Click on the **edit** button of the **Outgoing callbacks** section

Serial	Logical Name	Description	Action
VIRTHUB0-7d1a86fb0		VirtualHub	configure view log file
RELAYHI1-00055		Yocto-PowerRelay	configure view log file beacon
TMPSENS1-05E7F		Yocto-Temperature	configure view log file beacon

Click on the "configure" button on the first line

VIRTHUB0-7d1a86fb09

Edit parameters for VIRTHUB0-7d1a86fb09, and click on the **Save** button.

Serial #: VIRTHUB0-7d1a86fb09
Product name: VirtualHub
Software version: 10789
Logical name:

Incoming connections

Authentication to read information from the devices: NO [edit](#)
Authentication to make changes to the devices: NO [edit](#)

Outgoing callbacks

Callback URL: octoHub [edit](#)
Delay between callbacks: min: 3 [s] max: 600 [s]

[Save](#) [Cancel](#)

Click on the "edit" button of the "Outgoing callbacks" section

Edit callback

This VirtualHub can post the advertised values of all devices on a specific URL on a regular basis. If you wish to use this feature, choose the callback type follow the steps below carefully.

1. Specify the Type of callback you want to use: **Yocto-API callback**

Yoctopuce devices can be controlled through remote PHP scripts. That Yocto-API callback protocol is designed so it can pass through NAT filters without opening ports. See your device user manual, *PHP programming* section for more details.

2. Specify the URL to use for reporting values. *HTTPS protocol is not yet supported.*
Callback URL:

3. If your callback requires authentication, enter credentials here. Digest authentication is recommended, but Basic authentication works as well.
Username:
Password:

4. Setup the desired frequency of notifications:
No less than seconds between two notification
But notify after seconds in any case

5. Press on the **Test** button to check your parameters.
6. When everything works, press on the **OK** button.

[Test](#) [OK](#) [Cancel](#)

And select "Yocto-API callback".

You then only need to define the URL of the PHP script and, if need be, the user name and password to access this URL. Supported authentication methods are *basic* and *digest*. The second method is safer than the first one because it does not allow transfer of the password on the network.

Usage

From the programmer standpoint, the only difference is at the level of the *yRegisterHub* function call. Instead of using an IP address, you must use the *callback* string (or *http://callback* which is equivalent).

```
include("yocto_api.php");
yRegisterHub("callback");
```

The remainder of the code stays strictly identical. On the *VirtualHub* interface, at the bottom of the configuration window for the HTTP callback API, there is a button allowing you to test the call to the PHP script.

Be aware that the PHP script controlling the modules remotely through the HTTP callback API can be called only by the *VirtualHub*. Indeed, it requires the information posted by the *VirtualHub* to function. To code a web site which controls Yoctopuce modules interactively, you must create a user interface which stores in a file or in a database the actions to be performed on the Yoctopuce modules. These actions are then read and run by the control script.

Common issues

For the HTTP callback API to work, the PHP option *allow_url_fopen* must be set. Some web site hosts do not set it by default. The problem then manifests itself with the following error:

```
error: URL file-access is disabled in the server configuration
```

To set this option, you must create, in the repertory where the control PHP script is located, an *.htaccess* file containing the following line:

```
php_flag "allow_url_fopen" "On"
```

Depending on the security policies of the host, it is sometimes impossible to authorize this option at the root of the web site, or even to install PHP scripts receiving data from a POST HTTP. In this case, place the PHP script in a subdirectory.

Limitations

This method that allows you to go through NAT filters cheaply has nevertheless a price. Communications being initiated by the *VirtualHub* at a more or less regular interval, reaction time to an event is clearly longer than if the Yoctopuce modules were driven directly. You can configure the reaction time in the specific window of the *VirtualHub*, but it is at least of a few seconds in the best case.

The *HTTP callback Yocto-API* mode is currently available in PHP, EcmaScript (Node.JS) and Java only.

16.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the *isOnline* function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to *isOnline* and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

17. Using Yocto-Watt-V2-C with Visual Basic .NET

VisualBasic has long been the most favored entrance path to the Microsoft world. Therefore, we had to provide our library for this language, even if the new trend is shifting to C#. We support Visual Studio 2017 and its more recent versions.

17.1. Installation

Download the Visual Basic Yoctopuce library from the Yoctopuce web site¹. There is no setup program, simply copy the content of the zip file into the directory of your choice. You mostly need the content of the `Sources` directory. The other directories contain the documentation and a few sample programs. All sample projects are Visual Basic 2010, projects, if you are using a previous version, you may have to recreate the projects structure from scratch.

17.2. Using the Yoctopuce API in a Visual Basic project

The Visual Basic.NET Yoctopuce library is composed of a DLL and of source files in Visual Basic. The DLL is not a .NET DLL, but a classic DLL, written in C, which manages the low level communications with the modules². The source files in Visual Basic manage the high level part of the API. Therefore, you need both this DLL and the .vb files of the `sources` directory to create a project managing Yoctopuce modules.

Configuring a Visual Basic project

The following indications are provided for Visual Studio Express 2010, but the process is similar for other versions. Start by creating your project. Then, on the *Solution Explorer* panel, right click on your project, and select "Add" and then "Add an existing item".

A file selection window opens. Select the `yocto_api.vb` file and the files corresponding to the functions of the Yoctopuce modules that your project is going to manage. If in doubt, select all the files.

You then have the choice between simply adding these files to your project, or to add them as links (the **Add** button is in fact a scroll-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply keeps a link on the original files. We recommend you to use links, which makes updates of the library much easier.

¹ www.yoctopuce.com/EN/libraries.php

² The sources of this DLL are available in the C++ API

Then add in the same manner the `yapi.dll` DLL, located in the `Sources/dll` directory³. Then, from the **Solution Explorer** window, right click on the DLL, select **Properties** and in the **Properties** panel, set the **Copy to output folder** to **always**. You are now ready to use your Yoctopuce modules from Visual Studio.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

17.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Visual Basic code snippet to use the Power function.

```
[...]
' Enable detection of USB devices
Dim errmsg As String
YAPI.RegisterHub("usb", errmsg)
[...]

' Retrieve the object used to interact with the device
Dim power As YPower
power = YPower.FindPower("YWATMK2C-123456.power")

' Hot-plug is easy: just check that the device is online
If (power.isOnline()) Then
    ' Use power.get_currentValue()
    [...]
End If

[...]
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power")
power = YPower.FindPower("YWATMK2C-123456.MyFunction")
power = YPower.FindPower("MyModule.power")
power = YPower.FindPower("MyModule.MyFunction")
power = YPower.FindPower("MyFunction")
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

³ Remember to change the filter of the selection window, otherwise the DLL will not show.

get_currentValue

The `get_currentValue()` method of the object returned by `yFindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch Microsoft VisualBasic and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
Module Module1

    Private Sub Usage()

        Dim execname = System.AppDomain.CurrentDomain.FriendlyName
        Console.WriteLine("Usage:")
        Console.WriteLine(execname + " <serial_number>")
        Console.WriteLine(execname + " <logical_name>")
        Console.WriteLine(execname + " any ")
        System.Threading.Thread.Sleep(2500)
    End Sub
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim target As String

    Dim psensor As YPower

    If argv.Length < 2 Then Usage()

    target = argv(1)

    REM Setup the API to use local USB devices
    If (YAPI.RegisterHub("usb", errmsg) <> YAPI_SUCCESS) Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End If

    If target = "any" Then
        psensor = YPower.FirstPower()
        If psensor Is Nothing Then
            Console.WriteLine("No module connected (check USB cable) ")
        End If
    End If
    Else
        psensor = YPower.FindPower(target + ".power")
    End If

    While (True)
        If Not (psensor.IsOnline()) Then
            Console.WriteLine("Module not connected (check identification and USB cable)")
        End If
        Console.WriteLine("Current Power: " + Str(psensor.get_currentValue()) + " W")
        Console.WriteLine(" (press Ctrl-C to exit)")
        YAPI.Sleep(1000, errmsg)
    End While
    YAPI.FreeAPI()

End Sub

End Module
```

17.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
Imports System.IO
Imports System.Environment

Module Module1

    Sub usage()
        Console.WriteLine("usage: demo <serial or logical name> [ON/OFF]")
    End
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim m As ymodule

    If (YAPI.RegisterHub("usb", errmsg) <> YAPI_SUCCESS) Then
        Console.WriteLine("RegisterHub error:" + errmsg)
    End
End If

If argv.Length < 2 Then usage()

m = YModule.FindModule(argv(1)) REM use serial or logical name
If (m.isOnline()) Then
    If argv.Length > 2 Then
        If argv(2) = "ON" Then m.set_beacon(Y_BEACON_ON)
        If argv(2) = "OFF" Then m.set_beacon(Y_BEACON_OFF)
    End If
    Console.WriteLine("serial:      " + m.get_serialNumber())
    Console.WriteLine("logical name: " + m.get_logicalName())
    Console.WriteLine("luminosity:   " + Str(m.get_luminosity()))
    Console.WriteLine("beacon:      ")
    If (m.get_beacon() = Y_BEACON_ON) Then
        Console.WriteLine("ON")
    Else
        Console.WriteLine("OFF")
    End If
    Console.WriteLine("upTime:      " + Str(m.get_upTime() / 1000) + " sec")
    Console.WriteLine("USB current: " + Str(m.get_usbCurrent()) + " mA")
    Console.WriteLine("Logs:")
    Console.WriteLine(m.get_lastLogs())
Else
    Console.WriteLine(argv(1) + " not connected (check identification and USB cable)")
End If
YAPI.FreeAPI()
End Sub

End Module
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
Module Module1
```

```

Sub usage()

    Console.WriteLine("usage: demo <serial or logical name> <new logical name>")
End
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim newname As String
    Dim m As YModule

    If (argv.Length <> 3) Then usage()

    REM Setup the API to use local USB devices
    If YAPI.RegisterHub("usb", errmsg) <> YAPI.SUCCESS Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End
    End If

    m = YModule.FindModule(argv(1)) REM use serial or logical name
    If m.isOnline() Then
        newname = argv(2)
        If (Not YAPI.CheckLogicalName(newname)) Then
            Console.WriteLine("Invalid name (" + newname + ")")
        End
        End If
        m.set_logicalName(newname)
        m.saveToFlash() REM do not forget this
        Console.WriteLine("Module: serial= " + m.get_serialNumber())
        Console.WriteLine(" / name= " + m.get_logicalName())
    Else
        Console.WriteLine("not connected (check identification and USB cable)")
    End If
    YAPI.FreeAPI()

End Sub

End Module

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `Nothing`. Below a short example listing the connected modules.

```

Module Module1

    Sub Main()
        Dim M As ymodule
        Dim errmsg As String = ""

        REM Setup the API to use local USB devices
        If YAPI.RegisterHub("usb", errmsg) <> YAPI.SUCCESS Then
            Console.WriteLine("RegisterHub error: " + errmsg)
        End
        End If

        Console.WriteLine("Device list")
        M = YModule.FirstModule()
        While M IsNot Nothing
            Console.WriteLine(M.get_serialNumber() + " (" + M.get_productName() + ")")
            M = M.nextModule()
        End While
        YAPI.FreeAPI()
    End Sub

End Module

```

End Module

17.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

18. Using Yocto-Watt-V2-C with Delphi or Lazarus

Delphi is a descendent of Turbo-Pascal. Originally, Delphi was produced by Borland, Embarcadero now edits it. The strength of this language resides in its ease of use, as anyone with some notions of the Pascal language can develop a Windows application in next to no time. Its only disadvantage is to cost something¹.

Lazarus² is a free IDE based on Free-Pascal, it has nothing to envy to Delphi and is available for both Windows and Linux. The Yoctopuce Delphi library is compatible with both Windows and Linux versions of Lazarus

Delphi libraries are provided not as VCL components, but directly as source files. These files are compatible with most Delphi and Lazarus versions.³

18.1. Preparation

Go to the Yoctopuce web site and download the Yoctopuce Delphi libraries⁴. Uncompress everything in a directory of your choice.

- With Delphi, add the subdirectory *sources* in the list of directories of Delphi libraries.⁵
- With Lazarus, open your project options and add the *sources* folder to your "other unit files" path.⁶

Windows

With Windows, the Yoctopuce Delphi / Lazarus library uses two dlls *yapi.dll* (32-bit version) and *yapi64.dll* (64-bit version). All the applications that you create with Delphi or Lazarus must have access to these DLL. The simplest way to ensure this is to make sure that they are located in the same directory as the executable file of your application. You can find these dlls in the *sources/dll* folder.

¹ Actually, Borland provided free versions (for personal use) of Delphi 2006 and 2007. Look for them on the Internet, you may still be able to download them.

² www.lazarus-ide.org

³ Delphi libraries are regularly tested with Delphi 5, Delphi XE2, and the latest version of Lazarus.

⁴ www.yoctopuce.com/EN/libraries.php

⁵ Use the **Tools / Environment options** menu.

⁶ Use the Menu **Project / Project options/ Compiler options / Paths**

Linux

Under Linux, the Delphi / Lazarus library uses the following lib files:

- *libyapi-i386.so* for Intel 32-bit systems
- *libyapi-amd64.so* for Intel 64-bit systems
- *libyapi-armhf.so* for ARM 32-bit systems
- *libyapi-aarch64.so* for ARM 64-bit systems

You will find these lib files in the *sources/dll* folder. You have to make sure that

- Lazarus can find the right .so file at compilation time.
- The executable can find it at execution time.

The simplest way to ensure this is to copy all four .so files into the */usr/lib* folder. Alternatively, you can copy them next to your main source file and adjust your *LD_LIBRARY_PATH* environment variable accordingly.

18.2. About examples

To keep them simple, all the examples provided in this documentation are console applications. Obviously, the libraries work in a strictly identical way with VCL applications.

Note that most of these examples use command line parameters ⁷.

You will soon notice that the Delphi API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

18.3. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Delphi code snippet to use the Power function.

```
uses yocto_api, yocto_power;

var errmsg: string;
    power: TYPower;

[...]
// Enable detection of USB devices
yRegisterHub('usb',errmsg)
[...]

// Retrieve the object used to interact with the device
power = yFindPower("YWATMK2C-123456.power")

// Hot-plug is easy: just check that the device is online
if power.isOnline() then
begin
    // Use power.get_currentValue()
    [...]
end;
[...]
```

Let's look at these lines in more details.

yocto_api and yocto_power

These two units provide access to the functions allowing you to manage Yoctopuce modules. *yocto_api* must always be used, *yocto_power* is necessary to manage modules containing a electrical power sensor, such as Yocto-Watt-V2-C.

⁷ See <https://www.yoctopuce.com/EN/article/about-programming-examples>

yRegisterHub

The `yRegisterHub` function initializes the Yoctopuce API and specifies where the modules should be looked for. When used with the parameter `'usb'`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

yFindPower

The `yFindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
power := yFindPower("YWATMK2C-123456.power");
power := yFindPower("YWATMK2C-123456.MyFunction");
power := yFindPower("MyModule.power");
power := yFindPower("MyModule.MyFunction");
power := yFindPower("MyFunction");
```

`yFindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `yFindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `yFindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch your Delphi environment, copy the `yapi.dll` DLL in a directory, create a new console application in the same directory, and copy-paste the piece of code below:

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
program helloworld;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  {$IFDEF UNIX}
  windows,
  {$ENDIF UNIX}
  yocto_api,
  yocto_power;

Procedure Usage();
var
  exe : string;
begin
  exe:= ExtractFileName(paramstr(0));
  WriteLn(exe+' <serial_number>');
  WriteLn(exe+' <logical_name>');
  WriteLn(exe+' any');
  sleep(3000);
  halt;
End;

var
  sensor : TYPower;
  errmsg : string;
  done : boolean;
```

```

begin
    if (paramcount<1) then usage();

    // Setup the API to use local USB devices
    if yRegisterHub('usb', errmsg)<>YAPI_SUCCESS then
    begin
        Write('RegisterHub error: '+errmsg);
        sleep(3000);
        exit;
    end;

    if paramstr(1)='any' then
    begin
        // try to find the first Power sensor available
        sensor := yFirstPower();
        if sensor=nil then
        begin
            writeln('No module connected (check USB cable)');
            sleep(3000);
            halt;
        end
    end
    else // or use the one specified on the commande line
        sensor:= YFindPower(paramstr(1)+'.power');

    // let's poll
    done := false;
    repeat
        if (sensor.isOnline()) then
        begin
            Write('Current Power: '+FloatToStr(sensor.get_currentValue())+' W');
            Writeln('    (press Ctrl-C to exit)');
            Sleep(1000);
        end
        else
        begin
            Writeln('Module not connected (check identification and USB cable)');
            done := true;
        end;
    until done;
    yFreeAPI();
end.

```

18.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

program modulecontrol;
{$APPTYPE CONSOLE}
uses
    SysUtils,
    yocto_api;

const
    serial = 'YWATMK2C-123456'; // use serial number or logical name

procedure refresh(module:Tymodule) ;
begin
    if (module.isOnline()) then
    begin
        Writeln('');
        Writeln('Serial      : ' + module.get_serialNumber());
        Writeln('Logical name : ' + module.get_logicalName());
        Writeln('Luminosity   : ' + intToStr(module.get_luminosity()));
        Write('Beacon      :');
        if (module.get_beacon()=Y_BEACON_ON) then Writeln('on')
        else Writeln('off');
        Writeln('uptime      : ' + intToStr(module.get_upTime() div 1000)+'s');
        Writeln('USB current  : ' + intToStr(module.get_usbCurrent())+'mA');
        Writeln('Logs        : ');
    end;
end;

```

```

        Writeln(module.get_lastlogs());
        Writeln('');
        Writeln('r : refresh / b:beacon ON / space : beacon off');
    end
    else Writeln('Module not connected (check identification and USB cable)');
end;

procedure beacon(module:TModule;state:integer);
begin
    module.set_beacon(state);
    refresh(module);
end;

var
    module : TModule;
    c      : char;
    errmsg : string;

begin
    // Setup the API to use local USB devices
    if yRegisterHub('usb', errmsg)<>YAPI_SUCCESS then
    begin
        Write('RegisterHub error: '+errmsg);
        exit;
    end;

    module := yFindModule(serial);
    refresh(module);

    repeat
        read(c);
        case c of
            'r': refresh(module);
            'b': beacon(module,Y_BEACON_ON);
            ' ': beacon(module,Y_BEACON_OFF);
        end;
    until c = 'x';
    yFreeAPI();
end.

```

Each property xxx of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

program savesettings;
{$APPTYPE CONSOLE}
uses
    SysUtils,
    yocto_api;

const
    serial = 'YWATMK2C-123456'; // use serial number or logical name

var
    module : TModule;
    errmsg : string;
    newname : string;

begin
    // Setup the API to use local USB devices
    if yRegisterHub('usb', errmsg)<>YAPI_SUCCESS then
    begin
        Write('RegisterHub error: '+errmsg);
        exit;
    end;

```

```

end;

module := yFindModule(serial);
if (not(module.isOnline)) then
begin
  writeln('Module not connected (check identification and USB cable)');
  exit;
end;

writeln('Current logical name : '+module.get_logicalName());
write('Enter new name : ');
readln(newname);
if (not(yCheckLogicalName(newname))) then
begin
  writeln('invalid logical name');
  exit;
end;
module.set_logicalName(newname);
module.saveToFlash();
yFreeAPI();
writeln('logical name is now : '+module.get_logicalName());
end.

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `nil`. Below a short example listing the connected modules.

```

program inventory;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  yocto_api;

var
  module : TYModule;
  errmsg : string;

begin
  // Setup the API to use local USB devices
  if yRegisterHub('usb', errmsg) <> YAPI_SUCCESS then
  begin
    write('RegisterHub error: '+errmsg);
    exit;
  end;

  writeln('Device list');

  module := yFirstModule();
  while module <> nil do
  begin
    writeln( module.get_serialNumber()+' ('+module.get_productName()+') ');
    module := module.nextModule();
  end;
  yFreeAPI();
end.

```

18.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before

running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

19. Using the Yocto-Watt-V2-C with Universal Windows Platform

Universal Windows Platform (UWP) is not a language per say, but a software platform created by Microsoft. This platform allows you to run a new type of applications: the universal Windows applications. These applications can work on all machines running under Windows 10. This includes computers, tablets, smart phones, XBox One, and also Windows IoT Core.

The Yoctopuce UWP library allows you to use Yoctopuce modules in a universal Windows application and is written in C# in its entirety. You can add it to a Visual Studio 2017¹ project.

19.1. Blocking and asynchronous functions

The Universal Windows Platform does not use the Win32 API but only the Windows Runtime API which is available on all the versions of Windows 10 and for any architecture. Thanks to this library, you can use UWP on all the Windows 10 versions, including Windows 10 IoT Core.

However, using the new UWP API has some consequences: the Windows Runtime API to access the USB ports is asynchronous, and therefore the Yoctopuce library must be asynchronous as well. Concretely, the asynchronous methods do not return a result directly but a `Task` or `Task<>` object and the result can be obtained later. Fortunately, the C# language, version 6, supports the `async` and `await` keywords, which simplifies using these functions enormously. You can thus use asynchronous functions in the same way as traditional functions as long as you respect the following two rules:

- The method is declared as asynchronous with the `async` keyword
- The `await` keyword is added when calling an asynchronous function

Example:

```
async Task<int> MyFunction(int val)
{
    // do some long computation
    ...

    return result;
}

int res = await MyFunction(1234);
```

¹ <https://www.visualstudio.com/vs/cordova/vs/>

Our library follows these two rules and can therefore use the `await` notation.

For you not to have to wonder whether a function is asynchronous or not, there is the following convention: **all the public methods** of the UWP library **are asynchronous**, that is that you must call them with the `await` keyword, **except**:

- `GetTickCount()`, because measuring time in an asynchronous manner does not make a lot of sense...
- `FindModule()`, `FirstModule()`, `nextModule()`,... because detecting and enumerating modules is performed as a background task on internal structures which are managed transparently. It is therefore not necessary to use blocking functions while going through the lists of modules.

19.2. Installation

Download the Yoctopuce library for Universal Windows Platform from the Yoctopuce web site². There is no installation software, simply copy the content of the zip file in a directory of your choice. You essentially need the content of the `Sources` directory. The other directories contain documentation and a few sample programs. Sample projects are Visual Studio 2017 projects. Visual Studio 2017 is available on the Microsoft web site³.

19.3. Using the Yoctopuce API in a Visual Studio project

Start by creating your project. Then, from the **Solution Explorer** panel right click on your project and select **Add** then **Existing element**.

A file chooser opens: select all the files in the library `Sources` directory.

You then have the choice between simply adding the files to your project or adding them as a link (the **Add** button is actually a drop-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply creates a link to the original files. We recommend to use links, as a potential library update is thus much easier.

The Package.appxmanifest file

By default a Universal Windows application doesn't have access rights to the USB ports. If you want to access USB devices, you must imperatively declare it in the `Package.appxmanifest` file.

Unfortunately, the edition window of this file doesn't allow this operation and you must modify the `Package.appxmanifest` file by hand. In the "Solution Explorer" panel, right click on the `Package.appxmanifest` and select "View Code".

In this XML file, we must add a `DeviceCapability` node in the `Capabilities` node. This node must have a "Name" attribute with a "humaninterfacedevice" value.

Inside this node, you must declare all the modules that can be used. Concretely, for each module, you must add a "Device" node with an "Id" attribute, which has for value a character string "vidpid:USB_VENDORID USB_DEVICE_ID". The Yoctopuce USB_VENDORID is 24e0 and you can find the USB_DEVICE_ID of each Yoctopuce device in the documentation in the "Characteristics" section. Finally, the "Device" node must contain a "Function" node with the "Type" attribute with a value of "usage:ff00 0001".

For the Yocto-Watt-V2-C, here is what you must add in the "Capabilities" node:

```
<DeviceCapability Name="humaninterfacedevice">
  <!-- Yocto-Watt-V2-C -->
  <Device Id="vidpid:24e0 00E4">
    <Function Type="usage:ff00 0001" />
  </Device>
</DeviceCapability>
```

² www.yoctopuce.com/EN/libraries.php

³ <https://www.visualstudio.com/downloads/>

```
</Device>
</DeviceCapability>
```

Unfortunately, it's not possible to write a rule authorizing all Yoctopuce modules. Therefore, you must imperatively add each module that you want to use.

19.4. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a C# code snippet to use the Power function.

```
[...]
// Enable detection of USB devices
await YAPI.RegisterHub("usb");
[...]

// Retrieve the object used to interact with the device
YPower power = YPower.FindPower("YWATMK2C-123456.power");

// Hot-plug is easy: just check that the device is online
if (await power.isOnline())
{
    // Use power.get_currentValue()
    [...]
}

[...]
```

Let us look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the virtual hub able to see the devices. If the string "usb" is passed as parameter, the API works with modules locally connected to the machine. If the initialization does not succeed, an exception is thrown.

YPower.FindPower

The `YPower.FindPower` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named "MyModule", and for which you have given the `power` function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
power = YPower.FindPower("YWATMK2C-123456.power");
power = YPower.FindPower("YWATMK2C-123456.MaFonction");
power = YPower.FindPower("MonModule.power");
power = YPower.FindPower("MonModule.MaFonction");
power = YPower.FindPower("MaFonction");
```

`YPower.FindPower` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline()` method of the object returned by `YPower.FindPower` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

19.5. A real example

Launch Visual Studio and open the corresponding project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

Visual Studio projects contain numerous files, and most of them are not linked to the use of the Yoctopuce library. To simplify reading the code, we regrouped all the code that uses the library in the Demo class, located in the `demo.cs` file. Properties of this class correspond to the different fields displayed on the screen, and the `Run()` method contains the code which is run when the "Start" button is pushed.

In this example, you can recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }
        public string Target { get; set; }

        public override async Task<int> Run()
        {
            try {
                await YAPI.RegisterHub(HubURL);

                YPower psensor;

                if (Target.ToLower() == "any") {
                    psensor = YPower.FirstPower();

                    if (psensor == null) {
                        WriteLine("No module connected (check USB cable) ");
                        return -1;
                    }
                } else {
                    psensor = YPower.FindPower(Target + ".power");
                }

                while (await psensor.isOnline()) {
                    WriteLine("Current power: " + await psensor.get_currentValue() + " W");
                    await YAPI.Sleep(1000);
                }

                WriteLine("Module not connected (check identification and USB cable)");
            } catch (YAPI_Exception ex) {
                WriteLine("error: " + ex.Message);
            }

            await YAPI.FreeAPI();
            return 0;
        }
    }
}
```

19.6. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
```

```

using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {

        public string HubURL { get; set; }
        public string Target { get; set; }
        public bool Beacon { get; set; }

        public override async Task<int> Run()
        {
            YModule m;
            string errmsg = "";

            if (await YAPI.RegisterHub(HubURL) != YAPI.SUCCESS) {
                WriteLine("RegisterHub error: " + errmsg);
                return -1;
            }
            m = YModule.FindModule(Target + ".module"); // use serial or logical name
            if (await m.isOnline()) {
                if (Beacon) {
                    await m.set_beacon(YModule.BEACON_ON);
                } else {
                    await m.set_beacon(YModule.BEACON_OFF);
                }

                WriteLine("serial: " + await m.get_serialNumber());
                WriteLine("logical name: " + await m.get_logicalName());
                WriteLine("luminosity: " + await m.get_luminosity());
                Write("beacon: ");
                if (await m.get_beacon() == YModule.BEACON_ON)
                    WriteLine("ON");
                else
                    WriteLine("OFF");
                WriteLine("upTime: " + (await m.get_upTime() / 1000) + " sec");
                WriteLine("USB current: " + await m.get_usbCurrent() + " mA");
                WriteLine("Logs:\r\n" + await m.get_lastLogs());
            } else {
                WriteLine(Target + " not connected on" + HubURL +
                    "(check identification and USB cable)");
            }
            await YAPI.FreeAPI();
            return 0;
        }
    }
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {

        public string HubURL { get; set; }
    }
}

```

```

public string Target { get; set; }
public string LogicalName { get; set; }

public override async Task<int> Run()
{
    try {
        YModule m;

        await YAPI.RegisterHub(HubURL);

        m = YModule.FindModule(Target); // use serial or logical name
        if (await m.isOnline()) {
            if (!YAPI.CheckLogicalName(LogicalName)) {
                WriteLine("Invalid name (" + LogicalName + ")");
                return -1;
            }

            await m.set_logicalName(LogicalName);
            await m.saveToFlash(); // do not forget this
            Write("Module: serial= " + await m.get_serialNumber());
            WriteLine(" / name= " + await m.get_logicalName());
        } else {
            Write("not connected (check identification and USB cable)");
        }
    } catch (YAPI_Exception ex) {
        WriteLine("RegisterHub error: " + ex.Message);
    }
    await YAPI.FreeAPI();
    return 0;
}
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }

        public override async Task<int> Run()
        {
            YModule m;
            try {
                await YAPI.RegisterHub(HubURL);

                WriteLine("Device list");
                m = YModule.FirstModule();
                while (m != null) {
                    WriteLine(await m.get_serialNumber()
                        + " (" + await m.get_productName() + ")");
                    m = m.nextModule();
                }
            } catch (YAPI_Exception ex) {
                WriteLine("Error:" + ex.Message);
            }
            await YAPI.FreeAPI();
        }
    }
}

```

```
        return 0;
    }
}
```

19.7. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Universal Windows Platform library, error handling is implemented with exceptions. You must therefore intercept and correctly handle these exceptions if you want to have a reliable project which does not crash as soon as you disconnect a module.

Library thrown exceptions are always of the `YAPI_Exception` type, so you can easily separate them from other exceptions in a `try{...} catch{...}` block.

Example:

```
try {
    ....
} catch (YAPI_Exception ex) {
    Debug.WriteLine("Exception from Yoctopuce lib:" + ex.Message);
} catch (Exception ex) {
    Debug.WriteLine("Other exceptions :" + ex.Message);
}
```


20. Using Yocto-Watt-V2-C with Objective-C

Objective-C is language of choice for programming on macOS, due to its integration with the Cocoa framework. Yoctopuce supports the XCode versions supported by Apple. The Yoctopuce library is ARC compatible. You can therefore implement your projects either using the traditional *retain / release* method, or using the *Automatic Reference Counting*.

Yoctopuce Objective-C libraries¹ are integrally provided as source files. A section of the low-level library is written in pure C, but you should not need to interact directly with it: everything was done to ensure the simplest possible interaction from Objective-C.

You will soon notice that the Objective-C API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface. You can find on Yoctopuce blog a detailed example² with video shots showing how to integrate the library into your projects.

20.1. Control of the Power function

A few lines of code are enough to use a Yocto-Watt-V2-C. Here is the skeleton of a Objective-C code snippet to use the Power function.

```
#import "yocto_api.h"
#import "yocto_power.h"

...
NSError *error;
[YAPI RegisterHub:@"usb": &error]
...
// On récupère l'objet représentant le module (ici connecté en local sur USB)
power = [YPower FindPower:@"YWATMK2C-123456.power"];

// Pour gérer le hot-plug, on vérifie que le module est là
if([power isOnline])
{
    // Utiliser [power get_currentValue]
    ...
}
```

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/article/new-objective-c-library-for-mac-os-x

Let's look at these lines in more details.

yocto_api.h and yocto_power.h

These two import files provide access to the functions allowing you to manage Yoctopuce modules. `yocto_api.h` must always be used, `yocto_power.h` is necessary to manage modules containing a electrical power sensor, such as Yocto-Watt-V2-C.

[YAPI RegisterHub]

The `[YAPI RegisterHub]` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `@"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

[Power FindPower]

The `[Power FindPower]` function allows you to find a electrical power sensor from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-Watt-V2-C module with serial number `YWATMK2C-123456` which you have named `"MyModule"`, and for which you have given the `power` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
YPower *power = [Power FindPower:@"YWATMK2C-123456.power"];
YPower *power = [Power FindPower:@"YWATMK2C-123456.MyFunction"];
YPower *power = [Power FindPower:@"MyModule.power"];
YPower *power = [Power FindPower:@"MyModule.MyFunction"];
YPower *power = [Power FindPower:@"MyFunction"];
```

`[Power FindPower]` returns an object which you can then use at will to control the electrical power sensor.

isOnline

The `isOnline` method of the object returned by `[Power FindPower]` allows you to know if the corresponding module is present and in working order.

get_currentValue

The `get_currentValue()` method of the object returned by `YPower.FindPower` allows you to obtain the power consumption, as measured by the sensors. The return value is a number directly representing the value in Watts.

A real example

Launch Xcode 4.2 and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-Watt-V2-C** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#import <Foundation/Foundation.h>
#import "yocto_api.h"
#import "yocto_power.h"

static void usage(void)
{
    NSLog(@"usage: demo <serial_number> ");
    NSLog(@"          demo <logical_name>");
    NSLog(@"          demo any                (use any discovered device)");
    exit(1);
}

int main(int argc, const char * argv[])
{
    NSError *error;
```

```

if (argc < 2) {
    usage();
}

@autoreleasepool {
    // Setup the API to use local USB devices
    if([YAPI RegisterHub:@"usb": &error] != YAPI_SUCCESS) {
        NSLog(@"RegisterHub error: %@", [error localizedDescription]);
        return 1;
    }
    NSString *target = [NSString stringWithUTF8String:argv[1]];
    YPower *psensor;
    if ([target isEqualToString:@"any"]) {
        psensor = [YPower FirstPower];
        if (psensor == NULL) {
            NSLog(@"No module connected (check USB cable)");
            return 1;
        }
    } else {
        psensor = [YPower FindPower:[target stringByAppendingString:@".power"]];
    }

    while(1) {
        if(![psensor isOnline]) {
            NSLog(@"Module not connected (check identification and USB cable)\n");
            break;
        }

        NSLog(@"Current Power: %f W\n", [psensor get_currentValue]);
        NSLog(@"    (press Ctrl-C to exit)\n");
        [YAPI Sleep:1000:NULL];
    }
    [YAPI FreeAPI];
}
return 0;
}

```

20.2. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

#import <Foundation/Foundation.h>
#import "yocto_api.h"

static void usage(const char *exe)
{
    NSLog(@"usage: %s <serial or logical name> [ON/OFF]\n", exe);
    exit(1);
}

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb": &error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@", [error localizedDescription]);
            return 1;
        }
        if(argc < 2)
            usage(argv[0]);
        NSString *serial_or_name = [NSString stringWithUTF8String:argv[1]];
        // use serial or logical name
        YModule *module = [YModule FindModule:serial_or_name];
        if ([module isOnline]) {
            if (argc > 2) {
                if (strcmp(argv[2], "ON") == 0)
                    [module setBeacon:Y_BEACON_ON];
                else
            }
        }
    }
}

```

```

        [module setBeacon:Y_BEACON_OFF];
    }
    NSLog(@"serial:      %@\n", [module serialNumber]);
    NSLog(@"logical name: %@\n", [module logicalName]);
    NSLog(@"luminosity:  %d\n", [module luminosity]);
    NSLog(@"beacon:      ");
    if ([module beacon] == Y_BEACON_ON)
        NSLog(@"ON\n");
    else
        NSLog(@"OFF\n");
    NSLog(@"upTime:      %ld sec\n", [module upTime] / 1000);
    NSLog(@"USB current:  %d mA\n", [module usbCurrent]);
    NSLog(@"logs:      %@\n", [module get_lastLogs]);
} else {
    NSLog(@"%@ not connected (check identification and USB cable)\n",
        serial_or_name);
}
[YAPI FreeAPI];
}
return 0;
}

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx`, and properties which are not read-only can be modified with the help of the `set_xxx` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set xxx` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash` method. The short example below allows you to modify the logical name of a module.

```

#import <Foundation/Foundation.h>
#import "yocto_api.h"

static void usage(const char *exe)
{
    NSLog(@"usage: %s <serial> <newLogicalName>\n", exe);
    exit(1);
}

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb" :&error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@", [error localizedDescription]);
            return 1;
        }

        if(argc < 2)
            usage(argv[0]);

        NSString *serial_or_name = [NSString stringWithUTF8String:argv[1]];
        // use serial or logical name
        YModule *module = [YModule FindModule:serial_or_name];

        if (module.isOnline) {
            if (argc >= 3) {
                NSString *newname = [NSString stringWithUTF8String:argv[2]];
                if (![YAPI CheckLogicalName:newname]) {
                    NSLog(@"Invalid name (%@)\n", newname);
                    usage(argv[0]);
                }
                module.logicalName = newname;
                [module saveToFlash];
            }
        }
    }
}

```

```

    NSLog(@"Current name: %@\n", module.logicalName);
} else {
    NSLog(@"%@ not connected (check identification and USB cable)\n",
          serial_or_name);
}
[YAPI FreeAPI];
}
return 0;
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.

```

#import <Foundation/Foundation.h>
#import "yocto_api.h"

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb" :&error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@\n", [error localizedDescription]);
            return 1;
        }

        NSLog(@"Device list:\n");

        YModule *module = [YModule FirstModule];
        while (module != nil) {
            NSLog(@"%@ %@", module.serialNumber, module.productName);
            module = [module nextModule];
        }
        [YAPI FreeAPI];
    }
    return 0;
}

```

20.3. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

21. Using with unsupported languages

Yoctopuce modules can be driven from most common programming languages. New languages are regularly added, depending on the interest expressed by Yoctopuce product users. Nevertheless, some languages are not, and will never be, supported by Yoctopuce. There can be several reasons for this: compilers which are not available anymore, unadapted environments, and so on.

However, there are alternative methods to access Yoctopuce modules from an unsupported programming language.

21.1. Command line

The easiest method to drive Yoctopuce modules from an unsupported programming language is to use the command line API through system calls. The command line API is in fact made of a group of small executables which are easy to call. Their output is also easy to analyze. As most programming languages allow you to make system calls, the issue is solved with a few lines of code.


However, if the command line API is the easiest solution, it is neither the fastest nor the most efficient. For each call, the executable must initialize its own API and make an inventory of USB connected modules. This requires about one second per call.

21.2. .NET Assembly

A .NET Assembly enables you to share a set of pre-compiled classes to offer a service, by stating entry points which can be used by third-party applications. In our case, it's the whole Yoctopuce library which is available in the .NET Assembly, so that it can be used in any environment which supports .NET Assembly dynamic loading.

The Yoctopuce library as a .NET Assembly does not contain only the standard C# Yoctopuce library, as this would not have allowed an optimal use in all environments. Indeed, we cannot expect host applications to necessarily offer a thread system or a callback system, although they are very useful to manage plug-and-play events and sensors with a high refresh rate. Likewise, we cannot expect from external applications a transparent behavior in cases where a function call in Assembly creates a delay because of network communications.

Therefore, we added to it an additional layer, called *.NET Proxy* library. This additional layer offers an interface very similar to the standard library but somewhat simplified, as it internally manages all the callback mechanisms. Instead, this library offers mirror objects, called *Proxys*, which publish through *Properties* the main attributes of the Yoctopuce functions such as the current measure, configuration parameters, the state, and so on.

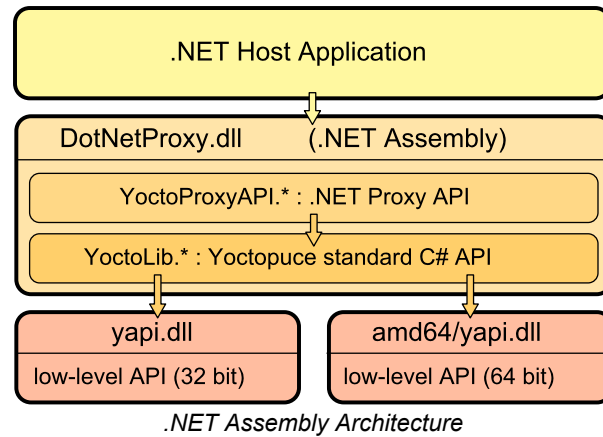

The callback mechanism automatically updates the properties of the *Proxys* objects, without the host application needing to care for it. The later can thus, at any time and without any risk of latency, display the value of all properties of Yoctopuce Proxy objects.

Pay attention to the fact that the `yapi.dll` low-level communication library is **not** included in the .NET Assembly. You must therefore keep it together with `DotNetProxyLibrary.dll`. The 32 bit version must be located in the same directory as `DotNetProxyLibrary.dll`, while the 64 bit version must be in a subdirectory `amd64`.

Example of use with MATLAB

Here is how to load our Proxy .NET Assembly in MATLAB and how to read the value of the first sensor connected by USB found on the machine:

```

NET.addAssembly("C:/Yoctopuce/DotNetProxyLibrary.dll");
import YoctoProxyAPI.*

errmsg = YAPIProxy.RegisterHub("usb");
sensor = YSensorProxy.FindSensor("");
measure = sprintf('%0.3f %s', sensor.CurrentValue, sensor.Unit);
  
```

Example of use in PowerShell

PowerShell commands are a little stranger, but we can recognize the same structure:

```

Add-Type -Path "C:/Yoctopuce/DotNetProxyLibrary.dll"

$errmsg = [YoctoProxyAPI.YAPIProxy]::RegisterHub("usb")
$sensor = [YoctoProxyAPI.YSensorProxy]::FindSensor("")
$measure = "{0:n3} {1}" -f $sensor.CurrentValue, $sensor.Unit
  
```

Specificities of the .NET Proxy library

With regards to classic Yoctopuce libraries, the following differences in particular should be noted:

No FirstModule/nextModule method

To obtain an object referring to the first found module, we call `YModuleProxy.FindModule("")`. If there is no connected module, this method returns an object with its `module.IsOnline` property set to `False`. As soon as a module is connected, the property changes to `True` and the module hardware identifier is updated.

To list modules, you can call the `module.GetSimilarFunctions()` method which returns an array of character strings containing the identifiers of all the modules which were found.

No callback function

Callback functions are implemented internally and they update the object properties. You can therefore simply poll the properties, without significant performance penalties. Be aware that if you

use one of the function that disables callbacks, the automatic refresh of object properties may not work anymore.

A new method `YAPIProxy.GetLog` makes it possible to retrieve low-level debug logs without using callbacks.

Enumerated types

In order to maximize compatibility with host applications, the .NET Proxy library does not use true .NET enumerated types, but simple integers. For each enumerated type, the library includes public constants named according to the possible values. Contrarily to standard Yoctopuce libraries, numeric values always start from 1, as the value 0 is reserved to return an invalid value, for instance when the device is disconnected.

Invalid numeric results

For all numeric results, rather than using an arbitrary constant, the invalid value returned in case of error is *NaN*. You should therefore use function *isNaN()* to detect this value.

Using .NET Assembly without the Proxy library

If for a reason or another you do not want to use the Proxy library, and if your environment allows it, you can use the standard C# API as it is located in the Assembly, under the `YoctoLib` namespace. Beware however not to mix both types of use: either you go through the Proxy library, or you use the `YoctoLib` version directly, but not both!

Compatibility

For the LabVIEW Yoctopuce library to work correctly with your Yoctopuce modules, these modules need to have firmware 37120, or higher.

In order to be compatible with as many versions of Windows as possible, including Windows XP, the *DotNetProxyLibrary.dll* library is compiled in .NET 3.5, which is available by default on all the Windows versions since XP. As of today, we have never met any non-Windows environment able to load a .NET Assembly, so we only ship the low-level communication dll for Windows together with the assembly.

21.3. VirtualHub and HTTP GET

VirtualHub is available on almost all current platforms. It is generally used as a gateway to provide access to Yoctopuce modules from languages which prevent direct access to hardware layers of a computer (JavaScript, PHP, Java, ...).

In fact, VirtualHub is a small web server able to route HTTP requests to Yoctopuce modules. This means that if you can make an HTTP request from your programming language, you can drive Yoctopuce modules, even if this language is not officially supported.

REST interface

At a low level, the modules are driven through a REST API. Thus, to control a module, you only need to perform appropriate requests on the *VirtualHub*. By default, the VirtualHub HTTP port is 4444.

An important advantage of this technique is that preliminary tests are very easy to implement. You only need a VirtualHub and a simple web browser. If you copy the following URL in your preferred browser, while VirtualHub is running, you obtain the list of the connected modules.

```
http://127.0.0.1:4444/api/services/whitePages.txt
```

Note that the result is displayed as text, but if you request *whitePages.xml*, you obtain an XML result. Likewise, *whitePages.json* allows you to obtain a JSON result. The *html* extension even allows you to display a rough interface where you can modify values in real time. The whole REST API is available in these different formats.

Driving a module through the REST interface

Each Yoctopuce module has its own REST interface, available in several variants. Let us imagine a Yocto-Watt-V2-C with the *YWATMK2C-12345* serial number and the *myModule* logical name. The following URL allows you to know the state of the module.

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/module.txt
```

You can naturally also use the module logical name rather than its serial number.

```
http://127.0.0.1:4444/byName/myModule/api/module.txt
```

To retrieve the value of a module property, simply add the name of the property below *module*. For example, if you want to know the signposting led luminosity, send the following request:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/module/luminosity
```

To change the value of a property, modify the corresponding attribute. Thus, to modify the luminosity, send the following request:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/module?luminosity=100
```

Driving the module functions through the REST interface

The module functions can be manipulated in the same way. To know the state of the power function, build the following URL:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/power.txt
```

Note that if you can use logical names for the modules instead of their serial number, you cannot use logical names for functions. Only hardware names are authorized to access functions.

You can retrieve a module function attribute in a way rather similar to that used with the modules. For example:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/power/logicalName
```

Rather logically, attributes can be modified in the same manner.

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/api/power?logicalName=myFunction
```

You can find the list of available attributes for your Yocto-Watt-V2-C at the beginning of the *Programming* chapter.

Accessing Yoctopuce data logger through the REST interface

This section only applies to devices with a built-in data logger.

The preview of all recorded data streams can be retrieved in JSON format using the following URL:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/dataLogger.json
```

Individual measures for any given stream can be obtained by appending the desired function identifier as well as start time of the stream:

```
http://127.0.0.1:4444/bySerial/YWATMK2C-12345/dataLogger.json?id=power&utc=1389801080
```

21.4. Using dynamic libraries

The low level Yoctopuce API is available under several formats of dynamic libraries written in C. The sources are available with the C++ API. If you use one of these low level libraries, you do not need VirtualHub anymore.

Filename	Platform
libyapi.dylib	Max OS X
libyapi-amd64.so	Linux Intel (64 bits)
libyapi-armel.so	Linux ARM EL (32 bits)
libyapi-armhf.so	Linux ARM HL (32 bits)
libyapi-aarch64.so	Linux ARM (64 bits)
libyapi-i386.so	Linux Intel (32 bits)
yapi64.dll	Windows (64 bits)
yapi.dll	Windows (32 bits)

These dynamic libraries contain all the functions necessary to completely rebuild the whole high level API in any language able to integrate these libraries. This chapter nevertheless restrains itself to describing basic use of the modules.

Driving a module

The three essential functions of the low level API are the following:

```
int yapiInitAPI(int connection_type, char *errmsg);
int yapiUpdateDeviceList(int forceupdate, char *errmsg);
int yapiHTTPRequest(char *device, char *request, char* buffer, int buffsize, int *fullsize,
char *errmsg);
```

The *yapiInitAPI* function initializes the API and must be called once at the beginning of the program. For a USB type connection, the *connection_type* parameter takes value 1. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The *yapiUpdateDeviceList* manages the inventory of connected Yoctopuce modules. It must be called at least once. To manage hot plug and detect potential newly connected modules, this function must be called at regular intervals. The *forceupdate* parameter must take value 1 to force a hardware scan. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

Finally, the *yapiHTTPRequest* function sends HTTP requests to the module REST API. The *device* parameter contains the serial number or the logical name of the module which you want to reach. The *request* parameter contains the full HTTP request (including terminal line breaks). *buffer* points to a character buffer long enough to contain the answer. *buffsize* is the size of the buffer. *fullsize* is a pointer to an integer to which will be assigned the actual size of the answer. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The format of the requests is the same as the one described in the *VirtualHub et HTTP GET* section. All the character strings used by the API are strings made of 8-bit characters: Unicode and UTF8 are not supported.

The result returned in the buffer variable respects the HTTP protocol. It therefore includes an HTTP header. This header ends with two empty lines, that is a sequence of four ASCII characters 13, 10, 13, 10.

Here is a sample program written in pascal using the *yapi.dll* DLL to read and then update the luminosity of a module.

```
// Dll functions import
function yapiInitAPI(mode:integer;
```

```

errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiInitAPI';
function yapiUpdateDeviceList(force:integer;errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiUpdateDeviceList';
function yapiHTTPRequest(device:pansichar,url:pansichar; buffer:pansichar;
buffsize:integer;var fullsize:integer;
errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiHTTPRequest';

var
errmsgBuffer : array [0..256] of ansichar;
dataBuffer : array [0..1024] of ansichar;
errmsg,data : pansichar;
fullsize,p : integer;

const
serial = 'YWATMK2C-12345';
getValue = 'GET /api/module/luminosity HTTP/1.1'#13#10#13#10;
setValue = 'GET /api/module?luminosity=100 HTTP/1.1'#13#10#13#10;

begin
errmsg := @errmsgBuffer;
data := @dataBuffer;
// API initialization
if(yapiInitAPI(1,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// forces a device inventory
if( yapiUpdateDeviceList(1,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// requests the module luminosity
if (yapiHTTPRequest(serial,getValue,data,sizeof(dataBuffer),fullsize,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// searches for the HTTP header end
p := pos(#13#10#13#10,data);

// displays the response minus the HTTP header
writeln(copy(data,p+4,length(data)-p-3));

// changes the luminosity
if (yapiHTTPRequest(serial,setValue,data,sizeof(dataBuffer),fullsize,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

end.

```

Module inventory

To perform an inventory of Yoctopuce modules, you need two functions from the dynamic library:

```

int yapiGetAllDevices(int *buffer,int maxsize,int *neededsize,char *errmsg);
int yapiGetDeviceInfo(int devdesc,yDeviceSt *infos, char *errmsg);

```

The *yapiGetAllDevices* function retrieves the list of all connected modules as a list of handles. *buffer* points to a 32-bit integer array which contains the returned handles. *maxsize* is the size in bytes of the buffer. To *neededsize* is assigned the necessary size to store all the handles. From this, you can deduce either the number of connected modules or that the input buffer is too small. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The `yapiGetDeviceInfo` function retrieves the information related to a module from its handle. `devdesc` is a 32-bit integer representing the module and which was obtained through `yapiGetAllDevices`. `infos` points to a data structure in which the result is stored. This data structure has the following format:

Name	Type	Size (bytes)	Description
vendorid	int	4	Yoctopuce USB ID
deviceid	int	4	Module USB ID
devrelease	int	4	Module version
nbinbterfaces	int	4	Number of USB interfaces used by the module
manufacturer	char[]	20	Yoctopuce (null terminated)
productname	char[]	28	Model (null terminated)
serial	char[]	20	Serial number (null terminated)
logicalname	char[]	20	Logical name (null terminated)
firmware	char[]	22	Firmware version (null terminated)
beacon	byte	1	Beacon state (0/1)

The `errmsg` parameter must point to a 255 character buffer to retrieve a potential error message.

Here is a sample program written in pascal using the `yapi.dll` DLL to list the connected modules.

```
// device description structure
type yDeviceSt = packed record
  vendorid      : word;
  deviceid      : word;
  devrelease    : word;
  nbinbterfaces : word;
  manufacturer  : array [0..19] of ansichar;
  productname   : array [0..27] of ansichar;
  serial        : array [0..19] of ansichar;
  logicalname    : array [0..19] of ansichar;
  firmware      : array [0..21] of ansichar;
  beacon        : byte;
end;

// Dll function import
function yapiInitAPI(mode:integer;
  errmsg : pansichar):integer;cdecl;
  external 'yapi.dll' name 'yapiInitAPI';

function yapiUpdateDeviceList(force:integer;errmsg : pansichar):integer;cdecl;
  external 'yapi.dll' name 'yapiUpdateDeviceList';

function yapiGetAllDevices( buffer:pointer;
  maxsize:integer;
  var neededsize:integer;
  errmsg : pansichar):integer; cdecl;
  external 'yapi.dll' name 'yapiGetAllDevices';

function apiGetDeviceInfo(d:integer; var infos:yDeviceSt;
  errmsg : pansichar):integer; cdecl;
  external 'yapi.dll' name 'yapiGetDeviceInfo';

var
  errmsgBuffer : array [0..256] of ansichar;
  dataBuffer    : array [0..127] of integer; // max of 128 USB devices
  errmsg,data    : pansichar;
  neededsize,i   : integer;
  devinfos       : yDeviceSt;

begin
  errmsg := @errmsgBuffer;

  // API initialization
  if(yapiInitAPI(1,errmsg)<0) then
  begin
    writeln(errmsg);
    halt;
  end;
```

```
// forces a device inventory
if( yapiUpdateDeviceList(1,errmsg)<0) then
begin
  writeln(errmsg);
  halt;
end;

// loads all device handles into dataBuffer
if yapiGetAllDevices(@dataBuffer,sizeof(dataBuffer),neededsize,errmsg)<0 then
begin
  writeln(errmsg);
  halt;
end;

// gets device info from each handle
for i:=0 to neededsize div sizeof(integer)-1 do
begin
  if (apiGetDeviceInfo(dataBuffer[i], devinfos, errmsg)<0) then
  begin
    writeln(errmsg);
    halt;
  end;
  writeln(pansichar(@devinfos.serial)+' ('+pansichar(@devinfos.productname)+')');
end;

end.
```

VB6 and yapi.dll

Each entry point from the yapi.dll is duplicated. You will find one regular C-decl version and one Visual Basic 6 compatible version, prefixed with *vb6_*.

21.5. Porting the high level library

As all the sources of the Yoctopuce API are fully provided, you can very well port the whole API in the language of your choice. Note, however, that a large portion of the API source code is automatically generated.

Therefore, it is not necessary for you to port the complete API. You only need to port the *yocto_api* file and one file corresponding to a function, for example *yocto_relay*. After a little additional work, Yoctopuce is then able to generate all other files. Therefore, we highly recommend that you contact Yoctopuce support before undertaking to port the Yoctopuce library in another language. Collaborative work is advantageous to both parties.

22. Advanced programming

The preceding chapters have introduced, in each available language, the basic programming functions which can be used with your Yocto-Watt-V2-C module. This chapter presents in a more generic manner a more advanced use of your module. Examples are provided in the language which is the most popular among Yoctopuce customers, that is C#. Nevertheless, you can find complete examples illustrating the concepts presented here in the programming libraries of each language.

To remain as concise as possible, examples provided in this chapter do not perform any error handling. Do not copy them "as is" in a production application.

22.1. Event programming

The methods to manage Yoctopuce modules which we presented to you in preceding chapters were polling functions, consisting in permanently asking the API if something had changed. While easy to understand, this programming technique is not the most efficient, nor the most reactive. Therefore, the Yoctopuce programming API also provides an event programming model. This technique consists in asking the API to signal by itself the important changes as soon as they are detected. Each time a key parameter is modified, the API calls a callback function which you have defined in advance.

Detecting module arrival and departure

Hot-plug management is important when you work with USB modules because, sooner or later, you will have to connect or disconnect a module when your application is running. The API is designed to manage module unexpected arrival or departure in a transparent way. But your application must take this into account if it wants to avoid pretending to use a disconnected module.

Event programming is particularly useful to detect module connection/disconnection. Indeed, it is simpler to be told of new connections rather than to have to permanently list the connected modules to deduce which ones just arrived and which ones left. To be warned as soon as a module is connected, you need three pieces of code.

The callback

The callback is the function which is called each time a new Yoctopuce module is connected. It takes as parameter the relevant module.

```
static void deviceArrival(YModule m)
{
    Console.WriteLine("New module : " + m.get_serialNumber());
}
```

Initialization

You must then tell the API that it must call the callback when a new module is connected.

```
YAPI.RegisterDeviceArrivalCallback(deviceArrival);
```

Note that if modules are already connected when the callback is registered, the callback is called for each of the already connected modules.

Triggering callbacks

A classis issue of callback programming is that these callbacks can be triggered at any time, including at times when the main program is not ready to receive them. This can have undesired side effects, such as dead-locks and other race conditions. Therefore, in the Yoctopuce API, module arrival/departure callbacks are called only when the `UpdateDeviceList()` function is running. You only need to call `UpdateDeviceList()` at regular intervals from a timer or from a specific thread to precisely control when the calls to these callbacks happen:

```
// waiting loop managing callbacks
while (true)
{
    // module arrival / departure callback
    YAPI.UpdateDeviceList(ref errmsg);
    // non active waiting time managing other callbacks
    YAPI.Sleep(500, ref errmsg);
}
```

In a similar way, it is possible to have a callback when a module is disconnected. You can find a complete example implemented in your favorite programming language in the *Examples/Prog-EventBased* directory of the corresponding library.

Be aware that in most programming languages, callbacks must be global procedures, and not methods. If you wish for the callback to call the method of an object, define your callback as a global procedure which then calls your method.

Detecting a modification in the value of a sensor

The Yoctopuce API also provides a callback system allowing you to be notified automatically with the value of any sensor, either when the value has changed in a significant way or periodically at a preset frequency. The code necessary to do so is rather similar to the code used to detect when a new module has been connected.

This technique is useful in particular if you want to detect very quick value changes (within a few milliseconds), as it is much more efficient than reading repeatedly the sensor value and therefore gives better performances.

Callback invocation

To enable a better control, value change callbacks are only called when the `YAPI.Sleep()` and `YAPI.HandleEvents()` functions are running. Therefore, you must call one of these functions at a regular interval, either from a timer or from a parallel thread.

```
while (true)
{
    // inactive waiting loop allowing you to trigger
    // value change callbacks
    YAPI.Sleep(500, ref errmsg);
}
```

In programming environments where only the interface thread is allowed to interact with the user, it is often appropriate to call `YAPI.HandleEvents()` from this thread.

The value change callback

This type of callback is called when a electrical power sensor changes in a significant way. It takes as parameter the relevant function and the new value, as a character string.¹

```
static void valueChangeCallback(YPower fct, string value)
{
    Console.WriteLine(fct.get_hardwareId() + "=" + value);
}
```

In most programming languages, callbacks are global procedures, not methods. If you wish for the callback to call a method of an object, define your callback as a global procedure which then calls your method. If you need to keep a reference to your object, you can store it directly in the YPower object using function `set_userdata`. You can then retrieve it in the global callback procedure using `get_userdata`.

Setting up a value change callback

The callback is set up for a given Power function with the help of the `registerValueCallback` method. The following example sets up a callback for the first available Power function.

```
YPower f = YPower.FirstPower();
f.registerValueCallback(powerChangeCallBack)
```

Note that each module function can thus have its own distinct callback. By the way, if you like to work with value change callbacks, you will appreciate the fact that value change callbacks are not limited to sensors, but are also available for all Yoctopuce devices (for instance, you can also receive a callback any time a relay state changes).

The timed report callback

This type of callback is automatically called at a predefined time interval. The callback frequency can be configured individually for each sensor, with frequencies going from hundred calls per seconds down to one call per hour. The callback takes as parameter the relevant function and the measured value, as an YMeasure object. Contrarily to the value change callback that only receives the latest value, an YMeasure object provides both minimal, maximal and average values since the timed report callback. Moreover, the measure includes precise timestamps, which makes it possible to use timed reports for a time-based graph even when not handled immediately.

```
static void periodicCallback(YPower fct, YMeasure measure)
{
    Console.WriteLine(fct.get_hardwareId() + "=" +
        measure.get_averageValue());
}
```

Setting up a timed report callback

The callback is set up for a given Power function with the help of the `registerTimedReportCallback` method. The callback will only be invoked once a callback frequency as been set using `set_reportFrequency` (which defaults to timed report callback turned off). The frequency is specified as a string (same as for the data logger), by specifying the number of calls per second (/s), per minute (/m) or per hour (/h). The maximal frequency is 100 times per second (i.e. "100/s"), and the minimal frequency is 1 time per hour (i.e. "1/h"). When the frequency is higher than or equal to 1/s, the measure represents an instant value. When the frequency is below, the measure will include distinct minimal, maximal and average values based on a sampling performed automatically by the device.

The following example sets up a timed report callback 4 times per minute for the first available Power function.

```
YPower f = YPower.FirstPower();
f.set_reportFrequency("4/m");
```

¹ The value passed as parameter is the same as the value returned by the `get_advertisedValue()` method.

```
f.registerTimedReportCallback(periodicCallback);
```

As for value change callbacks, each module function can thus have its own distinct timed report callback.

Generic callback functions

It is sometimes desirable to use the same callback function for various types of sensors (e.g. for a generic sensor graphing application). This is possible by defining the callback for an object of class `YSensor` rather than `YPower`. Thus, the same callback function will be usable with any subclass of `YSensor` (and in particular with `YPower`). With the callback function, you can use the method `get_unit()` to get the physical unit of the sensor, if you need to display it.

A complete example

You can find a complete example implemented in your favorite programming language in the *Examples/Prog-EventBased* directory of the corresponding library.

22.2. The data logger

Your Yocto-Watt-V2-C is equipped with a data logger able to store non-stop the measures performed by the module. The maximal frequency is 100 times per second (i.e. "100/s"), and the minimal frequency is 1 time per hour (i.e. "1/h"). When the frequency is higher than or equal to 1/s, the measure represents an instant value. When the frequency is below, the measure will include distinct minimal, maximal and average values based on a sampling performed automatically by the device.

Note that it is useless and counter-productive to set a recording frequency higher than the native sampling frequency of the recorded sensor.

The data logger flash memory can store about 500'000 instant measures, or 125'000 averaged measures. When the memory is about to be saturated, the oldest measures are automatically erased.

Make sure not to leave the data logger running at high speed unless really needed: the flash memory can only stand a limited number of erase cycles (typically 100'000 cycles). When running at full speed, the datalogger can burn more than 100 cycles per day ! Also be aware that it is useless to record measures at a frequency higher than the refresh frequency of the physical sensor itself.

Starting/stopping the datalogger

The data logger can be started with the `set_recording()` method.

```
YDataLogger l = YDataLogger.FirstDataLogger();
l.set_recording(YDataLogger.RECORDING_ON);
```

It is possible to make the data recording start automatically as soon as the module is powered on.

```
YDataLogger l = YDataLogger.FirstDataLogger();
l.set_autoStart(YDataLogger.AUTOSTART_ON);
l.get_module().saveToFlash(); // do not forget to save the setting
```

Note: Yoctopuce modules do not need an active USB connection to work: they start working as soon as they are powered on. The Yocto-Watt-V2-C can store data without necessarily being connected to a computer: you only need to activate the automatic start of the data logger and to power on the module with a simple USB charger.

Erasing the memory

The memory of the data logger can be erased with the `forgetAllDataStreams()` function. Be aware that erasing cannot be undone.

```
YDataLogger l = YDataLogger.FirstDataLogger();
l.forgetAllDataStreams();
```

Choosing the logging frequency

The logging frequency can be set up individually for each sensor, using the method `set_logFrequency()`. The frequency is specified as a string (same as for timed report callbacks), by specifying the number of calls per second (/s), per minute (/m) or per hour (/h). The default value is "1/s".

The following example configures the logging frequency at 15 measures per minute for the first sensor found, whatever its type:

```
YSensor sensor = YSensor.FirstSensor();
sensor.set_logFrequency("15/m");
```

To avoid wasting flash memory, it is possible to disable logging for specified functions. In order to do so, simply use the value "OFF":

```
sensor.set_logFrequency("OFF");
```

Limitation: The Yocto-Watt-V2-C cannot use a different frequency for timed-report callbacks and for recording data into the datalogger. You can disable either of them individually, but if you enable both timed-report callbacks and logging for a given function, the two will work at the same frequency.

Retrieving the data

To load recorded measures from the Yocto-Watt-V2-C flash memory, you must call the `get_recordedData()` method of the desired sensor, and specify the time interval for which you want to retrieve measures. The time interval is given by the start and stop UNIX timestamp. You can also specify 0 if you don't want any start or stop limit.

The `get_recordedData()` method does not return directly an array of measured values, since in some cases it would cause a huge load that could affect the responsiveness of the application. Instead, this function will return an `YDataSet` object that can be used to retrieve immediately an overview of the measured data (summary), and then to load progressively the details when desired.

Here are the main methods used to retrieve recorded measures:

1. **dataset = sensor.get_recordedData(0,0):** select the desired time interval
2. **dataset.loadMore():** load data from the device, progressively
3. **dataset.get_summary():** get a single measure summarizing the full time interval
4. **dataset.get_preview():** get an array of measures representing a condensed version of the whole set of measures on the selected time interval (reduced by a factor of approx. 200)
5. **dataset.get_measures():** get an array with all detailed measures (that grows while `loadMore` is being called repeatedly)

Measures are instances of `YMeasure`². They store simultaneously the minimal, average and maximal value at a given time, that you can retrieve using methods **get_minValue()**, **get_averageValue()** and **get_maxValue()** respectively. Here is a small example that uses the functions above:

```
// We will retrieve all measures, without time limit
YDataSet dataset = sensor.get_recordedData(0, 0);

// First call to loadMore() loads the summary/preview
dataset.loadMore();
YMeasure summary = dataset.get_summary();
string timeFmt = "dd MMM yyyy hh:mm:ss,fff";
string logFmt = "from {0} to {1} : average={2:0.00}{3}";
Console.WriteLine(String.Format(logFmt,
    summary.get_startTimeUTC_asDateTime().ToString(timeFmt),
    summary.get_endTimeUTC_asDateTime().ToString(timeFmt),
    summary.get_averageValue(), sensor.get_unit()));
```

² The `YMeasure` objects used by the data logger are exactly the same kind as those passed as argument to the timed report callbacks.

```
// Next calls to loadMore() will retrieve measures
Console.WriteLine("loading details");
int progress;
do {
    Console.Write(".");
    progress = dataset.loadMore();
} while(progress < 100);

// All measures have now been loaded
List<YMeasure> details = dataset.get_measures();
foreach (YMeasure m in details) {
    Console.WriteLine(String.Format(logFmt,
        m.get_startTimeUTC_asDateTime().ToString(timeFmt),
        m.get_endTimeUTC_asDateTime().ToString(timeFmt),
        m.get_averageValue(), sensor.get_unit()));
}
```

You will find a complete example demonstrating how to retrieve data from the logger for each programming language directly in the Yoctopuce library. The example can be found in directory *Examples/Prog-DataLogger*.

Timestamp

As the Yocto-Watt-V2-C does not have a battery, it cannot guess alone the current time when powered on. Nevertheless, the Yocto-Watt-V2-C will automatically try to adjust its real-time reference using the host to which it is connected, in order to properly attach a timestamp to each measure in the datalogger:

- When the Yocto-Watt-V2-C is connected to a computer running either the VirtualHub or any application using the Yoctopuce library, it will automatically receive the time from this computer.
- When the Yocto-Watt-V2-C is connected to a YoctoHub-Ethernet, it will get the time that the YoctoHub has obtained from the network (using a server from pool.ntp.org)
- When the Yocto-Watt-V2-C is connected to a YoctoHub-Wireless, it will get the time provided by the YoctoHub based on its internal battery-powered real-time clock, which was itself configured either from the network or from a computer
- When the Yocto-Watt-V2-C is connected to an Android mobile device, it will get the time from the mobile device as long as an app using the Yoctopuce library is launched.

When none of these conditions applies (for instance if the module is simply connected to an USB charger), the Yocto-Watt-V2-C will do its best effort to attach a reasonable timestamp to the measures, using the timestamp found on the latest recorded measures. It is therefore possible to "preset to the real time" an autonomous Yocto-Watt-V2-C by connecting it to an Android mobile phone, starting the data logger, then connecting the device alone on an USB charger. Nevertheless, be aware that without external time source, the internal clock of the Yocto-Watt-V2-C might be subject to a clock skew (theoretically up to 2%).

22.3. Sensor calibration

Your Yocto-Watt-V2-C module is equipped with a digital sensor calibrated at the factory. The values it returns are supposed to be reasonably correct in most cases. There are, however, situations where external conditions can impact the measures.

The Yoctopuce API provides the mean to re-caliber the values measured by your Yocto-Watt-V2-C. You are not going to modify the hardware settings of the module, but rather to transform afterwards the measures taken by the sensor. This transformation is controlled by parameters stored in the flash memory of the module, making it specific for each module. This re-calibration is therefore a fully software matter and remains perfectly reversible.

Before deciding to re-calibrate your Yocto-Watt-V2-C module, make sure you have well understood the phenomena which impact the measures of your module, and that the differences between true values and measured values do not result from a incorrect use or an inadequate location of the module.

The Yoctopuce modules support two types of calibration. On the one hand, a linear interpolation based on 1 to 5 reference points, which can be performed directly inside the Yocto-Watt-V2-C. On the other hand, the API supports an external arbitrary calibration, implemented with callbacks.


1 to 5 point linear interpolation

These transformations are performed directly inside the Yocto-Watt-V2-C which means that you only have to store the calibration points in the module flash memory, and all the correction computations are done in a perfectly transparent manner: The function `get_currentValue()` returns the corrected value while the function `get_currentRawValue()` keeps returning the value before the correction.

Calibration points are simply (*Raw_value*, *Corrected_value*) couples. Let us look at the impact of the number of calibration points on the corrections.

1 point correction

The 1 point correction only adds a shift to the measures. For example, if you provide the calibration point (*a*, *b*), all the measured values are corrected by adding to them *b-a*, so that when the value read on the sensor is *a*, the power function returns *b*.

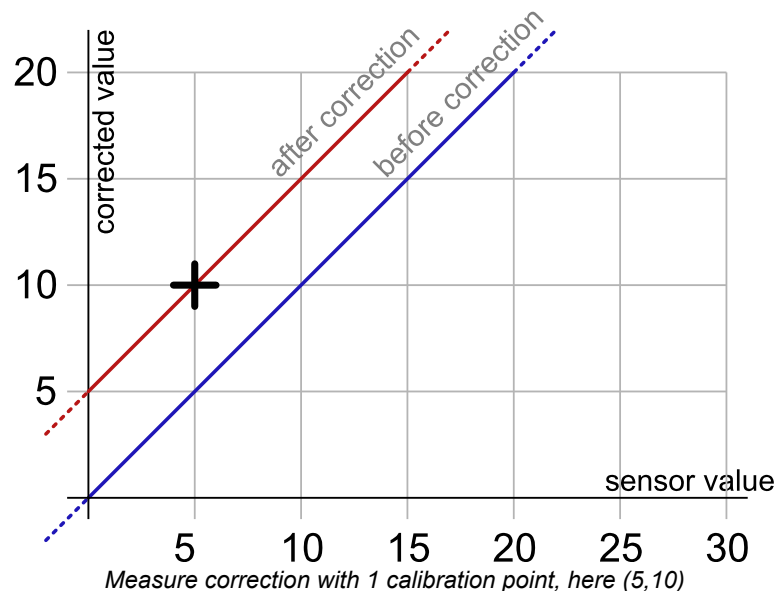


The application is very simple: you only need to call the `calibrateFromPoints()` method of the function you wish to correct. The following code applies the correction illustrated on the graph above to the first power function found. Note the call to the `saveToFlash` method of the module hosting the function, so that the module does not forget the calibration as soon as it is disconnected.

```
Double[] ValuesBefore = {5};
Double[] ValuesAfter  = {10};
YPower f = YPower.FirstPower();
f.calibrateFromPoints(ValuesBefore, ValuesAfter);
f.get_module().saveToFlash();
```

2 point correction

2 point correction allows you to perform both a shift and a multiplication by a given factor between two points. If you provide the two points (*a*, *b*) and (*c*, *d*), the function result is multiplied $(d-b)/(c-a)$ in the [*a*, *c*] range and shifted, so that when the value read by the sensor is *a* or *c*, the power function returns respectively *b* and *d*. Outside of the [*a*, *c*] range, the values are simply shifted, so as to preserve the continuity of the measures: an increase of 1 on the value read by the sensor induces an increase of 1 on the returned value.

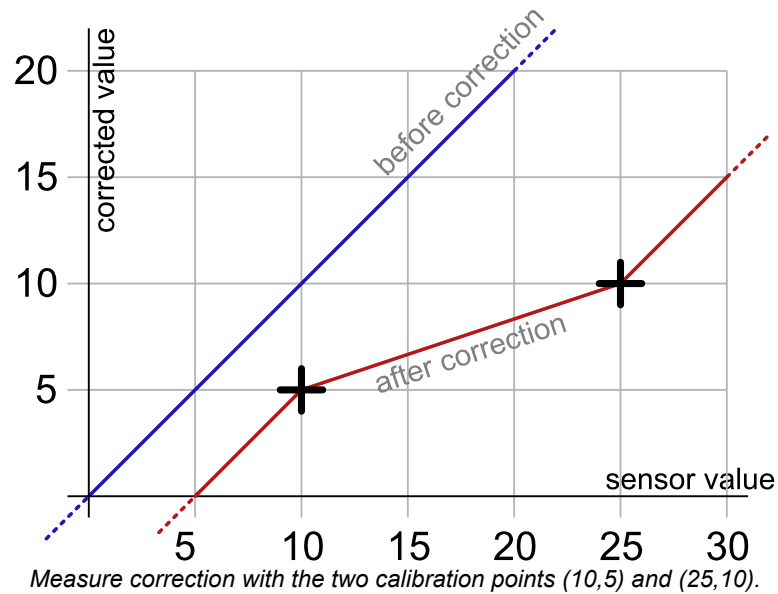


The code allowing you to program this calibration is very similar to the preceding code example.

```
Double[] ValuesBefore = {10,25};
Double[] ValuesAfter = {5,10};
YPower f = YPower.FirstPower();
f.calibrateFromPoints(ValuesBefore, ValuesAfter);
f.get_module().saveToFlash();
```

Note that the values before correction must be sorted in a strictly ascending order, otherwise they are simply ignored.

3 to 5 point correction

3 to 5 point corrections are only a generalization of the 2 point method, allowing you to create up to 4 correction ranges for an increased precision. These ranges cannot be disjoint.

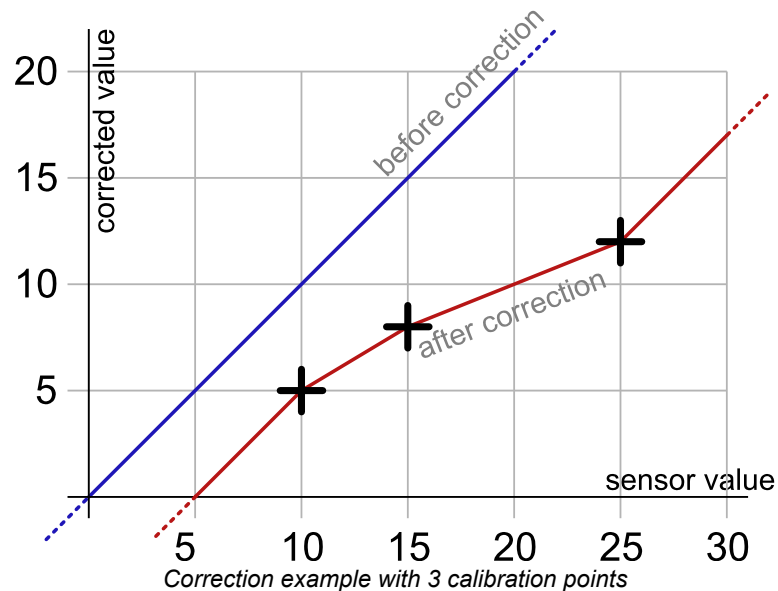

Back to normal

To cancel the effect of a calibration on a function, call the `calibrateFromPoints()` method with two empty arrays.

```
Double[] ValuesBefore = {};
Double[] ValuesAfter = {};
YPower f = YPower.FirstPower();
```

```
f.calibrateFromPoints(ValuesBefore, ValuesAfter);
f.get_module().saveToFlash();
```

You will find, in the *Examples\Prog-Calibration* directory of the Delphi, VB, and C# libraries, an application allowing you to test the effects of the 1 to 5 point calibration.

Limitations

Due to storage and processing limitations of real values within Yoctopuce sensors, raw values and corrected values must conform to a few numeric constraints:

- Only 3 decimals are taken into account (i.e. resolution is 0.001)
- The lowest allowed value is -2'100'000
- The highest allowed value is +2'100'000

Arbitrary interpolation

It is also possible to compute the interpolation instead of letting the module do it, in order to calculate a spline interpolation, for instance. To do so, you only need to store a callback in the API. This callback must specify the number of calibration points it is expecting.

```
public static double CustomInterpolation3Points(double rawValue, int calibType,
    int[] parameters, double[] beforeValues, double[] afterValues)
{
    double result;
    // the value to be corrected is rawValue
    // calibration points are in beforeValues and afterValues
    result = .... // interpolation of your choice
    return result;
}
YAPI.RegisterCalibrationHandler(3, CustomInterpolation3Points);
```

Note that these interpolation callbacks are global, and not specific to each function. Thus, each time someone requests a value from a module which contains in its flash memory the correct number of calibration points, the corresponding callback is called to correct the value before returning it, enabling thus a perfectly transparent measure correction.

23. Firmware Update

There are multiples way to update the firmware of a Yoctopuce module.

23.1. VirtualHub or the YoctoHub

It is possible to update the firmware directly from the web interface of VirtualHub or of a YoctoHub. The configuration panel of the module has an "upgrade" button to start a wizard that will guide you through the firmware update procedure.

In case the firmware update fails for any reason, and the module does no start anymore, simply unplug the module then plug it back while maintaining the *Yocto-button* down. The module will boot in "firmware update" mode and will appear in the VirtualHub interface below the module list.

23.2. The command line library

All the command line tools can update Yoctopuce modules thanks to the `downloadAndUpdate` command. The module selection mechanism works like for a traditional command. The `[target]` is the name of the module that you want to update. You can also use the "any" or "all" aliases, or even a name list, where the names are separated by commas, without spaces.

```
C:\>Executable [options] [target] command [parameters]
```

The following example updates all the Yoctopuce modules connected by USB.

```
C:\>YModule all downloadAndUpdate
ok: Yocto-PowerRelay RELAYHI1-266C8(rev=15430) is up to date.
ok: 0 / 0 hubs in 0.000000s.
ok: 0 / 0 shields in 0.000000s.
ok: 1 / 1 devices in 0.130000s 0.130000s per device.
ok: All devices are now up to date.
C:\>
```

23.3. The Android application Yocto-Firmware

You can update your module firmware from your Android phone or tablet with the [Yocto-Firmware](#) application. This application lists all the Yoctopuce modules connected by USB and checks if a more recent firmware is available on www.yoctopuce.com. If a more recent firmware is available, you can

update the module. The application is responsible for downloading and installing the new firmware while preserving the module parameters.

Please note: while the firmware is being updated, the module restarts several times. Android interprets a USB device reboot as a disconnection and reconnection of the USB device and asks the authorization to use the USB port again. The user must click on *OK* for the update process to end successfully.

23.4. Updating the firmware with the programming library

If you need to integrate firmware updates in your application, the libraries offer you an API to update your modules.

Saving and restoring parameters

The `get_allSettings()` method returns a binary buffer enabling you to save a module persistent parameters. This function is very useful to save the network configuration of a YoctoHub for example.

```
YWireless wireless = YWireless.FindWireless("reference");
YModule m = wireless.get_module();
byte[] default_config = m.get_allSettings();
saveFile("default.bin", default_config);
...
```

You can then apply these parameters to other modules with the `set_allSettings()` method.

```
byte[] default_config = loadFile("default.bin");
YModule m = YModule.FirstModule();
while (m != null) {
    if (m.get_productName() == "YoctoHub-Wireless") {
        m.set_allSettings(default_config);
    }
    m = m.next();
}
```

Finding the correct firmware

The first step to update a Yoctopuce module is to find which firmware you must use. The `checkFirmware(path, onlynew)` method of the `YModule` object does exactly this. The method checks that the firmware given as argument (`path`) is compatible with the module. If the `onlynew` parameter is set, this method checks that the firmware is more recent than the version currently used by the module. When the file is not compatible (or if the file is older than the installed version), this method returns an empty string. In the opposite, if the file is valid, the method returns a file access path.

The following piece of code checks that the `c:\tmp\METEOMK1.17328.byn` is compatible with the module stored in the `m` variable.

```
YModule m = YModule.FirstModule();
...
...
string path = "c:\\tmp\\METEOMK1.17328.byn";
string newfirm = m.checkFirmware(path, false);
if (newfirm != "") {
    Console.WriteLine("firmware " + newfirm + " is compatible");
}
...
```

The argument can be a directory (instead of a file). In this case, the method checks all the files of the directory recursively and returns the most recent compatible firmware. The following piece of code checks whether there is a more recent firmware in the `c:\tmp\` directory.

```
YModule m = YModule.FirstModule();
...
...
string path = "c:\\tmp";
string newfirm = m.checkFirmware(path, true);
if (newfirm != "") {
    Console.WriteLine("firmware " + newfirm + " is compatible and newer");
}
...
```

You can also give the "www.yoctopuce.com" string as argument to check whether there is a more recent published firmware on Yoctopuce's web site. In this case, the method returns the firmware URL. You can use this URL to download the firmware on your disk or use this URL when updating the firmware (see below). Obviously, this possibility works only if your machine is connected to Internet.

```
YModule m = YModule.FirstModule();
...
...
string url = m.checkFirmware("www.yoctopuce.com", true);
if (url != "") {
    Console.WriteLine("new firmware is available at " + url );
}
...
```

Updating the firmware

A firmware update can take several minutes. That is why the update process is run as a background task and is driven by the user code thanks to the `YFirmwareUpdate` class.

To update a Yoctopuce module, you must obtain an instance of the `YFirmwareUpdate` class with the `updateFirmware` method of a `YModule` object. The only parameter of this method is the *path* of the firmware that you want to install. This method does not immediately start the update, but returns a `YFirmwareUpdate` object configured to update the module.

```
string newfirm = m.checkFirmware("www.yoctopuce.com", true);
....
YFirmwareUpdate fw_update = m.updateFirmware(newfirm);
```

The `startUpdate()` method starts the update as a background task. This background task automatically takes care of

1. saving the module parameters
2. restarting the module in "update" mode
3. updating the firmware
4. starting the module with the new firmware version
5. restoring the parameters

The `get_progress()` and `get_progressMessage()` methods enable you to follow the progression of the update. `get_progress()` returns the progression as a percentage (100 = update complete). `get_progressMessage()` returns a character string describing the current operation (deleting, writing, rebooting, ...). If the `get_progress` method returns a negative value, the update process failed. In this case, the `get_progressMessage()` returns an error message.

The following piece of code starts the update and displays the progress on the standard output.

```
YFirmwareUpdate fw_update = m.updateFirmware(newfirm);
....
int status = fw_update.startUpdate();
while (status < 100 && status >= 0) {
    int newstatus = fw_update.get_progress();
    if (newstatus != status) {
        Console.WriteLine(status + "% "
            + fw_update.get_progressMessage());
    }
}
```

```
YAPI.Sleep(500, ref errmsg);
status = newstatus;
}

if (status < 0) {
    Console.WriteLine("Firmware Update failed: "
        + fw_update.get_progressMessage());
} else {
    Console.WriteLine("Firmware Updated Successfully!");
}
```

An Android characteristic

You can update a module firmware using the Android library. However, for modules connected by USB, Android asks the user to authorize the application to access the USB port.

During firmware update, the module restarts several times. Android interprets a USB device reboot as a disconnection and a reconnection to the USB port, and prevents all USB access as long as the user has not closed the pop-up window. The user has to click on OK for the update process to continue correctly. **You cannot update a module connected by USB to an Android device without having the user interacting with the device.**

23.5. The "update" mode

If you want to erase all the parameters of a module or if your module does not start correctly anymore, you can install a firmware from the "update" mode.

To force the module to work in "update" mode, disconnect it, wait a few seconds, and reconnect it while maintaining the *Yocto-button* down. This will restart the module in "update" mode. This update mode is protected against corruptions and is always available.

In this mode, the module is not detected by the YModule objects anymore. To obtain the list of connected modules in "update" mode, you must use the `YAPI.GetAllBootLoaders()` function. This function returns a character string array with the serial numbers of the modules in "update" mode.

```
List<string> allBootLoader = YAPI.GetAllBootLoaders();
```

The update process is identical to the standard case (see the preceding section), but you must manually instantiate the `YFirmwareUpdate` object instead of calling `module.updateFirmware()`. The constructor takes as argument three parameters: the module serial number, the path of the firmware to be installed, and a byte array with the parameters to be restored at the end of the update (or `null` to restore default parameters).

```
YFirmwareUpdate fw_update;
fw_update = new YFirmwareUpdate(allBootLoader[0], newfirm, null);
int status = fw_update.startUpdate();
.....
```

24. High-level API Reference

This chapter summarizes the high-level API functions to drive your Yocto-Watt-V2-C. Syntax and exact type names may vary from one language to another, but, unless otherwise stated, all the functions are available in every language. For detailed information regarding the types of arguments and return values for a given language, refer to the definition file for this language (`yocto_api.*` as well as the other `yocto_*` files that define the function interfaces).

For languages which support exceptions, all of these functions throw exceptions in case of error by default, rather than returning the documented error value for each function. This is by design, to facilitate debugging. It is however possible to disable the use of exceptions using the `yDisableExceptions()` function, in case you prefer to work with functions that return error values.

This chapter does not repeat the programming concepts described earlier, in order to stay as concise as possible. In case of doubt, do not hesitate to go back to the chapter describing in details all configurable attributes.

24.1. Class YAPI

General functions

These general functions should be used to initialize and configure the Yoctopuce library. In most cases, a simple call to function `yRegisterHub()` should be enough. The module-specific functions `yFind...()` or `yFirst...()` should then be used to retrieve an object that provides interaction with the module.

In order to use the functions described here, you should include:

java	<code>import com.yoctopuce.YoctoAPI.YAPI;</code>
dnf	<code>import YoctoProxyAPI.YAPIProxy</code>
cp	<code>#include "yocto_api_proxy.h"</code>
m1	<code>import YoctoProxyAPI.YAPIProxy"</code>
cpp	<code>#include "yocto_api.h"</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
py	<code>from yocto_api import *</code>
php	<code>require_once('yocto_api.php');</code>
ts	<code>in HTML: import { YAPI, YErrorMsg, YModule, YSensor } from '../dist/esm/yocto_api_browser.js';</code> <code>in Node.js: import { YAPI, YErrorMsg, YModule, YSensor } from 'yoctolib-cjs/yocto_api_nodejs.js';</code>
tpy	<code>from yoctolib.yocto_api import *</code>
vi	<code>YModule.vi</code>
pas	<code>uses yocto_api;</code>

Global functions

YAPI.AddTrustedCertificates(*certificate*)

Adds a TLS/SSL certificate to the list of trusted certificates.

cpp vb cs java py php ts tpy pas

YAPI.AddUdevRule(*force*)

Adds a UDEV rule which authorizes all users to access Yoctopuce modules connected to the USB ports.

cpp vb cs java py php ts pas

YAPI.CheckLogicalName(*name*)

Checks if a given string is valid as logical name for a module or a function.

cpp vb cs java py php ts tpy pas

YAPI.ClearHTTPCallbackCacheDir(*removeFiles*)

Disables the HTTP callback cache.

java php

YAPI.DisableExceptions()

Disables the use of exceptions to report runtime errors.

cpp vb cs py php ts tpy pas

YAPI.DownloadHostCertificate(*url*, *mstimeout*)

Download the TLS/SSL certificate from the hub.

cpp vb cs java py php ts tpy pas

YAPI.EnableExceptions()

Re-enables the use of exceptions for runtime error handling.

cpp vb cs py php ts tpy pas

YAPI.EnableUSBHost(osContext)

This function is used only on Android.

java

YAPI.FreeAPI()

Waits for all pending communications with Yoctopuce devices to be completed then frees dynamically allocated resources used by the Yoctopuce library.

cpp vb cs java py php ts dnp tpy pas

YAPI.GetAPIVersion()

Returns the version identifier for the Yoctopuce library in use.

cpp vb cs java py php ts dnp tpy pas

YAPI.GetCacheValidity()

Returns the validity period of the data loaded by the library.

cpp vb cs java py php ts tpy pas

YAPI.GetDeviceListValidity()

Returns the delay between each forced enumeration of the used YoctoHubs.

cpp vb cs java py php ts tpy pas

YAPI.GetDllArchitecture()

Returns the system architecture for the Yoctopuce communication library in use.

dnp

YAPI.GetDllPath()

Returns the paths of the DLLs for the Yoctopuce library in use.

dnp

YAPI.GetLog(lastLogLine)

Retrieves Yoctopuce low-level library diagnostic logs.

dnp

YAPI.GetNetworkTimeout()

Returns the network connection delay for `yRegisterHub()` and `yUpdateDeviceList()`.

cpp vb cs java py php ts dnp tpy pas

YAPI.GetTickCount()

Returns the current value of a monotone millisecond-based time counter.

cpp vb cs java py php ts tpy pas

YAPI.GetYAPISharedLibraryPath()

Returns the path to the dynamic YAPI library.

cpp vb cs java py php ts pas

YAPI.HandleEvents(errmsg)

Maintains the device-to-library communication channel.

cpp vb cs java py php ts tpy pas

YAPI.InitAPI(mode, errmsg)

Initializes the Yoctopuce programming library explicitly.

cpp vb cs java py php ts tpy pas

YAPI.PreregisterHub(url, errmsg)

Fault-tolerant alternative to `yRegisterHub()`.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnf` `tpy` `pas`

YAPI.RegisterDeviceArrivalCallback(arrivalCallback)

Register a callback function, to be called each time a device is plugged.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

YAPI.RegisterDeviceRemovalCallback(removalCallback)

Register a callback function, to be called each time a device is unplugged.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

YAPI.RegisterHub(url, errmsg)

Set up the Yoctopuce library to use modules connected on a given machine.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnf` `tpy` `pas`

YAPI.RegisterHubDiscoveryCallback(hubDiscoveryCallback)

Register a callback function, to be called each time an Network Hub send an SSDP message.

`cpp` `vb` `cs` `java` `py` `ts` `tpy` `pas`

YAPI.RegisterHubWebsocketCallback(ws, errmsg, authpwd)

Variant to `yRegisterHub()` used to initialize Yoctopuce API on an existing Websocket session, as happens for incoming WebSocket callbacks.

YAPI.RegisterLogFunction(logfun)

Registers a log callback function.

`cpp` `vb` `cs` `java` `py` `ts` `tpy` `pas`

YAPI.SelectArchitecture(arch)

Select the architecture or the library to be loaded to access to USB.

`py`

YAPI.SetCacheValidity(cacheValidityMs)

Change the validity period of the data loaded by the library.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

YAPI.SetDelegate(object)

(Objective-C only) Register an object that must follow the protocol `YDeviceHotPlug`.

YAPI.SetDeviceListValidity(deviceListValidity)

Modifies the delay between each forced enumeration of the used YoctoHubs.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

YAPI.SetHTTPCallbackCacheDir(directory)

Enables the HTTP callback cache.

`java` `php`

YAPI.SetNetworkSecurityOptions(opts)

Enables or disables certain TLS/SSL certificate checks.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

YAPI.SetNetworkTimeout(networkMsTimeout)

Modifies the network connection delay for `yRegisterHub()` and `yUpdateDeviceList()`.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnf` `tpy` `pas`

YAPI.SetTimeout(callback, ms_timeout, args)

Invoke the specified callback function after a given timeout.

ts

YAPI.SetTrustedCertificatesList(certificatePath)

Set the path of Certificate Authority file on local filesystem.

cpp vb cs java py php ts tpy pas

YAPI.SetUSBPacketAckMs(pktAckDelay)

Enables the acknowledge of every USB packet received by the Yoctopuce library.

java

YAPI.Sleep(ms_duration, errmsg)

Pauses the execution flow for a specified duration.

cpp vb cs java py php ts tpy pas

YAPI.TestHub(url, mtimeout, errmsg)

Test if the hub is reachable.

cpp vb cs java py php ts dnp tpy pas

YAPI.TriggerHubDiscovery(errmsg)

Force a hub discovery, if a callback as been registered with `yRegisterHubDiscoveryCallback` it will be called for each net work hub that will respond to the discovery.

cpp vb cs java py ts tpy pas

YAPI.UnregisterHub(url)

Set up the Yoctopuce library to no more use modules connected on a previously registered machine with `RegisterHub`.

cpp vb cs java py php ts tpy pas

YAPI.UpdateDeviceList(errmsg)

Triggers a (re)detection of connected Yoctopuce modules.

cpp vb cs java py php ts tpy pas

YAPI.UpdateDeviceList_async(callback, context)

Triggers a (re)detection of connected Yoctopuce modules.

24.2. Class YModule

Global parameters control interface for all Yoctopuce devices

The YModule class can be used with all Yoctopuce USB devices. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

In order to use the functions described here, you should include:

cpp	<code>#include "yocto_api.h"</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>
php	<code>require_once('yocto_api.php');</code>
ts	<code>in HTML: import { YAPI, YErrorMsg, YModule, YSensor } from '../dist/esm/yocto_api_browser.js'; in Node.js: import { YAPI, YErrorMsg, YModule, YSensor } from 'yoctolib-cjs/yocto_api_nodejs.js';</code>
dnf	<code>import YoctoProxyAPI.YModuleProxy</code>
cp	<code>#include "yocto_module_proxy.h"</code>
tpy	<code>from yoctolib.yocto_api import *</code>
vi	<code>YModule.vi</code>
ml	<code>import YoctoProxyAPI.YModuleProxy"</code>
pas	<code>uses yocto_api;</code>

Global functions

YModule.FindModule(func)

Allows you to find a module from its serial number or from its logical name.

cpp vb cs java py php ts dnf tpy pas

YModule.FindModuleInContext(yctx, func)

Retrieves a module for a given identifier in a YAPI context.

java ts tpy

YModule.FirstModule()

Starts the enumeration of modules currently accessible.

cpp vb cs java py php ts tpy pas

YModule properties

module→Beacon [writable]

State of the localization beacon.

dnf

module→FirmwareRelease [read-only]

Version of the firmware embedded in the module.

dnf

module→FunctionId [read-only]

Retrieves the hardware identifier of the *n*th function on the module.

dnf

module→HardwareId [read-only]

Unique hardware identifier of the module.

dnp

module→IsOnline *[read-only]*

Checks if the module is currently reachable.

dnp

module→LogicalName [*writable*]

Logical name of the module.

dnp

module→**Luminosity** *[writable]*

Luminosity of the module informative LEDs (from 0 to 100).

dnp

module→ProductId *[read-only]*

USB device identifier of the module.

dnp

module→ProductName *[read-only]*

Commercial name of the module, as set by the factory.

dnp

module→ProductRelease *[read-only]*

Release number of the module hardware, preprogrammed at the factory.

dnp

module→**SerialNumber** *[read-only]*

Serial number of the module, as set by the factory.

dnp

YModule methods

```
module→addFileToHTTPCallback(filename)
```

Adds a file to the uploaded data at the next HTTP callback.

cmd cpp vb cs java py php ts dnp pas

```
module→checkFirmware(path, onlynew)
```

Tests whether the byn file is valid for this module.

cmd cpp vb cs java py php ts dnp tpy pas

module→clearCache()

Invalidates the cache.

cpp vb cs java py php ts tpy pas

module→describe()

Returns a descriptive text that identifies the module.

cpp vb cs java py php ts pas

```
module→download(pathname)
```

Downloads the specified built-in file and returns a binary buffer with its content.

cmd cpp vb cs java py php ts dnp tpy pas

```
module→functionBaseType(functionIndex)
```

Retrieves the base type of the n th function on the module.

cpp vb cs java py php ts tpy pas

module→functionCount()

Returns the number of functions (beside the "module" interface) available on the module.

cpp vb cs java py php ts tpy pas

module→functionId(functionIndex)

Retrieves the hardware identifier of the n th function on the module.

cpp vb cs java py php ts tpy pas

module→functionName(functionIndex)

Retrieves the logical name of the n th function on the module.

cpp vb cs java py php ts tpy pas

module→functionType(functionIndex)

Retrieves the type of the n th function on the module.

cpp vb cs java py php ts tpy pas

module→functionValue(functionIndex)

Retrieves the advertised value of the n th function on the module.

cpp vb cs java py php ts tpy pas

module→get_allSettings()

Returns all the settings and uploaded files of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_beacon()

Returns the state of the localization beacon.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_errorMessage()

Returns the error message of the latest error with this module object.

cpp vb cs java py php ts tpy pas

module→get_errorType()

Returns the numerical error code of the latest error with this module object.

cpp vb cs java py php ts tpy pas

module→get_firmwareRelease()

Returns the version of the firmware embedded in the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_functionIds(funType)

Retrieve all hardware identifier that match the type passed in argument.

cmd cpp vb cs java py php ts dnp pas

module→get_hardwareId()

Returns the unique hardware identifier of the module.

cpp vb cs java py php ts dnp tpy cmd pas

module→get_icon2d()

Returns the icon of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_lastLogs()

Returns a string with last logs of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_logicalName()

Returns the logical name of the module.

cpp vb cs java py php ts dnp tpy pas cmd

module→get_luminosity()

Returns the luminosity of the module informative LEDs (from 0 to 100).

cmd cpp vb cs java py php ts dnp tpy pas

module→get_parentHub()

Returns the serial number of the YoctoHub on which this module is connected.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_persistentSettings()

Returns the current state of persistent module settings.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_productId()

Returns the USB device identifier of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_productName()

Returns the commercial name of the module, as set by the factory.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_productRelease()

Returns the release number of the module hardware, preprogrammed at the factory.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_rebootCountdown()

Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

module→get_subDevices()

Returns a list of all the modules that are plugged into the current module.

cmd cpp vb cs java py php ts dnp pas

module→get_upTime()

Returns the number of milliseconds spent since the module was powered on.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_url()

Returns the URL used to access the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_usbCurrent()

Returns the current consumed by the module on the USB bus, in milli-amps.

cmd cpp vb cs java py php ts dnp tpy pas

module→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp vb cs java py php ts tpy pas

module→get_userVar()

Returns the value previously stored in this attribute.

cmd cpp vb cs java py php ts dnp tpy pas

module→hasFunction(funcId)

Tests if the device includes a specific function.

cmd cpp vb cs java py php ts dnp tpy pas

module→isOnline()

Checks if the module is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

module→isOnline_async(callback, context)

Checks if the module is currently reachable, without raising any error.

module→isReadOnly()

Indicates whether changes to the module are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

module→load(msValidity)

Preloads the module cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

module→load_async(msValidity, callback, context)

Preloads the module cache with a specified validity duration (asynchronous version).

module→log(text)

Adds a text message to the device logs.

cmd cpp vb cs java py php ts dnp tpy pas

module→nextModule()

Continues the module enumeration started using `yFirstModule()`.

cpp vb cs java py php ts tpy pas

module→reboot(secBeforeReboot)

Schedules a simple module reboot after the given number of seconds.

cmd cpp vb cs java py php ts dnp tpy pas

module→registerBeaconCallback(callback)

Register a callback function, to be called when the localization beacon of the module has been changed.

cpp vb cs java py php ts tpy pas

module→registerConfigChangeCallback(callback)

Register a callback function, to be called when a persistent settings in a device configuration has been changed (e.g.

cpp vb cs java py php ts tpy pas

module→registerLogCallback(callback)

Registers a device log callback function.

cpp vb cs java py php ts tpy pas

module→revertFromFlash()

Reloads the settings stored in the nonvolatile memory, as when the module is powered on.

cmd cpp vb cs java py php ts dnp tpy pas

module→saveToFlash()

Saves current settings in the nonvolatile memory of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→set_allSettings(settings)

Restores all the settings of the device.

cmd cpp vb cs java py php ts dnp tpy pas

module→set_allSettingsAndFiles(settings)

Restores all the settings and uploaded files to the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→set_beacon(newval)

Turns on or off the module localization beacon.

cmd cpp vb cs java py php ts dnp tpy pas

module→set_logicalName(newval)

Changes the logical name of the module.

cpp vb cs java py php ts dnp tpy pas cmd

module→set_luminosity(newval)

Changes the luminosity of the module informative leds.

cmd cpp vb cs java py php ts dnp tpy pas

module→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp vb cs java py php ts tpy pas

module→set_userVar(newval)

Stores a 32 bit value in the device RAM.

cmd cpp vb cs java py php ts dnp tpy pas

module→triggerConfigChangeCallback()

Triggers a configuration change callback, to check if they are supported or not.

cmd cpp vb cs java py php ts dnp tpy pas

module→triggerFirmwareUpdate(secBeforeReboot)

Schedules a module reboot into special firmware update mode.

cmd cpp vb cs java py php ts dnp tpy pas

module→updateFirmware(path)

Prepares a firmware update of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→updateFirmwareEx(path, force)

Prepares a firmware update of the module.

cmd cpp vb cs java py php ts dnp tpy pas

module→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.3. Class YPower

Electrical power sensor control interface, available for instance in the Yocto-Watt

The YPower class allows you to read and configure Yoctopuce electrical power sensors. It inherits from YSensor class the core functions to read measures, to register callback functions, and to access the autonomous datalogger. This class adds the ability to access the energy counter and the power factor.

In order to use the functions described here, you should include:

es	in HTML: <code><script src="../../lib/yocto_power.js"></script></code> in node.js: <code>require('yoctolib-es2017/yocto_power.js');</code>
cpp	<code>#include "yocto_power.h"</code>
vb	<code>yocto_power.vb</code>
cs	<code>yocto_power.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YPower;</code>
py	<code>from yocto_power import *</code>
php	<code>require_once('yocto_power.php');</code>
ts	in HTML: <code>import { YPower } from '../../dist/esm/yocto_power.js';</code> in Node.js: <code>import { YPower } from 'yoctolib-cjs/yocto_power.js';</code>
dnp	<code>import YoctoProxyAPI.YPowerProxy</code>
cp	<code>#include "yocto_power_proxy.h"</code>
tpy	<code>from yoctolib.yocto_power import *</code>
vi	<code>YPower.vi</code>
ml	<code>import YoctoProxyAPI.YPowerProxy</code>
pas	<code>uses yocto_power;</code>

Global functions

YPower.FindPower(func)

Retrieves a electrical power sensor for a given identifier.

cpp vb cs java py php ts dnp tpy pas

YPower.FindPowerInContext(yctx, func)

Retrieves a electrical power sensor for a given identifier in a YAPI context.

java ts tpy

YPower.FirstPower()

Starts the enumeration of electrical power sensors currently accessible.

cpp vb cs java py php ts tpy pas

YPower.FirstPowerInContext(yctx)

Starts the enumeration of electrical power sensors currently accessible.

java ts tpy

YPower.GetSimilarFunctions()

Enumerates all functions of type Power available on the devices currently reachable by the library, and returns their unique hardware ID.

dnp

YPower properties

power→AdvMode [writable]

Measuring mode used for the advertised value pushed to the parent hub.

dnp

power→AdvertisedValue [read-only]

Short string representing the current state of the function.

dnp

power→FriendlyName *[read-only]*

Global identifier of the function in the format **MODULE NAME.FUNCTION NAME.**

dnp

power→FunctionId *[read-only]*

Hardware identifier of the sensor, without reference to the module.

dnp

power→HardwareId [read-only]

Unique hardware identifier of the function in the form SERIAL.FUNCTIONID.

dnp

power→IsOnline *[read-only]*

Checks if the function is currently reachable.

dnp

power→LogFrequency [writable]

Datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

dnp

power→LogicalName *[writable]*

Logical name of the function.

dnp

power→ReportFrequency *[writable]*

Timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

dnp

power→Resolution [writable]

Resolution of the measured values.

dnp

power→SerialNumber *[read-only]*

Serial number of the module, as set by the factory.

dnp

YPower methods

```
power→calibrateFromPoints(rawValues, refValues)
```

Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.

cmd cpp vb cs java py php ts dnp tpy pas

power→clearCache()

Invalidates the cache.

cpp vb cs java py php ts tpy pas

power→describe()

Returns a short text that describes unambiguously the instance of the electrical power sensor in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

`cpp` `vb` `cs` `java` `py` `php` `ts` `pas`

power→get_advMode()

Returns the measuring mode used for the advertised value pushed to the parent hub.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_advertisedValue()

Returns the current value of the electrical power sensor (no more than 6 characters).

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas` `cmd`

power→get_cosPhi()

Returns the Displacement Power factor (DPF), i.e.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor, in Watt, as a floating point number.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_currentValue()

Returns the current value of the electrical power, in Watt, as a floating point number.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_dataLogger()

Returns the `YDataLogger` object of the device hosting the sensor.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_deliveredEnergyMeter()

Returns the energy counter, maintained by the wattmeter by integrating the power consumption over time, but only when positive.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

power→get_errorMessage()

Returns the error message of the latest error with the electrical power sensor.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

power→get_errorType()

Returns the numerical error code of the latest error with the electrical power sensor.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

power→get_friendlyName()

Returns a global identifier of the electrical power sensor in the format `MODULE_NAME.FUNCTION_NAME`.

`cpp` `cs` `java` `py` `php` `ts` `dnp` `tpy`

power→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

`cpp` `vb` `cs` `java` `py` `php` `ts` `pas`

power→get_functionId()

Returns the hardware identifier of the electrical power sensor, without reference to the module.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy`

power→get_hardwareId()

Returns the unique hardware identifier of the electrical power sensor in the form `SERIAL . FUNCTIONID`.

cpp vb cs java py php ts dnp tpy

power→get_highestValue()

Returns the maximal value observed for the electrical power since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_logicalName()

Returns the logical name of the electrical power sensor.

cpp vb cs java py php ts dnp tpy pas cmd

power→get_lowestValue()

Returns the minimal value observed for the electrical power since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_meter()

Returns the energy counter, maintained by the wattmeter by integrating the power consumption over time.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_meterTimer()

Returns the elapsed time since last energy counter reset, in seconds.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_module()

Gets the `YModule` object for the device on which the function is located.

cpp vb cs java py php ts dnp tpy pas

power→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

power→get_powerFactor()

Returns the power factor (PF), i.e.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_receivedEnergyMeter()

Returns the energy counter, maintained by the wattmeter by integrating the power consumption over time, but only when negative.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_recordedData(startTime, endTime)

Retrieves a `YDataSet` object holding historical data for this sensor, for a specified time interval.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_resolution()

Returns the resolution of the measured values.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_sensorState()

Returns the sensor state code, which is zero when there is an up-to-date measure available or a positive code if the sensor is not able to provide a measure right now.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

power→get_unit()

Returns the measuring unit for the electrical power.

cmd cpp vb cs java py php ts dnp tpy pas

power→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp vb cs java py php ts tpy pas

power→isOnline()

Checks if the electrical power sensor is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

power→isOnline_async(callback, context)

Checks if the electrical power sensor is currently reachable, without raising any error (asynchronous version).

power→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

power→isSensorReady()

Checks if the sensor is currently able to provide an up-to-date measure.

cmd

power→load(msValidity)

Preloads the electrical power sensor cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

power→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp vb cs java py php ts dnp tpy pas

power→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

cmd cpp vb cs java py php ts tpy pas

power→load_async(msValidity, callback, context)

Preloads the electrical power sensor cache with a specified validity duration (asynchronous version).

power→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

power→nextPower()

Continues the enumeration of electrical power sensors started using `yFirstPower()`.

cpp vb cs java py php ts tpy pas

power→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

cpp vb cs java py php ts tpy pas

power→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp vb cs java py php ts tpy pas

power→reset()

Resets the energy counters.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_advMode(newval)

Changes the measuring mode used for the advertised value pushed to the parent hub.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_highestValue(newval)

Changes the recorded maximal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_logicalName(newval)

Changes the logical name of the electrical power sensor.

cpp vb cs java py php ts dnp tpy pas cmd

power→set_lowestValue(newval)

Changes the recorded minimal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_resolution(newval)

Changes the resolution of the measured physical values.

cmd cpp vb cs java py php ts dnp tpy pas

power→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

cpp vb cs java py php ts tpy pas

power→startDataLogger()

Starts the data logger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

power→stopDataLogger()

Stops the datalogger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

power→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

power→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.4. Class YVoltage

Voltage sensor control interface, available for instance in the Yocto-Motor-DC, the Yocto-Volt or the Yocto-Watt

The YVoltage class allows you to read and configure Yoctopuce voltage sensors. It inherits from YSensor class the core functions to read measures, to register callback functions, and to access the autonomous datalogger.

In order to use the functions described here, you should include:

es	in HTML: <code><script src="../../lib/yocto_voltage.js"></script></code> in node.js: <code>require('yoctolib-es2017/yocto_voltage.js');</code>
cpp	<code>#include "yocto_voltage.h"</code>
vb	<code>yocto_voltage.vb</code>
cs	<code>yocto_voltage.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YVoltage;</code>
py	<code>from yocto_voltage import *</code>
php	<code>require_once('yocto_voltage.php');</code>
ts	in HTML: <code>import { YVoltage } from '../../dist/esm/yocto_voltage.js';</code> in Node.js: <code>import { YVoltage } from 'yoctolib-cjs/yocto_voltage.js';</code>
dnp	<code>import YoctoProxyAPI.YVoltageProxy</code>
cp	<code>#include "yocto_voltage_proxy.h"</code>
tpy	<code>from yoctolib.yocto_voltage import *</code>
vi	<code>YVoltage.vi</code>
ml	<code>import YoctoProxyAPI.YVoltageProxy</code>
pas	<code>uses yocto_voltage;</code>

Global functions

YVoltage.FindVoltage(func)

Retrieves a voltage sensor for a given identifier.

cpp vb cs java py php ts dnp tpy pas

YVoltage.FindVoltageInContext(yctx, func)

Retrieves a voltage sensor for a given identifier in a YAPI context.

java ts tpy

YVoltage.FirstVoltage()

Starts the enumeration of voltage sensors currently accessible.

cpp vb cs java py php ts tpy pas

YVoltage.FirstVoltageInContext(yctx)

Starts the enumeration of voltage sensors currently accessible.

java ts tpy

YVoltage.GetSimilarFunctions()

Enumerates all functions of type Voltage available on the devices currently reachable by the library, and returns their unique hardware ID.

dnp

YVoltage properties

voltage→AdvMode [writable]

Measuring mode used for the advertised value pushed to the parent hub.

	dnp
voltage→AdvertisedValue <i>[read-only]</i>	
Short string representing the current state of the function.	dnp
voltage→Enabled <i>[writable]</i>	
Activation state of this input.	dnp
voltage→FriendlyName <i>[read-only]</i>	
Global identifier of the function in the format MODULE_NAME . FUNCTION_NAME.	dnp
voltage→FunctionId <i>[read-only]</i>	
Hardware identifier of the sensor, without reference to the module.	dnp
voltage→HardwareId <i>[read-only]</i>	
Unique hardware identifier of the function in the form SERIAL . FUNCTIONID.	dnp
voltage→IsOnline <i>[read-only]</i>	
Checks if the function is currently reachable.	dnp
voltage→LogFrequency <i>[writable]</i>	
Datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.	dnp
voltage→LogicalName <i>[writable]</i>	
Logical name of the function.	dnp
voltage→ReportFrequency <i>[writable]</i>	
Timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.	dnp
voltage→Resolution <i>[writable]</i>	
Resolution of the measured values.	dnp
voltage→SerialNumber <i>[read-only]</i>	
Serial number of the module, as set by the factory.	dnp
YVoltage methods	
voltage→calibrateFromPoints (rawValues, refValues)	
Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.	
	cmd cpp vb cs java py php ts dnp tpy pas
voltage→clearCache()	

Invalidates the cache.

cpp vb cs java py php ts tpy pas

voltage→describe()

Returns a short text that describes unambiguously the instance of the voltage sensor in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

cpp vb cs java py php ts pas

voltage→get_advMode()

Returns the measuring mode used for the advertised value pushed to the parent hub.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_advertisedValue()

Returns the current value of the voltage sensor (no more than 6 characters).

cpp vb cs java py php ts dnp tpy pas cmd

voltage→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor, in Volt, as a floating point number.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_currentValue()

Returns the current value of the voltage, in Volt, as a floating point number.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_dataLogger()

Returns the `YDataLogger` object of the device hosting the sensor.

cpp vb cs java py php ts dnp tpy pas

voltage→get_enabled()

Returns the activation state of this input.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_errorMessage()

Returns the error message of the latest error with the voltage sensor.

cpp vb cs java py php ts tpy pas

voltage→get_errorType()

Returns the numerical error code of the latest error with the voltage sensor.

cpp vb cs java py php ts tpy pas

voltage→get_friendlyName()

Returns a global identifier of the voltage sensor in the format `MODULE_NAME.FUNCTION_NAME`.

cpp cs java py php ts dnp tpy

voltage→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

cpp vb cs java py php ts pas

voltage→get_functionId()

Returns the hardware identifier of the voltage sensor, without reference to the module.

cpp vb cs java py php ts dnp tpy

voltage→get_hardwareId()

Returns the unique hardware identifier of the voltage sensor in the form `SERIAL.FUNCTIONID`.

cpp vb cs java py php ts dnp tpy

voltage→get_highestValue()

Returns the maximal value observed for the voltage since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_logicalName()

Returns the logical name of the voltage sensor.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→get_lowestValue()

Returns the minimal value observed for the voltage since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_module()

Gets the YModule object for the device on which the function is located.

cpp vb cs java py php ts dnp tpy pas

voltage→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

voltage→get_recordedData(startTime, endTime)

Retrieves a YDataSet object holding historical data for this sensor, for a specified time interval.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_resolution()

Returns the resolution of the measured values.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_sensorState()

Returns the sensor state code, which is zero when there is an up-to-date measure available or a positive code if the sensor is not able to provide a measure right now.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→get_unit()

Returns the measuring unit for the voltage.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

cpp vb cs java py php ts tpy pas

voltage→isOnline()

Checks if the voltage sensor is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

voltage→isOnline_async(callback, context)

Checks if the voltage sensor is currently reachable, without raising any error (asynchronous version).

voltage→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→isSensorReady()

Checks if the sensor is currently able to provide an up-to-date measure.

cmd

voltage→load(msValidity)

Preloads the voltage sensor cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

voltage→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp vb cs java py php ts dnp tpy pas

voltage→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

cmd cpp vb cs java py php ts tpy pas

voltage→load_async(msValidity, callback, context)

Preloads the voltage sensor cache with a specified validity duration (asynchronous version).

voltage→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→nextVoltage()

Continues the enumeration of voltage sensors started using `yFirstVoltage()`.

cpp vb cs java py php ts tpy pas

voltage→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

cpp vb cs java py php ts tpy pas

voltage→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp vb cs java py php ts tpy pas

voltage→set_advMode(newval)

Changes the measuring mode used for the advertised value pushed to the parent hub.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_enabled(newval)

Changes the activation state of this voltage input.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_highestValue(newval)

Changes the recorded maximal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_logicalName(newval)

Changes the logical name of the voltage sensor.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→set_lowestValue(newval)

Changes the recorded minimal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_resolution(newval)

Changes the resolution of the measured physical values.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp vb cs java py php ts tpy pas

voltage→startDataLogger()

Starts the data logger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→stopDataLogger()

Stops the datalogger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

voltage→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

voltage→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.5. Class YCurrent

Current sensor control interface, available for instance in the Yocto-Amp, the Yocto-Motor-DC or the Yocto-Watt

The YCurrent class allows you to read and configure Yoctopuce current sensors. It inherits from YSensor class the core functions to read measures, to register callback functions, and to access the autonomous datalogger.

In order to use the functions described here, you should include:

es	in HTML: <script src="../../lib/yocto_current.js"></script> in node.js: require('yoctolib-es2017/yocto_current.js');
cpp	#include "yocto_current.h"
vb	yocto_current.vb
cs	yocto_current.cs
java	import com.yoctopuce.YoctoAPI.YCurrent;
py	from yocto_current import *
php	require_once('yocto_current.php');
ts	in HTML: import { YCurrent } from '../../dist/esm/yocto_current.js'; in Node.js: import { YCurrent } from 'yoctolib-cjs/yocto_current.js';
dnp	import YoctoProxyAPI.YCurrentProxy
cp	#include "yocto_current_proxy.h"
tpy	from yoctolib.yocto_current import *
vi	YCurrent.vi
ml	import YoctoProxyAPI.YCurrentProxy
pas	uses yocto_current;

Global functions

YCurrent.FindCurrent(func)

Retrieves a current sensor for a given identifier.

cpp vb cs java py php ts dnp tpy pas

YCurrent.FindCurrentInContext(yctx, func)

Retrieves a current sensor for a given identifier in a YAPI context.

java ts tpy

YCurrent.FirstCurrent()

Starts the enumeration of current sensors currently accessible.

cpp vb cs java py php ts tpy pas

YCurrent.FirstCurrentInContext(yctx)

Starts the enumeration of current sensors currently accessible.

java ts tpy

YCurrent.GetSimilarFunctions()

Enumerates all functions of type Current available on the devices currently reachable by the library, and returns their unique hardware ID.

dnp

YCurrent properties

current→AdvMode [writable]

Measuring mode used for the advertised value pushed to the parent hub.

	dnp
current→AdvertisedValue <i>[read-only]</i>	
Short string representing the current state of the function.	dnp
current→Enabled <i>[writable]</i>	
Activation state of this input.	dnp
current→FriendlyName <i>[read-only]</i>	
Global identifier of the function in the format MODULE_NAME . FUNCTION_NAME.	dnp
current→FunctionId <i>[read-only]</i>	
Hardware identifier of the sensor, without reference to the module.	dnp
current→HardwareId <i>[read-only]</i>	
Unique hardware identifier of the function in the form SERIAL . FUNCTIONID.	dnp
current→IsOnline <i>[read-only]</i>	
Checks if the function is currently reachable.	dnp
current→LogFrequency <i>[writable]</i>	
Datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.	dnp
current→LogicalName <i>[writable]</i>	
Logical name of the function.	dnp
current→ReportFrequency <i>[writable]</i>	
Timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.	dnp
current→Resolution <i>[writable]</i>	
Resolution of the measured values.	dnp
current→SerialNumber <i>[read-only]</i>	
Serial number of the module, as set by the factory.	dnp
YCurrent methods	
current→calibrateFromPoints (rawValues, refValues)	
Configures error correction data points, in particular to compensate for a possible perturbation of the measure caused by an enclosure.	
	cmd cpp vb cs java py php ts dnp tpy pas
current→clearCache()	

Invalidates the cache.

cpp vb cs java py php ts tpy pas

current→describe()

Returns a short text that describes unambiguously the instance of the current sensor in the form `TYPE (NAME) = SERIAL . FUNCTIONID`.

cpp vb cs java py php ts pas

current→get_advMode()

Returns the measuring mode used for the advertised value pushed to the parent hub.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_advertisedValue()

Returns the current value of the current sensor (no more than 6 characters).

cpp vb cs java py php ts dnp tpy pas cmd

current→get_currentRawValue()

Returns the uncalibrated, unrounded raw value returned by the sensor, in mA, as a floating point number.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_currentValue()

Returns the current value of the current, in mA, as a floating point number.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_dataLogger()

Returns the `YDataLogger` object of the device hosting the sensor.

cpp vb cs java py php ts dnp tpy pas

current→get_enabled()

Returns the activation state of this input.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_errorMessage()

Returns the error message of the latest error with the current sensor.

cpp vb cs java py php ts tpy pas

current→get_errorType()

Returns the numerical error code of the latest error with the current sensor.

cpp vb cs java py php ts tpy pas

current→get_friendlyName()

Returns a global identifier of the current sensor in the format `MODULE_NAME . FUNCTION_NAME`.

cpp cs java py php ts dnp tpy

current→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

cpp vb cs java py php ts pas

current→get_functionId()

Returns the hardware identifier of the current sensor, without reference to the module.

cpp vb cs java py php ts dnp tpy

current→get_hardwareId()

Returns the unique hardware identifier of the current sensor in the form `SERIAL . FUNCTIONID`.

cpp vb cs java py php ts dnp tpy

current→get_highestValue()

Returns the maximal value observed for the current since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_logFrequency()

Returns the datalogger recording frequency for this function, or "OFF" when measures are not stored in the data logger flash memory.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_logicalName()

Returns the logical name of the current sensor.

cpp vb cs java py php ts dnp tpy pas cmd

current→get_lowestValue()

Returns the minimal value observed for the current since the device was started.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_module()

Gets the YModule object for the device on which the function is located.

cpp vb cs java py php ts dnp tpy pas

current→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

current→get_recordedData(startTime, endTime)

Retrieves a YDataSet object holding historical data for this sensor, for a specified time interval.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_reportFrequency()

Returns the timed value notification frequency, or "OFF" if timed value notifications are disabled for this function.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_resolution()

Returns the resolution of the measured values.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_sensorState()

Returns the sensor state code, which is zero when there is an up-to-date measure available or a positive code if the sensor is not able to provide a measure right now.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

current→get_unit()

Returns the measuring unit for the current.

cmd cpp vb cs java py php ts dnp tpy pas

current→get_userData()

Returns the value of the userData attribute, as previously stored using method set_userData.

cpp vb cs java py php ts tpy pas

current→isOnline()

Checks if the current sensor is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

current→isOnline_async(callback, context)

Checks if the current sensor is currently reachable, without raising any error (asynchronous version).

current→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

current→isSensorReady()

Checks if the sensor is currently able to provide an up-to-date measure.

cmd

current→load(msValidity)

Preloads the current sensor cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

current→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp vb cs java py php ts dnp tpy pas

current→loadCalibrationPoints(rawValues, refValues)

Retrieves error correction data points previously entered using the method `calibrateFromPoints`.

cmd cpp vb cs java py php ts tpy pas

current→load_async(msValidity, callback, context)

Preloads the current sensor cache with a specified validity duration (asynchronous version).

current→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

current→nextCurrent()

Continues the enumeration of current sensors started using `yFirstCurrent()`.

cpp vb cs java py php ts tpy pas

current→registerTimedReportCallback(callback)

Registers the callback function that is invoked on every periodic timed notification.

cpp vb cs java py php ts tpy pas

current→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp vb cs java py php ts tpy pas

current→set_advMode(newval)

Changes the measuring mode used for the advertised value pushed to the parent hub.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_enabled(newval)

Changes the activation state of this voltage input.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_highestValue(newval)

Changes the recorded maximal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_logFrequency(newval)

Changes the datalogger recording frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_logicalName(newval)

Changes the logical name of the current sensor.

cpp vb cs java py php ts dnp tpy pas cmd

current→set_lowestValue(newval)

Changes the recorded minimal value observed.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_reportFrequency(newval)

Changes the timed value notification frequency for this function.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_resolution(newval)

Changes the resolution of the measured physical values.

cmd cpp vb cs java py php ts dnp tpy pas

current→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp vb cs java py php ts tpy pas

current→startDataLogger()

Starts the data logger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

current→stopDataLogger()

Stops the datalogger on the device.

cmd cpp vb cs java py php ts dnp tpy pas

current→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

current→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.6. Class YInputCapture

Instant snapshot trigger control interface

The YInputCapture class allows you to access data samples measured by a Yoctopuce electrical sensor. The data capture can be triggered manually, or be configured to detect specific events.

In order to use the functions described here, you should include:

cpp	<code>#include "yocto_inputcapture.h"</code>
vb	<code>yocto_inputcapture.vb</code>
cs	<code>yocto_inputcapture.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YInputCapture;</code>
py	<code>from yocto_inputcapture import *</code>
php	<code>require_once('yocto_inputcapture.php');</code>
ts	<code>in HTML: import { YInputCapture } from '../dist/esm/yocto_inputcapture.js'; in Node.js: import { YInputCapture } from 'yoctolib-cjs/yocto_inputcapture.js';</code>
dnf	<code>import YoctoProxyAPI.YInputCaptureProxy</code>
cp	<code>#include "yocto_inputcapture_proxy.h"</code>
tpy	<code>from yoctolib.yocto_inputcapture import *</code>
vi	<code>YInputCapture.vi</code>
ml	<code>import YoctoProxyAPI.YInputCaptureProxy</code>
pas	<code>uses yocto_inputcapture;</code>

Global functions

YInputCapture.FindInputCapture(func)

Retrieves an instant snapshot trigger for a given identifier.

cpp vb cs java py php ts dnf tpy pas

YInputCapture.FindInputCaptureInContext(yctx, func)

Retrieves an instant snapshot trigger for a given identifier in a YAPI context.

java ts tpy

YInputCapture.FirstInputCapture()

Starts the enumeration of instant snapshot triggers currently accessible.

cpp vb cs java py php ts tpy pas

YInputCapture.FirstInputCaptureInContext(yctx)

Starts the enumeration of instant snapshot triggers currently accessible.

java ts tpy

YInputCapture.GetSimilarFunctions()

Enumerates all functions of type InputCapture available on the devices currently reachable by the library, and returns their unique hardware ID.

dnf

YInputCapture properties

inputcapture→AdvertisedValue [read-only]

Short string representing the current state of the function.

dnf

inputcapture→CaptureTypeAtStartup [writable]

Type of automatic conditional capture applied at device power on.

dnp

inputcapture→CondAlign [writable]

Relative position of the trigger event within the capture window.

dnp

inputcapture→CondValue [writable]

Current threshold value for automatic conditional capture.

dnp

inputcapture→CondValueAtStartup [writable]

Threshold value for automatic conditional capture applied at device power on.

dnp

inputcapture→FriendlyName [read-only]

Global identifier of the function in the format MODULE_NAME . FUNCTION_NAME.

dnp

inputcapture→FunctionId [read-only]

Hardware identifier of the instant snapshot trigger, without reference to the module.

dnp

inputcapture→HardwareId [read-only]

Unique hardware identifier of the function in the form SERIAL . FUNCTIONID.

dnp

inputcapture→IsOnline [read-only]

Checks if the function is currently reachable.

dnp

inputcapture→LastCaptureTime [read-only]

Number of elapsed milliseconds between the module power on and the last capture (time of trigger), or zero if no capture has been done.

dnp

inputcapture→LogicalName [writable]

Logical name of the function.

dnp

inputcapture→NSamples [writable]

Number of samples that will be captured.

dnp

inputcapture→SerialNumber [read-only]

Serial number of the module, as set by the factory.

dnp

YInputCapture methods**inputcapture→clearCache()**

Invalidates the cache.

cpp

vb

cs

java

py

php

ts

tpy

pas

inputcapture→describe()

Returns a short text that describes unambiguously the instance of the instant snapshot trigger in the form `TYPE(NAME)=SERIAL.FUNCTIONID`.

`cpp` `vb` `cs` `java` `py` `php` `ts` `pas`

inputcapture→get_advertisedValue()

Returns the current value of the instant snapshot trigger (no more than 6 characters).

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas` `cmd`

inputcapture→get_captureType()

Returns the type of automatic conditional capture.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

inputcapture→get_captureTypeAtStartup()

Returns the type of automatic conditional capture applied at device power on.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

inputcapture→get_condAlign()

Returns the relative position of the trigger event within the capture window.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

inputcapture→get_condValue()

Returns current threshold value for automatic conditional capture.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

inputcapture→get_condValueAtStartup()

Returns the threshold value for automatic conditional capture applied at device power on.

`cmd` `cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy` `pas`

inputcapture→get_errorMessage()

Returns the error message of the latest error with the instant snapshot trigger.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

inputcapture→get_errorType()

Returns the numerical error code of the latest error with the instant snapshot trigger.

`cpp` `vb` `cs` `java` `py` `php` `ts` `tpy` `pas`

inputcapture→get_friendlyName()

Returns a global identifier of the instant snapshot trigger in the format `MODULE_NAME.FUNCTION_NAME`.

`cpp` `cs` `java` `py` `php` `ts` `dnp` `tpy`

inputcapture→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

`cpp` `vb` `cs` `java` `py` `php` `ts` `pas`

inputcapture→get_functionId()

Returns the hardware identifier of the instant snapshot trigger, without reference to the module.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy`

inputcapture→get_hardwareId()

Returns the unique hardware identifier of the instant snapshot trigger in the form `SERIAL.FUNCTIONID`.

`cpp` `vb` `cs` `java` `py` `php` `ts` `dnp` `tpy`

inputcapture→get_immediateCapture(msDuration)

Returns a new immediate capture of the device inputs.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→get_lastCapture()

Returns all details about the last automatic input capture.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→get_lastCaptureTime()

Returns the number of elapsed milliseconds between the module power on and the last capture (time of trigger), or zero if no capture has been done.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→get_logicalName()

Returns the logical name of the instant snapshot trigger.

cpp vb cs java py php ts dnp tpy pas cmd

inputcapture→get_module()

Gets the YModule object for the device on which the function is located.

cpp vb cs java py php ts dnp tpy pas

inputcapture→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

inputcapture→get_nSamples()

Returns the number of samples that will be captured.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→get_samplingRate()

Returns the sampling frequency, in Hz.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

inputcapture→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp vb cs java py php ts tpy pas

inputcapture→isOnline()

Checks if the instant snapshot trigger is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

inputcapture→isOnline_async(callback, context)

Checks if the instant snapshot trigger is currently reachable, without raising any error (asynchronous version).

inputcapture→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

inputcapture→load(msValidity)

Preloads the instant snapshot trigger cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

inputcapture→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp vb cs java py php ts dnp tpy pas

inputcapture→load_async(msValidity, callback, context)

Preloads the instant snapshot trigger cache with a specified validity duration (asynchronous version).

inputcapture→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

inputcapture→nextInputCapture()

Continues the enumeration of instant snapshot triggers started using `yFirstInputCapture()`.

cpp vb cs java py php ts tpy pas

inputcapture→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp vb cs java py php ts tpy pas

inputcapture→set_captureType(newval)

Changes the type of automatic conditional capture.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_captureTypeAtStartup(newval)

Changes the type of automatic conditional capture applied at device power on.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_condAlign(newval)

Changes the relative position of the trigger event within the capture window.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_condValue(newval)

Changes current threshold value for automatic conditional capture.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_condValueAtStartup(newval)

Changes current threshold value for automatic conditional capture applied at device power on.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_logicalName(newval)

Changes the logical name of the instant snapshot trigger.

cpp vb cs java py php ts dnp tpy pas cmd

inputcapture→set_nSamples(newval)

Changes the type of automatic conditional capture.

cmd cpp vb cs java py php ts dnp tpy pas

inputcapture→set_userData(data)

Stores a user context provided as argument in the `userData` attribute of the function.

cpp vb cs java py php ts tpy pas

inputcapture→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

`inputcapture`→`wait_async(callback, context)`

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.7. Class YDataLogger

DataLogger control interface, available on most Yoctopuce sensors.

A non-volatile memory for storing ongoing measured data is available on most Yoctopuce sensors. Recording can happen automatically, without requiring a permanent connection to a computer. The YDataLogger class controls the global parameters of the internal data logger. Recording control (start/stop) as well as data retrieval is done at sensor objects level.

In order to use the functions described here, you should include:

cpp	<code>#include "yocto_module.h"</code>
vb	<code>yocto_module.vb</code>
cs	<code>yocto_module.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDataLogger;</code>
py	<code>from yocto_module import *</code>
php	<code>require_once('yocto_module.php');</code>
ts	<code>in HTML: import { YDataLogger } from '../dist/esm/yocto_module.js'; in Node.js: import { YDataLogger } from 'yoctolib-cjs/yocto_module.js';</code>
dnf	<code>import YoctoProxyAPI.YDataLoggerProxy</code>
cp	<code>#include "yocto_module_proxy.h"</code>
tpy	<code>from yoctolib.yocto_module import *</code>
vi	<code>YDataLogger.vi</code>
ml	<code>import YoctoProxyAPI.YDataLoggerProxy</code>
pas	<code>uses yocto_module;</code>

Global functions

YDataLogger.FindDataLogger(func)

Retrieves a data logger for a given identifier.

cpp vb cs java py php ts dnf tpy pas

YDataLogger.FindDataLoggerInContext(yctx, func)

Retrieves a data logger for a given identifier in a YAPI context.

java ts tpy

YDataLogger.FirstDataLogger()

Starts the enumeration of data loggers currently accessible.

cpp vb cs java py php ts tpy pas

YDataLogger.FirstDataLoggerInContext(yctx)

Starts the enumeration of data loggers currently accessible.

java ts tpy

YDataLogger.GetSimilarFunctions()

Enumerates all functions of type DataLogger available on the devices currently reachable by the library, and returns their unique hardware ID.

dnf

YDataLogger properties

datalogger→AdvertisedValue [read-only]

Short string representing the current state of the function.

dnf

datalogger→AutoStart [writable]

Default activation state of the data logger on power up.

dnf

datalogger→BeaconDriven [writable]

True if the data logger is synchronised with the localization beacon.

dnf

datalogger→FriendlyName [read-only]

Global identifier of the function in the format `MODULE_NAME . FUNCTION_NAME`.

dnf

datalogger→FunctionId [read-only]

Hardware identifier of the data logger, without reference to the module.

dnf

datalogger→HardwareId [read-only]

Unique hardware identifier of the function in the form `SERIAL . FUNCTIONID`.

dnf

datalogger→IsOnline [read-only]

Checks if the function is currently reachable.

dnf

datalogger→LogicalName [writable]

Logical name of the function.

dnf

datalogger→Recording [writable]

Current activation state of the data logger.

dnf

datalogger→SerialNumber [read-only]

Serial number of the module, as set by the factory.

dnf

YDataLogger methods

datalogger→clearCache()

Invalidates the cache.

cpp vb cs java py php ts tpy pas

datalogger→describe()

Returns a short text that describes unambiguously the instance of the data logger in the form `TYPE(NAME)=SERIAL . FUNCTIONID`.

cpp vb cs java py php ts pas

datalogger→forgetAllDataStreams()

Clears the data logger memory and discards all recorded data streams.

cmd cpp vb cs java py php ts dnf tpy pas

datalogger→get_advertisedValue()

Returns the current value of the data logger (no more than 6 characters).

cpp vb cs java py php ts dnf tpy pas cmd

dataLogger→get_autoStart()

Returns the default activation state of the data logger on power up.

cmd cpp vb cs java py php ts dnp tpy pas

dataLogger→get_beaconDriven()

Returns true if the data logger is synchronised with the localization beacon.

cmd cpp vb cs java py php ts dnp tpy pas

dataLogger→get_currentRunIndex()

Returns the current run number, corresponding to the number of times the module was powered on with the dataLogger enabled at some point.

cmd cpp vb cs java py php ts dnp tpy pas

dataLogger→get_dataSets()

Returns a list of YDataSet objects that can be used to retrieve all measures stored by the data logger.

cmd cpp vb cs java py php ts dnp pas

dataLogger→get_errorMessage()

Returns the error message of the latest error with the data logger.

cpp vb cs java py php ts tpy pas

dataLogger→get_errorType()

Returns the numerical error code of the latest error with the data logger.

cpp vb cs java py php ts tpy pas

dataLogger→get_friendlyName()

Returns a global identifier of the data logger in the format `MODULE_NAME . FUNCTION_NAME`.

cpp cs java py php ts dnp tpy

dataLogger→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

cpp vb cs java py php ts pas

dataLogger→get_functionId()

Returns the hardware identifier of the data logger, without reference to the module.

cpp vb cs java py php ts dnp tpy

dataLogger→get_hardwareId()

Returns the unique hardware identifier of the data logger in the form `SERIAL . FUNCTIONID`.

cpp vb cs java py php ts dnp tpy

dataLogger→get_logicalName()

Returns the logical name of the data logger.

cpp vb cs java py php ts dnp tpy pas cmd

dataLogger→get_module()

Gets the YModule object for the device on which the function is located.

cpp vb cs java py php ts dnp tpy pas

dataLogger→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

dataLogger→get_recording()

Returns the current activation state of the data logger.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp vb cs java py php ts dnp tpy pas cmd

datalogger→get_timeUTC()

Returns the Unix timestamp for current UTC time, if known.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→get_usage()

Returns the percentage of datalogger memory in use.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp vb cs java py php ts tpy pas

datalogger→isOnline()

Checks if the data logger is currently reachable, without raising any error.

cpp vb cs java py php ts dnp tpy pas

datalogger→isOnline_async(callback, context)

Checks if the data logger is currently reachable, without raising any error (asynchronous version).

datalogger→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp vb cs java py php ts dnp tpy pas cmd

datalogger→load(msValidity)

Preloads the data logger cache with a specified validity duration.

cpp vb cs java py php ts tpy pas

datalogger→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp vb cs java py php ts dnp tpy pas

datalogger→load_async(msValidity, callback, context)

Preloads the data logger cache with a specified validity duration (asynchronous version).

datalogger→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

datalogger→nextDataLogger()

Continues the enumeration of data loggers started using `yFirstDataLogger()`.

cpp vb cs java py php ts tpy pas

datalogger→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp vb cs java py php ts tpy pas

datalogger→set_autoStart(newval)

Changes the default activation state of the data logger on power up.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→set_beaconDriven(newval)

Changes the type of synchronisation of the data logger.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→set_logicalName(newval)

Changes the logical name of the data logger.

cpp vb cs java py php ts dnp tpy pas cmd

datalogger→set_recording(newval)

Changes the activation state of the data logger to start/stop recording data.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→set_timeUTC(newval)

Changes the current UTC time reference used for recorded data.

cmd cpp vb cs java py php ts dnp tpy pas

datalogger→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp vb cs java py php ts tpy pas

datalogger→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp vb cs java py php ts dnp tpy pas cmd

datalogger→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts

24.8. Class YDataSet

Recorded data sequence, as returned by `sensor.get_recordedData()`

`YDataSet` objects make it possible to retrieve a set of recorded measures for a given sensor and a specified time interval. They can be used to load data points with a progress report. When the `YDataSet` object is instantiated by the `sensor.get_recordedData()` function, no data is yet loaded from the module. It is only when the `loadMore()` method is called over and over than data will be effectively loaded from the `dataLogger`.

A preview of available measures is available using the function `get_preview()` as soon as `loadMore()` has been called once. Measures themselves are available using function `get_measures()` when loaded by subsequent calls to `loadMore()`.

This class can only be used on devices that use a relatively recent firmware, as `YDataSet` objects are not supported by firmwares older than version 13000.

In order to use the functions described here, you should include:

cpp	<code>#include "yocto_module.h"</code>
vb	<code>yocto_module.vb</code>
cs	<code>yocto_module.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDataSet;</code>
py	<code>from yocto_module import *</code>
php	<code>require_once('yocto_module.php');</code>
ts	<code>in HTML: import { YDataSet } from '../dist/esm/yocto_module.js'; in Node.js: import { YDataSet } from 'yoctolib-cjs/yocto_module.js';</code>
dnp	<code>import YoctoProxyAPI.YDataSetProxy</code>
cp	<code>#include "yocto_module_proxy.h"</code>
tpy	<code>from yoctolib.yocto_module import *</code>
m1	<code>import YoctoProxyAPI.YDataSetProxy</code>
pas	<code>uses yocto_module;</code>

Global functions

`YDataSet.Init(sensorName, startTime, endTime)`

Retrieves a `YDataSet` object holding historical data for a sensor given by its name or hardware identifier, for a specified time interval.

YDataSet methods

`dataset→get_endTimeUTC()`

Returns the end time of the dataset, relative to the Jan 1, 1970.

cpp vb cs java py php ts dnp tpy pas

`dataset→get_functionId()`

Returns the hardware identifier of the function that performed the measure, without reference to the module.

cpp vb cs java py php ts dnp tpy pas

`dataset→get_hardwareId()`

Returns the unique hardware identifier of the function who performed the measures, in the form `SERIAL.FUNCTIONID`.

cpp vb cs java py php ts dnp tpy pas

`dataset→get_measures()`

Returns all measured values currently available for this DataSet, as a list of YMeasure objects.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [pas](#)

dataset→get_measuresAt(measure)

Returns the detailed set of measures for the time interval corresponding to a given condensed measures previously returned by get_preview().

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [pas](#)

dataset→get_measuresAvgAt(index)

Returns the average value observed during the time interval covered by the specified entry in the preview.

dataset→get_measuresEndTimeAt(index)

Returns the end time of the specified entry in the preview, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_measuresMaxAt(index)

Returns the largest value observed during the time interval covered by the specified entry in the preview.

dataset→get_measuresMinAt(index)

Returns the smallest value observed during the time interval covered by the specified entry in the preview.

dataset→get_measuresRecordCount()

Returns the number of measures currently loaded for this data set.

dataset→get_measuresStartTimeAt(index)

Returns the start time of the specified entry in the preview, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_preview()

Returns a condensed version of the measures that can retrieved in this YDataSet, as a list of YMeasure objects.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [pas](#)

dataset→get_previewAvgAt(index)

Returns the average value observed during the time interval covered by the specified entry in the preview.

dataset→get_previewEndTimeAt(index)

Returns the end time of the specified entry in the preview, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_previewMaxAt(index)

Returns the largest value observed during the time interval covered by the specified entry in the preview.

dataset→get_previewMinAt(index)

Returns the smallest value observed during the time interval covered by the specified entry in the preview.

dataset→get_previewRecordCount()

Returns the number of entries in the preview summarizing this data set

dataset→get_previewStartTimeAt(index)

Returns the start time of the specified entry in the preview, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_progress()

Returns the progress of the downloads of the measures from the data logger, on a scale from 0 to 100.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [tpy](#) [pas](#)

dataset→get_startTimeUTC()

Returns the start time of the dataset, relative to the Jan 1, 1970.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [tpy](#) [pas](#)

dataset→get_summary()

Returns an YMeasure object which summarizes the whole YDataSet.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [tpy](#) [pas](#)

dataset→get_summaryAvg()

Returns the average value observed during the time interval covered by this data set.

dataset→get_summaryEndTime()

Returns the end time of the last measure in the data set, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_summaryMax()

Returns the largest value observed during the time interval covered by this data set.

dataset→get_summaryMin()

Returns the smallest value observed during the time interval covered by this data set.

dataset→get_summaryStartTime()

Returns the start time of the first measure in the data set, relative to the Jan 1, 1970 UTC (Unix timestamp).

dataset→get_unit()

Returns the measuring unit for the measured value.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [tpy](#) [pas](#)

dataset→loadMore()

Loads the next block of measures from the dataLogger, and updates the progress indicator.

[cpp](#) [vb](#) [cs](#) [java](#) [py](#) [php](#) [ts](#) [dnp](#) [tpy](#) [pas](#)

dataset→loadMore_async(callback, context)

Loads the next block of measures from the dataLogger asynchronously.

24.9. Class YMeasure

Measured value, returned in particular by the methods of the `YDataSet` class.

`YMeasure` objects are used within the API to represent a value measured at a specified time. These objects are used in particular in conjunction with the `YDataSet` class, but also for sensors periodic timed reports (see `sensor.registerTimedReportCallback`).

In order to use the functions described here, you should include:

cpp	<code>#include "yocto_module.h"</code>
vb	<code>yocto_module.vb</code>
cs	<code>yocto_module.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YMeasure;</code>
py	<code>from yocto_module import *</code>
php	<code>require_once('yocto_module.php');</code>
ts	<code>in HTML: import { YMeasure } from '../dist/esm/yocto_module.js';</code> <code>in Node.js: import { YMeasure } from 'yoctolib-cjs/yocto_module.js';</code>
tpy	<code>from yoctolib.yocto_module import *</code>
pas	<code>uses yocto_module;</code>

YMeasure methods

`measure→get_averageValue()`

Returns the average value observed during the time interval covered by this measure.

cpp vb cs java py php ts tpy pas

`measure→get_endTimeUTC()`

Returns the end time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

cpp vb cs java py php ts tpy pas

`measure→get_maxValue()`

Returns the largest value observed during the time interval covered by this measure.

cpp vb cs java py php ts tpy pas

`measure→get_minValue()`

Returns the smallest value observed during the time interval covered by this measure.

cpp vb cs java py php ts tpy pas

`measure→get_startTimeUTC()`

Returns the start time of the measure, relative to the Jan 1, 1970 UTC (Unix timestamp).

cpp vb cs java py php ts tpy pas

25. Troubleshooting

25.1. Where to start?

If it is the first time that you use a Yoctopuce module and you do not really know where to start, have a look at the Yoctopuce blog. There is a section dedicated to beginners ¹.

25.2. Programming examples don't seem to work

Most of Yoctopuce API programming examples are command line programs and require some parameters to work properly. You have to start them from your operating system command prompt, or configure your IDE to run them with the proper parameters. ².

25.3. Linux and USB

To work correctly under Linux, the library needs to have write access to all the Yoctopuce USB peripherals. However, by default under Linux, USB privileges of the non-root users are limited to read access. To avoid having to run the library as root, you need to create a new *udev* rule to authorize one or several users to have write access to the Yoctopuce peripherals.

To add a new *udev* rule to your installation, you must add a file with a name following the "`##-arbitraryName.rules`" format, in the `/etc/udev/rules.d` directory. When the system is starting, *udev* reads all the files with a `.rules` extension in this directory, respecting the alphabetical order (for example, the `51-custom.rules` file is interpreted AFTER the `50-udev-default.rules` file).

The `50-udev-default` file contains the system default *udev* rules. To modify the default behavior, you therefore need to create a file with a name that starts with a number larger than 50, that will override the system default rules. Note that to add a rule, you need a root access on the system.

In the `udev_conf` directory of the VirtualHub for Linux³ archive, there are two rule examples which you can use as a basis.

¹ see: http://www.yoctopuce.com/EN/blog_by_categories/for-the-beginners

² see: <http://www.yoctopuce.com/EN/article/about-programming-examples>

³ <http://www.yoctopuce.com/FR/virtualhub.php>

Example 1: 51-yoctopuce.rules

This rule provides all the users with read and write access to the Yoctopuce USB devices. Access rights for all other devices are not modified. If this scenario suits you, you only need to copy the "51-yoctopuce_all.rules" file into the "/etc/udev/rules.d" directory and to restart your system.

```
# udev rules to allow write access to all users
# for Yoctopuce USB devices
SUBSYSTEM=="usb", ATTR{idVendor}=="24e0", MODE="0666"
```

Example 2: 51-yoctopuce_group.rules

This rule authorizes the "yoctogroup" group to have read and write access to Yoctopuce USB peripherals. Access rights for all other peripherals are not modified. If this scenario suits you, you only need to copy the "51-yoctopuce_group.rules" file into the "/etc/udev/rules.d" directory and restart your system.

```
# udev rules to allow write access to all users of "yoctogroup"
# for Yoctopuce USB devices
SUBSYSTEM=="usb", ATTR{idVendor}=="24e0", MODE="0664", GROUP="yoctogroup"
```

25.4. ARM Platforms: HF and EL

There are two main flavors of executable on ARM: HF (Hard Float) binaries, and EL (EABI Little Endian) binaries. These two families are not compatible at all. The compatibility of a given ARM platform with one of these two families depends on the hardware and on the OS build. ArmHL and ArmEL compatibility problems are quite difficult to detect. Most of the time, the OS itself is unable to make a difference between an HF and an EL executable and will return meaningless messages when you try to use the wrong type of binary.

All pre-compiled Yoctopuce binaries are provided in both formats, as two separate ArmHF et ArmEL executables. If you do not know what family your ARM platform belongs to, just try one executable from each family.

25.5. Powered module but invisible for the OS

If your Yocto-Watt-V2-C is connected by USB, if its blue led is on, but if the operating system cannot see the module, check that you are using a true USB cable with data wires, and not a charging cable. Charging cables have only power wires.

25.6. Another process named xxx is already using yAPI

If when initializing the Yoctopuce API, you obtain the *"Another process named xxx is already using yAPI"* error message, it means that another application is already using Yoctopuce USB modules. On a single machine only one process can access Yoctopuce modules by USB at a time. You can easily work around this limitation by using VirtualHub and the network mode ⁴.

25.7. Disconnections, erratic behavior

If your Yocto-Watt-V2-C behaves erratically and/or disconnects itself from the USB bus without apparent reason, check that it is correctly powered. Avoid cables with a length above 2 meters. If needed, insert a powered USB hub ^{5 6}.

⁴ see: <http://www.yoctopuce.com/EN/article/error-message-another-process-is-already-using-yapi>

⁵ see: <http://www.yoctopuce.com/EN/article/usb-cables-size-matters>

⁶ see: <http://www.yoctopuce.com/EN/article/how-many-usb-devices-can-you-connect>

25.8. After a failed firmware update, the device stopped working

If a firmware update of your Yocto-Watt-V2-C fails, it is possible that the module is no longer working. If this is the case, plug in your module while holding down the Yocto-Button. The Yocto-LED should light up brightly and remain steady. Release the button. Your Yocto-Watt-V2-C should then appear at the bottom of the VirtualHub user interface as a module waiting to be flashed. This operation also reverts the module to its factory configuration.

25.9. Registering VirtualHub disconnects another instance

If, when performing a call to `RegisterHub()` with a VirtualHub address, another previously registered VirtualHub disconnects, make sure the machine running these VirtualHubs do not have the same *Hostname*. Same *Hostname* can happen very easily when the operating system is installed from a monolithic image, Raspberry Pi are the best example. The Yoctopuce API uses serial numbers to communicate with devices and VirtualHub serial numbers are created on the fly based the *hostname* of the machine running VirtualHub.

25.10. Dropped commands

If, after sending a bunch of commands to a Yoctopuce device, you are under the impression that the last ones have been ignored, a typical example is a quick and dirty program meant to configure a device, make sure you used a `YAPI.FreeAPI()` at the end of the program. Commands are sent to Yoctopuce modules asynchronously thanks to a background thread. When the main program terminates, that thread is killed no matter if some command are left to be sent. However `API.FreeAPI()` waits until there is no more command to send before freeing the API resources and returning.

25.11. Damaged device

Yoctopuce strives to reduce the production of electronic waste. If you believe that your Yocto-Watt-V2-C is not working anymore, start by contacting Yoctopuce support by e-mail to diagnose the failure. Even if you know that the device was damaged by mistake, Yoctopuce engineers might be able to repair it, and thus avoid creating electronic waste.



Waste Electrical and Electronic Equipment (WEEE) If you really want to get rid of your Yocto-Watt-V2-C, do not throw it away in a trash bin but bring it to your local WEEE recycling point. In this way, it will be disposed properly by a specialized WEEE recycling center.



26. Characteristics



You can find below a summary of the main technical characteristics of your Yocto-Watt-V2-C module.

Product ID	YWATMK2C
Hardware release [†]	
USB connector	Type-C
Width	50 mm
Length	58 mm
Weight	22 g
Max Current (continuous)	16 A
Refresh rate	10 Hz
Measuring range (I)	-16...16 A DC/rms
Measuring range (U)	-250...250 V DC/rms
Précision AC (I)	2 mA / 1%
Précision AC (U)	50 mV / 1%
Précision DC (I)	1 mA / 1%
Précision DC (U)	10 mV / 1%
Max working voltage	250 V r.m.s
Accuracy (AC, 50Hz/60Hz)	0.1 W / 1%
Accuracy (DC)	1 mW / 1%
Measurement category	Cat II
Protection class, according to IEC 61140	class II
USB isolation, clearance dist.	3.8 mm
USB isolation, creepage dist.	3.8 / 6 mm
USB isolation, dielectric strength	3 kV
Normal operating temperature	5...40 °C
Extended operating temperature [‡]	-30...85 °C
Power derating	0,67A/°C above 61°C
RoHS compliance	RoHS III (2011/65/UE+2015/863)

USB Vendor ID	0x24E0
USB Device ID	0x00E4
Suggested enclosure	YoctoBox-Watt-Transp
Harmonized tariff code	9032.9000
Made in	Switzerland

† These specifications are for the current hardware revision. Specifications for earlier revisions may differ.

‡ The extended temperature range is defined based on components specifications and has been tested during a limited duration (1h). When using the device in harsh environments for a long period of time, we strongly advise to run extensive tests before going to production.

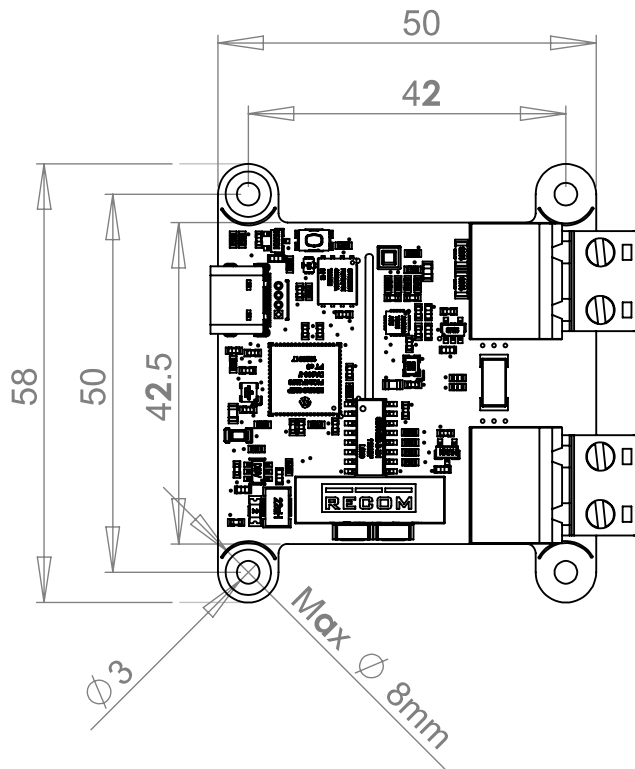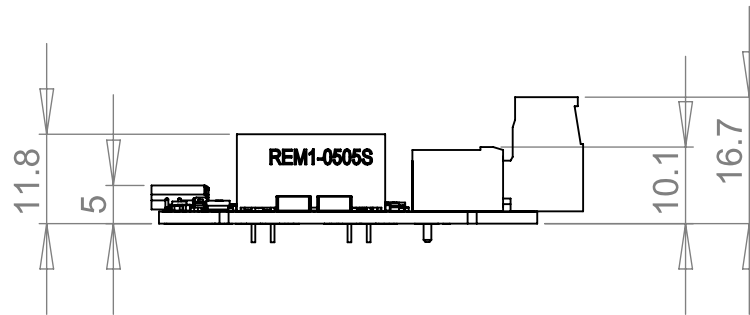

All dimensions are in mm
Toutes les dimensions sont en mm

Yocto-Watt-V2-C

A4

Scale
1:1
Echelle