


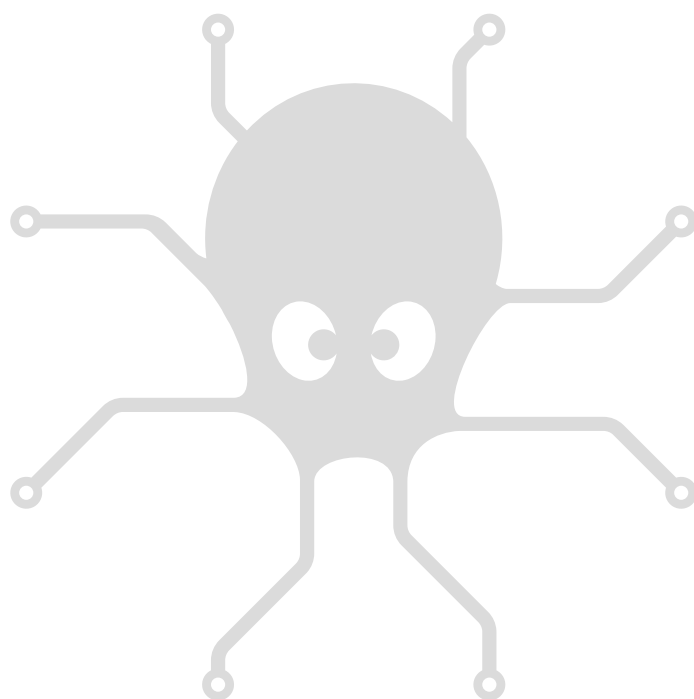

Yocto-MaxiDisplay

User manual

Table of contents

1. Introduction	1
1.1. <i>Safety Information</i>	2
1.2. <i>Environmental conditions</i>	3
2. Presentation	5
2.1. <i>Common elements</i>	5
2.2. <i>Specific elements</i>	6
2.3. <i>Optional accessories</i>	7
3. Working principles	9
3.1. <i>Embedded processor and memory</i>	9
3.2. <i>Orientation</i>	9
3.3. <i>Layer system</i>	9
3.4. <i>Graphic routines</i>	10
3.5. <i>Text display</i>	11
3.6. <i>Font file format</i>	12
3.7. <i>Sequences and animations</i>	13
3.8. <i>Optimizations</i>	13
4. The embedded file system	15
4.1. <i>Usage</i>	15
4.2. <i>Limitations</i>	16
5. First steps	17
5.1. <i>Prerequisites</i>	17
5.2. <i>Testing USB connectivity</i>	18
5.3. <i>Localization</i>	19
5.4. <i>Test of the module</i>	19
5.5. <i>Configuration</i>	20
6. Assembly and connections	23
6.1. <i>Fixing</i>	23
6.2. <i>USB power distribution</i>	24
6.3. <i>Electromagnetic compatibility (EMI)</i>	24


7. Programming, general concepts	27
7.1. <i>Programming paradigm</i>	27
7.2. <i>The Yocto-MaxiDisplay module</i>	29
7.3. <i>Module</i>	30
7.4. <i>Display</i>	31
7.5. <i>AnButton</i>	32
7.6. <i>Files</i>	34
7.7. <i>What interface: Native, DLL or Service ?</i>	34
7.8. <i>Accessing modules through a hub</i>	36
7.9. <i>Programming, where to start?</i>	37
8. Using the Yocto-MaxiDisplay in command line	39
8.1. <i>Installing</i>	39
8.2. <i>Use: general description</i>	39
8.3. <i>Control of the Display function</i>	40
8.4. <i>Control of the module part</i>	40
8.5. <i>Limitations</i>	41
9. Using the Yocto-MaxiDisplay with Python	43
9.1. <i>Source files</i>	43
9.2. <i>Dynamic library</i>	43
9.3. <i>Control of the Display function</i>	43
9.4. <i>Control of the module part</i>	46
9.5. <i>Error handling</i>	48
10. Using Yocto-MaxiDisplay with C++	49
10.1. <i>Control of the Display function</i>	49
10.2. <i>Control of the module part</i>	52
10.3. <i>Error handling</i>	54
10.4. <i>Integration variants for the C++ Yoctopuce library</i>	55
11. Using Yocto-MaxiDisplay with C#	57
11.1. <i>Installation</i>	57
11.2. <i>Using the Yoctopuce API in a Visual C# project</i>	57
11.3. <i>Control of the Display function</i>	58
11.4. <i>Control of the module part</i>	60
11.5. <i>Error handling</i>	63
12. Using the Yocto-MaxiDisplay with LabVIEW	65
12.1. <i>Architecture</i>	65
12.2. <i>Compatibility</i>	66
12.3. <i>Installation</i>	66
12.4. <i>Presentation of Yoctopuce VIs</i>	71
12.5. <i>Functioning and use of VIs</i>	74
12.6. <i>Using</i>	76
12.7. <i>Managing the data logger</i>	78
12.8. <i>Function list</i>	79
12.9. <i>A word on performances</i>	80
12.10. <i>A full example of a LabVIEW program</i>	80
12.11. <i>Differences from other Yoctopuce APIs</i>	81

13. Using the Yocto-MaxiDisplay with Java	83
13.1. <i>Getting ready</i>	83
13.2. <i>Control of the Display function</i>	83
13.3. <i>Control of the module part</i>	86
13.4. <i>Error handling</i>	88
14. Using the Yocto-MaxiDisplay with Android	89
14.1. <i>Native access and VirtualHub</i>	89
14.2. <i>Getting ready</i>	89
14.3. <i>Compatibility</i>	89
14.4. <i>Activating the USB port under Android</i>	90
14.5. <i>Control of the Display function</i>	91
14.6. <i>Control of the module part</i>	94
14.7. <i>Error handling</i>	98
15. Using Yocto-MaxiDisplay with TypeScript	101
15.1. <i>Using the Yoctopuce library for TypeScript</i>	102
15.2. <i>Refresher on asynchronous I/O in JavaScript</i>	102
15.3. <i>Control of the Display function</i>	103
15.4. <i>Control of the module part</i>	106
15.5. <i>Error handling</i>	108
16. Using Yocto-MaxiDisplay with JavaScript / EcmaScript	111
16.1. <i>Blocking I/O versus Asynchronous I/O in JavaScript</i>	111
16.2. <i>Using Yoctopuce library for JavaScript / EcmaScript 2017</i>	112
16.3. <i>Control of the Display function</i>	114
16.4. <i>Control of the module part</i>	118
16.5. <i>Error handling</i>	121
17. Using Yocto-MaxiDisplay with PHP	123
17.1. <i>Getting ready</i>	123
17.2. <i>Control of the Display function</i>	124
17.3. <i>Control of the module part</i>	126
17.4. <i>HTTP callback API and NAT filters</i>	128
17.5. <i>Error handling</i>	132
18. Using Yocto-MaxiDisplay with Visual Basic .NET	133
18.1. <i>Installation</i>	133
18.2. <i>Using the Yoctopuce API in a Visual Basic project</i>	133
18.3. <i>Control of the Display function</i>	134
18.4. <i>Control of the module part</i>	136
18.5. <i>Error handling</i>	138
19. Using Yocto-MaxiDisplay with Delphi or Lazarus	141
19.1. <i>Preparation</i>	141
19.2. <i>About examples</i>	142
19.3. <i>Control of the Display function</i>	142
19.4. <i>Control of the module part</i>	145
19.5. <i>Error handling</i>	147
20. Using the Yocto-MaxiDisplay with Universal Windows Platform	149

20.1. Blocking and asynchronous functions	149
20.2. Installation	150
20.3. Using the Yoctopuce API in a Visual Studio project	150
20.4. Control of the Display function	151
20.5. A real example	152
20.6. Control of the module part	153
20.7. Error handling	155
21. Using Yocto-MaxiDisplay with Objective-C	157
21.1. Control of the Display function	157
21.2. Control of the module part	160
21.3. Error handling	162
22. Using with unsupported languages	163
22.1. Command line	163
22.2. .NET Assembly	163
22.3. VirtualHub and HTTP GET	165
22.4. Using dynamic libraries	167
22.5. Porting the high level library	170
23. Advanced programming	171
23.1. Event programming	171
24. High-level API Reference	173
24.1. Class YAPI	174
24.2. Class YModule	178
24.3. Class YDisplay	185
24.4. Class YDisplayLayer	192
24.5. Class YAnButton	195
24.6. Class YFiles	201
25. Troubleshooting	207
25.1. Where to start?	207
25.2. Programming examples don't seem to work	207
25.3. Linux and USB	207
25.4. ARM Platforms: HF and EL	208
25.5. Powered module but invisible for the OS	208
25.6. Another process named xxx is already using yAPI	208
25.7. Disconnections, erratic behavior	208
25.8. After a failed firmware update, the device stopped working	209
25.9. Registering VirtualHub disconnects another instance	209
25.10. Dropped commands	209
25.11. Damaged device	209
26. Characteristics	211
Blueprint	213

1. Introduction

The Yocto-MaxiDisplay is a 66x58mm electronic module allowing you to drive a 128 x 64px monochrome OLED screen, as well as 6 channels which can measure the state of switches, push buttons, or even potentiometers. This screen enables you to easily display some easily readable pieces of information from a machine which does not usually have a monitor.

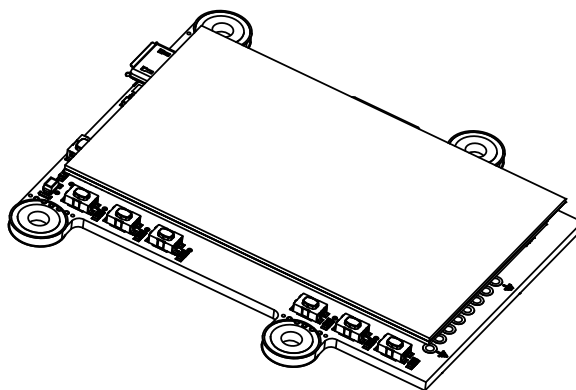

The Yocto-MaxiDisplay module

The Yocto-MaxiDisplay is not in itself a complete product. It is a component intended to be integrated into a solution used in laboratory equipments, or in industrial process-control equipments, or for similar applications in domestic and commercial environments. In order to use it, you must at least install it in a protective enclosure and connect it to a host computer.

Yoctopuce thanks you for buying this Yocto-MaxiDisplay and sincerely hopes that you will be satisfied with it. The Yoctopuce engineers have put a large amount of effort to ensure that your Yocto-MaxiDisplay is easy to install anywhere and easy to drive from a maximum of programming languages. If you are nevertheless disappointed with this module, or if you need additional information, do not hesitate to contact Yoctopuce support:

E-mail address:	support@yoctopuce.com
Web site:	www.yoctopuce.com
Postal address:	Route de Cartigny 33
ZIP code, city:	1236 Cartigny
Country:	Switzerland

1.1. Safety Information

The Yocto-MaxiDisplay is designed to meet the requirements of IEC 61010-1:2010 safety standard. It does not create any serious hazards to the operator and surrounding area, even in single fault condition, as long as it is integrated and used according to the instructions contained in this documentation, and in this section in particular.

Protective enclosure


The Yocto-MaxiDisplay should not be used without a protective enclosure, because of the accessible bare electronic components. For optimal safety, it should be put into a non-metallic, non-inflammable enclosure, resistant to a mechanical stress level of 5 J. For instance, use a polycarbonate (e.g. LEXAN) enclosure rated IK08 with a IEC 60695-11-10 flammability rating of V-1 or better. Using a lower quality enclosure may require specific warnings for the operator and/or compromise conformity with the safety standard.

Maintenance

If a damage is observed on the electronic board or on the enclosure, it should be replaced in order to ensure continued safety of the equipment, and to prevent damaging other parts of the system due to overload that a short circuit could cause.

Identification

In order to ease the maintenance and the identification of risks during maintenance, you should stick the water-resistant identification label provided together with the electronic board as close as possible to the device. If the device is put in a dedicated enclosure, the identification label should be affixed on the outside of the enclosure. This label is resistant to humidity and to the usual rubbing that can occur during normal maintenance.

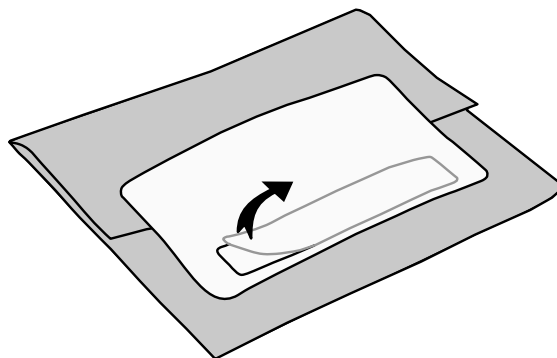

Identification label is integrated in the package label.

Application

The safety standard applied is intended to cover laboratory equipment, industrial process-control equipment and similar applications in residential or commercial environment. If you intend to use the Yocto-MaxiDisplay for another kind of application, you should check the safety regulations according to the standard applicable to your application.

In particular, the Yocto-MaxiDisplay is *not* certified for use in medical environments or for life-support applications.

Environment

The Yocto-MaxiDisplay is *not* certified for use in hazardous locations, explosive environments, or life-threatening applications. Environmental ratings are provided below.


1.2. Environmental conditions

Yoctopuce devices have been designed for indoor use in a standard office or laboratory environment (IEC 60664 *pollution degree 2*): air pollution is expected to be limited and mainly non-conductive. Relative humidity is expected to be between 10% and 90% RH, non condensing. Use in environments with significant solid pollution or conductive pollution requires a protection from such pollution using an IP67 or IP68 enclosure. The products are designed for use up to altitude 2000m.

All Yoctopuce devices are warranted to perform according to their documentation and technical specifications under normal temperature conditions according to IEC61010-1, i.e. 5°C to 40°C. In addition, most devices can also be used on an extended temperature range, where some limitations may apply from case to case.

The extended operating temperature range for the Yocto-MaxiDisplay is -25...70°C. This temperature range has been determined based on components manufacturer recommendations, and on controlled environment tests performed during a limited duration (1h). If you plan to use the Yocto-MaxiDisplay in harsh environments for a long period of time, we strongly advise you to run extensive tests before going to production.

2. Presentation

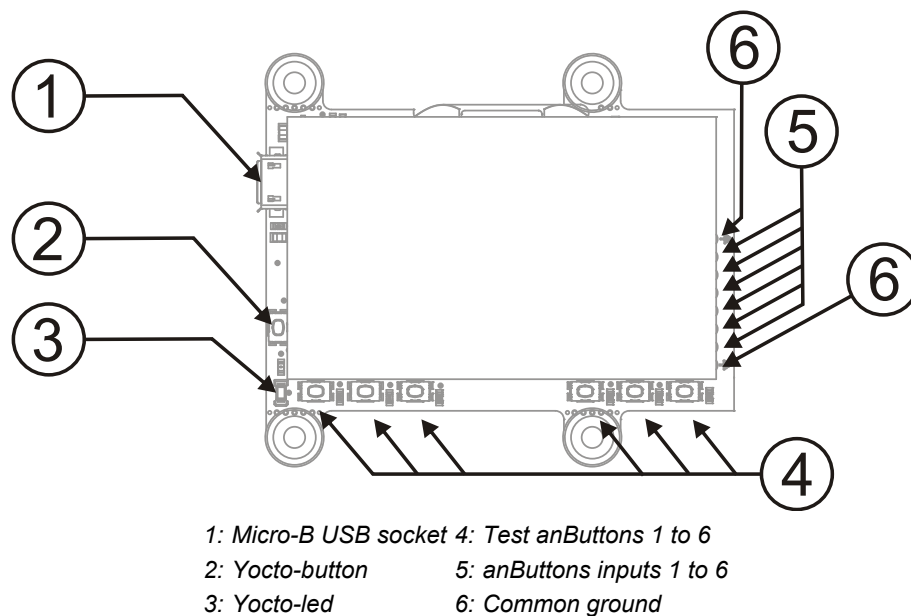

2.1. Common elements

All Yocto-modules share a number of common functionalities.

USB connector

Yoctopuce modules all come with a USB 2.0 micro-B socket. Warning: the USB connector is simply soldered in surface and can be pulled out if the USB plug acts as a lever. In this case, if the tracks stayed in position, the connector can be soldered back with a good iron and using flux to avoid bridges. Alternatively, you can solder a USB cable directly in the 1.27mm-spaced holes near the connector.

If you plan to use a power source other than a standard USB host port to power the device through the USB connector, that power source must respect the assigned values of USB 2.0 specifications:

- **Voltage min.:** 4.75 V DC
- **Voltage max.:** 5.25 V DC
- **Over-current protection:** 5.0 A max.

A higher voltage is likely to destroy the device. The behaviour with a lower voltage is not specified, but it can result firmware corruption.

Yocto-button

The Yocto-button has two functionalities. First, it can activate the Yocto-beacon mode (see below under Yocto-led). Second, if you plug in a Yocto-module while keeping this button pressed, you can then reprogram its firmware with a new version. Note that there is a simpler UI-based method to update the firmware, but this one works even in case of severely damaged firmware.

Yocto-led

Normally, the Yocto-led is used to indicate that the module is working smoothly. The Yocto-led then emits a low blue light which varies slowly, mimicking breathing. The Yocto-led stops breathing when the module is not communicating any more, as for instance when powered by a USB hub which is disconnected from any active computer.

When you press the Yocto-button, the Yocto-led switches to Yocto-beacon mode. It starts flashing faster with a stronger light, in order to facilitate the localization of a module when you have several identical ones. It is indeed possible to trigger off the Yocto-beacon by software, as it is possible to detect by software that a Yocto-beacon is on.

The Yocto-led has a third functionality, which is less pleasant: when the internal software which controls the module encounters a fatal error, the Yocto-led starts emitting an SOS in morse ¹. If this happens, unplug and re-plug the module. If it happens again, check that the module contains the latest version of the firmware, and, if it is the case, contact Yoctopuce support².

Current sensor

Each Yocto-module is able to measure its own current consumption on the USB bus. Current supply on a USB bus being quite critical, this functionality can be of great help. You can only view the current consumption of a module by software.

Serial number

Each Yocto-module has a unique serial number assigned to it at the factory. For Yocto-MaxiDisplay modules, this number starts with YD128X64. The module can be software driven using this serial number. The serial number cannot be modified.

Logical name

The logical name is similar to the serial number: it is a supposedly unique character string which allows you to reference your module by software. However, in the opposite of the serial number, the logical name can be modified at will. The benefit is to enable you to build several copies of the same project without needing to modify the driving software. You only need to program the same logical name in each copy. Warning: the behavior of a project becomes unpredictable when it contains several modules with the same logical name and when the driving software tries to access one of these modules through its logical name. When leaving the factory, modules do not have an assigned logical name. It is yours to define.

2.2. Specific elements


The screen

The screen is an OLED screen manufactured by WiseChip under the UG-2864ASGGG14 reference. Being made of glass, it is rather fragile. Do not let your Yocto-MaxiDisplay drop. When you install your Yocto-MaxiDisplay, make sure that the screen is not subjected to any mechanical constraint. Moreover, the ribbon coming out of the screen is particularly fragile at its junction with the screen.

¹ short-short-short long-long-long short-short-short

² support@yoctopuce.com


Make sure it is not subject to any mechanical constraint. When you manipulate the Yocto-MaxiDisplay, do not press on the ribbon.

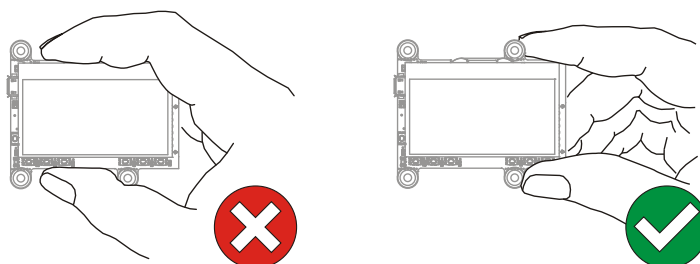

Do not press on the ribbon when you manipulate the Yocto-MaxiDisplay.

Inputs 1 to 6

The Yocto-MaxiDisplay module contains 6 inputs allowing you to measure the state of resistive components (switches, push buttons, potentiometers, and so on). These inputs share a common ground. This means that each switch / push button / potentiometer must be connected both to the corresponding input and to the common ground. You can use any potentiometer value between 1K Ω and 200 K Ω .

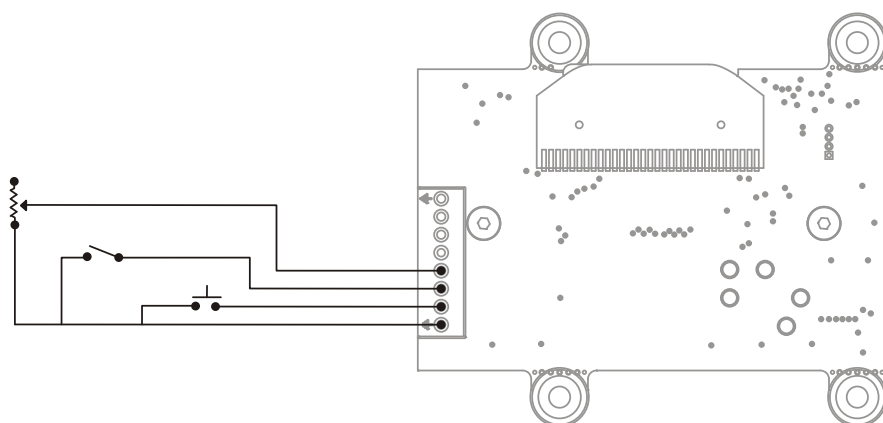

Wiring of a potentiometer, a switch, and a push button, with a common ground.

The measurement circuit is a safety extra low voltage (SELV) circuit. It should not be connected to any external voltage source, but only be connected to passive components. In no event shall it be connected to mains circuits.

You will probably want to solder a connector at the designed location. To access the pads, remove the screws located at the back of your Yocto-MaxiDisplay, delicately move the screen aside, and solder your connector. Then put the screen back in position.

Potentiometers and calibration

This module allows you to use a wide range of potentiometer values. But to enable it to provide you with coherent measures for the model you are using, you must calibrate the corresponding channels. You can do this very easily thanks to the configuration interface. You do not need to perform a calibration if you use only simple switches or push buttons.

Test push buttons

Each channel has its own small push button allowing you to artificially close the corresponding circuit. This is helpful to debug your projects.

2.3. Optional accessories

The accessories below are not necessary to use the Yocto-MaxiDisplay module but might be useful depending on your project. These are mostly common products that you can buy from your favorite DIY store. To save you the tedious job of looking for them, most of them are also available on the Yoctopuce shop.

Screws and spacers

In order to mount the Yocto-MaxiDisplay module, you can put small screws in the 3mm assembly holes, with a screw head no larger than 8mm. The best way is to use threaded spacers, which you can then mount wherever you want. You can find more details on this topic in the chapter about assembly and connections.

Micro-USB hub

If you intend to put several Yoctopuce modules in a very small space, you can connect them directly to a micro-USB hub. Yoctopuce builds a USB hub particularly small for this purpose (down to 20mmx36mm), on which you can directly solder a USB cable instead of using a USB plug. For more details, see the micro-USB hub information sheet.

YoctoHub-Ethernet, YoctoHub-Wireless and YoctoHub-GSM

You can add network connectivity to your Yocto-MaxiDisplay, thanks to the YoctoHub-Ethernet, the YoctoHub-Wireless and the YoctoHub-GSM which provides respectively Ethernet, WiFi and GSM connectivity. All of them can drive up to three devices and behave exactly like a regular computer running VirtualHub.

1.27mm (or 1.25mm) connectors


In case you wish to connect your Yocto-MaxiDisplay to a Micro-hub USB or a YoctoHub without using a bulky USB connector, you can use the four 1.27mm pads just behind the USB connector. There are two options.

You can mount the Yocto-MaxiDisplay directly on the hub using screw and spacers, and connect it using 1.27mm board-to-board connectors. To prevent shortcuts, it is best to solder the female connector on the hub and the male connector on the Yocto-MaxiDisplay.

You can also use a small 4-wires cable with a 1.27mm connector. 1.25mm works as well, it does not make a difference for 4 pins. This makes it possible to move the device a few inches away. Don't put it too far away if you use that type of cable, because as the cable is not shielded, it may cause undesirable electromagnetic emissions.

Enclosure

Your Yocto-MaxiDisplay has been designed to be installed as is in your project. Nevertheless, Yoctopuce sells enclosures specifically designed for Yoctopuce modules. The recommended enclosure for your Yocto-MaxiDisplay is the YoctoBox-MaxiDisplay model. It has a small removable stand enabling it to stay upright, it is also equipped with powerful magnets allowing it to stick on ferromagnetic surfaces. More details are available on the Yoctopuce web site ³.

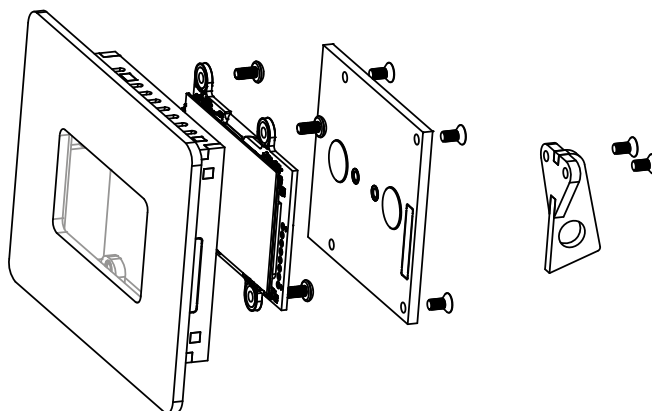

You can install your Yocto-MaxiDisplay in an optional enclosure.

³ <http://www.yoctopuce.com/EN/products/category/enclosures>

3. Working principles


3.1. Embedded processor and memory

Like all the Yoctopuce modules, your Yocto-MaxiDisplay contains an embedded processor allowing it to perform relatively complex operations transparently. Thus, to draw a line, the host computer only needs to send a *draw a line* command to the Yocto-MaxiDisplay. It does not have to do anything else, everything is managed by the Yocto-MaxiDisplay processor. For this reason, the Yocto-MaxiDisplay behaves a little like a graphic accelerator where the graphical tasks are performed by a dedicated processor, letting the main processor perform other tasks.

Your Yocto-MaxiDisplay contains also a small file system to help you store some graphics, fonts, and other animations.

3.2. Orientation

To facilitate its hardware installation, your Yocto-MaxiDisplay can work in four distinct orientations. You only need to set a single parameter. When you set the value of this parameter to *left*, *up*, *right*, or *down* to indicate the position of the USB socket with regards to the circuit, the screen rotates its content in order for it to appear in the correct orientation.

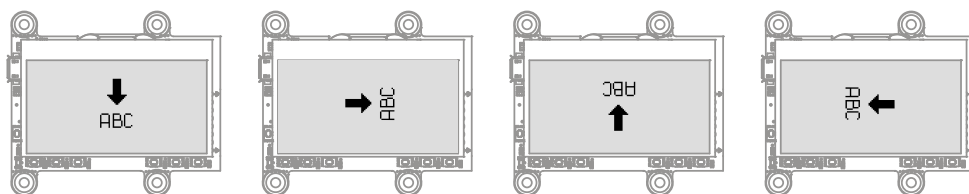


Parameter values LEFT, UP, RIGHT, and DOWN influence the orientation of the display.

This parameter is persistent and can be saved in the flash memory of the Yocto-MaxiDisplay.

3.3. Layer system

Your Yocto-MaxiDisplay works according to a principle of superposed and independent layers. You can write and draw independently in each of the 5 layers. This allows you to simplify and optimize your display code.

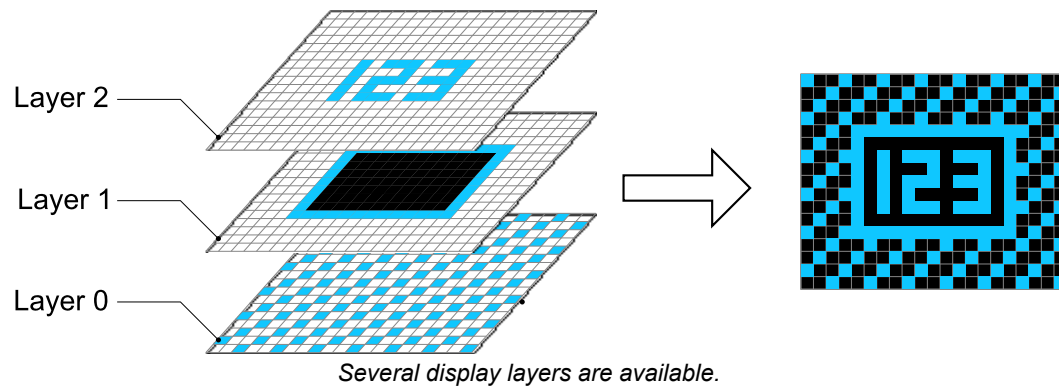

You can hide or show any layer. You can even laterally move these layers which are slightly larger than the displayable surface (128x128), generating thus a scrolling effect. You can take advantage of this layer system to implement a *double buffering*¹ system.

Each layer has its own graphical context: cursor position, current font, current color, etc... This means that you must set these parameters for each layer with which you work. But this also means that several distinct processes can interact with your Yocto-MaxiDisplay without risking conflict issues: they only need to write in different layers.

Primitives working directly on display layers include:

- clear
- hide
- unhide
- setLayerPosition
- reset
- swapLayerContent
- copyLayerContent

3.4. Graphic routines

Your Yocto-MaxiDisplay contains basic graphic routines: lines, rectangles, circles, discs, text display, etc. All these routines support clipping: you can write on top of a layer border, the part located in the zone managed is taken into account, the outside part is ignored.

For more complex graphical operations, or simply if you feel more comfortable with it, you can also use your favorite graphic library running on the host driving the Yocto-MaxiDisplay to build a bitmap in memory, then render it with a single command on the layer of your choice. The Yoctopuce API is fast enough to make this possible even to make real-time animations.

Basic graphic primitives are:

- moveTo
- lineTo
- drawPixel
- drawRect
- drawBar
- drawCircle
- drawDisc
- drawBitmap
- drawImage

Colors

The Yocto-MaxiDisplay screen is purely monochrome. You cannot, therefore, display grey levels, nor benefit from anti-aliasing. You can draw using three "colors": the screen display color (which we will

¹ http://en.wikipedia.org/wiki/Multiple_buffering


call "white" in this documentation even if it might be light blue for example), black, or transparent (eraser). When you write using the transparent color, the layer below becomes visible. Note that layer 0 is not transparent. Writing in transparent color on this layer is equivalent to writing in black. This is important when you switch the content of two layers.

Primitives allowing you to change the color of a drawing are:

- selectGrayPen
- selectEraser

3.5. Text display

You can display any text at an arbitrary location of the screen. The Yocto-MaxiDisplay contains some embedded fonts, but you can create your own relatively easily. It is not possible to know beforehand the size of a text, but to compensate this, numerous text alignment modes are available. You can align text left, right, and center, from the decimal point, the base line, etc.

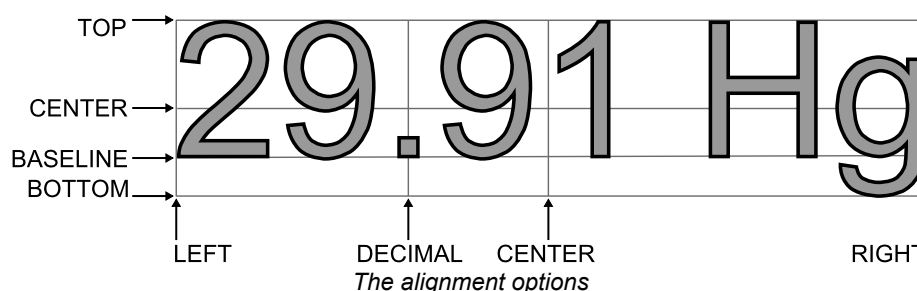

Primitives allowing you to display text are:

- selectFont
- drawText

Fonts built-in into the device firmware are:

- Small.yfm (height: 8 pixels)
- Medium.yfm (height: 16 pixels)
- Large.yfm (height: 32 pixels)
- 8x8.yfm (monospaced)

Console mode

There is another method to display text on your Yocto-MaxiDisplay: the console mode. The console is a rectangular area of which you can parameterize the position. Texts displayed in this console are displayed like in a terminal, and line feeds are automatically generated. By default, the console size of each layer is initialized to the size of the screen.

Primitives allowing you to manage the console are:

- clearConsole
- consoleOut
- setConsoleMargins
- setConsoleBackground
- setConsoleWordWrap

Internationalization and regional characters

The text display functions can render international characters for languages that meet the following criteria:

- 8-bit character set

- left-to-right writing

For character sets requiring more than 8-bit (for instance chinese characters) and for right-to-left (RTL) languages, the only solution is to create a bitmap image on the computer using system built-in functions, and to display it using the `drawBitmap` primitive.

For all other languages, you should simply make sure that you use using the same locale (or *code page*) for the display font and for the text strings to draw. With this, you will be able to display all kind of accented characters and glyphs. Built-in fonts are provided according to the `iso-8859-1` locale (also known as `iso-latin-1` or `Windows-1252`), and support all languages from Western Europe. But you can easily generate equivalent fonts for the locale used by your computer using the small utility provided in the Delphi Library, under *Examples\Display-font-generator*.

In practice, for all languages with native Unicode support (e.g. 16-bit or UTF-8) like Python, C#, VB or Java, you can configure in the API the codepage to use to convert from unicode character strings to 8-bit format. The default value is `iso-8859-1`, corresponding to the built-in fonts.

For other languages like Delphi, C++ or PHP where the codepage is implicitly determined by the encoding of the source file, and where conversions are under the responsibility of the developer, you must simply take care to provide to the API a string that is compatible with the character set used in your display. The most common pitfall is to use an UTF-8 encoded string (because this is the most common format used by editors nowadays) and to forget to convert it into `iso-8859-*` before using it with `drawText` or `consoleOut`. If your display shows two strange letters instead of every accented character, this is the reason.


3.6. Font file format

Your Yocto-MaxiDisplay contains a few embedded fonts, but it is designed so that you could create your own fonts as easily as possible. A font file for your Yocto-MaxiDisplay is mostly a large bitmap where all the characters are drawn one after the other, in the order of the ASCII code of each character. Besides the bitmap, these files include a header with a some more information, as well as a list of the position of the last column of each character. The format is the following:

offset	type	Size (bytes)	signification
0x00	U16	2	Signature ("YF" 0x4659, little endian)
0x02	U8	1	Version = 1
0x03	U8	1	Bits by pixel =1
0x04	U16	2	<i>W</i> width of the bitmap, little endian, (must be a multiple of 16)
0x06	U8	1	<i>H</i> height of the bitmap
0x09	U8	1	Base line (starting from the bottom)
0x07	U8	1	First defined character
0x08	U8	1	Last defined character
0x0A	U16[]	2*N	Coordinates of the last column of each character (little endian)
0x0A +2*N	U8[]	H* W / 16	Bitmap data

Practical example

Let us imagine that we wish to define a lower case 3x5 pixel font for numbers 0 to 9. The bitmap would be the following:

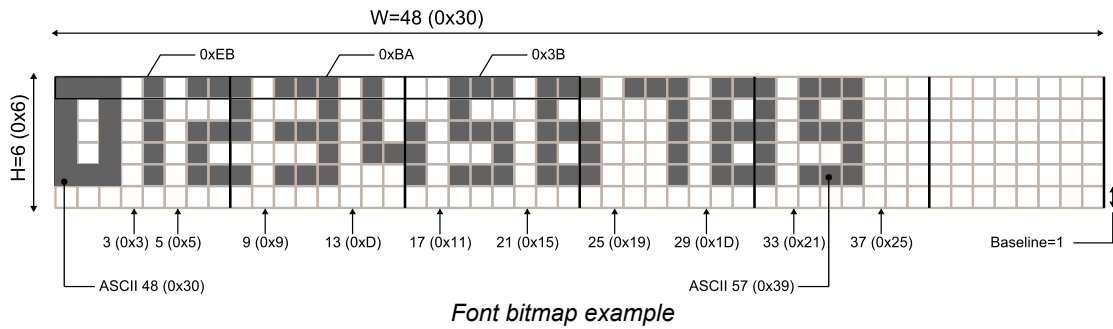

The font file contains the following data:

Offset	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00000000	59	46	01	01	30	00	06	01	30	39	03	00	05	00	09	00
00000010	0D	00	11	00	15	00	19	00	1D	00	21	00	25	00	EB	BA
00000020	3B	BB	B8	00	A8	8A	22	0A	A8	00	AB	BA	BB	8B	B8	00
00000030	AA	0B	8A	8A	88	00	EB	B8	BB	8B	B8	00	00	00	00	00
00000040	00	00														

Note that the bitmap width must be a multiple of 16 pixels and that the height cannot be above 255 pixels. Moreover, blank spaces between two characters are encoded directly in the image. You do not have to leave a blank space below the characters if you do not intend to use your font in console mode.

You can find in the Delphi library a small Windows tool² enabling you to generate font files from the system fonts.

3.7. Sequences and animations

You can pre-program animations and play them as background tasks. To do so, you must call the *newSequence* method of the *Display* object, then call the available graphical methods. You can insert waiting times with *pauseSequence*. When you are done recording the sequence components, call *saveSequence*. The sequence is then saved in the Yocto-MaxiDisplay file system. You can play it back at will with *playSequence*. You can create loops by calling *playSequence* within a sequence.

You can find in the libraries a code sample³ illustrating how sequences work. As soon as this example is run, the screen starts playing the sequence indefinitely.

Be aware that sequences change the values of the layer parameters (current point, current color, etc.) with which they work. If you use a sequence as an animation in background task, make sure to work with a different layer than the one used by your sequence.

Startup sequence

When your Yocto-MaxiDisplay is powered on, it runs the *yocto.seq* sequence which is hard-coded inside the module. But you can configure your module so that it runs a sequence that you have chosen.

3.8. Optimizations

While the Yocto-MaxiDisplay has its own processor and offers numerous graphical routines, it stays a relatively slow system compared to a classic display system. This slowness is the result of using the HID protocol so that the Yocto-MaxiDisplay can be driven without drivers. The transfer rate between the screen and the computer is limited to 64Ko per second. Each request takes up about 3ms. However, there are techniques to optimize display.

² Examples\Display-font-generator

³ Prog-Display-Sequences

Writing in hidden layers

Actions to be performed on visible layers are immediately sent to the screen in order to be executed as soon as possible. On the other hand, actions to be performed on hidden layers are buffered, in order to send several commands at once. It is therefore much more efficient to write in a hidden layer and to make it visible afterwards, which makes double buffering a very interesting technique.

Double buffering

The technique called *double buffering* enables you to display animations without making visible artifacts linked to the creation of the graphics. It consists in working on two layers, one visible, the other one hidden. The images are created in the hidden layer, and once the image is complete, the two layers are switched. In the libraries, you can find an example⁴ using this technique to animate a Von Koch flake.

Using a bitmap

When the graphics become complex, it becomes more efficient to compute a bitmap on the host computer and to send it to the screen. Use the *drawBitmap* to do this. Bitmap data are encoded in a byte array, line by line, starting from the top left corner. In each byte, the most significant bit represents the leftmost pixel. In the libraries, you can find an example⁵ computing a Mandelbrot set based on this principle.

Here is the C code allowing you to draw a pixel at the (x,y) coordinates in the byte array representing a *w x h* bitmap.

```
void putpixel(unsigned char *data, int x, int y)
{
    int bytesPerLine = (w + 7) >> 3;
    data[ (x >> 3) + (y * bytesPerLine) ] |= 128 >> (x & 7);
}
```

⁴ Prog-Display-DoubleBuffering

⁵ Prog-Display-DrawBitmap

4. The embedded file system

Your Yocto-MaxiDisplay contains a small embedded file system, allowing it to store personalized files for its own use. You can manipulate the file system thanks to the *yocto_files* library.

4.1. Usage

Interactive usage with the VirtualHub

The *VirtualHub* provides a succinct interface to manipulate the content of the file system: simply click the *configuration* button corresponding to your module in the *VirtualHub* interface, then the *manage files* button. The files are listed and you can view them, erase them, or add new ones (downloads).

Because of its small size, the file system does not have an explicit concept of directories. You can nevertheless use the slash sign "/" inside file names to sort them as if they were in directories.

Programmed usage

Use the *yocto_files* library to manage the file system. Basic functions are available:

- *upload* creates a new file on the module, with a content that you provide;
- *get_list* lists the files on the module, including their content size and CRC32;
- *download* retrieves in a variable the content of a file present on the module;
- *remove* erases a file from the module;
- *format* resets the file system to an empty, not fragmented state.

A piece of software using a well designed file system should always start by making sure that all the files necessary for its working are available on the module, and if needed upload them on the module. We can thus transparently manage software updates and application deployment on new modules. To make file versions easier to detect, the *get_list* method returns for each file a 32 bit signature called CRC (Cyclic Redundancy Check) which identifies in a reliable manner the file content. Thus, if the file CRC corresponds, there is less than one chance over 4 billions that the content is not the correct one. You can even compute in advance in your software the CRC of the content you want, and therefore check it without having to download the files. The CRC function used by the Yoctopuce file system is the same as Ethernet, Gzip, PNG, etc. Its characteristic value for the nine character string "123456789" is 0xCBf43926.

HTTP usage

You can access the files that you have downloaded on your Yocto-MaxiDisplay by HTTP, at the root of the module (at the same level as the REST API). This allows you to load personalized HTML and

Javascript interface pages, for example. You cannot, however, replace the content of a file preloaded on the module, you can only add new ones.

4.2. Limitations

The file system embedded on your Yocto-MaxiDisplay has some technical limitations:

- Its maximal storage space is 3.5MB, allocated in blocks enabling to store up to about 128 files.
- Erasing a file does not necessarily immediately free all the space used by the file. The non freed space is completely reused if you create a new file with the same name, but not necessarily if you create files with a distinct name each time. For this reason, it is not recommended to automatically create files with ever changing names.
- You can recover the whole non freed space with the *format* command which frees all the files.
- Each firmware update implicitly provokes a complete reformatting of the file system.
- As all flash memories, the memory used to store the files has a life of about 100'000 erasing cycles. It is enough, but it is not infinite. Make sure that you do not write and erase files uselessly and very quickly in a loop, or you may destroy your module.

5. First steps

By design, all Yoctopuce modules are driven the same way. Therefore, user's guides for all the modules of the range are very similar. If you have already carefully read through the user's guide of another Yoctopuce module, you can jump directly to the description of the module functions.

5.1. Prerequisites

In order to use your Yocto-MaxiDisplay module, you should have the following items at hand.

A computer

Yoctopuce modules are intended to be driven by a computer (or possibly an embedded microprocessor). You will write the control software yourself, according to your needs, using the information provided in this manual.

Yoctopuce provides software libraries to drive its modules for the following operating systems: **Windows, Linux, macOS, and Android**. Yoctopuce modules do not require the installation of specific drivers, as they use the HID driver¹ standardly supplied in all operating systems.

The general rule regarding supported operating system versions is as follows: Yoctopuce development tools are supported for all versions covered by the operating system vendor's support, including the duration of extended support (*long term support* or LTS). Yoctopuce pays particular attention to long-term support, and whenever possible with reasonable effort, our tools are designed so that they can be used on older systems even several years after the end of the manufacturer's extended support.

Moreover, the programming libraries used to drive our modules being available in source code, you can generally recompile them to run on even older operating systems. To date, our programming library can still be compiled to run on operating systems released in 2008, such as Windows XP SP3 or Linux Debian Squeeze.

The architectures supported by Yoctopuce software libraries are as follows:

- Windows: Intel 64 bits and 32 bits
- Linux: Intel 64 bits and 32 bits, ARM 64 bits and 32 bits, including Raspberry Pi OS.
- macOS: Intel 64 bits and Apple Silicon (ARM)

Under Linux, communication with our USB modules requires the libusb library, version 1.0 or higher, which is available on all common distributions. Libraries and command-line tools should be easy to


¹ The HID driver is manages peripheral devices such as mouse, keyboard, and so on.

recompile on any UNIX variant (Linux, FreeBSD, ...) from the last fifteen years for which libusb-1.0 is available and functional.

Under Android, the ability to connect a USB module depends on whether the tablet or phone supports the *USB Host mode*.


A USB 2.0 cable, type A-micro B

USB connectors come in several shapes. The "standard" size is the one you probably use to connect your printer. The "mini" size has more or less disappeared. The "micro" size was the smallest when the first Yoctopuce modules were designed, and it is still the one we use. Over the last few years, USB-C connectors have appeared, but in order not to multiply the number of connectors in our product range, we have so far stuck with the "micro-B" standard.

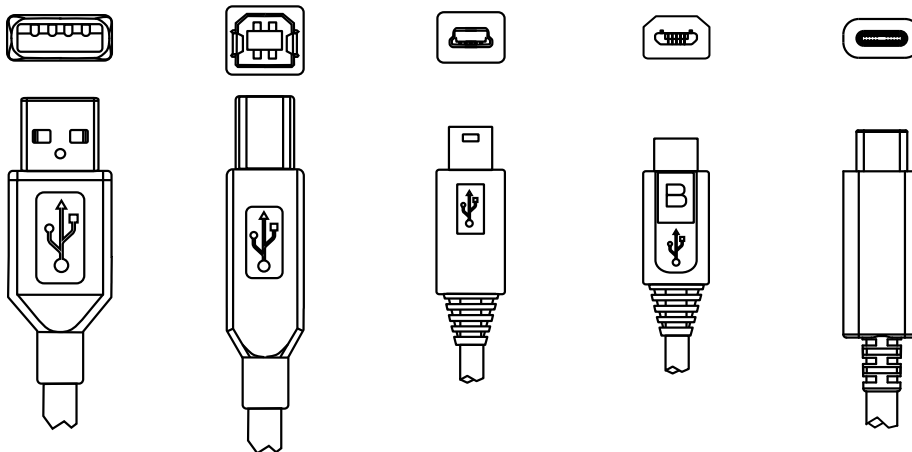

The most common USB 2.0 connectors: A, B, Mini B, Micro B et USB-C.

To connect your Yocto-MaxiDisplay module to a computer, you need a USB 2.0 cable of type A-micro B. The price of this cable may vary a lot depending on the source, look for it under the name *USB 2.0 A to micro B Data cable*. Make sure not to buy a simple USB charging cable without data connectivity. The correct type of cable is available on the Yoctopuce shop.

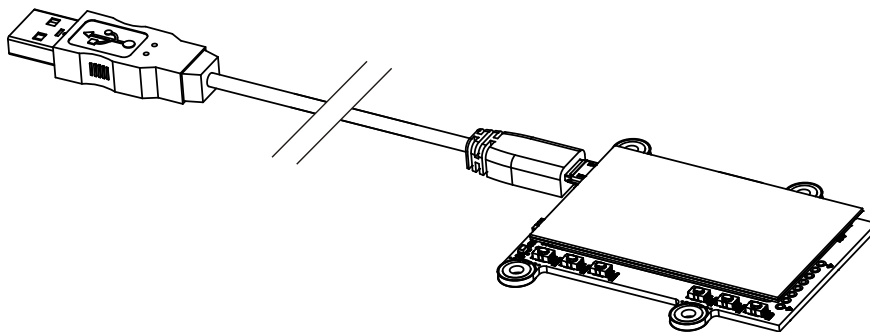

You must plug in your Yocto-MaxiDisplay module with a USB 2.0 cable of type A - micro B

If you insert a USB hub between the computer and the Yocto-MaxiDisplay module, make sure to take into account the USB current limits. If you do not, be prepared to face unstable behaviors and unpredictable failures. You can find more details on this topic in the chapter about assembly and connections.

5.2. Testing USB connectivity

At this point, your Yocto-MaxiDisplay should be connected to your computer, which should have recognized it. It is time to make it work.

Go to the Yoctopuce web site and download the *Virtual Hub* software². It is available for Windows, Linux, and macOS. Normally, VirtualHub serves as an abstraction layer for languages which cannot access the hardware layers of your computer. However, it also offers a succinct interface to configure your modules and to test their basic functions. You access this interface with a simple web browser³. Start VirtualHub in a command line, open your preferred web browser and enter the URL `http://127.0.0.1:4444`. The list of the Yoctopuce modules connected to your computer is displayed.

Serial	Logical Name	Description	Action
VIRTHUB0-7d1a86fb0		VirtualHub	configure view log file
YD128X64-0AFFA		Yocto-MaxiDisplay	configure view log file beacon

Search: [Show device functions](#)

Module list as displayed in your web browser


5.3. Localization

You can then physically localize each of the displayed modules by clicking on the **beacon** button. This puts the Yocto-led of the corresponding module in Yocto-beacon mode. It starts flashing, which allows you to easily localize it. The second effect is to display a little blue circle on the screen. You obtain the same behavior when pressing the Yocto-button of the module.

5.4. Test of the module

The first item to check is that your module is working well: click on the serial number corresponding to your module. This displays a window summarizing the properties of your Yocto-MaxiDisplay.

YD128X64-0AFFA



YD128X64-0AFFA is a 66x58mm board featuring a 128x64 pixels OLED display and 6 entries meant to interface switches or potentiometers.

Kernel

Serial # YD128X64-0AFFA
 Product name: Yocto-MaxiDisplay
 Logical name:
 Product release: 1
 Firmware: 10238
 Consumption: 27 mA
 Beacon: Inactive [turn on](#)
 Luminosity: 50%

Display

Text to display:



Sensors

anButton1:		released
anButton2:		released
anButton3:		pressed
anButton4:		released
anButton5:		released
anButton6:		released

Misc

[Open API browser \(non-UI\)](#)

Close

Properties of the Yocto-MaxiDisplay module

² www.yoctopuce.com/EN/virtualhub.php

³ The interface is tested on Chrome, FireFox, Safari, Edge et IE 11.

This window allows you, among other things, to display an arbitrary text on the screen and to check the state of the anButtons inputs.

5.5. Configuration

When, in the module list, you click on the **configure** button corresponding to your module, the configuration window is displayed.

Yocto-MaxiDisplay module configuration.

Firmware

The module firmware can easily be updated with the help of the interface. Firmware destined for Yoctopuce modules are available as .byn files and can be downloaded from the Yoctopuce web site.

To update a firmware, simply click on the **upgrade** button on the configuration window and follow the instructions. If the update fails for one reason or another, unplug and re-plug the module and start the update process again. This solves the issue in most cases. If the module was unplugged while it was being reprogrammed, it does probably not work anymore and is not listed in the interface. However, it is always possible to reprogram the module correctly by using VirtualHub⁴ in command line⁵.

Logical name of the module

The logical name is a name that you choose, which allows you to access your module, in the same way a file name allows you to access its content. A logical name has a maximum length of 19 characters. Authorized characters are A..Z, a..z, 0..9, _, and -. If you assign the same logical name to two modules connected to the same computer and you try to access one of them through this logical name, behavior is undetermined: you have no way of knowing which of the two modules answers.

Luminosity

This parameter allows you to act on the maximal intensity of the leds of the module. This enables you, if necessary, to make it a little more discreet, while limiting its power consumption. Note that this parameter acts on all the signposting leds of the module, including the Yocto-led. If you connect a module and no led turns on, it may mean that its luminosity was set to zero.

Logical names of functions

Each Yoctopuce module has a serial number and a logical name. In the same way, each function on each Yoctopuce module has a hardware name and a logical name, the latter can be freely chosen by the user. Using logical names for functions provides a greater flexibility when programming modules.

⁴ www.yoctopuce.com/EN/virtualhub.php

⁵ More information available in the VirtualHub documentation


The functions provided by the Yocto-MaxiDisplay module are *display*, corresponding to the screen, *anButton1* to *anButton6* to manage the potentiometer inputs, and *files* corresponding to the file system.

6. Assembly and connections

This chapter provides important information regarding the use of the Yocto-MaxiDisplay module in real-world situations. Make sure to read it carefully before going too far into your project if you want to avoid pitfalls.

6.1. Fixing

While developing your project, you can simply let the module hang at the end of its cable. Check only that it does not come in contact with any conducting material (such as your tools). When your project is almost at an end, you need to find a way for your modules to stop moving around.

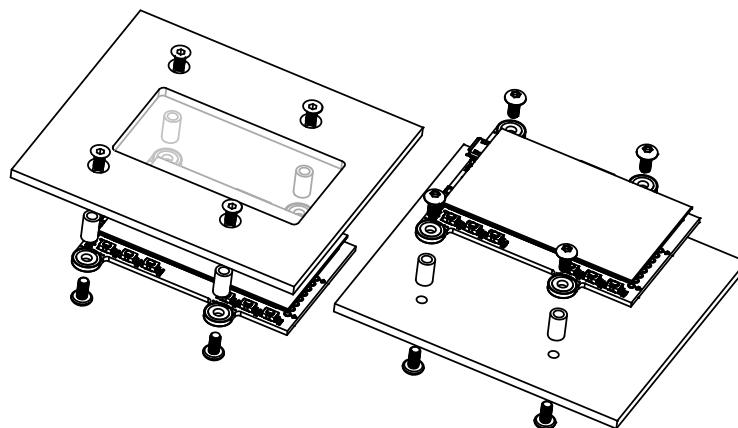

Examples of assembly on supports

The Yocto-MaxiDisplay module contains 3mm assembly holes. You can use these holes for screws. The screw head diameter must not be larger than 8mm or they will damage the module circuits. Make sure that the lower surface of the module is not in contact with the support. We recommend using spacers, but other methods are possible. Nothing prevents you from fixing the module with a glue gun; it will not be good-looking, but it will hold.

If you intend to screw your module directly against a conducting part, for example a metallic frame, insert an isolating layer in between. Otherwise you are bound to induce a short circuit: there are naked pads under your module. Simple insulating tape should be enough.

6.2. USB power distribution

Although USB means *Universal Serial BUS*, USB devices are not physically organized as a flat bus but as a tree, using point-to-point connections. This has consequences on power distribution: to make it simple, every USB port must supply power to all devices directly or indirectly connected to it. And USB puts some limits.

In theory, a USB port provides 100mA, and may provide up to 500mA if available and requested by the device. In the case of a hub without external power supply, 100mA are available for the hub itself, and the hub should distribute no more than 100mA to each of its ports. This is it, and this is not much. In particular, it means that in theory, it is not possible to connect USB devices through two cascaded hubs without external power supply. In order to cascade hubs, it is necessary to use self-powered USB hubs, that provide a full 500mA to each subport.

In practice, USB would not have been as successful if it was really so picky about power distribution. As it happens, most USB hub manufacturers have been doing savings by not implementing current limitation on ports: they simply connect the computer power supply to every port, and declare themselves as *self-powered hub* even when they are taking all their power from the USB bus (in order to prevent any power consumption check in the operating system). This looks a bit dirty, but given the fact that computer USB ports are usually well protected by a hardware current limitation around 2000mA, it actually works in every day life, and seldom makes hardware damage.

What you should remember: if you connect Yoctopuce modules through one, or more, USB hub without external power supply, you have no safe-guard and you depend entirely on your computer manufacturer attention to provide as much current as possible on the USB ports, and to detect overloads before they lead to problems or to hardware damages. When modules are not provided enough current, they may work erratically and create unpredictable bugs. If you want to prevent any risk, do not cascade hubs without external power supply, and do not connect peripherals requiring more than 100mA behind a bus-powered hub.

In order to help you controlling and planning overall power consumption for your project, all Yoctopuce modules include a built-in current sensor that indicates (with 5mA precision) the consumption of the module on the USB bus.

Note also that the USB cable itself may also cause power supply issues, in particular when the wires are too thin or when the cable is too long ¹. Good cables are usually made using AWG 26 or AWG 28 wires for data lines and AWG 24 wires for power.

6.3. Electromagnetic compatibility (EMI)

Connection methods to integrate the Yocto-MaxiDisplay obviously have an impact on the system overall electromagnetic emissions, and therefore also impact the conformity with international standards.

When we perform reference measurements to validate the conformity of our products with IEC CISPR 11, we do not use any enclosure but connect the devices using a shielded USB cable, compliant with USB 2.0 specifications: the cable shield is connected to both connector shells, and the total resistance from shell to shell is under 0.6Ω. The USB cable length is 3m, in order to expose one meter horizontally, one meter vertically and keep the last meter close to the host computer within a ferrite bead.

If you use a non-shielded USB cable, or an improperly shielded cable, your system will work perfectly well but you may not remain in conformity with the emission standard. If you are building a system made of multiple devices connected using 1.27mm pitch connectors, or with a sensor moved away from the device CPU, you can generally recover the conformity by using a metallic enclosure acting as an external shield.

¹ www.yoctopuce.com/EN/article/usb-cables-size-matters

Still on the topic of electromagnetic compatibility, the maximum supported length of the USB cable is 3m. In addition to the voltage drop issue mentioned above, using longer wires would require to run extra tests to assert compatibility with the electromagnetic immunity standards.


7. Programming, general concepts

The Yoctopuce API was designed to be at the same time simple to use and sufficiently generic for the concepts used to be valid for all the modules in the Yoctopuce range, and this in all the available programming languages. Therefore, when you have understood how to drive your Yocto-MaxiDisplay with your favorite programming language, learning to use another module, even with a different language, will most likely take you only a minimum of time.

7.1. Programming paradigm

The Yoctopuce API is object oriented. However, for simplicity's sake, only the basics of object programming were used. Even if you are not familiar with object programming, it is unlikely that this will be a hinderance for using Yoctopuce products. Note that you will never need to allocate or deallocate an object linked to the Yoctopuce API: it is automatically managed.

There is one class per Yoctopuce function type. The name of these classes always starts with a Y followed by the name of the function, for example *YTemperature*, *YRelay*, *YPressure*, and so on. There is also a *YModule* class, dedicated to managing the modules themselves, and finally there is the static *YAPI* class, that supervises the global workings of the API and manages low level communications.

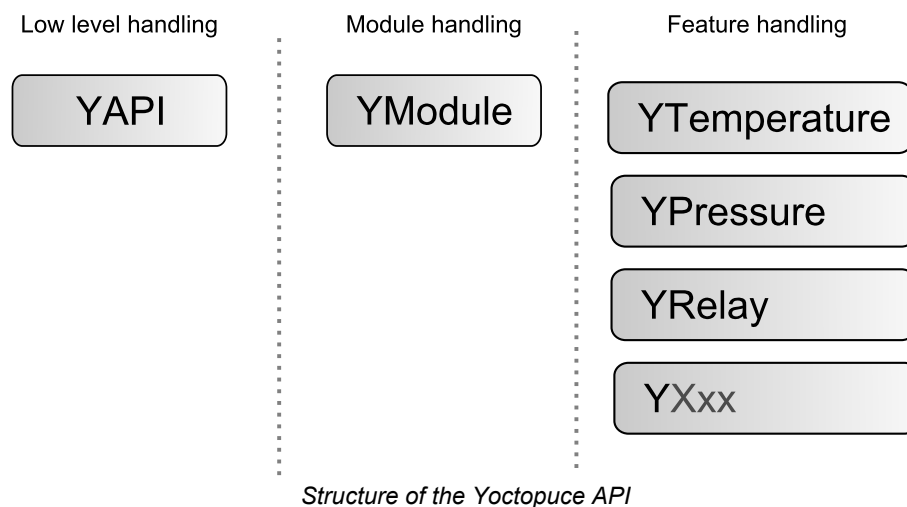

The YSensor class

Each Yoctopuce sensor function has its dedicated class: *YTemperature* to measure the temperature, *YVoltage* to measure a voltage, *YRelay* to drive a relay, etc. However there is a special class that can do more: *YSensor*.

The YSensor class is the parent class for all Yoctopuce sensors, and can provide access to any sensor, regardless of its type. It includes methods to access all common functions. This makes it easier to create applications that use many different sensors. Moreover, if you create an application based on YSensor, it will work with all Yoctopuce sensors, even those which do not yet exist.

Programmation

In the Yoctopuce API, priority was put on the ease of access to the module functions by offering the possibility to make abstractions of the modules implementing them. Therefore, it is quite possible to work with a set of functions without ever knowing exactly which module are hosting them at the hardware level. This tremendously simplifies programming projects with a large number of modules.

From the programming stand point, your Yocto-MaxiDisplay is viewed as a module hosting a given number of functions. In the API, these functions are objects which can be found independently, in several ways.

Access to the functions of a module

Access by logical name

Each function can be assigned an arbitrary and persistent logical name: this logical name is stored in the flash memory of the module, even if this module is disconnected. An object corresponding to an Xxx function to which a logical name has been assigned can then be directly found with this logical name and the *YXxx.FindXxx* method. Note however that a logical name must be unique among all the connected modules.

Access by enumeration

You can enumerate all the functions of the same type on all the connected modules with the help of the classic enumeration functions *FirstXxx* and *nextXxxx* available for each *YXxx* class.

Access by hardware name

Each module function has a hardware name, assigned at the factory and which cannot be modified. The functions of a module can also be found directly with this hardware name and the *YXxx.FindXxx* function of the corresponding class.

Difference between *Find* and *First*

The *YXxx.FindXxxx* and *YXxx.FirstXxxx* methods do not work exactly the same way. If there is no available module, *YXxx.FirstXxxx* returns a null value. On the opposite, even if there is no corresponding module, *YXxx.FindXxxx* returns a valid object, which is not online but which could become so if the corresponding module is later connected.

Function handling

When the object corresponding to a function is found, its methods are available in a classic way. Note that most of these subfunctions require the module hosting the function to be connected in order to be handled. This is generally not guaranteed, as a USB module can be disconnected after the control software has started. The *isOnline* method, available in all the classes, is then very helpful.

Access to the modules

Even if it is perfectly possible to build a complete project while making a total abstraction of which function is hosted on which module, the modules themselves are also accessible from the API. In fact, they can be handled in a way quite similar to the functions. They are assigned a serial number at the factory which allows you to find the corresponding object with *YModule.Find()*. You can also assign arbitrary logical names to the modules to make finding them easier. Finally, the *YModule* class contains the *YModule.FirstModule()* and *nextModule()* enumeration methods allowing you to list the connected modules.

Functions/Module interaction

From the API standpoint, the modules and their functions are strongly uncorrelated by design. Nevertheless, the API provides the possibility to go from one to the other. Thus, the `get_module()` method, available for each function class, allows you to find the object corresponding to the module hosting this function. Inversely, the `YModule` class provides several methods allowing you to enumerate the functions available on a module.

7.2. The Yocto-MaxiDisplay module

The Yocto-MaxiDisplay is a 128x64 OLED display. It includes a flash-based filesystem to store files (such as images, fonts and animated sequences) and six instances of the `AnButton` function, corresponding to the six analog inputs (potentiometer or button reading) present on the module.

module : Module

attribute	type	modifiable ?
productName	String	read-only
serialNumber	String	read-only
logicalName	String	modifiable
productId	Hexadecimal number	read-only
productRelease	Hexadecimal number	read-only
firmwareRelease	String	read-only
persistentSettings	Enumerated	modifiable
luminosity	0..100%	modifiable
beacon	On/Off	modifiable
upTime	Time	read-only
usbCurrent	Used current (mA)	read-only
rebootCountdown	Integer	modifiable
userVar	Integer	modifiable

display : Display

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
enabled	Boolean	modifiable
startupSeq	String	modifiable
brightness	0..100%	modifiable
orientation	Enumerated	modifiable
displayWidth	Integer	read-only
displayHeight	Integer	read-only
displayType	Enumerated	read-only
layerWidth	Integer	read-only
layerHeight	Integer	read-only
layerCount	Integer	read-only
command	String	modifiable

files : Files

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
filesCount	Integer	read-only
freeSpace	Integer	read-only

anButton1 : `AnButton`

anButton2 : `AnButton`

anButton3 : `AnButton`

anButton4 : `AnButton`

anButton5 : AnButton
anButton6 : AnButton

attribute	type	modifiable ?
logicalName	String	modifiable
advertisedValue	String	modifiable
calibratedValue	Integer	read-only
rawValue	Integer	read-only
analogCalibration	On/Off	modifiable
calibrationMax	Integer	modifiable
calibrationMin	Integer	modifiable
sensitivity	Integer	modifiable
isPressed	Boolean	read-only
lastTimePressed	Time	read-only
lastTimeReleased	Time	read-only
pulseCounter	Integer	modifiable
pulseTimer	Time	read-only
inputType	Enumerated	modifiable

7.3. Module

Global parameters control interface for all Yoctopuce devices

The `YModule` class can be used with all Yoctopuce USB devices. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

productName

Character string containing the commercial name of the module, as set by the factory.

serialNumber

Character string containing the serial number, unique and programmed at the factory. For a Yocto-MaxiDisplay module, this serial number always starts with YD128X64. You can use the serial number to access a given module by software.

logicalName

Character string containing the logical name of the module, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access a given module. If two modules with the same logical name are in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, _ , and -.

productId

USB device identifier of the module, preprogrammed to 48 at the factory.

productRelease

Release number of the module hardware, preprogrammed at the factory. The original hardware release returns value 1, revision B returns value 2, and so on.

firmwareRelease

Release version of the embedded firmware, changes each time the embedded software is updated.

persistentSettings

State of persistent module settings: loaded from flash memory, modified by the user or saved to flash memory.

luminosity

Lighting strength of the informative leds (e.g. the Yocto-Led) contained in the module. It is an integer value which varies between 0 (LEDs turned off) and 100 (maximum led intensity). The default value is 50. To change the strength of the module LEDs, or to turn them off completely, you only need to change this value.

beacon

Activity of the localization beacon of the module.

upTime

Time elapsed since the last time the module was powered on.

usbCurrent

Current consumed by the module on the USB bus, in milli-amps.

rebootCountdown

Countdown to use for triggering a reboot of the module.

userVar

32bit integer variable available for user storage.

7.4. Display

display control interface, available for instance in the Yocto-Display, the Yocto-MaxiDisplay, the Yocto-MaxiDisplay-G or the Yocto-MiniDisplay

The `YDisplay` class allows to drive Yoctopuce displays. Yoctopuce display interface has been designed to easily show information and images. The device provides built-in multi-layer rendering. Layers can be drawn offline, individually, and freely moved on the display. It can also replay recorded sequences (animations). In order to draw on the screen, you should use the `display.get_displayLayer` method to retrieve the layer(s) on which you want to draw, and then use methods defined in `YDisplayLayer` to draw on the layers.

logicalName

Character string containing the logical name of the display, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the display directly. If two displays with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, _, and -.

advertisedValue

Short character string summarizing the current state of the display, that is automatically advertised up to the parent hub. For a display, the advertised value is its power state (ON or OFF).

enabled

Power state of the display. The display can be enabled and disabled at will using this attribute.

startupSeq

Name of the sequence to play when the display is powered on.

brightness

Brightness of the display. It is an integer value which varies between 0 (very dark display) and 100 (very bright display).

orientation

Display orientation. The orientation is defined as the side of the screen where the USB connector is located when the display is up straight.

displayWidth

Display width, in pixels.

displayHeight

Display height, in pixels.

displayType

Display type: monochrome (MONO), gray levels (GRAY) or full color (RGB).

layerWidth

Width of the layers to draw on, in pixels.

layerHeight

Height of the layers to draw on, in pixels.

layerCount

Available layers to draw on.

command

Magic attribute used to send content to the display. If a command is not interpreted as expected, check the device logs.

7.5. AnButton

analog input control interface, available for instance in the Yocto-Buzzer, the Yocto-Knob, the Yocto-MaxiBuzzer or the Yocto-MaxiDisplay

The `YAnButton` class provide access to basic resistive inputs. Such inputs can be used to measure the state of a simple button as well as to read an analog potentiometer (variable resistance). This can be use for instance with a continuous rotating knob, a throttle grip or a joystick. The module is capable to calibrate itself on min and max values, in order to compute a calibrated value that varies proportionally with the potentiometer position, regardless of its total resistance.

logicalName

Character string containing the logical name of the analog input, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the analog input directly. If two analog inputs with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among `A..Z`, `a..z`, `0..9`, `_`, and `-`.

advertisedValue

Short character string summarizing the current state of the analog input, that is be automatically advertised up to the parent hub. For an analog input, the advertised value is the calibrated measured value (a number between 0 and 1000).

calibratedValue

Calibrated value of the analog input, as an integer from 0 to 1000, included. If no calibration has been run, the calibrated value is simply the measured value, scaled down to the range 0...1000, without linearity correction.

rawValue

Measured value of the analog input, as is, formatted as an integer from 0 to 4095. The measured value is zero when the input resistance is zero (closed contact), and reaches 4095 as the input resistance moves toward infinity (open contact). Be aware that this value does not vary linearly with regard to the input resistance (and to the known position). If you need a linear value, perform a calibration and use the computed value `calibratedValue`.

analogCalibration

Use this attribute to start and stop the calibration process for the analog input. When the calibration is enabled, the module records the minimal and maximal measured values into `calibrationMin` and `calibrationMax`. Once the calibration is over (stopped), the module can automatically compute a running calibrated value for the every measure, varying linearly with the measured resistance value.

calibrationMax

Maximal observed raw measure during calibration. You can also change this value by software if you want to force a theoretical calibration.

calibrationMin

Minimal observed raw measure during calibration. You can also change this value by software if you want to force a theoretical calibration.

sensitivity

Sensitivity of the analog input to trigger user callbacks. The sensitivity corresponds to the difference of value required to propagate a new advertised value and trigger the corresponding user callbacks. If the value is too small, it could cause spurious callbacks if the measured input is not stable enough.

isPressed

Logical state of the input, considered as a binary input (on/off button). The logical state is pressed when the contact is closed, and non-pressed when the contact is open. The module implements a slight averaging and a Schmitt trigger to get a more reliable binary reading.

lastTimePressed

Absolute time of the last "button pressed" event on the input (the input contact transitioned from open to closed). The time reference is the same as the `upTime` attribute, i.e. the elapsed time since the module was turned on.

lastTimeReleased

Absolute time of the last "button released" event on the input (the input contact transitioned from closed to open). The time reference is the same as the `upTime` attribute, i.e. the elapsed time since the module was turned on. If you subtract from this value the `lastTimePressed` value, you can get the duration of the last button pressure.

pulseCounter

Pulse counter (32 bits), incremented each time the button state changes (PRESSED / RELEASED), Each pulse therefore increment the counter by 2. This counter is set to zero when `resetCounter()` is called and each time the device restarts

pulseTimer

Elapsed time since last pulse counter reset (milliseconds).

inputType

Type of knob connected to the input (analog or multiplexed binary switches)

7.6. Files

filesystem control interface, available for instance in the Yocto-Color-V2, the Yocto-SPI, the YoctoHub-Ethernet or the YoctoHub-GSM-4G

The YFiles class is used to access the filesystem embedded on some Yoctopuce devices. This filesystem makes it possible for instance to design a custom web UI (for networked devices) or to add fonts (on display devices).

logicalName

Character string containing the logical name of the filesystem, initially empty. This attribute can be modified at will by the user. Once initialized to a non-empty value, it can be used to access the filesystem directly. If two filesystems with the same logical name are used in the same project, there is no way to determine which one answers when one tries accessing by logical name. The logical name is limited to 19 characters among A..Z, a..z, 0..9, _, and -.

advertisedValue

Short character string summarizing the current state of the filesystem, that is automatically advertised up to the parent hub. For a filesystem, the advertised value is the number of files loaded in the filesystem.

filesCount

Number of files currently loaded in the filesystem.

freeSpace


Free space for uploading new files to the filesystem, in bytes.

7.7. What interface: Native, DLL or Service ?

There are several methods to control your Yoctopuce module by software.

Native control

In this case, the software driving your project is compiled directly with a library which provides control of the modules. Objectively, it is the simplest and most elegant solution for the end user. The end user then only needs to plug the USB cable and run your software for everything to work. Unfortunately, this method is not always available or even possible.

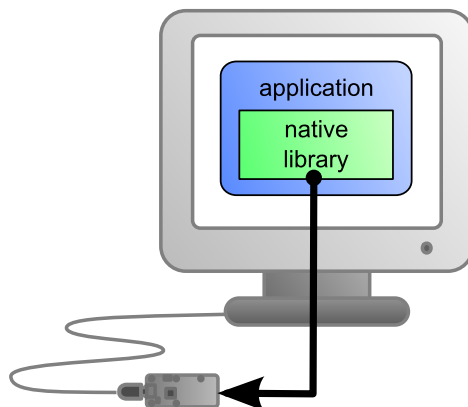


The application uses the native library to control the locally connected module

Native control by DLL

Here, the main part of the code controlling the modules is located in a DLL. The software is compiled with a small library which provides control of the DLL. It is the fastest method to code module support in a given language. Indeed, the "useful" part of the control code is located in the DLL which is the


same for all languages: the effort to support a new language is limited to coding the small library which controls the DLL. From the end user stand point, there are few differences: one must simply make sure that the DLL is installed on the end user's computer at the same time as the main software.

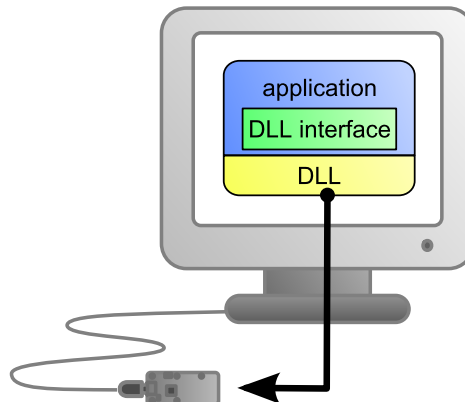

The application uses the DLL to natively control the locally connected module

Control by service


Some languages do simply not allow you to easily gain access to the hardware layers of the machine. It is the case for Javascript, for instance. To deal with this case, Yoctopuce provides a solution in the form of a small piece of software called *VirtualHub*¹. It can access the modules, and your application only needs to use a library which offers all necessary functions to control the modules via this VirtualHub. The end users will have to start VirtualHub before running the project control software itself, unless they decide to install the hub as a service/deamon, in which case VirtualHub starts automatically when the machine starts up.

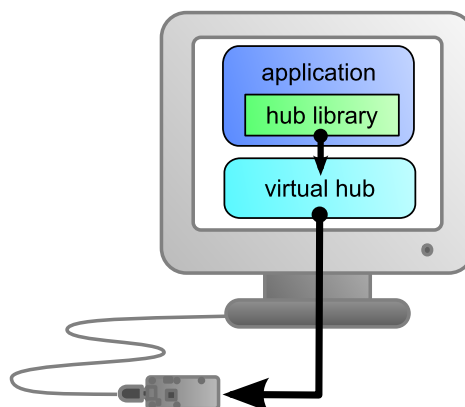

The application connects itself to VirtualHub to gain access to the module

The service control method comes with a non-negligible advantage: the application does not need to run on the machine on which the modules are connected. The application can very well be located on another machine which connects itself to the service to drive the modules. Moreover, the native libraries and DLL mentioned above are also able to connect themselves remotely to one or several machines running VirtualHub.

¹ www.yoctopuce.com/EN/virtualhub.php

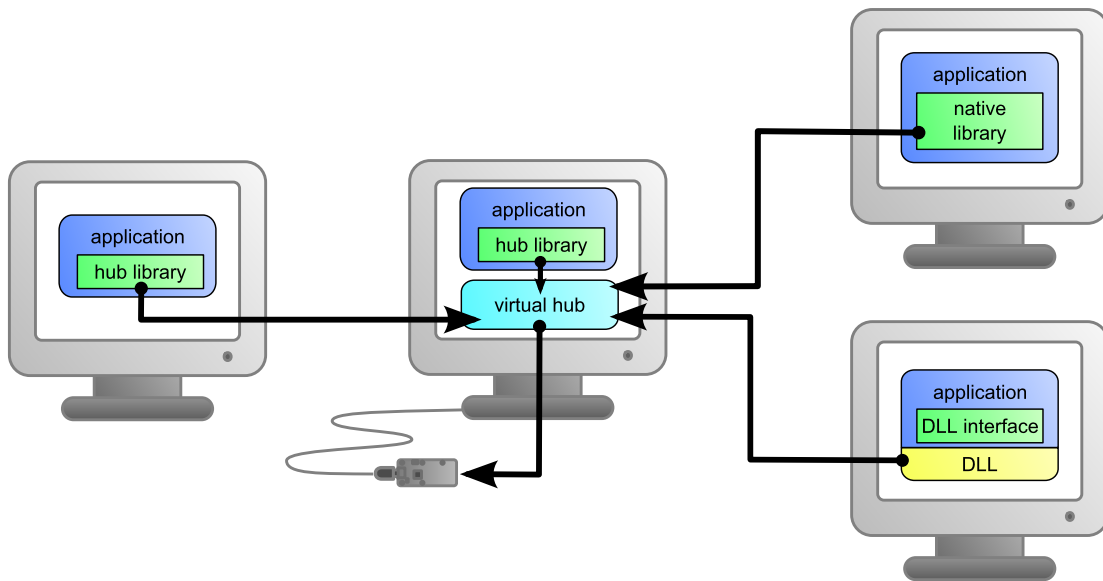

When VirtualHub is used, the control application does not need to reside on the same machine as the module.

Whatever the selected programming language and the control paradigm used, programming itself stays strictly identical. From one language to another, functions bear exactly the same name, and have the same parameters. The only differences are linked to the constraints of the languages themselves.

Language	Native	Native with DLL	VirtualHub
Command line	✓	-	✓
Python	-	✓	✓
C++	✓	✓	✓
C# .Net	-	✓	✓
C# UWP	✓	-	✓
LabVIEW	-	✓	✓
Java	-	✓	✓
Java for Android	✓	-	✓
TypeScript	-	-	✓
JavaScript / ECMAScript	-	-	✓
PHP	-	-	✓
VisualBasic .Net	-	✓	✓
Delphi	-	✓	✓
Objective-C	✓	-	✓

Support methods for different languages

7.8. Accessing modules through a hub

VirtualHub to work around USB access limitation

Only one application at a given time can have native access to Yoctopuce devices. This limitation is related to the fact that two different processes cannot talk to a USB device at the same time. Usually, this kind of problem is solved by a driver that takes care of the police work to prevent multiple processes fighting over the same device. But Yoctopuce products do not use drivers. Therefore, the first process that manages to access the native mode keeps it for itself until `UnregisterHub` or `FreeApi` is called.

If your application tries to communicate in native mode with Yoctopuce devices, but that another application prevents you from accessing them, you receive the following error message:

```
Another process is already using yAPI
```

The solution is to use VirtualHub locally on your machine and to use it as a gateway for your applications. In this way, if all your applications use VirtualHub, you do not have conflicts anymore and you can access all your devices all the time.

With a YoctoHub

A YoctoHub behaves itself exactly like a computer running VirtualHub. The only difference between a program using the Yoctopuce API with modules in native USB and the same program with Yoctopuce modules connected to a YoctoHub is located at the level of the `RegisterHub` function call. To use USB modules connected natively, the `RegisterHub` parameter is `usb`. To use modules connected to a YoctoHub, you must simply replace this parameter by the IP address of the YoctoHub.

So there are three possible modes: native mode, network mode via VirtualHub on your local machine, or via a YoctoHub. To switch from native to network mode on your local machine, you only need to change the parameter when calling `YAPI.RegisterHub`, as shown in the examples below:

```
YAPI.RegisterHub("usb",errmsg); // native USB mode

YAPI.RegisterHub("127.0.0.1",errmsg); // local network mode with VirtualHub

YAPI.RegisterHub("192.168.0.10",errmsg); // YoctoHub mode, with 192.168.0.10 as YoctoHub IP address
```

7.9. Programming, where to start?

At this point of the user's guide, you should know the main theoretical points of your Yocto-MaxiDisplay. It is now time to practice. You must download the Yoctopuce library for your favorite programming language from the Yoctopuce web site². Then skip directly to the chapter corresponding to the chosen programming language.

All the examples described in this guide are available in the programming libraries. For some languages, the libraries also include some complete graphical applications, with their source code.

When you have mastered the basic programming of your module, you can turn to the chapter on advanced programming that describes some techniques that will help you make the most of your Yocto-MaxiDisplay.

² <http://www.yoctopuce.com/EN/libraries.php>

8. Using the Yocto-MaxiDisplay in command line

When you want to perform a punctual operation on your Yocto-MaxiDisplay, such as reading a value, assigning a logical name, and so on, you can obviously use VirtualHub, but there is a simpler, faster, and more efficient method: the command line API.

The command line API is a set of executables, one by type of functionality offered by the range of Yoctopuce products. These executables are provided pre-compiled for all the Yoctopuce officially supported platforms/OS. Naturally, the executable sources are also provided¹.

8.1. Installing

Download the command line API². You do not need to run any setup, simply copy the executables corresponding to your platform/OS in a directory of your choice. You may add this directory to your PATH variable to be able to access these executables from anywhere. You are all set, you only need to connect your Yocto-MaxiDisplay, open a shell, and start working by typing for example:

```
C:\>YDisplay any -layer 0 drawText 64 16 CENTER "Hello world!"
```

To use the command line API on Linux, you need either have root privileges or to define an *udev* rule for your system. See the *Troubleshooting* chapter for more details.

8.2. Use: general description

All the command line API executables work on the same principle. They must be called the following way

```
C:\>Executable [options] [target] command [parameter]
```

[options] manage the global workings of the commands, they allow you, for instance, to pilot a module remotely through the network, or to force the module to save its configuration after executing the command.

[target] is the name of the module or of the function to which the command applies. Some very generic commands do not need a target. You can also use the aliases "*any*" and "*all*", or a list of names separated by comas without space.

¹ If you want to recompile the command line API, you also need the C++ API.

² <http://www.yoctopuce.com/EN/libraries.php>

`command` is the command you want to run. Almost all the functions available in the classic programming APIs are available as commands. You need to respect neither the case nor the underlined characters in the command name.

[parameters] are logically the parameters needed by the command.

At any time, the command line API executables can provide a rather detailed help. Use for instance:

```
C:\>executable /help
```

to know the list of available commands for a given command line API executable, or even:

```
C:\>executable command /help
```

to obtain a detailed description of the parameters of a command.

8.3. Control of the Display function

To control the Display function of your Yocto-MaxiDisplay, you need the YDisplay executable file.

For instance, you can launch:

```
C:\>YDisplay any -layer 0 drawText 64 16 CENTER "Hello world!"
```

This example uses the *"any"* target to indicate that we want to work on the first Display function found among all those available on the connected Yoctopuce modules when running. This prevents you from having to know the exact names of your function and of your module.

But you can use logical names as well, as long as you have configured them beforehand. Let us imagine a Yocto-MaxiDisplay module with the *YD128X64-123456* serial number which you have called *"MyModule"*, and its display function which you have renamed *"MyFunction"*. The five following calls are strictly equivalent (as long as *MyFunction* is defined only once, to avoid any ambiguity).

```
C:\>YDisplay YD128X64-123456.display describe
C:\>YDisplay YD128X64-123456.MyFunction describe
C:\>YDisplay MyModule.display describe
C:\>YDisplay MyModule.MyFunction describe
C:\>YDisplay MyFunction describe
```

To work on all the Display functions at the same time, use the *"all"* target.

```
C:\>YDisplay all describe
```

For more details on the possibilities of the YDisplay executable, use:

```
C:\>YDisplay /help
```

8.4. Control of the module part

Each module can be controlled in a similar way with the help of the YModule executable. For example, to obtain the list of all the connected modules, use:

```
C:\>YModule inventory
```

You can also use the following command to obtain an even more detailed list of the connected modules:

```
C:\>YModule all describe
```

Each `xxx` property of the module can be obtained thanks to a command of the `get_xxxx()` type, and the properties which are not read only can be modified with the `set_xxx()` command. For example:

```
C:\>YModule YD128X64-12346 set_logicalName MonPremierModule
C:\>YModule YD128X64-12346 get_logicalName
```

Changing the settings of the module

When you want to change the settings of a module, simply use the corresponding `set_xxx` command. However, this change happens only in the module RAM: if the module restarts, the changes are lost. To store them permanently, you must tell the module to save its current configuration in its nonvolatile memory. To do so, use the `saveToFlash` command. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash` method. For example:

```
C:\>YModule YD128X64-12346 set_logicalName MonPremierModule
C:\>YModule YD128X64-12346 saveToFlash
```

Note that you can do the same thing in a single command with the `-s` option.

```
C:\>YModule -s YD128X64-12346 set_logicalName MonPremierModule
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

8.5. Limitations

The command line API has the same limitation than the other APIs: there can be only one application at a given time which can access the modules natively. By default, the command line API works in native mode.

You can easily work around this limitation by using a Virtual Hub: run `VirtualHub3` on the concerned machine, and use the executables of the command line API with the `-r` option. For example, if you use:

```
C:\>YModule inventory
```

you obtain a list of the modules connected by USB, using a native access. If another command which accesses the modules natively is already running, this does not work. But if you run `VirtualHub`, and you give your command in the form:

```
C:\>YModule -r 127.0.0.1 inventory
```

it works because the command is not executed natively anymore, but through `VirtualHub`. Note that `VirtualHub` counts as a native application.

³ <http://www.yoctopuce.com/EN/virtualhub.php>

9. Using the Yocto-MaxiDisplay with Python

Python is an interpreted object oriented language developed by Guido van Rossum. Among its advantages is the fact that it is free, and the fact that it is available for most platforms, Windows as well as UNIX. It is an ideal language to write small scripts on a napkin. The Yoctopuce library is compatible with Python 2.7 and 3.x up to the latest official versions. It works under Windows, macOS, and Linux, Intel as well as ARM. Python interpreters are available on the Python web site¹.

9.1. Source files

The Yoctopuce library classes² for Python that you will use are provided as source files. Copy all the content of the *Sources* directory in the directory of your choice and add this directory to the *PYTHONPATH* environment variable. If you use an IDE to program in Python, refer to its documentation to configure it so that it automatically finds the API source files.

9.2. Dynamic library

A section of the low-level library is written in C, but you should not need to interact directly with it: it is provided as a DLL under Windows, as a *.so* files under UNIX, and as a *.dylib* file under macOS. Everything was done to ensure the simplest possible interaction from Python: the distinct versions of the dynamic library corresponding to the distinct operating systems and architectures are stored in the *cdll* directory. The API automatically loads the correct file during its initialization. You should not have to worry about it.

If you ever need to recompile the dynamic library, its complete source code is located in the Yoctopuce C++ library.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

9.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Python code snippet to use the Display function.

¹ <http://www.python.org/download/>

² www.yoctopuce.com/EN/libraries.php

```
[...]
# Enable detection of USB devices
errmsg=YRefParam()
YAPI.RegisterHub("usb",errmsg)
[...]

# Retrieve the object used to interact with the device
display = YDisplay.FindDisplay("YD128X64-123456.display")

# Hot-plug is easy: just check that the device is online
if display.isOnline():
    # Use display.get_displayLayer()
    [...]

[...]
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter "usb", it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI.SUCCESS` and `errmsg` contains the error message.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named "MyModule", and for which you have given the `display` function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MyFunction")
display = YDisplay.FindDisplay("MyModule.display")
display = YDisplay.FindDisplay("MyModule.MyFunction")
display = YDisplay.FindDisplay("MyFunction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

About python imports

This documentation assumes that you are using the Python library downloaded directly from the Yoctopuce website, but if you are using the library installed with PIP, then you will need to prefix all imports with `yoctopuce..` Meaning all the import examples shown in the documentation, such as:

```
from yocto_api import *
```

need to be converted , when the yoctopuce library was installed by PIP, to:

```
from yoctopuce.yocto_api import *
```

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch Python and open the corresponding sample script provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *
from yocto_display import *

def usage():
    scriptname = os.path.basename(sys.argv[0])
    print("Usage:")
    print(scriptname + ' <serial_number>')
    print(scriptname + ' <logical_name>')
    print(scriptname + ' any ')
    sys.exit()

def die(msg):
    sys.exit(msg + ' (check USB cable)')

errmsg = YRefParam()

if len(sys.argv) < 2:
    usage()

target = sys.argv[1]

# Setup the API to use local USB devices
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("init error" + errmsg.value)

if target == 'any':
    # retrieve any RGB led
    disp = YDisplay.FirstDisplay()
    if disp is None:
        die('No module connected')
else:
    disp = YDisplay.FindDisplay(target + ".display")

if not disp.isOnline():
    die("Module not connected ")

# display clean up
disp.resetAll()

# retrieve the display size
w = disp.get_displayWidth()
h = disp.get_displayHeight()

# retrieve the first layer
l0 = disp.get_displayLayer(0)
l0.clear()

# display a text in the middle of the screen
l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN.CENTER, "Hello world!")

# visualize each corner
l0.moveTo(0, 5)
l0.lineTo(0, 0)
l0.lineTo(5, 0)
l0.moveTo(0, h - 6)
l0.lineTo(0, h - 1)
l0.lineTo(5, h - 1)
l0.moveTo(w - 1, h - 6)
l0.lineTo(w - 1, h - 1)
l0.lineTo(w - 6, h - 1)
l0.moveTo(w - 1, 5)
```

```

10.lineTo(w - 1, 0)
10.lineTo(w - 6, 0)

# draw a circle in the top left corner of layer 1
l1 = disp.get_displayLayer(1)
l1.clear()
l1.drawCircle(h / 8, h / 8, h / 8)

# and animate the layer
print("Use Ctrl-C to stop")
x = 0
y = 0
vx = 1
vy = 1
while disp.isOnline():
    x += vx
    y += vy
    if x < 0 or x > w - (h / 4):
        vx = -vx
    if y < 0 or y > h - (h / 4):
        vy = -vy
    l1.setLayerPosition(x, y, 0)
    YAPI.Sleep(5, errmsg)
YAPI.FreeAPI()

```

9.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *

def usage():
    sys.exit("usage: demo <serial or logical name> [ON/OFF]")

errmsg = YRefParam()
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("RegisterHub error: " + str(errmsg))

if len(sys.argv) < 2:
    usage()

m = YModule.FindModule(sys.argv[1]) # # use serial or logical name

if m.isOnline():
    if len(sys.argv) > 2:
        if sys.argv[2].upper() == "ON":
            m.set_beacon(YModule.BEACON_ON)
        if sys.argv[2].upper() == "OFF":
            m.set_beacon(YModule.BEACON_OFF)

    print("serial:      " + m.get_serialNumber())
    print("logical name: " + m.get_logicalName())
    print("luminosity:   " + str(m.get_luminosity()))
    if m.get_beacon() == YModule.BEACON_ON:
        print("beacon:      ON")
    else:
        print("beacon:      OFF")
    print("upTime:      " + str(m.get_upTime() / 1000) + " sec")
    print("USB current: " + str(m.get_usbCurrent()) + " mA")
    print("logs:\n" + m.get_lastLogs())
else:
    print(sys.argv[1] + " not connected (check identification and USB cable)")
YAPI.FreeAPI()

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *

def usage():
    sys.exit("usage: demo <serial or logical name> <new logical name>")

if len(sys.argv) != 3:
    usage()

errmsg = YRefParam()
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("RegisterHub error: " + str(errmsg))

m = YModule.FindModule(sys.argv[1]) # use serial or logical name
if m.isOnline():
    newname = sys.argv[2]
    if not YAPI.CheckLogicalName(newname):
        sys.exit("Invalid name (" + newname + ")")
    m.set_logicalName(newname)
    m.saveToFlash() # do not forget this
    print("Module: serial= " + m.get_serialNumber() + " / name= " + m.get_logicalName())
else:
    sys.exit("not connected (check identification and USB cable)")
YAPI.FreeAPI()
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```
#!/usr/bin/python
# -*- coding: utf-8 -*-
import os, sys

from yocto_api import *

errmsg = YRefParam()

# Setup the API to use local USB devices
if YAPI.RegisterHub("usb", errmsg) != YAPI.SUCCESS:
    sys.exit("init error" + str(errmsg))

print('Device list')
```

```
module = YModule.FirstModule()
while module is not None:
    print(module.get_serialNumber() + ' (' + module.get_productName() + ')')
    module = module.nextModule()
YAPI.FreeAPI()
```

9.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

10. Using Yocto-MaxiDisplay with C++

C++ is not the simplest language to master. However, if you take care to limit yourself to its essential functionalities, this language can very well be used for short programs quickly coded, and it has the advantage of being easily ported from one operating system to another. Under Windows, C++ is supported with Microsoft Visual Studio 2017 and more recent versions. Under macOS, we support the XCode versions supported by Apple. And under Linux, we support all GCC version published since 2008. Moreover, under Max OS X and under Linux, you can compile the examples using a command line with GCC using the provided `GNUmakefile`. In the same manner under Windows, a `Makefile` allows you to compile examples using a command line, fully knowing the compilation and linking arguments.

Yoctopuce C++ libraries¹ are integrally provided as source files. A section of the low-level library is written in pure C, but you should not need to interact directly with it: everything was done to ensure the simplest possible interaction from C++. The library is naturally also available as binary files, so that you can link it directly if you prefer.

You will soon notice that the C++ API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface. You will find in the last section of this chapter all the information needed to create a wholly new project linked with the Yoctopuce libraries.

10.1. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a C++ code snippet to use the Display function.

```
#include "yocto_api.h"
#include "yocto_display.h"

[...]
// Enable detection of USB devices
String errmsg;
YAPI::RegisterHub("usb", errmsg);
[...]

// Retrieve the object used to interact with the device
YDisplay *display;
```

¹ www.yoctopuce.com/EN/libraries.php

```
display = YDisplay::FindDisplay("YD128X64-123456.display");

// Hot-plug is easy: just check that the device is online
if(display->isOnline())
{
    // Use display->get_displayLayer()
    [...]
}
```

Let's look at these lines in more details.

yocto_api.h et yocto_display.h

These two include files provide access to the functions allowing you to manage Yoctopuce modules. `yocto_api.h` must always be used, `yocto_display.h` is necessary to manage modules containing a display, such as Yocto-MaxiDisplay.

YAPI::RegisterHub

The `YAPI::RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter "usb", it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

YDisplay::FindDisplay

The `YDisplay::FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named "MyModule", and for which you have given the `display` function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
YDisplay *display = YDisplay::FindDisplay("YD128X64-123456.display");
YDisplay *display = YDisplay::FindDisplay("YD128X64-123456.MyFunction");
YDisplay *display = YDisplay::FindDisplay("MyModule.display");
YDisplay *display = YDisplay::FindDisplay("MyModule.MyFunction");
YDisplay *display = YDisplay::FindDisplay("MyFunction");
```

`YDisplay::FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay::FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YFindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch your C++ environment and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library. If you prefer to work with your favorite text editor, open the file `main.cpp`, and type `make` to build the example when you are done.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#include "yocto_api.h"
#include "yocto_display.h"
#include <iostream>
#include <stdio.h>
#include <stdlib.h>
```



```

using namespace std;

static void usage(void)
{
    cout << "Wrong command line arguments" << endl;
    cout << "usage: demo <serial_number>" << endl;
    cout << "      demo <logical_name>" << endl;
    cout << "      demo any (use any discovered device)" << endl;
    u64 now = YAPI::GetTickCount();
    while (YAPI::GetTickCount() - now < 3000) {
        // wait 3 sec to show the message
    }
    exit(1);
}

int main(int argc, const char * argv[])
{
    string      errmsg;
    string      target;
    YDisplay    *disp;
    YDisplayLayer *l0, *l1;
    int w, h, x, y, vx, vy;

    if(argc < 2) {
        usage();
    }

    // Setup the API to use local USB devices
    if (YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        usage();
        return 1;
    }

    target      = (string) argv[1];
    if (target == "any") {
        disp = YDisplay::FirstDisplay();
        if (disp == NULL) {
            cout << "No module connected (check USB cable)" << endl;
            usage();
            return 1;
        }
    } else {
        disp = YDisplay::FindDisplay(target + ".display");
    }

    if (!disp->isOnline()) {
        cout << "Module is offline (check USB cable)" << endl;
        usage();
        return 1;
    }

    disp->resetAll();
    // retrieve the display size
    w = disp->get_displayWidth();
    h = disp->get_displayHeight();

    // retrieve the first layer
    l0 = disp->get_displayLayer(0);
    l0->clear();

    // display a text in the middle of the screen
    l0->drawText(w / 2, h / 2, YDisplayLayer::ALIGN_CENTER, "Hello world!");
    // visualize each corner
    l0->moveTo(0, 5);
    l0->lineTo(0, 0);
    l0->lineTo(5, 0);
    l0->moveTo(0, h - 6);
    l0->lineTo(0, h - 1);
    l0->lineTo(5, h - 1);
    l0->moveTo(w - 1, h - 6);
    l0->lineTo(w - 1, h - 1);
    l0->lineTo(w - 6, h - 1);
    l0->moveTo(w - 1, 5);
    l0->lineTo(w - 1, 0);
    l0->lineTo(w - 6, 0);

```

```

// draw a circle in the top left corner of layer 1
l1 = disp->get_displayLayer(1);
l1->clear();
l1->drawCircle(h / 8, h / 8, h / 8);

// and animate the layer
cout << "Use Ctrl-C to stop";
x = 0;
y = 0;
vx = 1;
vy = 1;
while (disp->isOnline()) {
    x += vx;
    y += vy;
    if ((x < 0) || (x > w - (h / 4)))
        vx = -vx;
    if ((y < 0) || (y > h - (h / 4)))
        vy = -vy;
    l1->setLayerPosition(x, y, 0);
    YAPI::Sleep(5, errmsg);
}
YAPI::FreeAPI();
return 0;
}

```

10.2. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

#include <iostream>
#include <stdlib.h>

#include "yocto_api.h"

using namespace std;

static void usage(const char *exe)
{
    cout << "usage: " << exe << " <serial or logical name> [ON/OFF]" << endl;
    exit(1);
}

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices
    if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    if(argc < 2)
        usage(argv[0]);

    YModule *module = YModule::FindModule(argv[1]); // use serial or logical name

    if (module->isOnline()) {
        if (argc > 2) {
            if (string(argv[2]) == "ON")
                module->set_beacon(Y_BEACON_ON);
            else
                module->set_beacon(Y_BEACON_OFF);
        }
        cout << "serial:      " << module->get_serialNumber() << endl;
        cout << "logical name: " << module->get_logicalName() << endl;
        cout << "luminosity:  " << module->get_luminosity() << endl;
        cout << "beacon:      ";
        if (module->get_beacon() == Y_BEACON_ON)
            cout << "ON" << endl;
        else

```

```

        cout << "OFF" << endl;
    cout << "upTime: " << module->get_upTime() / 1000 << " sec" << endl;
    cout << "USB current: " << module->get_usbCurrent() << " mA" << endl;
    cout << "Logs:" << endl << module->get_lastLogs() << endl;
} else {
    cout << argv[1] << " not connected (check identification and USB cable)"
        << endl;
}
YAPI::FreeAPI();
return 0;
}

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

#include <iostream>
#include <stdlib.h>

#include "yocto_api.h"

using namespace std;

static void usage(const char *exe)
{
    cerr << "usage: " << exe << " <serial> <newLogicalName>" << endl;
    exit(1);
}

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices
    if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    if(argc < 2)
        usage(argv[0]);

    YModule *module = YModule::FindModule(argv[1]); // use serial or logical name

    if (module->isOnline()) {
        if (argc >= 3) {
            string newname = argv[2];
            if (!YCheckLogicalName(newname)) {
                cerr << "Invalid name (" << newname << ")" << endl;
                usage(argv[0]);
            }
            module->set_logicalName(newname);
            module->saveToFlash();
        }
        cout << "Current name: " << module->get_logicalName() << endl;
    } else {
        cout << argv[1] << " not connected (check identification and USB cable)"
            << endl;
    }
    YAPI::FreeAPI();
    return 0;
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.

```
#include <iostream>

#include "yocto_api.h"

using namespace std;

int main(int argc, const char * argv[])
{
    string      errmsg;

    // Setup the API to use local USB devices
    if(YAPI::RegisterHub("usb", errmsg) != YAPI::SUCCESS) {
        cerr << "RegisterHub error: " << errmsg << endl;
        return 1;
    }

    cout << "Device list: " << endl;

    YModule *module = YModule::FirstModule();
    while (module != NULL) {
        cout << module->get_serialNumber() << " ";
        cout << module->get_productName() << endl;
        module = module->nextModule();
    }
    YAPI::FreeAPI();
    return 0;
}
```

10.3. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.

- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errorMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

10.4. Integration variants for the C++ Yoctopuce library

Depending on your needs and on your preferences, you can integrate the library into your projects in several distinct manners. This section explains how to implement the different options.

Integration in source format (recommended)

Integrating all the sources of the library into your projects has several advantages:

- It guaranties the respect of the compilation conventions of your project (32/64 bits, inclusion of debugging symbols, unicode or ASCII characters, etc.);
- It facilitates debugging if you are looking for the cause of a problem linked to the Yoctopuce library;
- It reduces the dependencies on third party components, for example in the case where you would need to recompile this project for another architecture in many years;
- It does not require the installation of a dynamic library specific to Yoctopuce on the final system, everything is in the executable.

To integrate the source code, the easiest way is to simply include the `Sources` directory of your Yoctopuce library into your **IncludePath**, and to add all the files of this directory (including the sub-directory `yapi`) to your project.

For your project to build correctly, you need to link with your project the prerequisite system libraries, that is:

- For Windows: the libraries are added automatically
- For macOS: **IOKit.framework** and **CoreFoundation.framework**
- For Linux: **libm**, **libpthread**, **libusb1.0**, and **libstdc++**

Integration as a static library

With the integration of the Yoctopuce library as a static library, you do not need to install a dynamic library specific to Yoctopuce, everything is in the executable.

To use the static library, you must first compile it using the shell script `build.sh` on UNIX, or `build.bat` on Windows. This script, located in the root directory of the library, detects the OS and recompiles all the corresponding libraries as well as the examples.

Then, to integrate the static Yoctopuce library to your project, you must include the `Sources` directory of the Yoctopuce library into your **IncludePath**, and add the sub-directory `Binaries/...` corresponding to your operating system into your **libPath**.

Finally, for you project to build correctly, you need to link with your project the Yoctopuce library and the prerequisite system libraries:

- For Windows: **yocto-static.lib**
- For macOS: **libyocto-static.a**, **IOKit.framework**, and **CoreFoundation.framework**
- For Linux: **libyocto-static.a**, **libm**, **libpthread**, **libusb1.0**, and **libstdc++**.

Note, under Linux, if you wish to compile in command line with GCC, it is generally advisable to link system libraries as dynamic libraries, rather than as static ones. To mix static and dynamic libraries on the same command line, you must pass the following arguments:

```
gcc (...) -Wl,-Bstatic -lyocto-static -Wl,-Bdynamic -lm -lpthread -lusb-1.0 -lstdc++
```

Integration as a dynamic library

Integration of the Yoctopuce library as a dynamic library allows you to produce an executable smaller than with the two previous methods, and to possibly update this library, if a patch reveals itself necessary, without needing to recompile the source code of the application. On the other hand, it is an integration mode which systematically requires you to copy the dynamic library on the target machine where the application will run (**yocto.dll** for Windows, **libyocto.so.1.0.1** for macOS and Linux).

To use the dynamic library, you must first compile it using the shell script `build.sh` on UNIX, or `build.bat` on Windows. This script, located in the root directory of the library, detects the OS and recompiles all the corresponding libraries as well as the examples.

Then, To integrate the dynamic Yoctopuce library to your project, you must include the `Sources` directory of the Yoctopuce library into your **IncludePath**, and add the sub-directory `Binaries/...` corresponding to your operating system into your **LibPath**.

Finally, for you project to build correctly, you need to link with your project the dynamic Yoctopuce library and the prerequisite system libraries:

- For Windows: **yocto.lib**
- For macOS: **libyocto**, **IOKit.framework**, and **CoreFoundation.framework**
- For Linux: **libyocto**, **libm**, **libpthread**, **libusb1.0**, and **libstdc++**.

With GCC, the command line to compile is simply:

```
gcc (...) -lyocto -lm -lpthread -lusb-1.0 -lstdc++
```

11. Using Yocto-MaxiDisplay with C#

C# (pronounced C-Sharp) is an object-oriented programming language promoted by Microsoft, it is somewhat similar to Java. Like Visual-Basic and Delphi, it allows you to create Windows applications quite easily. C# is supported under Windows Visual Studio 2017 and its more recent versions.

Our programming library is also compatible with *Mono*, the open source version of C# that also works on Linux and macOS. Under Linux, use Mono version 5.20 or more recent. Under macOS, support is limited to 32bit systems, which makes it virtually useless nowadays. You will find on our web site various articles that describe how to configure Mono to use our library.

11.1. Installation

Download the Visual C# Yoctopuce library from the Yoctopuce web site¹. There is no setup program, simply copy the content of the zip file into the directory of your choice. You mostly need the content of the `Sources` directory. The other directories contain the documentation and a few sample programs. All sample projects are Visual C# 2010, projects, if you are using a previous version, you may have to recreate the projects structure from scratch.

11.2. Using the Yoctopuce API in a Visual C# project

The Visual C#.NET Yoctopuce library is composed of a DLL and of source files in Visual C#. The DLL is not a .NET DLL, but a classic DLL, written in C, which manages the low level communications with the modules². The source files in Visual C# manage the high level part of the API. Therefore, you need both this DLL and the .cs files of the `sources` directory to create a project managing Yoctopuce modules.

Configuring a Visual C# project

The following indications are provided for Visual Studio Express 2010, but the process is similar for other versions. Start by creating your project. Then, on the *Solution Explorer* panel, right click on your project, and select "Add" and then "Add an existing item".

A file selection window opens. Select the `yocto_api.cs` file and the files corresponding to the functions of the Yoctopuce modules that your project is going to manage. If in doubt, select all the files.

¹ www.yoctopuce.com/EN/libraries.php

² The sources of this DLL are available in the C++ API

You then have the choice between simply adding these files to your project, or to add them as links (the **Add** button is in fact a scroll-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply keeps a link on the original files. We recommend you to use links, which makes updates of the library much easier.

Then add in the same manner the `yapi.dll` DLL, located in the `Sources/dll` directory³. Then, from the **Solution Explorer** window, right click on the DLL, select **Properties** and in the **Properties** panel, set the **Copy to output folder** to **always**. You are now ready to use your Yoctopuce modules from Visual Studio.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

11.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a C# code snippet to use the Display function.

```
[...]
// Enable detection of USB devices
string errmsg = "";
YAPI.RegisterHub("usb", errmsg);
[...]

// Retrieve the object used to interact with the device
YDisplay display = YDisplay.FindDisplay("YD128X64-123456.display");

// Hot-plug is easy: just check that the device is online
if (display.isOnline())
{
    // Use display.get_displayLayer()
    [...]
}
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI.SUCCESS` and `errmsg` contains the error message.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display");
display = YDisplay.FindDisplay("YD128X64-123456.MyFunction");
display = YDisplay.FindDisplay("MyModule.display");
display = YDisplay.FindDisplay("MyModule.MyFunction");
display = YDisplay.FindDisplay("MyFunction");
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

³ Remember to change the filter of the selection window, otherwise the DLL will not show.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch Microsoft Visual C# and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string execname = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine(execname + " <serial_number> ");
            Console.WriteLine(execname + " <logical_name>");
            Console.WriteLine(execname + " any ");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }

        static void Main(string[] args)
        {
            string errmsg = "";
            string target;
            YDisplay disp;
            YDisplayLayer l0, l1;
            int h, w, y, x, vx, vy;
            if (args.Length < 1) usage();

            target = args[0].ToUpper();

            // API init
            if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errmsg);
                Environment.Exit(0);
            }

            // find the display according to command line parameters
            if (target == "ANY") {
                disp = YDisplay.FirstDisplay();
                if (disp == null) {
                    Console.WriteLine("No module connected (check USB cable) ");
                    Environment.Exit(0);
                }
            } else disp = YDisplay.FindDisplay(target + ".display");

            if (!disp.isOnline()) {
                Console.WriteLine("Module not connected (check identification and USB cable) ");
                Environment.Exit(0);
            }

            //clean up
            disp.resetAll();

            // retrieve the display size
            w = disp.get_displayWidth();
        }
    }
}
```

```

h = disp.get_displayHeight();

// retrieve the first layer
l0 = disp.get_displayLayer(0);

// display a text in the middle of the screen
l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN.CENTER, "Hello world!");

// visualize each corner
l0.moveTo(0, 5);
l0.lineTo(0, 0);
l0.lineTo(5, 0);
l0.moveTo(0, h - 6);
l0.lineTo(0, h - 1);
l0.lineTo(5, h - 1);
l0.moveTo(w - 1, h - 6);
l0.lineTo(w - 1, h - 1);
l0.lineTo(w - 6, h - 1);
l0.moveTo(w - 1, 5);
l0.lineTo(w - 1, 0);
l0.lineTo(w - 6, 0);

// draw a circle in the top left corner of layer 1
l1 = disp.get_displayLayer(1);
l1.clear();
l1.drawCircle(h / 8, h / 8, h / 8);

// and animate the layer
Console.WriteLine("Use Ctrl-C to stop");
x = 0;
y = 0;
vx = 1;
vy = 1;
while (disp.isOnline()) {
    x += vx;
    y += vy;
    if ((x < 0) || (x > w - (h / 4))) vx = -vx;
    if ((y < 0) || (y > h - (h / 4))) vy = -vy;
    l1.setLayerPosition(x, y, 0);
    YAPI.Sleep(5, ref errormsg);
}
YAPI.FreeAPI();
}
}

```

11.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string execname = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine("Usage:");
            Console.WriteLine(execname + " <serial or logical name> [ON/OFF]");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }

        static void Main(string[] args)
        {
            YModule m;

```

```

string errmsg = "";

if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
    Console.WriteLine("RegisterHub error: " + errmsg);
    Environment.Exit(0);
}

if (args.Length < 1) usage();

m = YModule.FindModule(args[0]); // use serial or logical name

if (m.isOnline()) {
    if (args.Length >= 2) {
        if (args[1].ToUpper() == "ON") {
            m.set_beacon(YModule.BEACON_ON);
        }
        if (args[1].ToUpper() == "OFF") {
            m.set_beacon(YModule.BEACON_OFF);
        }
    }

    Console.WriteLine("serial: " + m.get_serialNumber());
    Console.WriteLine("logical name: " + m.get_logicalName());
    Console.WriteLine("luminosity: " + m.get_luminosity().ToString());
    Console.WriteLine("beacon: ");
    if (m.get_beacon() == YModule.BEACON_ON)
        Console.WriteLine("ON");
    else
        Console.WriteLine("OFF");
    Console.WriteLine("upTime: " + (m.get_upTime() / 1000).ToString() + " sec");
    Console.WriteLine("USB current: " + m.get_usbCurrent().ToString() + " mA");
    Console.WriteLine("Logs:\r\n" + m.get_lastLogs());

} else {
    Console.WriteLine(args[0] + " not connected (check identification and USB cable)");
}
YAPI.FreeAPI();
}
}

```

Each property xxx of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void usage()
        {
            string execname = System.AppDomain.CurrentDomain.FriendlyName;
            Console.WriteLine("Usage:");
            Console.WriteLine("usage: demo <serial or logical name> <new logical name>");
            System.Threading.Thread.Sleep(2500);
            Environment.Exit(0);
        }
    }
}

```

```

static void Main(string[] args)
{
    YModule m;
    string errmsg = "";
    string newname;

    if (args.Length != 2) usage();

    if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
        Console.WriteLine("RegisterHub error: " + errmsg);
        Environment.Exit(0);
    }

    m = YModule.FindModule(args[0]); // use serial or logical name

    if (m.isOnline()) {
        newname = args[1];
        if (!YAPI.CheckLogicalName(newname)) {
            Console.WriteLine("Invalid name (" + newname + ")");
            Environment.Exit(0);
        }

        m.set_logicalName(newname);
        m.saveToFlash(); // do not forget this

        Console.Write("Module: serial= " + m.get_serialNumber());
        Console.WriteLine(" / name= " + m.get_logicalName());
    } else {
        Console.WriteLine("not connected (check identification and USB cable)");
    }
    YAPI.FreeAPI();
}
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;

namespace ConsoleApplication1
{
    class Program
    {
        static void Main(string[] args)
        {
            YModule m;
            string errmsg = "";

            if (YAPI.RegisterHub("usb", ref errmsg) != YAPI.SUCCESS) {
                Console.WriteLine("RegisterHub error: " + errmsg);
                Environment.Exit(0);
            }

            Console.WriteLine("Device list");
            m = YModule.FirstModule();
            while (m != null) {
                Console.WriteLine(m.get_serialNumber() + " (" + m.get_productName() + ")");
                m = m.nextModule();
            }
            YAPI.FreeAPI();
        }
    }
}

```

```

    }
}

```

11.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.


When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

12. Using the Yocto-MaxiDisplay with LabVIEW

LabVIEW is edited by National Instruments since 1986. It is a graphic development environment: rather than writing lines of code, the users draw their programs, somewhat like a flow chart. LabVIEW was designed mostly to interface measuring tools, hence the *Virtual Instruments* name for LabVIEW programs. With visual programming, drawing complex algorithms becomes quickly fastidious. The LabVIEW Yoctopuce library was thus designed to make it as easy to use as possible. In other words, LabVIEW being an environment extremely different from other languages supported by Yoctopuce, there are major differences between the LabVIEW API and the other APIs.

12.1. Architecture

The LabVIEW library is based on the Yoctopuce DotNetProxy library contained in the DotNetProxyLibrary.dll DLL. In fact, it is this DotNetProxy library which takes care of most of the work by relying on the C# library which, in turn, uses the low level library coded in yapi.dll (32bits) and amd64\yapi.dll (64bits).

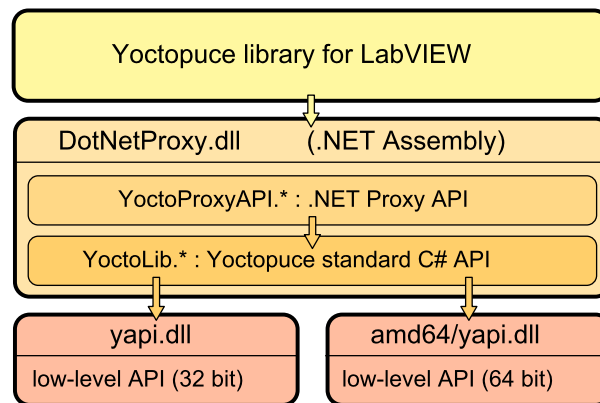

LabVIEW Yoctopuce API architecture

You must therefore imperatively distribute the *DotNetProxyLibrary.dll*, *yapi.dll*, and *amd64\yapi.dll* with your LabVIEW applications using the Yoctopuce API.

If need be, you can find the low level API sources in the C# library and the *DotNetProxyLibrary.dll* sources in the *DotNetProxy* library.

12.2. Compatibility

Firmware

For the LabVIEW Yoctopuce library to work correctly with your Yoctopuce modules, these modules need to have firmware 37120, or higher.

LabVIEW for Linux and MacOS

At the time of writing, the LabVIEW Yoctopuce API has been tested under Windows only. It is therefore most likely that it simply does not work with the Linux and MacOS versions of LabVIEW.

LabVIEW NXG

The LabVIEW Yoctopuce library uses many techniques which are not yet available in the new generation of LabVIEW. The library is therefore absolutely not compatible with LabVIEW NXG.

About DotNetProxyLibrary.dll

In order to be compatible with as many versions of Windows as possible, including Windows XP, the *DotNetProxyLibrary.dll* library is compiled in .NET 3.5, which is available by default on all the Windows versions since XP.


12.3. Installation

Download the LabVIEW library from the Yoctopuce web site¹. It is a ZIP file in which there is a distinct directory for each version of LabVIEW. Each of these directories contains two subdirectories: the first one contains programming examples for each Yoctopuce product; the second one, called *VIs*, contains all the VIs of the API and the required DLLs.

Depending on Windows configuration and the method used to copy the *DotNetProxyLibrary.dll* on your system, Windows may block it because it comes from an other computer. This may happen when the library zip file is uncompressed with Window's file explorer. If the DLL is blocked, LabVIEW will not be able to load it and an error 1386 will occur whenever any of the Yoctopuce VIs is executed.

There are two ways to fix this. The simplest is to unblock the file with the Windows file explorer: *right click / properties* on the *DotNetProxyLibrary.dll* file, and click on the *unblock* button. But this has to be done each time a new version of the DLL is copied on your system.

¹ <http://www.yoctopuce.com/EN/libraries.php>

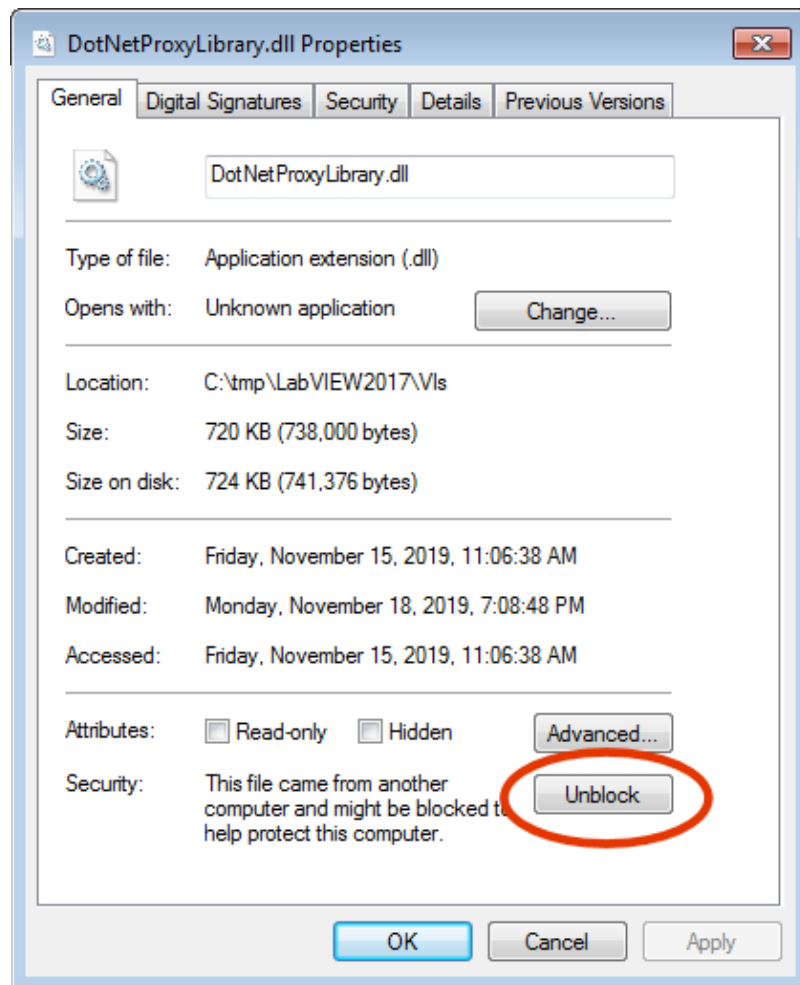

Unblock the DotNetProxyLibrary DLL.

Alternatively, one can modify the LabVIEW configuration by creating, in the same directory as the labview.exe executable, an XML file called *labview.exe.config* containing the following code:

```
<?xml version="1.0"?>
<configuration>
  <runtime>
    <loadFromRemoteSources enabled="true" />
  </runtime>
</configuration>
```

Make sure to select the correct directory depending on the LabVIEW version you are using (32 bits vs. 64 bits). You can find more information about this file on the National Instruments web site.²


To install the LabVIEW Yoctopuce API, there are several methods.

Method 1 : "Take-out" installation

The simplest way to use the Yoctopuce library is to copy the content of the *VIs* directory wherever you want and to use the VIs in LabVIEW with a simple drag-n-drop operation.

To use the examples provided with the API, it is simpler if you add the directory of Yoctopuce VIs into the list of where LabVIEW must look for VIs that it has not found. You can access this list through the *Tools > Options > Paths > VI Search Path* menu.


² <https://knowledge.ni.com/KnowledgeArticleDetails?id=kA00Z000000P8XnSAK>

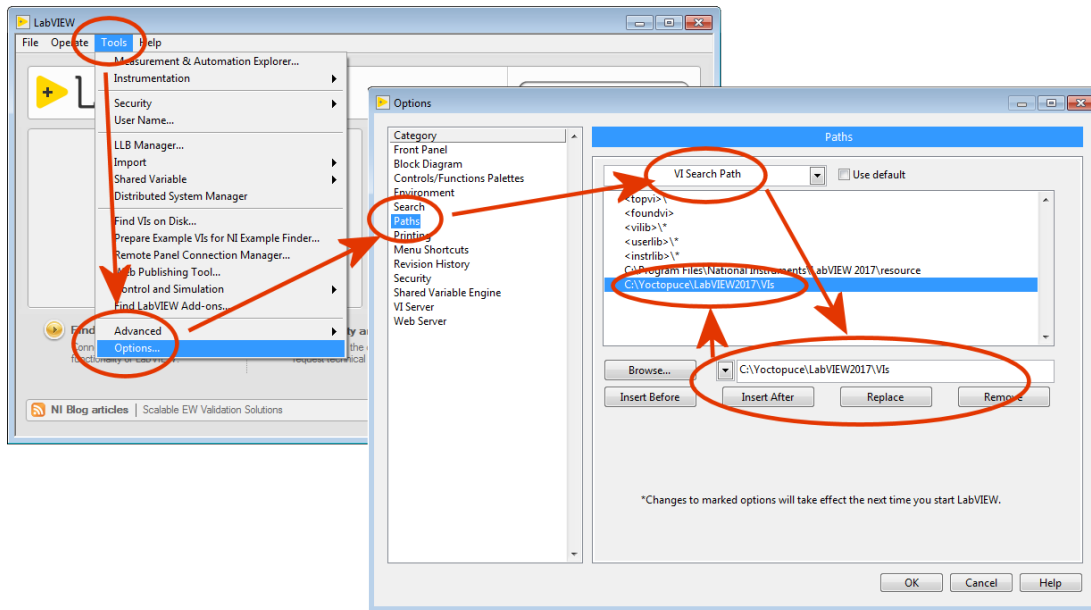

Configuring the "VI Search Path"

Method 2 : Provided installer

In each LabVIEW folder of the Library, you will find a VI named "*Install.vi*", just open the one matching your LabVIEW version.

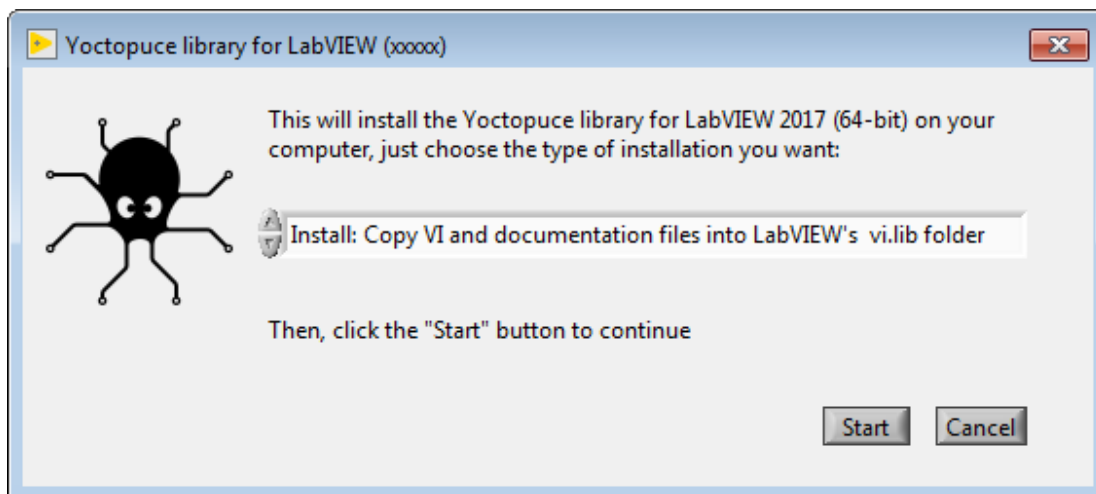

The provider installer

This installer provide 3 installation options:

Install: Keep VI and documentation files where they are.

With this option, VI files are keep in the place where the library has been unzipped. So you will have to make sure these files are not deleted as long as you need them. Here is what the installer will do if that option is chosen:

- All references to Yoctopuce any library paths will be removed from the *viSearchPath* option in the *labview.ini* file.
- A dir.mnu palette file referring to VIs in the install folder will be created in *C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce*
- A reference to the VIs source install path will inserted into the *viSearchPath* option in the *labview.ini* file.

Install: Copy VI and documentation files into LabVIEW's vi.lib folder

In that case all required files are copied inside the LabVIEW's installation folder, so you will be able to delete the installation folder once the original installation is complete. Note that programming examples won't be copied. Here is the exact behaviour of the installer in that case:

- All references to Yoctopuce library paths will be removed from *viSearchPath* in *labview.ini* file
- All VIs, DLLs, and documentation files will be copied into:
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\Yoctopuce
- VIs will be patched with the path to copied documentation files
- A dir.mnu palette file referring to copied VIs will be created in
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce

Uninstall Yoctopuce Library

this option is meant to remove the LabVIEW library from your LabVIEW installation, here is how it is done:

- All references to Yoctopuce library paths will be removed from *viSearchPath* in *labview.ini* file
- Following folders, if exists, will be removed:
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\addons\Yoctopuce
C:\Program Files xx\National Instruments\LabVIEW 20xx\vi.lib\Yoctopuce

In any case, if the *labview.ini* file needs to be modified, a backup copy will be made beforehand.


The installer identifies Yoctopuce VIs library folders by checking the presence of the *YRegisterHub.vi* file in said folders.

Once the installation is complete, a Yoctopuce palette will appear in *Functions/Addons* menu.

Method 3 : Installation in a LabVIEW palette (ancillary method)

The steps to manually install the VIs directly in the LabVIEW palette are somewhat more complex. You can find the detailed procedure on the National Instruments web site ³, but here is a summary:


1. Create a *Yoctopuce/API* directory in the *C:\Program Files\National Instruments\LabVIEW xxxx\vi.lib* directory and copy all the VIs and DLLs of the *VIs* directory into it.
2. Create a *Yoctopuce* directory in the *C:\Program Files\National Instruments\LabVIEW xxxx\menus\Categories* directory.
3. Run LabVIEW and select the option *Tools>Advanced>Edit Palette Set*

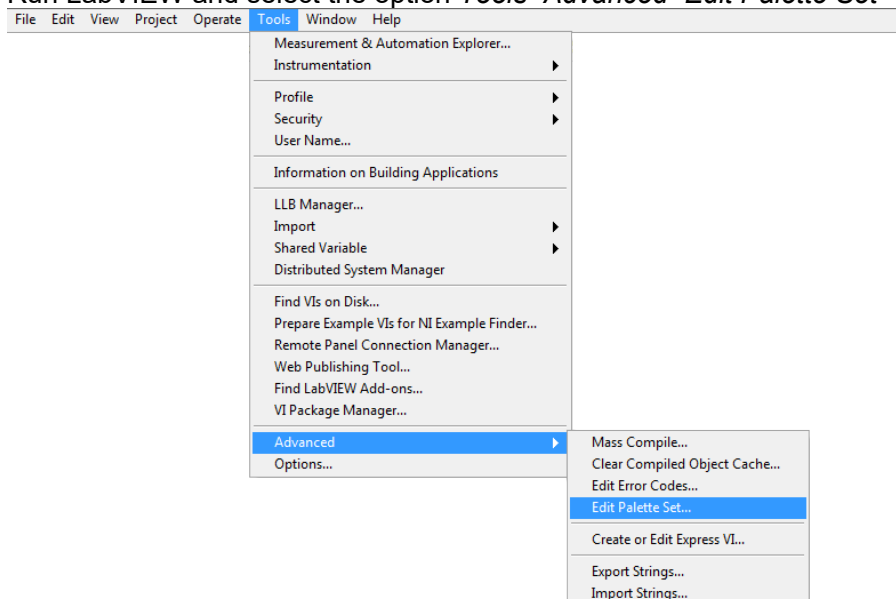

³ <https://forums.ni.com/t5/Developer-Center-Resources/Creating-a-LabVIEW-Palette/ta-p/3520557>


Three windows pop up:

- "Edit Controls and Functions Palette Set"
- "Functions"
- "Controls"

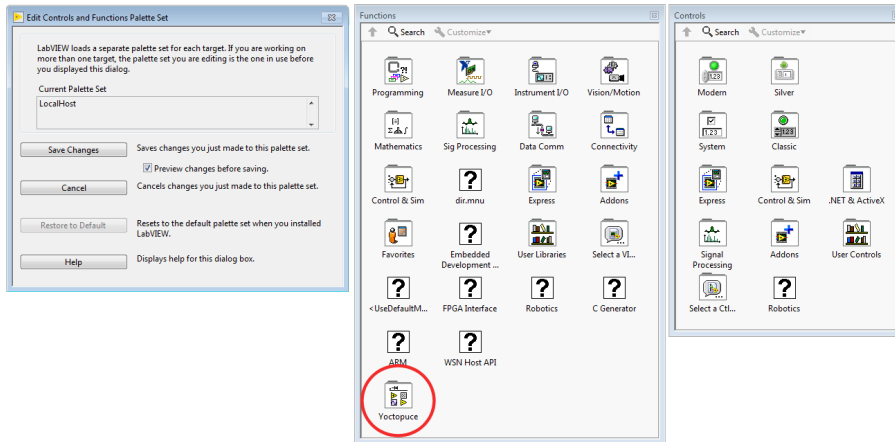


In the *Function* window, there is a *Yoctopuce* icon. Double-click it to create an empty "Yoctopuce" window.

4. In the Yoctopuce window, perform a *Right click>Insert>Vi(s)*..

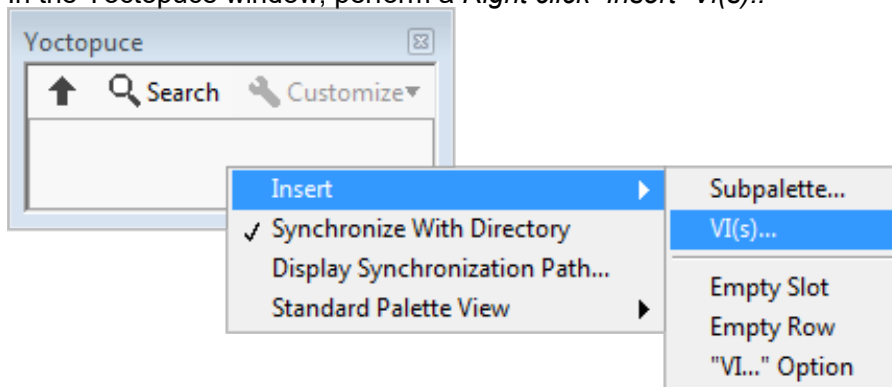


in order to open a file chooser. Put the file chooser in the *vi.lib\Yoctopuce\API* directory that you have created in step 1 and click on *Current Folder*

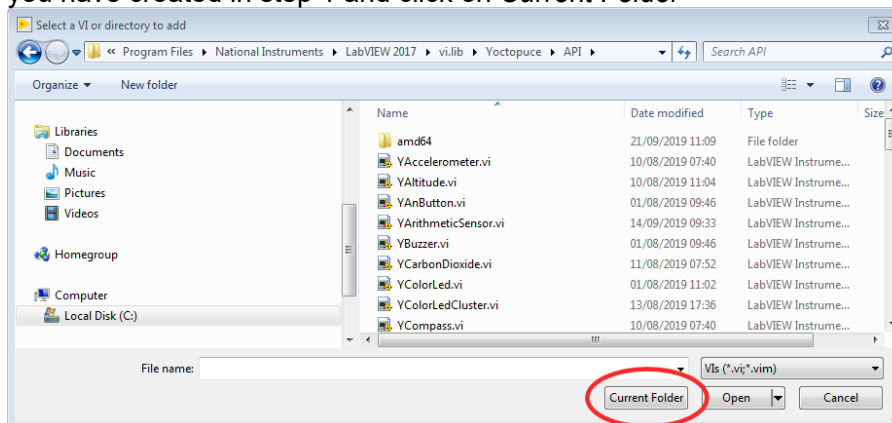


All the Yoctopuce VIs now appear in the Yoctopuce window. By default, they are sorted by alphabetical order, but you can arrange them as you see fit by moving them around with the mouse. For the palette to be easy to use, we recommend to reorganize the icons over 8 columns.

5. In the "Edit Controls and Functions Palette Set" window, click on the "Save Changes" button, the window indicates that it has created a *dir.mnu* file in your *Documents* directory.

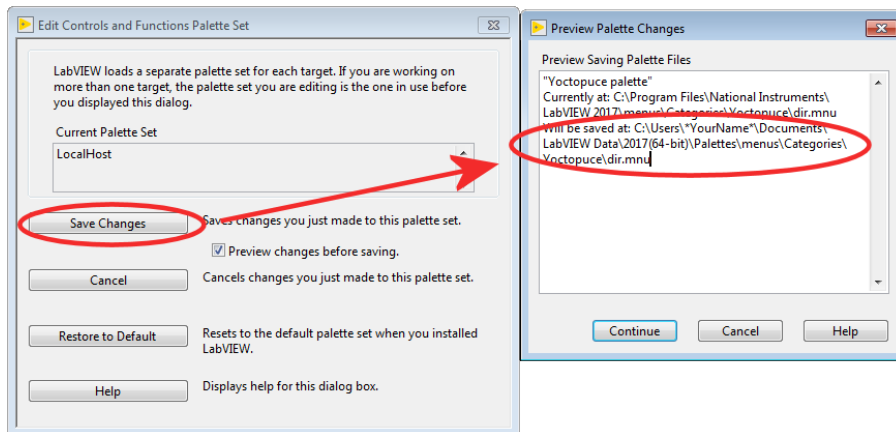

Copy this file in the "menus\Categories\Yoctopuce" directory that you have created in step 2.

- Restart LabVIEW, the LabVIEW palette now contains a Yoctopuce sub-palette with all the VIs of the API.

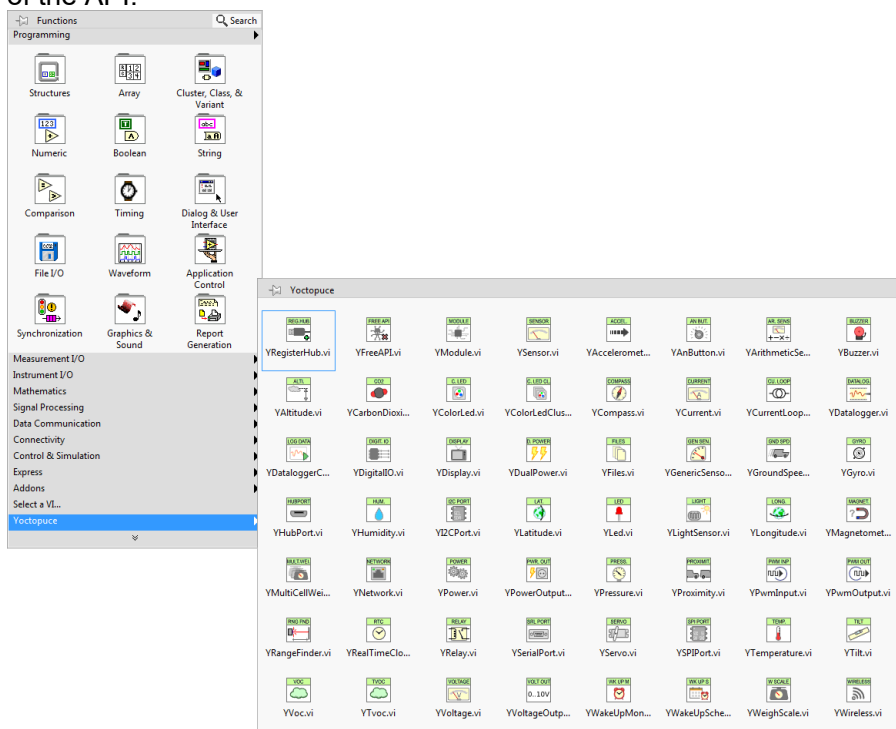


12.4. Presentation of Yoctopuce VIs

The LabVIEW Yoctopuce library contains one VI per class of the Yoctopuce API, as well as a few special VIs. All the VIs have the traditional connectors *Error IN* and *Error Out*.

YRegisterHub

The YRegisterHub VI is used to initialize the API. You must imperatively call this VI once before you do anything in relation with Yoctopuce modules.

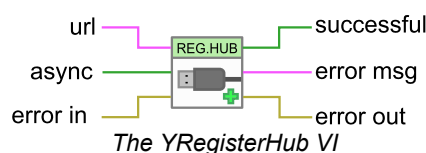

The YRegisterHub VI takes a *url* parameter which can be:

- The "usb" character string to indicated that you wish to work with local modules, directly connected by USB
- An IP address to indicate that you wish to work with modules which are available through a network connection. This IP address can be that of a YoctoHub⁴ or even that of a machine on which the VirtualHub⁵ application is running.


In the case of an IP address, the YRegisterHub VI tries to contact this address and generates an error if it does not succeed, unless the *async* parameter is set to TRUE. If *async* is set to TRUE, no error is generated and Yoctopuce modules corresponding to that IP address become automatically available as soon as the said machine can be reached.

If everything went well, the *successful* output contains the value TRUE. In the opposite case, it contains the value FALSE and the *error msg* output contains a string of characters with a description of the error.

You can use several YRegisterHub VIs with distinct URLs if you so wish. However, on the same machine, there can be only one process accessing local Yoctopuce modules directly by USB (*url* set to "usb"). You can easily work around this limitation by running the VirtualHub software on the local machine and using the "127.0.0.1" url.

YFreeAPI


The YFreeAPI VI enables you to free resources allocated by the Yoctopuce API.



You must call the YFreeAPI VI when your code is done with the Yoctopuce API. Otherwise, direct USB access (*url* set to "usb") could stay locked after the execution of your VI, and stay so for as long as LabVIEW is not completely closed.

Structure of the VIs corresponding to a class

The other VIs correspond to each function/class of the Yoctopuce API, they all have the same structure:

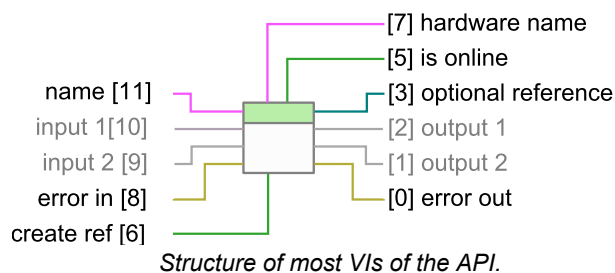

- Connector [11]: *name* must contain the hardware name or the logical name of the intended function.
- Connectors [10] and [9]: input parameters depending on the nature of the VI.
- Connectors [8] and [0] : *error in* and *error out*.
- Connector [7] : Unique hardware name of the found function.
- Connector [5] : *is online* contains TRUE if the function is available, FALSE otherwise.
- Connectors [2] and [1]: output values depending on the nature of the VI.
- Connector [6]: If this input is set to TRUE, connector [3] contains a reference to the *Proxy* objects implemented by the VI⁶. This input is initialized to FALSE by default.

⁴ www.yoctopuce.com/EN/products/category/extensions-and-networking

⁵ <http://www.yoctopuce.com/EN/virtualhub.php>

⁶ see section *Using Proxy objects*

- Connector [3]: Reference on the *Proxy* object implemented by the VI if input [6] is TRUE. This object enables you to access additional features.


You can find the list of functions available on your Yocto-MaxiDisplay in chapter *Programming, general concepts*.

If the desired function (parameter *name*) is not available, this does not generate an error, but the *is online* output contains FALSE and all the other outputs contain the value "N/A" whenever possible. If the desired function becomes available later in the life of your program, *is online* switches to TRUE automatically.


If the *name* parameter contains an empty string, the VI targets the first available function of the same type. If no function is available, *is online* is set to FALSE.

The YModule VI

The `YModule` VI enables you to interface with the "module" section of each Yoctopuce module. It enables you to drive the module led and to know the serial number of the module.

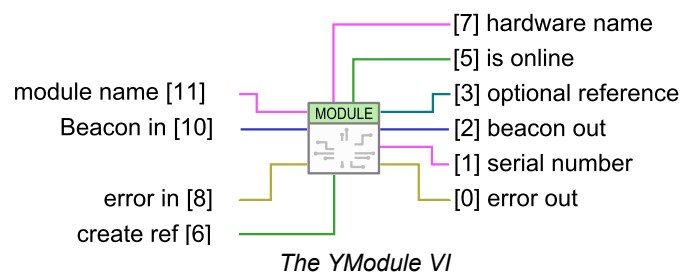


The *name* input works slightly differently from other VIs. If it is called with a *name* parameter corresponding to a function name, the `YModule` VI finds the *Module* function of the module hosting the function. You can therefore easily find the serial number of the module of any function. This enables you to build the name of other functions which are located on the same module. The following example finds the first available *YHumidity* function and builds the name of the *YTemperature* function located on the same module. The examples provided with the Yoctopuce API make extensive use of this technique.

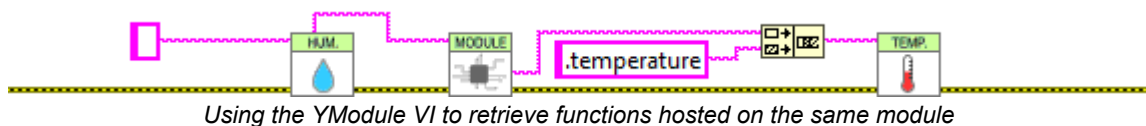

The sensor VIs

All the VIs corresponding to Yoctopuce sensors have exactly the same geometry. Both outputs enable you to retrieve the value measured by the corresponding sensor as well the unit used.

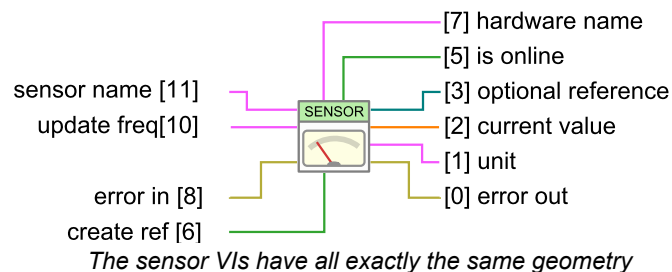


The *update freq* input parameter is a character string enabling you to configure the way in which the output value is updated:

- "auto" : The VI value is updated as soon as the sensor detects a significant modification of the value. It is the default behavior.
- "x/s" : The VI value is updated x times per second with the current value of the sensor.

- "x/m","x/h": The VI value is updated x times per minute (resp. hour) with the average value over the latest period. Note, maximum frequencies are (60/m) and (3600/h), for higher frequencies use the (x/s) syntax.

The update frequency of the VI is a parameter managed by the physical Yoctopuce module. If several VIs try to change the frequency of the same sensor, the valid configuration is that of the latest call. It is however possible to set different update frequencies to different sensors on the same Yoctopuce module.

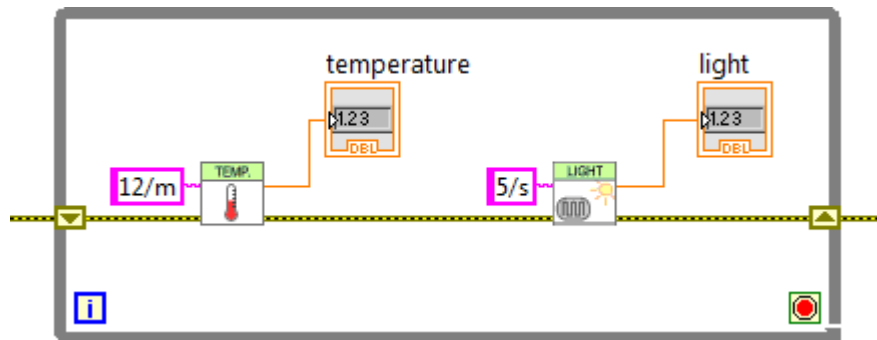


Changing the update frequency of the same module

The update frequency of the VI is completely independent from the sampling frequency of the sensor, which you usually cannot modify. It is useless and counterproductive to define an update frequency higher than the sensor sampling frequency.

12.5. Functioning and use of VIs

Here is one of the simplest example of VIs using the Yoctopuce API.

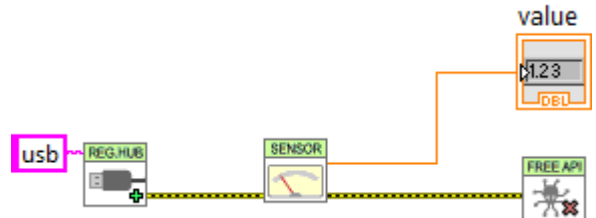


Minimal example of use of the LabVIEW Yoctopuce API

This example is based on the `YSensor` VI which is a generic VI enabling you to interface any sensor function of a Yoctopuce module. You can replace this VI by any other from the Yoctopuce API, they all have the same geometry and work in the same way. This example is limited to three actions:


1. It initializes the API in native ("usb") mode with the `YRegisterHub` VI.
2. It displays the value of the first Yoctopuce sensor it finds thanks to the `YSensor` VI.
3. It frees the API thanks to the `YFreeAPI` VI.

This example automatically looks for an available sensor. If there is such a sensor, we can retrieve its name through the *hardware name* output and the *isOnline* output equals TRUE. If there is no available sensor, the VI does not generate an error but emulates a ghost sensor which is "offline". However, if later in the life of the application, a sensor becomes available because it has been connected, *isOnline* switches to TRUE and the *hardware name* contains the name of the sensor. We can therefore easily add a few indicators in the previous example to know how the executions goes.

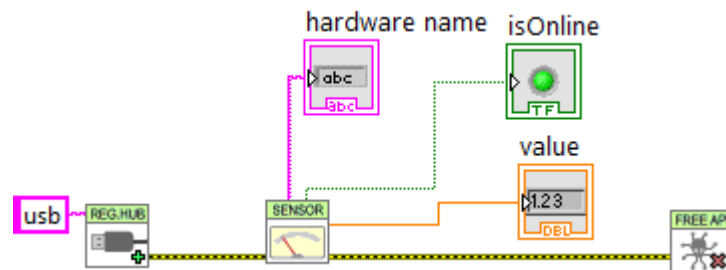

Use of the hardware name and isOnline outputs


The VIs of the Yoctopuce API are actually an entry door into the library. Internally, this mechanism works independently of the Yoctopuce VIs. Indeed, most communications with electronic modules are managed automatically as background tasks. Therefore, you do not necessarily need to take any specific care to use Yoctopuce VIs, you can for example use them in a non-delayed loop without creating any specific problem for the API.

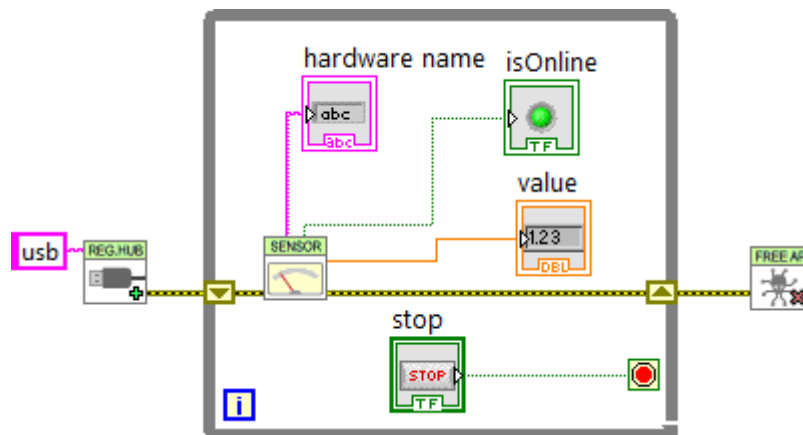

The Yoctopuce VIs can be used in a non-delayed loop

Note that the YRegisterHub VI is not inside the loop. The YRegisterHub VI is used to initialize the API. Unless you have several URLs that you need to register, it is better to call the YRegisterHub VI only once.

When the *name* parameter is initialized to an empty string, the Yoctopuce VIs automatically look for a function they can work with. This is very handy when you know that there is only one function of the same type available and when you do not want to manage its name. If the *name* parameter contains a hardware name or a logical name, the VI looks for the corresponding function. If it does not find it, it emulates an *offline* function while it waits for the true function to become available.

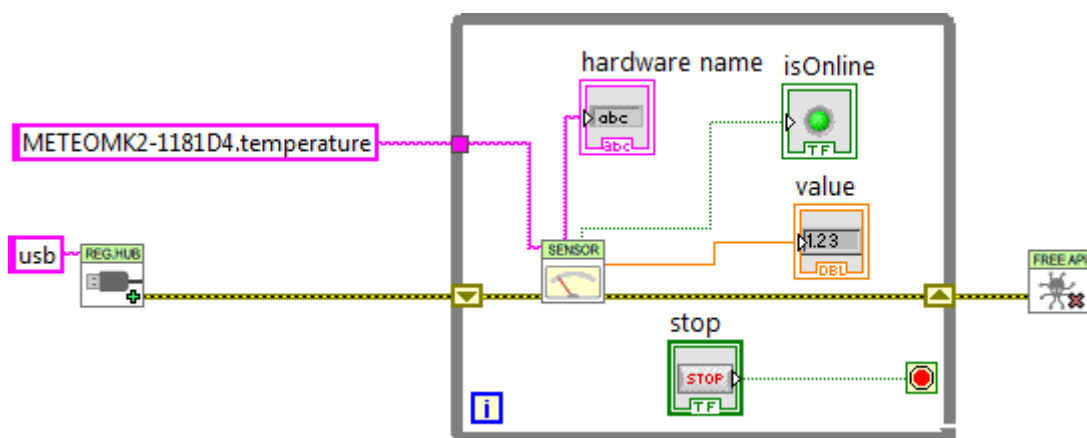


Using names to identify the functions to be used

Error handling

The LabVIEW Yoctopuce API is coded to handle errors as smoothly as possible: for example, if you use a VI to access a function which does not exist, the *isOnline* output is set to FALSE, the other outputs are set to *NaN*, and thus the inputs do not have any impact. Fatal errors are propagated through the traditional *error in*, *error out* channel.

However, the YRegisterHub VI manages connection errors slightly differently. In order to make them easier to manage, connection errors are signaled with *Success* and *error msg* outputs. If there is an issue during a call to the YRegisterHub VI, *Success* contains FALSE and *error msg* contains a description of the error.

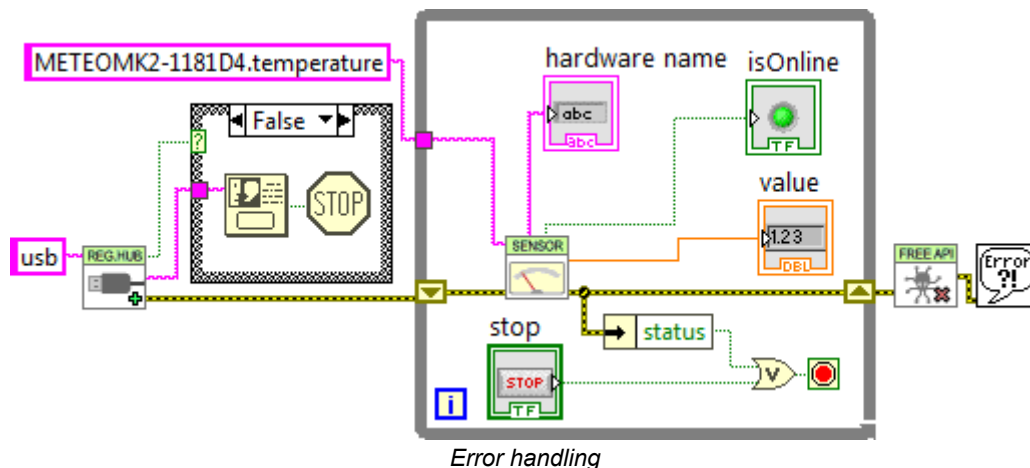


The most common error message is "Another process is already using yAPI". It means that another application, LabVIEW or other, already uses the API in native USB mode. For technical reasons, the native USB API can be used by only one application at the same time on the same machine. You can easily work around this limitation by using the network mode.

12.6. Using Proxy objects

The Yoctopuce API contains hundreds of methods, functions, and properties. It was not possible, or desirable, to create a VI for each of them. Therefore, there is a VI per class that shows the two properties that Yoctopuce deemed the most useful, but this does not mean that the rest is not available.


Each VI corresponding to a class has two connectors *create ref* and *optional ref* which enable you to obtain a reference on the Proxy object of the .NET Proxy API on which the LabVIEW library is built.

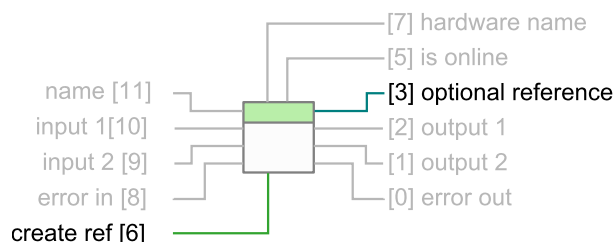

The connectors to obtain a reference on the Proxy object corresponding to the VI


To obtain this reference, you only need to set *optional ref* to TRUE. Note, it is essential to close all references created in this way, otherwise you risk to quickly saturate the computer memory.

Here is an example which uses this technique to change the luminosity of the leds of a Yoctopuce module.

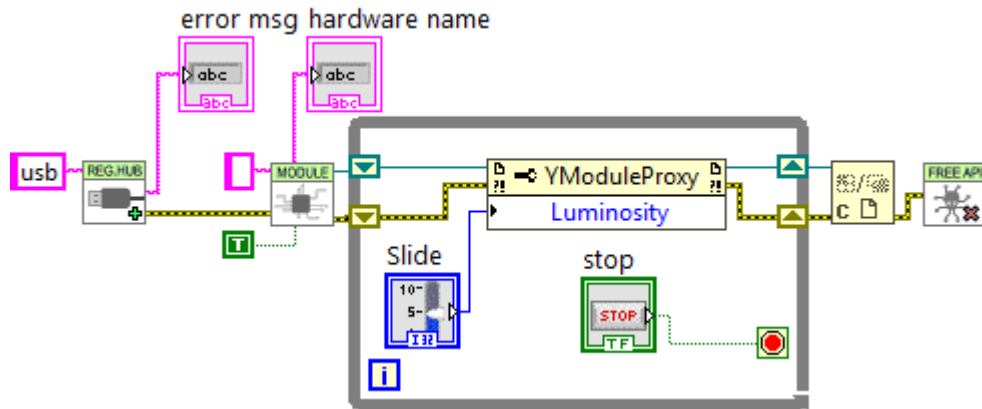

Regulating the luminosity of the leds of a module

Note that each reference allows you to obtain properties (*property nodes*) as well as methods (*invoke nodes*). By convention, properties are optimized to generate a minimum of communication with the modules. Therefore, we recommend to use them rather than the corresponding *get_xxx* and *set_xxx* methods which might seem equivalent but which are not optimized. Properties also enable you to retrieve the various constants of the API, prefixed with the "_" character. For technical reasons, the *get_xxx* and *set_xxx* methods are not all available as properties.

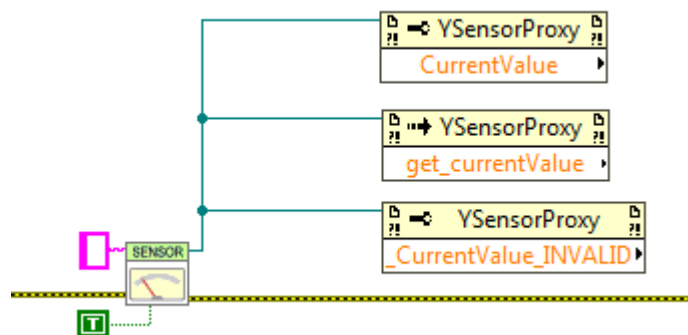


Property and Invoke nodes: Using properties, methods and constants

You can find a description of all the available properties, functions, and methods in the documentation of the *.NET Proxy API*.

Network mode

On a given machine, there can be only one process accessing local Yoctopuce modules directly by USB (url set to "usb"). It is however possible that multiple process connect in parallel to YoctoHubs⁷ or to a machine on which *VirtualHub*⁸ is running, including the local machine. Therefore, if you use the local address of your machine (127.0.0.1) and if a VirtualHub runs on it, you can work around the limitation which prevents using the native USB API in parallel.

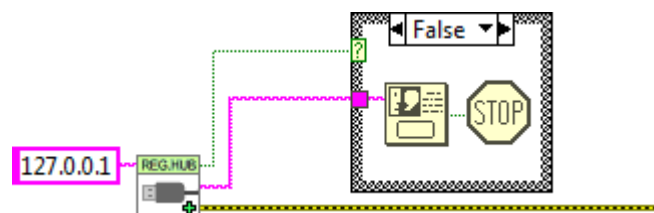


Network mode


⁷ <https://www.yoctopuce.com/EN/products/category/extensions-and-networking>

⁸ www.yoctopuce.com/EN/virtualhub.php

In the same way, there is no limitation on the number of network interfaces to which the API can connect itself in parallel. This means that it is quite possible to make multiple calls to the YRegisterHub VI. This is the only case where it is useful to call the YRegisterHub VI several times in the life of the application.

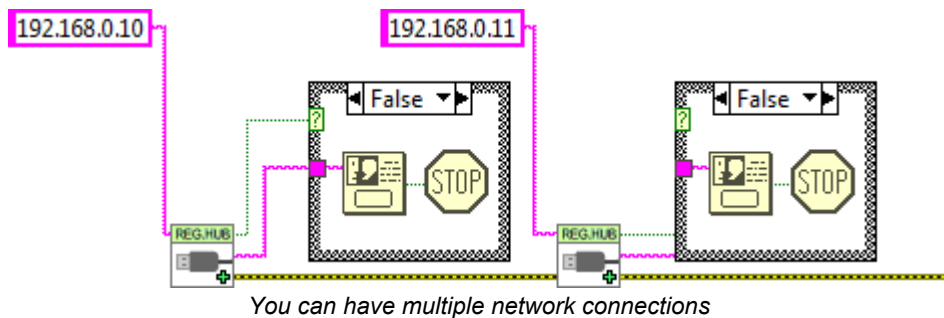

By default, the YRegisterHub VI tries to connect itself on the address given as parameter and generates an error (*success=FALSE*) when it cannot do so because nobody answers. But if the *async* parameter is initialized to *TRUE*, no error is generated when the connection does not succeed. If the connection becomes possible later in the life of the application, the corresponding modules are automatically made available.

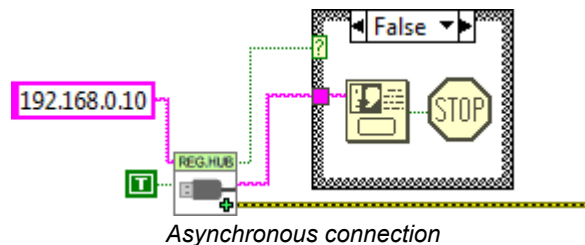


12.7. Managing the data logger

Almost all the Yoctopuce sensors have a data logger which enables you to store the measures of the sensors in the non-volatile memory of the module. You can configure the data logger with the VirtualHub, but also with a little bit of LabVIEW code.


Logging

To do so, you must configure the logging frequency by using the "LogFrequency" property which you can reach with a reference on the *Proxy* object of the sensor you are using. Then, you must turn the data logger on thanks to the YDataLogger VI. Note that, like with the YModule VI, you can obtain the YDataLogger VI corresponding to a module with its own name, but also with the name of any of the functions available on the same module.

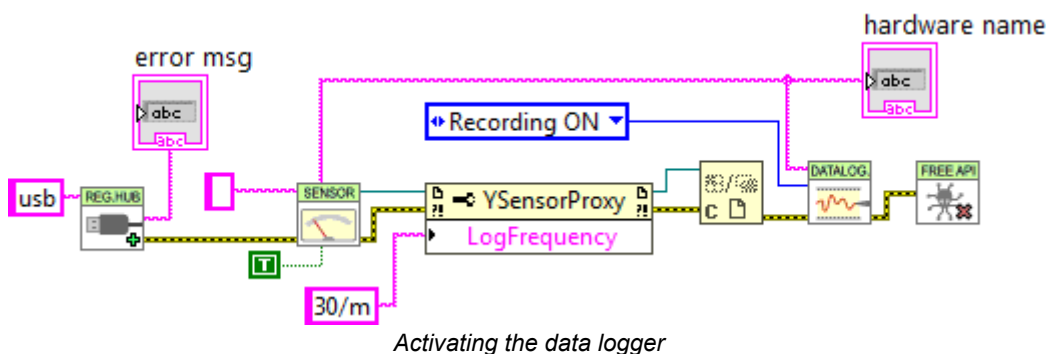

Reading


You can retrieve the data in the data logger with the YDataLoggerContents VI.

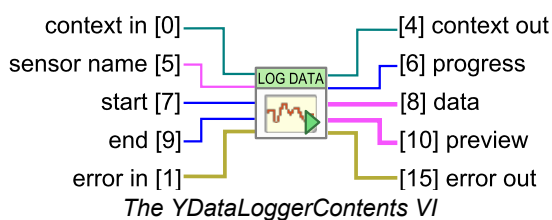

Retrieving the data from the logger of a Yoctopuce module is a slow process which can take up to several tens of seconds. Therefore, we designed the VI enabling this operation to work iteratively.

As a first step, you must call the VI with a sensor name, a start date, and an end date (UTC UNIX timestamp). The (0,0) pair enables you to obtain the complete content of the data logger. This first call enables you to obtain a summary of the data logger content and a context.

As a second step, you must call the *YDataLoggerContents* VI in a loop with the context parameter, until the *progress* output reaches the 100 value. At this time, the data output represents the content of the data logger.

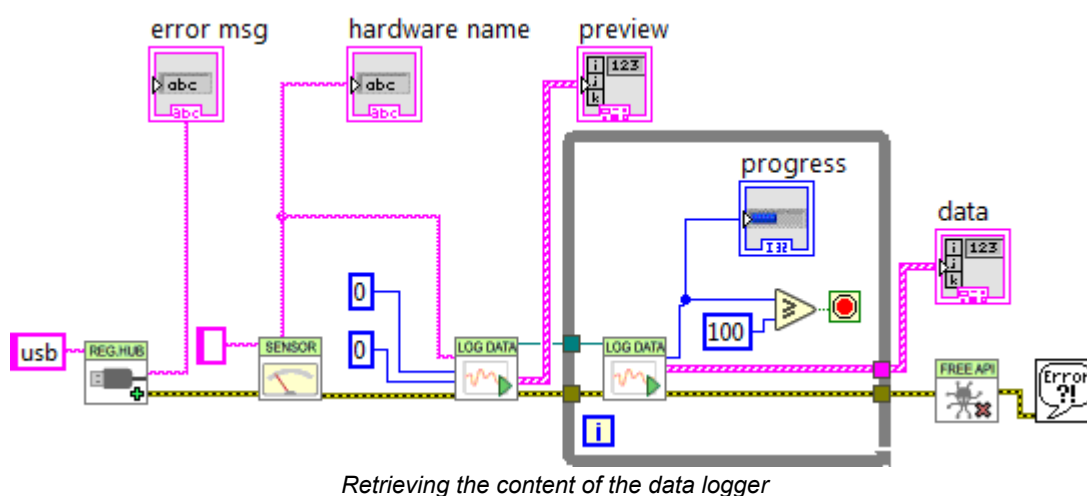


The results and the summary are returned as an array of structures containing the following fields:

- **startTime**: beginning of the measuring period
- **endTime**: end of the measuring period
- **averageValue**: average value for the period
- **minValue**: minimum value over the period
- **maxValue**: maximum value over the period

Note that if the logging frequency is superior to 1Hz, the data logger stores only current values. In this case, *averageValue*, *minValue*, and *maxValue* share the same value.

12.8. Function list


Each VI corresponding to an object of the *Proxy API* enables you to list all the functions of the same class with the *getSimilarfunctions()* method of the corresponding *Proxy* object. Thus, you can easily perform an inventory of all the connected modules, of all the connected sensors, of all the connected relays, and so on.

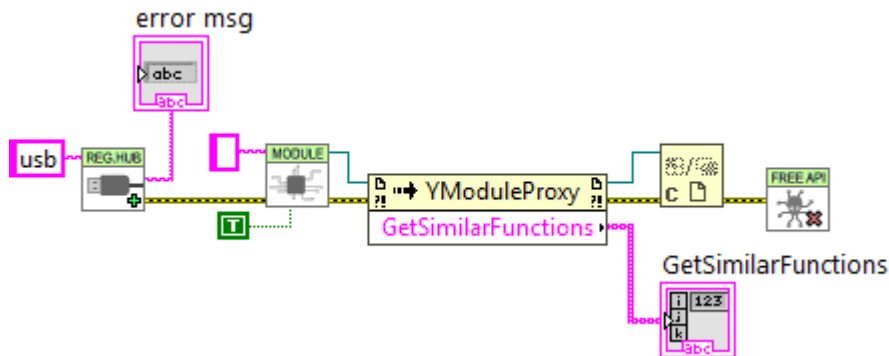

Retrieving the list of all the modules which are connected


12.9. A word on performances

The LabVIEW Yoctopuce API is optimized so that all the VIs and *.NET Proxy* API object properties generate a minimum of communication with Yoctopuce modules. Thus, you can use them in loops without taking any specific precaution: you *do not have to* slow down the loops with a timer.

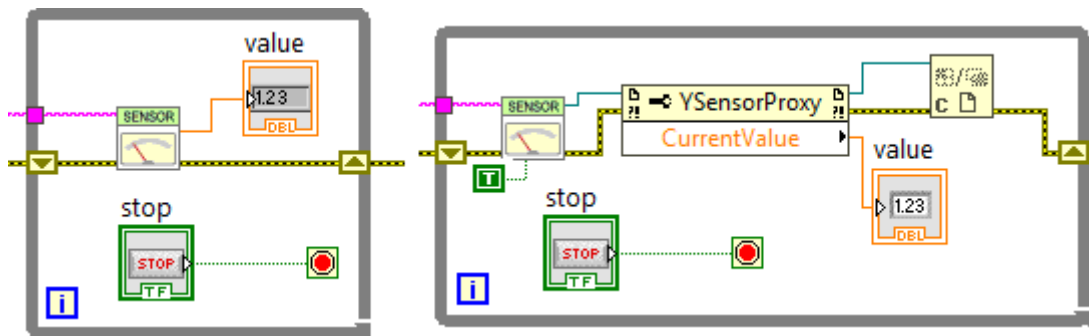

These two loops generate little USB communication and do not need to be slowed down

However, almost all the methods of the available Proxy objects initiate a communication with the Yoctopuce modules each time they are called. You should therefore avoid calling them too often without purpose.

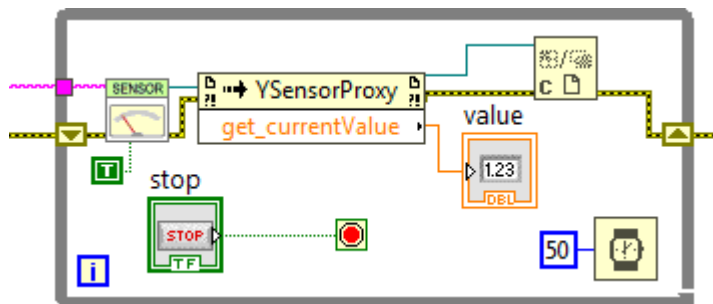

This loop, using a method, must be slowed down

12.10. A full example of a LabVIEW program

UNABLE TO INCLUDE

<http://172.17.17.77/tu/projects/yoctodisplay-128x64/public/doc-labview-example-EN.html>

If you read this documentation on screen, you can zoom on the image above. You can also find this example in the LabVIEW Yoctopuce library.

12.11. Differences from other Yoctopuce APIs

Yoctopuce does everything it can to maintain a strong coherence between its different programming libraries. However, LabVIEW being clearly apart as an environment, there are, as a consequence, important differences from the other libraries.

These differences were introduced to make the use of modules as easy as possible and requiring a minimum of LabVIEW code.

YFreeAPI

In the opposite to other languages, you must absolutely free the native API by calling the `YFreeAPI` VI when your code does not need to use the API anymore. If you forget this call, the native API risks to stay locked for the other applications until LabVIEW is completely closed.

Properties

In the opposite to classes of the other APIs, classes available in LabVIEW implement *properties*. By convention, these properties are optimized to generate a minimum of communication with the modules while automatically refreshing. By contrast, methods of type `get_xxx` and `set_xxx` systematically generate communications with the Yoctopuce modules and must be called sparingly.

Callback vs. Properties

There is no callback in the LabVIEW Yoctopuce API, the VIs automatically refresh: they are based on the properties of the *.NET Proxy* API objects.

13. Using the Yocto-MaxiDisplay with Java

Java is an object oriented language created by Sun Microsystem. Beside being free, its main strength is its portability. Unfortunately, this portability has an excruciating price. In Java, hardware abstraction is so high that it is almost impossible to work directly with the hardware. Therefore, the Yoctopuce API does not support native mode in regular Java. The Java API needs VirtualHub to communicate with Yoctopuce devices.

13.1. Getting ready

Go to the Yoctopuce web site and download the following items:

- The Java programming library¹
- VirtualHub² for Windows, macOS or Linux, depending on your OS

The library is available as source files as well as a *jar* file. Decompress the library files in a folder of your choice, connect your modules, run VirtualHub, and you are ready to start your first tests. You do not need to install any driver.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

13.2. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Java code snippet to use the Display function.

```
[...]
// Get access to your device, through the VirtualHub running locally
YAPI.RegisterHub("127.0.0.1");
[...]

// Retrieve the object used to interact with the device
display = YDisplay.FindDisplay("YD128X64-123456.display");

// Hot-plug is easy: just check that the device is online
if (display.isOnline())
{
```

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

```
// Use display.get_displayLayer()
[...]
```

Let us look at these lines in more details.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the Virtual Hub able to see the devices. If the initialization does not succeed, an exception is thrown.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MyFunction")
display = YDisplay.FindDisplay("MyModule.display")
display = YDisplay.FindDisplay("MyModule.MyFunction")
display = YDisplay.FindDisplay("MyFunction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch your Java environment and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
import com.yoctopuce.YoctoAPI.*;
import java.util.logging.Level;
import java.util.logging.Logger;

public class Demo {

    private static void disp(YDisplay display, String text, YDisplayLayer.ALIGN al) throws
YAPI_Exception
    {
        YDisplayLayer layer0 = display.get_displayLayer(0);
        int l = (int) display.get_displayWidth();
        int h = (int) display.get_displayHeight();
        int mx = l / 2;
        int my = h / 2;
        layer0.clear();
        layer0.moveTo(mx, 0);
        layer0.lineTo(mx, h);
        layer0.moveTo(0, my);
        layer0.lineTo(l, my);
    }
}
```

```

        layer0.drawText(mx, my, al, text);
    }

    public static void main(String[] args)
    {

        YDisplay disp;
        YDisplayLayer l0, l1;
        int h, w, y, x, vx, vy;

        // API init
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }

        if (args.length == 0) {
            disp = YDisplay.FirstDisplay();
            if (disp == null) {
                System.out.println("No module connected (check USB cable)");
                System.exit(1);
            }
        } else {
            disp = YDisplay.FindDisplay(args[0] + ".display");
        }

        try {
            //clean up
            disp.resetAll();

            // retrieve the display size
            w = disp.get_displayWidth();
            h = disp.get_displayHeight();

            // retrieve the first layer
            l0 = disp.get_displayLayer(0);

            // display a text in the middle of the screen
            l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN.CENTER, "Hello world!");

            // visualize each corner
            l0.moveTo(0, 5);
            l0.lineTo(0, 0);
            l0.lineTo(5, 0);
            l0.moveTo(0, h - 6);
            l0.lineTo(0, h - 1);
            l0.lineTo(5, h - 1);
            l0.moveTo(w - 1, h - 6);
            l0.lineTo(w - 1, h - 1);
            l0.lineTo(w - 6, h - 1);
            l0.moveTo(w - 1, 5);
            l0.lineTo(w - 1, 0);
            l0.lineTo(w - 6, 0);

            // draw a circle in the top left corner of layer 1
            l1 = disp.get_displayLayer(1);
            l1.clear();
            l1.drawCircle(h / 8, h / 8, h / 8);

            // and animate the layer
            System.out.println("Use Ctrl-C to stop");
            x = 0;
            y = 0;
            vx = 1;
            vy = 1;
            while (true) {
                x += vx;
                y += vy;
                if ((x < 0) || (x > w - (h / 4))) {
                    vx = -vx;
                }
                if ((y < 0) || (y > h - (h / 4))) {
                    vy = -vy;
                }
            }
        }
    }
}

```

```

        }
        ll.setLayerPosition(x, y, 0);
        YAPI.Sleep(5);
    }

} catch (YAPI_Exception ex) {
    System.out.println("Exception durring execution (" + ex.getLocalizedMessage() +
    ")");
    YAPI.FreeAPI();
    System.exit(1);
}

}

}

```

13.3. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

import com.yoctopuce.YoctoAPI.*;
import java.util.logging.Level;
import java.util.logging.Logger;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }
        System.out.println("usage: demo [serial or logical name] [ON/OFF]");

        YModule module;
        if (args.length == 0) {
            module = YModule.FirstModule();
            if (module == null) {
                System.out.println("No module connected (check USB cable)");
                System.exit(1);
            }
        } else {
            module = YModule.FindModule(args[0]); // use serial or logical name
        }

        try {
            if (args.length > 1) {
                if (args[1].equalsIgnoreCase("ON")) {
                    module.setBeacon(YModule.BEACON_ON);
                } else {
                    module.setBeacon(YModule.BEACON_OFF);
                }
            }
            System.out.println("serial:      " + module.get_serialNumber());
            System.out.println("logical name: " + module.get_logicalName());
            System.out.println("luminosity:  " + module.get_luminosity());
            if (module.get_beacon() == YModule.BEACON_ON) {
                System.out.println("beacon:      ON");
            } else {
                System.out.println("beacon:      OFF");
            }
            System.out.println("upTime:      " + module.get_upTime() / 1000 + " sec");
            System.out.println("USB current: " + module.get_usbCurrent() + " mA");
            System.out.println("logs:\n" + module.get_lastLogs());
        } catch (YAPI_Exception ex) {
            System.out.println(args[1] + " not connected (check identification and USB
cable)");
        }
    }
}

```

```

    }
    YAPI.FreeAPI();
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

import com.yoctopuce.YoctoAPI.*;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }

        if (args.length != 2) {
            System.out.println("usage: demo <serial or logical name> <new logical name>");
            System.exit(1);
        }

        YModule m;
        String newname;

        m = YModule.FindModule(args[0]); // use serial or logical name

        try {
            newname = args[1];
            if (!YAPI.CheckLogicalName(newname))
            {
                System.out.println("Invalid name (" + newname + ")");
                System.exit(1);
            }

            m.set_logicalName(newname);
            m.saveToFlash(); // do not forget this

            System.out.println("Module: serial= " + m.get_serialNumber());
            System.out.println(" / name= " + m.get_logicalName());
        } catch (YAPI_Exception ex) {
            System.out.println("Module " + args[0] + "not connected (check identification
and USB cable)");
            System.out.println(ex.getMessage());
            System.exit(1);
        }

        YAPI.FreeAPI();
    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short,

you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `null`. Below a short example listing the connected modules.

```
import com.yoctopuce.YoctoAPI.*;

public class Demo {

    public static void main(String[] args)
    {
        try {
            // setup the API to use local VirtualHub
            YAPI.RegisterHub("127.0.0.1");
        } catch (YAPI_Exception ex) {
            System.out.println("Cannot contact VirtualHub on 127.0.0.1 (" +
ex.getLocalizedMessage() + ")");
            System.out.println("Ensure that the VirtualHub application is running");
            System.exit(1);
        }

        System.out.println("Device list");
        YModule module = YModule.FirstModule();
        while (module != null) {
            try {
                System.out.println(module.get_serialNumber() + " (" +
module.get_productName() + ")");
            } catch (YAPI_Exception ex) {
                break;
            }
            module = module.nextModule();
        }
        YAPI.FreeAPI();
    }
}
```

13.4. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Java API, error handling is implemented with exceptions. Therefore you must catch and handle correctly all exceptions that might be thrown by the API if you do not want your software to crash as soon as you unplug a device.

14. Using the Yocto-MaxiDisplay with Android

To tell the truth, Android is not a programming language, it is an operating system developed by Google for mobile appliances such as smart phones and tablets. But it so happens that under Android everything is programmed with the same programming language: Java. Nevertheless, the programming paradigms and the possibilities to access the hardware are slightly different from classical Java, and this justifies a separate chapter on Android programming.

14.1. Native access and VirtualHub

In the opposite to the classical Java API, the Java for Android API can access USB modules natively. However, as there is no VirtualHub running under Android, it is not possible to remotely control Yoctopuce modules connected to a machine under Android. Naturally, the Java for Android API remains perfectly able to connect itself to VirtualHub running on another OS.

14.2. Getting ready

Go to the Yoctopuce web site and download the Java for Android programming library¹. The library is available as source files, and also as a jar file. Connect your modules, decompress the library files in the directory of your choice, and configure your Android programming environment so that it can find them.

To keep them simple, all the examples provided in this documentation are snippets of Android applications. You must integrate them in your own Android applications to make them work. However, you can find complete applications in the examples provided with the Java for Android library.

14.3. Compatibility

In an ideal world, you would only need to have a smart phone running under Android to be able to make Yoctopuce modules work. Unfortunately, it is not quite so in the real world. A machine running under Android must fulfil to a few requirements to be able to manage Yoctopuce USB modules natively.

Android version

Our library can be compiled to work with older versions, as long as the Android tools allow us to support them, i.e. approximately versions of the last ten years.

¹ www.yoctopuce.com/EN/libraries.php

USB *host* support

Naturally, not only must your machine have a USB port, this port must also be able to run in *host* mode. In *host* mode, the machine literally takes control of the devices which are connected to it. The USB ports of a desktop computer, for example, work in *host* mode. The opposite of the *host* mode is the *device* mode. USB keys, for instance, work in *device* mode: they must be controlled by a *host*. Some USB ports are able to work in both modes, they are *OTG (On The Go)* ports. It so happens that many mobile devices can only work in *device* mode: they are designed to be connected to a charger or a desktop computer, and nothing else. It is therefore highly recommended to pay careful attention to the technical specifications of a product working under Android before hoping to make Yoctopuce modules work with it.

Unfortunately, having a correct version of Android and USB ports working in *host* mode is not enough to guaranty that Yoctopuce modules will work well under Android. Indeed, some manufacturers configure their Android image so that devices other than keyboard and mass storage are ignored, and this configuration is hard to detect. As things currently stand, the best way to know if a given Android machine works with Yoctopuce modules consists in trying.

14.4. Activating the USB port under Android

By default, Android does not allow an application to access the devices connected to the USB port. To enable your application to interact with a Yoctopuce module directly connected on your tablet on a USB port, a few additional steps are required. If you intend to interact only with modules connected on another machine through the network, you can ignore this section.

In your `AndroidManifest.xml`, you must declare using the "USB Host" functionality by adding the `<uses-feature android:name="android.hardware.usb.host" />` tag in the `manifest` section.

```
<manifest ...>
...
  <uses-feature android:name="android.hardware.usb.host" />
...
</manifest>
```

When first accessing a Yoctopuce module, Android opens a window to inform the user that the application is going to access the connected module. The user can deny or authorize access to the device. If the user authorizes the access, the application can access the connected device as long as it stays connected. To enable the Yoctopuce library to correctly manage these authorizations, your must provide a pointer on the application context by calling the `EnableUSBHost` method of the `YAPI` class before the first USB access. This function takes as arguments an object of the `android.content.Context` class (or of a subclass). As the `Activity` class is a subclass of `Context`, it is simpler to call `YAPI.EnableUSBHost(this)` ; in the method `onCreate` of your application. If the object passed as parameter is not of the correct type, a `YAPI_Exception` exception is generated.

```
...
@Override
public void onCreate(Bundle savedInstanceState) {
    super.onCreate(savedInstanceState);
    try {
        // Pass the application Context to the Yoctopuce Library
        YAPI.EnableUSBHost(this);
    } catch (YAPI_Exception e) {
        Log.e("Yocto", e.getLocalizedMessage());
    }
}
...
```

Autorun

It is possible to register your application as a default application for a USB module. In this case, as soon as a module is connected to the system, the application is automatically launched. You must

add `<action android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED"/>` in the section `<intent-filter>` of the main activity. The section `<activity>` must have a pointer to an XML file containing the list of USB modules which can run the application.

```
<manifest xmlns:android="http://schemas.android.com/apk/res/android"
...
<uses-feature android:name="android.hardware.usb.host" />
...
<application ... >
    <activity
        android:name=".MainActivity" >
        <intent-filter>
            <action android:name="android.intent.action.MAIN" />
            <action android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED" />
            <category android:name="android.intent.category.LAUNCHER" />
        </intent-filter>

        <meta-data
            android:name="android.hardware.usb.action.USB_DEVICE_ATTACHED"
            android:resource="@xml/device_filter" />
        </activity>
    </application>
</manifest>
```

The XML file containing the list of modules allowed to run the application must be saved in the `res/xml` directory. This file contains a list of USB *vendorId* and *deviceId* in decimal. The following example runs the application as soon as a Yocto-Relay or a YoctoPowerRelay is connected. You can find the *vendorId* and the *deviceId* of Yoctopuce modules in the characteristics section of the documentation.

```
<?xml version="1.0" encoding="utf-8"?>

<resources>
    <usb-device vendor-id="9440" product-id="12" />
    <usb-device vendor-id="9440" product-id="13" />
</resources>
```

14.5. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Java code snippet to use the Display function.

```
[...]
// Enable detection of USB devices
YAPI.EnableUSBHost(this);
YAPI.RegisterHub("usb");
[...]
// Retrieve the object used to interact with the device
display = YDisplay.FindDisplay("YD128X64-123456.display");

// Hot-plug is easy: just check that the device is online
if (display.isOnline()) {
    // Use display.get_displayLayer()
    [...]
}

[...]
```

Let us look at these lines in more details.

YAPI.EnableUSBHost

The `YAPI.EnableUSBHost` function initializes the API with the Context of the current application. This function takes as argument an object of the `android.content.Context` class (or of a subclass). If you intend to connect your application only to other machines through the network, this function is facultative.

YAPI.RegisterHub

The `yAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the virtual hub able to see the devices. If the string "usb" is passed as parameter, the API works with modules locally connected to the machine. If the initialization does not succeed, an exception is thrown.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named "MyModule", and for which you have given the *display* function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MyFunction")
display = YDisplay.FindDisplay("MyModule.display")
display = YDisplay.FindDisplay("MyModule.MyFunction")
display = YDisplay.FindDisplay("MyFunction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch your Java environment and open the corresponding sample project provided in the directory **Examples//Doc-Examples** of the Yoctopuce library.

In this example, you can recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.view.View;
import android.widget.AdapterView;
import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.EditText;
import android.widget.Spinner;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YDisplay;
import com.yoctopuce.YoctoAPI.YDisplayLayer;

public class GettingStarted_Yocto_MaxiDisplay extends Activity implements
OnItemClickListener
{

    private YDisplay display = null;
    private ArrayAdapter<String> aa;

    @Override
    public void onCreate(Bundle savedInstanceState)
```

```

{
    super.onCreate(savedInstanceState);
    setContentView(R.layout.gettingstarted_yocto_maxidisplay);
    Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
    my_spin.setOnItemSelectedListener(this);
    aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
    aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
    my_spin.setAdapter(aa);
}

@Override
protected void onStart()
{
    super.onStart();
    aa.clear();
    try {
        YAPI.EnableUSBHost(this);
        YAPI.RegisterHub("usb");
        YDisplay d = YDisplay.FirstDisplay();
        while (d != null) {
            String hwid = d.get_hardwareId();
            aa.add(hwid);
            d = d.nextDisplay();
        }
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
    aa.notifyDataSetChanged();
}

@Override
protected void onStop()
{
    super.onStop();
    YAPI.FreeAPI();
}

@Override
public void onItemSelected(AdapterView<?> parent, View view, int pos, long id)
{
    String hwid = parent.getItemAtPosition(pos).toString();
    display = YDisplay.FindDisplay(hwid);
    updateDisplay(null);
}

@Override
public void onNothingSelected(AdapterView<?> arg0)
{
}

public void updateDisplay(View view)
{
    if (display == null)
        return;

    EditText message = (EditText) findViewById(R.id.editText1);
    // clean up
    try {
        display.resetAll();

        // retrieve the display size
        int w = display.get_displayWidth();
        int h = display.get_displayHeight();

        // retrieve the first layer
        YDisplayLayer l0 = display.get_displayLayer(0);

        // display a text in the middle of the screen
        l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN.CENTER, message.getText(
    ).toString());

        // visualize each corner
        l0.moveTo(0, 5);
        l0.lineTo(0, 0);
        l0.lineTo(5, 0);
        l0.moveTo(0, h - 6);
        l0.lineTo(0, h - 1);
        l0.lineTo(5, h - 1);
    }
}

```

```

        10.moveTo(w - 1, h - 6);
        10.lineTo(w - 1, h - 1);
        10.lineTo(w - 6, h - 1);
        10.moveTo(w - 1, 5);
        10.lineTo(w - 1, 0);
        10.lineTo(w - 6, 0);
    } catch (YAPI_Exception e) {
        e.printStackTrace();
    }
}
}

```

14.6. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.view.View;
import android.widget.AdapterView;
import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.Spinner;
import android.widget.Switch;
import android.widget.TextView;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

public class ModuleControl extends Activity implements OnItemClickListener
{
    private ArrayAdapter<String> aa;
    private YModule module = null;

    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.modulecontrol);
        Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
        my_spin.setOnItemClickListener(this);
        aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
        aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
        my_spin.setAdapter(aa);
    }

    @Override
    protected void onStart()
    {
        super.onStart();

        try {
            aa.clear();
            YAPI.EnableUSBHost(this);
            YAPI.RegisterHub("usb");
            YModule r = YModule.FirstModule();
            while (r != null) {
                String hwid = r.get_hardwareId();
                aa.add(hwid);
                r = r.nextModule();
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
        // refresh Spinner with detected relay
    }
}

```

```

        aa.notifyDataSetChanged();
    }

    @Override
    protected void onStop()
    {
        super.onStop();
        YAPI.FreeAPI();
    }

    private void DisplayModuleInfo()
    {
        TextView field;
        if (module == null)
            return;
        try {
            field = (TextView) findViewById(R.id.serialfield);
            field.setText(module.getSerialNumber());
            field = (TextView) findViewById(R.id.logicalnamefield);
            field.setText(module.getLogicalName());
            field = (TextView) findViewById(R.id.luminosityfield);
            field.setText(String.format("%d%%", module.getLuminosity()));
            field = (TextView) findViewById(R.id.uptimefield);
            field.setText(module.getUpTime() / 1000 + " sec");
            field = (TextView) findViewById(R.id.usbcurrentfield);
            field.setText(module.getUsbCurrent() + " mA");
            Switch sw = (Switch) findViewById(R.id.beaconswitch);
            sw.setChecked(module.getBeacon() == YModule.BEACON_ON);
            field = (TextView) findViewById(R.id.logs);
            field.setText(module.get_lastLogs());

        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
    }

    @Override
    public void onItemClick(AdapterView<?> parent, View view, int pos, long id)
    {
        String hwid = parent.getItemAtPosition(pos).toString();
        module = YModule.FindModule(hwid);
        DisplayModuleInfo();
    }

    @Override
    public void onNothingSelected(AdapterView<?> arg0)
    {
    }

    public void refreshInfo(View view)
    {
        DisplayModuleInfo();
    }

    public void toggleBeacon(View view)
    {
        if (module == null)
            return;
        boolean on = ((Switch) view).isChecked();

        try {
            if (on) {
                module.setBeacon(YModule.BEACON_ON);
            } else {
                module.setBeacon(YModule.BEACON_OFF);
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
    }
}

```

Each property xxx of the module can be read thanks to a method of type `YModule.get_XXX()`, and properties which are not read-only can be modified with the help of the `YModule.set_XXX()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.view.View;
import android.widget.AdapterView;
import android.widget.AdapterView.OnItemClickListener;
import android.widget.ArrayAdapter;
import android.widget.EditText;
import android.widget.Spinner;
import android.widget.TextView;
import android.widget.Toast;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

public class SaveSettings extends Activity implements OnItemClickListener
{
    private ArrayAdapter<String> aa;
    private YModule module = null;

    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.savesettings);
        Spinner my_spin = (Spinner) findViewById(R.id.spinner1);
        my_spin.setOnItemClickListener(this);
        aa = new ArrayAdapter<String>(this, android.R.layout.simple_spinner_item);
        aa.setDropDownViewResource(android.R.layout.simple_spinner_dropdown_item);
        my_spin.setAdapter(aa);
    }

    @Override
    protected void onStart()
    {
        super.onStart();

        try {
            aa.clear();
            YAPI.EnableUSBHost(this);
            YAPI.RegisterHub("usb");
            YModule r = YModule.FirstModule();
            while (r != null) {
                String hwid = r.get_hardwareId();
                aa.add(hwid);
                r = r.nextModule();
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
        // refresh Spinner with detected relay
        aa.notifyDataSetChanged();
    }

    @Override
    protected void onStop()
    {
        super.onStop();
        YAPI.FreeAPI();
    }

    private void DisplayModuleInfo()
    {

```

```

        TextView field;
        if (module == null)
            return;
        try {
            YAPI.UpdateDeviceList(); // fixme
            field = (TextView) findViewById(R.id.logicalnamefield);
            field.setText(module.getLogicalName());
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
    }

    @Override
    public void onItemSelected(AdapterView<?> parent, View view, int pos, long id)
    {
        String hwid = parent.getItemAtPosition(pos).toString();
        module = YModule.FindModule(hwid);
        DisplayModuleInfo();
    }

    @Override
    public void onNothingSelected(AdapterView<?> arg0)
    {
    }

    public void saveName(View view)
    {
        if (module == null)
            return;

        EditText edit = (EditText) findViewById(R.id.newname);
        String newname = edit.getText().toString();
        try {
            if (!YAPI.CheckLogicalName(newname)) {
                Toast.makeText(getApplicationContext(), "Invalid name (" + newname + ")",
                    Toast.LENGTH_LONG).show();
                return;
            }
            module.set_logicalName(newname);
            module.saveToFlash(); // do not forget this
            edit.setText("");
        } catch (YAPI_Exception ex) {
            ex.printStackTrace();
        }
        DisplayModuleInfo();
    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `null`. Below a short example listing the connected modules.

```

package com.yoctopuce.doc_examples;

import android.app.Activity;
import android.os.Bundle;
import android.util.TypedValue;
import android.view.View;
import android.widget.LinearLayout;
import android.widget.TextView;

import com.yoctopuce.YoctoAPI.YAPI;
import com.yoctopuce.YoctoAPI.YAPI_Exception;
import com.yoctopuce.YoctoAPI.YModule;

```

```

public class Inventory extends Activity
{
    @Override
    public void onCreate(Bundle savedInstanceState)
    {
        super.onCreate(savedInstanceState);
        setContentView(R.layout.inventory);
    }

    public void refreshInventory(View view)
    {
        LinearLayout layout = (LinearLayout) findViewById(R.id.inventoryList);
        layout.removeAllViews();

        try {
            YAPI.UpdateDeviceList();
            YModule module = YModule.FirstModule();
            while (module != null) {
                String line = module.get_serialNumber() + " (" + module.get_productName() +
                ")";

                TextView tx = new TextView(this);
                tx.setText(line);
                tx.setTextSize(TypedValue.COMPLEX_UNIT_SP, 20);
                layout.addView(tx);
                module = module.nextModule();
            }
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
    }

    @Override
    protected void onStart()
    {
        super.onStart();
        try {
            YAPI.EnableUSBHost(this);
            YAPI.RegisterHub("usb");
        } catch (YAPI_Exception e) {
            e.printStackTrace();
        }
        refreshInventory(null);
    }

    @Override
    protected void onStop()
    {
        super.onStop();
        YAPI.FreeAPI();
    }
}

```

14.7. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Java API for Android, error handling is implemented with exceptions. Therefore you must catch and handle correctly all exceptions that might be thrown by the API if you do not want your software to crash soon as you unplug a device.

15. Using Yocto-MaxiDisplay with TypeScript

TypeScript is an enhanced version of the JavaScript programming language. It is a syntactic superset with strong typing, therefore increasing the code reliability, but transpiled - aka compiled - into JavaScript for execution in any standard Web browser or Node.js environment.

This Yoctopuce library therefore makes it possible to implement JavaScript applications using strong typing. Similarly to our EcmaScript library, it uses the new asynchronous features introduced in ECMAScript 2017, which are now available in all modern JavaScript environments. Note however that at the time of writing, Web browsers and Node.JS cannot use TypeScript code directly, so you must first compile your TypeScript into JavaScript before running it.

The library works both in a Web browser and in Node.js. In order to allow for a static resolution of dependencies, and to avoid ambiguities that can arise when using hybrid environments such as Electron, the choice of the runtime environment must be done explicitly upon import of the library, by referencing in the project either `yocto_api_nodejs.js` or `yocto_api_html.js`.

The library can be integrated in your projects in multiple ways, depending on what best fits your requirements:

- by directly copying the TypeScript library source files into your project, and by adding them to your build script. Only a few files are usually needed to handle most use-cases. You will find TypeScript source files in the `src` subdirectory of our library.
- by using CommonJS module resolution, natively supported by TypeScript, with a package manager such as `npm`. You will find a version of the library transpiled according to CommonJS module standard in the `dist/cjs` subdirectory, including all type definition files (with extension `.d.ts`) and source maps (with extension `.js.map`) enabling source-level error reporting and debugging. We have also published these files on `npmjs` under the name `yoctolib-cjs`.
- by using ECMAScript standard module resolution, also supported by TypeScript, usually referenced by relative path. You will find a version of the library transpiled as an ECMAScript 2015 module in the `dist/esm` subdirectory, including all type definition files (with extension `.d.ts`) and source maps (with extension `.js.map`) enabling source-level error reporting and debugging. We have also published these files on `npmjs` under the name `yoctolib-esm`.

15.1. Using the Yoctopuce library for TypeScript

1. Start by installing TypeScript on your machine if this is not yet done. In order to do so:

- Install on your development machine the official version of Node.js (version 10 or more recent). You can download it for free from the official web site: <http://nodejs.org>. Make sure to install it fully, including `npm`, and add it to the system path.
- Then install TypeScript on your machine using the command line:

```
npm install -g typescript
```

2. Go to the Yoctopuce web site and download the following items:

- The TypeScript programming library¹
- The VirtualHub software² for Windows, macOS, or Linux, depending on your OS. TypeScript and JavaScript are part of those languages which do not generally allow you to directly access to USB peripherals. Therefore the library can only be used to access network-enabled devices (connected through a YoctoHub), or USB devices accessible through Yoctopuce TCP/IP to USB gateway, named *VirtualHub*. No extra driver will be needed, though.

3. Extract the library files in a folder of your choice, and open a command window in the directory where you have installed it. In order to install the few dependencies which are necessary to start the examples, run this command:

```
npm install
```

When the command has run without error, you are ready to explore the examples. They are available in two different trees, depending on the environment that you need to use: `example_html` for running the Yoctopuce library within a Web browser, or `example_nodejs` if you plan to use the library in a Node.js environment.

The method to use for launching the examples depends on the environment. You will find more about it below.

15.2. Refresher on asynchronous I/O in JavaScript

JavaScript is single-threaded by design. In order to handle time-consuming I/O operations, JavaScript relies on asynchronous operations: the I/O call is only triggered but then the code execution flow is suspended. The JavaScript engine is therefore free to handle other pending tasks, such as user interface. Whenever the pending I/O call is completed, the system invokes a callback function with the result of the I/O call to resume execution of the original execution flow.

When used with plain callback functions, as pervasive in Node.js libraries, asynchronous I/O tend to produce code with poor readability, as the execution flow is broken into many disconnected callback functions. Fortunately, the ECMAScript 2015 standard came in with *Promise* objects and a new `async / await` syntax to abstract calls to asynchronous calls:

- a function declared *async* automatically encapsulates its result as a Promise
- within an *async* function, any function call prefixed with *await* chains the Promise returned by the function with a promise to resume execution of the caller
- any exception during the execution of an *async* function automatically invokes the Promise failure continuation

To make a long story short, *async* and *await* make it possible to write TypeScript code with all the benefits of asynchronous I/O, but without breaking the code flow. It is almost like multi-threaded

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

execution, except that control switch between pending tasks only happens at places where the *await* keyword appears.

This TypeScript library uses the *Promise* objects and *async* methods, to allow you to use the *await* syntax. To keep it easy to remember, all public methods of the TypeScript library are *async*, i.e. return a Promise object, except:

- `GetTickCount()`, because returning a time stamp asynchronously does not make sense...
- `FindModule()`, `FirstModule()`, `nextModule()`, ... because device detection and enumeration always works on internal device lists handled in background, and does not require immediate asynchronous I/O.

In most cases, TypeScript strong typing will remind you to use *await* when calling an asynchronous method.

15.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a TypeScript code snippet to use the Display function.

```
// For Node.js, the library is referenced through the NPM package
// For HTML, we would use instead a relative path (depending on the build environment)
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';
import { YDisplay } from 'yoctolib-cjs/yocto_display.js';

[...]
```

```
// Get access to your device, through the VirtualHub running locally
await YAPI.RegisterHub('127.0.0.1');
[...]
```

```
// Retrieve the object used to interact with the device
var display: YDisplay = YDisplay.FindDisplay("YD128X64-123456.display");

// Check that the module is online to handle hot-plug
if(await display.isOnline())
{
    // Use display.get_displayLayer()
    [...]
```

Let us look at these lines in more details.

yocto_api and yocto_display import

These two imports provide access to functions allowing you to manage Yoctopuce modules. `yocto_api` is always needed, `yocto_display` is necessary to manage modules containing a display, such as Yocto-MaxiDisplay. Other imports can be useful in other cases, such as `YModule` which can let you enumerate any type of Yoctopuce device.

In order to properly bind `yocto_api` to the proper network libraries (provided either by Node.js or by the web browser for an HTML application), you must import at least once in your project one of the two variants `yocto_api_nodejs.js` or `yocto_api_html.js`.

Note that this example imports the Yoctopuce library as a CommonJS module, which is the most frequently used with Node.JS, but if your project is designed around EcmaScript native modules, you can also replace in the import directive the prefix `yoctolib-cjs` by `yoctolib-esm`.

YAPI.RegisterHub

The `RegisterHub` method allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port 4444 (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running, or of a YoctoHub. If the host cannot be reached, this function will trigger an exception.

As explained above, using `RegisterHub("usb")` is not supported in TypeScript, because the JavaScript engine has no direct access to USB devices. It needs to go through the VirtualHub via a localhost connection.

YDisplay.FindDisplay

The `FindDisplay` method allows you to find a display from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MaFonction")
display = YDisplay.FindDisplay("MonModule.display")
display = YDisplay.FindDisplay("MonModule.MaFonction")
display = YDisplay.FindDisplay("MaFonction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example, for Node.js

Open a command window (a terminal, a shell...) and go into the directory **example_nodejs/Doc-GettingStarted-Yocto-MaxiDisplay** within Yoctopuce library for TypeScript. In there, you will find a file named `demo.ts` with the sample code below, which uses the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

If your Yocto-MaxiDisplay is not connected on the host running the browser, replace in the example the address `127.0.0.1` by the IP address of the host on which the Yocto-MaxiDisplay is connected and where you run the VirtualHub.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';
import { YDisplay, YDisplayLayer } from 'yoctolib-cjs/yocto_display.js'

let disp: YDisplay;
let ll: YDisplayLayer;
let h: number;
let w: number;
let y: number;
let x: number;
let vx: number;
let vy: number;

async function startDemo(): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select specified device, or use first available one
    let serial: string = process.argv[process.argv.length-1];
    if (serial[8] !== '-') {
```

```

    let anydisplay = YDisplay.FirstDisplay();
    if (anydisplay) {
        let module: YModule = await anydisplay.get_module();
        serial = await module.get_serialNumber();
    } else {
        console.log('No matching device connected, check cable !');
        await YAPI.FreeAPI();
        return;
    }
}
console.log('Using device ' + serial);
disp = YDisplay.FindDisplay(serial + ".display");

//clean up
await disp.resetAll();

// retrieve the display size
w = await disp.get_displayWidth();
h = await disp.get_displayHeight();

// retrieve the first layer
let l0 = await disp.get_displayLayer(0);
// display a text in the middle of the screen
await l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN_CENTER, "Hello world!");

// visualize each corner
await l0.moveTo(0, 5);
await l0.lineTo(0, 0);
await l0.lineTo(5, 0);
await l0.moveTo(0, h - 6);
await l0.lineTo(0, h - 1);
await l0.lineTo(5, h - 1);
await l0.moveTo(w - 1, h - 6);
await l0.lineTo(w - 1, h - 1);
await l0.lineTo(w - 6, h - 1);
await l0.moveTo(w - 1, 5);
await l0.lineTo(w - 1, 0);
await l0.lineTo(w - 6, 0);

// draw a circle in the top left corner of layer 1
l1 = await disp.get_displayLayer(1);
await l1.clear();
await l1.drawCircle(h / 8, h / 8, h / 8);

// and animate the layer
console.log("Use Ctrl-C to stop");
x = 0;
y = 0;
vx = 1;
vy = 1;
refresh();
}

async function refresh(): Promise<void>
{
    if (await disp.isOnline()) {
        x += vx;
        y += vy;
        if ((x < 0) || (x > w - (h / 4))) vx = -vx;
        if ((y < 0) || (y > h - (h / 4))) vy = -vy;
        await l1.setLayerPosition(x, y, 0);
    } else {
        console.log('Module not connected');
    }
    setTimeout(refresh, 5);
}

startDemo();

```

As explained at the beginning of this chapter, you need to have installed the TypeScript compiler on your machine to test these examples, and to install the typescript library dependencies. If you have done that, you can now type the following two commands in the example directory, to finalize the resolution of the example-specific dependencies:

```
npm install
```

You are now ready to start the sample code with Node.js. The easiest way to do it is to use the following command, replacing the [...] by the arguments that you want to pass to the demo code:

```
npm run demo [...]
```

This command, defined in `package.json`, will first start the TypeScript compiler using the simple `tsc` command, then run the transpiled code in Node.js.

The compilation uses the parameters specified in the file `tsconfig.json`, and produces

- a JavaScript file named `demo.js`, that Node.js can run
- a debug file named `demo.js.map`, that will help Node.js to locate the source of errors in the original TypeScript source file rather than reporting them in the JavaScript compiled file.

Note that the `package.json` file in our examples uses a relative reference to the local copy of the library, to avoid duplicating the library in each example. But of course, for your application, you can refer to the package directly in npm repository, by adding it to your project using the command:

```
npm install yoctolib-cjs
```

Same example, but this time running in a browser

If you want to see how to use the library within a browser rather than with Node.js, switch to the directory **example_html/Doc-GettingStarted-Yocto-MaxiDisplay**. You will find there an HTML file named `app.html`, and a TypeScript file `app.ts` similar to the code above, but with a few changes since it has to interact through an HTML page rather than through the JavaScript console.

No installation is needed to run this example, as the TypeScript library is referenced using a relative path. However, in order to allow the browser to run the code, the HTML page must be served by a Web server. We therefore provide a simple test server for this purpose, that you can start with the command:

```
npm run app-server
```

This command will compile the TypeScript sample code, make it available via an HTTP server on port 3000 and open a Web browser on this example. If you change the example source code, the TypeScript compiler will automatically be triggered to update the transpiled code and a simple page reload on the browser will make it possible to test the change.

As for the Node.js example, the compilation process will create a source map file which makes it possible to debug the example code in TypeScript source form within the browser debugger. Note that as of the writing of this document, this works on Chromium-based browsers but not yet in Firefox.

15.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(args: string[]): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }
}
```



```
// Select the device to use
let module: YModule = YModule.FindModule(args[0]);
if(await module.isOnline()) {
    if(args.length > 1) {
        if(args[1] == 'ON') {
            await module.set_beacon(YModule.BEACON_ON);
        } else {
            await module.set_beacon(YModule.BEACON_OFF);
        }
    }
    console.log('serial:      '+await module.get_serialNumber());
    console.log('logical name: '+await module.get_logicalName());
    console.log('luminosity:  '+await module.get_luminosity()+'%');
    console.log('beacon:      '+
        (await module.get_beacon() == YModule.BEACON_ON ? 'ON' : 'OFF'));
    console.log('upTime:      '+
        ((await module.get_upTime()/1000)>>0) + ' sec');
    console.log('USB current:  '+await module.get_usbCurrent()+' mA');
    console.log('logs:');
    console.log(await module.get_lastLogs());
} else {
    console.log("Module not connected (check identification and USB cable)\n");
}
await YAPI.FreeAPI();

if(process.argv.length < 3) {
    console.log("usage: npm run demo <serial or logicalname> [ ON | OFF ]");
} else {
    startDemo(process.argv.slice(2));
}
}
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used methods, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` method. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(args: string[]): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg: YErrorMsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) != YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select the device to use
    let module: YModule = YModule.FindModule(args[0]);
    if(await module.isOnline()) {
        if(args.length > 1) {
            let newname: string = args[1];
            if (!await YAPI.CheckLogicalName(newname)) {
                console.log("Invalid name (" + newname + ")");
                process.exit(1);
            }
            await module.set_logicalName(newname);
            await module.saveToFlash();
        }
        console.log('Current name: '+await module.get_logicalName());
    } else {
        console.log("Module not connected (check identification and USB cable)\n");
    }
}
```

```

    }
    await YAPI.FreeAPI();
}

if(process.argv.length < 3) {
    console.log("usage: npm run demo <serial> [newLogicalName]");
} else {
    startDemo(process.argv.slice(2));
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` method only 100000 times in the life of the module. Make sure you do not call this method within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.FirstModule()` method which returns the first module found. Then, you only need to call the `nextModule()` method of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

import { YAPI, YErrorMsg, YModule } from 'yoctolib-cjs/yocto_api_nodejs.js';

async function startDemo(): Promise<void>
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1');
        return;
    }
    refresh();
}

async function refresh(): Promise<void>
{
    try {
        let errmsg: YErrorMsg = new YErrorMsg();
        await YAPI.UpdateDeviceList(errmsg);

        let module = YModule.FirstModule();
        while(module) {
            let line: string = await module.get_serialNumber();
            line += '(' + (await module.get_productName()) + ')';
            console.log(line);
            module = module.nextModule();
        }
        setTimeout(refresh, 500);
    } catch(e) {
        console.log(e);
    }
}

startDemo();

```

15.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

16. Using Yocto-MaxiDisplay with JavaScript / EcmaScript

EcmaScript is the official name of the standardized version of the web-oriented programming language commonly referred to as *JavaScript*. This Yoctopuce library take advantages of advanced features introduced in EcmaScript 2017. It has therefore been named *Library for JavaScript / EcmaScript 2017* to differentiate it from the previous *Library for JavaScript*, now deprecated in favor of this new version.

This library provides access to Yoctopuce devices for modern JavaScript engines. It can be used within a browser as well as with Node.js. The library will automatically detect upon initialization whether the runtime environment is a browser or a Node.js virtual machine, and use the most appropriate system libraries accordingly.

Asynchronous communication with the devices is handled across the whole library using Promise objects, leveraging the new EcmaScript 2017 `async / await` non-blocking syntax for asynchronous I/O (see below). This syntax is now available out-of-the-box in most Javascript engines. No transpilation is needed: no Babel, no jspm, just plain Javascript. Here is your favorite engines minimum version needed to run this code. All of them are officially released at the time we write this document.

- Node.js v7.6 and later
- Firefox 52
- Opera 42 (incl. Android version)
- Chrome 55 (incl. Android version)
- Safari 10.1 (incl. iOS version)
- Android WebView 55
- Google V8 Javascript engine v5.5

If you need backward-compatibility with older releases, you can always run Babel to transpile your code and the library to older standards, as described a few paragraphs below.

We don't suggest using `jspm` anymore now that `async / await` are part of the standard.

16.1. Blocking I/O versus Asynchronous I/O in JavaScript

JavaScript is single-threaded by design. That means, if a program is actively waiting for the result of a network-based operation such as reading from a sensor, the whole program is blocked. In browser environments, this can even completely freeze the user interface. For this reason, the use of blocking I/O in JavaScript is strongly discouraged nowadays, and blocking network APIs are getting deprecated everywhere.

Instead of using parallel threads, JavaScript relies on asynchronous I/O to handle operations with a possible long timeout: whenever a long I/O call needs to be performed, it is only triggered and but then the code execution flow is terminated. The JavaScript engine is therefore free to handle other pending tasks, such as UI. Whenever the pending I/O call is completed, the system invokes a callback function with the result of the I/O call to resume execution of the original execution flow.

When used with plain callback functions, as pervasive in Node.js libraries, asynchronous I/O tend to produce code with poor readability, as the execution flow is broken into many disconnected callback functions. Fortunately, new methods have emerged recently to improve that situation. In particular, the use of *Promise* objects to abstract and work with asynchronous tasks helps a lot. Any function that makes a long I/O operation can return a *Promise*, which can be used by the caller to chain subsequent operations in the same flow. Promises are part of EcmaScript 2015 standard.

Promise objects are good, but what makes them even better is the new `async / await` keywords to handle asynchronous I/O:

- a function declared `async` will automatically encapsulate its result as a Promise
- within an `async` function, any function call prefixed with `await` will chain the Promise returned by the function with a promise to resume execution of the caller
- any exception during the execution of an `async` function will automatically invoke the Promise failure continuation

Long story made short, `async` and `await` make it possible to write EcmaScript code with all benefits of asynchronous I/O, but without breaking the code flow. It is almost like multi-threaded execution, except that control switch between pending tasks only happens at places where the `await` keyword appears.

We have therefore chosen to write our new EcmaScript library using Promises and `async` functions, so that you can use the friendly `await` syntax. To keep it easy to remember, **all public methods** of the EcmaScript library **are `async`**, i.e. return a Promise object, **except**:

- `GetTickCount()`, because returning a time stamp asynchronously does not make sense...
- `FindModule()`, `FirstModule()`, `nextModule()`, ... because device detection and enumeration always work on internal device lists handled in background, and does not require immediate asynchronous I/O.

16.2. Using Yoctopuce library for JavaScript / EcmaScript 2017

JavaScript is one of those languages which do not generally allow you to directly access the hardware layers of your computer. Therefore the library can only be used to access network-enabled devices (connected through a YoctoHub), or USB devices accessible through Yoctopuce TCP/IP to USB gateway, named *VirtualHub*.

Go to the Yoctopuce web site and download the following items:

- The Javascript / EcmaScript 2017 programming library¹
- VirtualHub² for Windows, macOS or Linux, depending on your OS

Extract the library files in a folder of your choice, you will find many of examples in it. Connect your modules and start the VirtualHub software. You do not need to install any driver.

Using the official Yoctopuce library for node.js

Start by installing the latest Node.js version (v7.6 or later) on your system. It is very easy. You can download it from the official web site: <http://nodejs.org>. Make sure to install it fully, including npm, and add it to the system path.

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/virtualhub.php

To give it a try, go into one of the example directory (for instance `example_nodejs/Doc-Inventory`). You will see that it include an application description file (`package.json`) and a source file (`demo.js`). To download and setup the libraries needed by this example, just run:

```
npm install
```

Once done, you can start the example file using:

```
node demo.js
```

Using a local copy of the Yoctopuce library with node.js

If for some reason you need to make changes to the Yoctopuce library, you can easily configure your project to use the local copy in the `lib/` subdirectory rather than the official npm package. In order to do so, simply type the following command in your project directory:

```
npm link ../../lib
```

Using the Yoctopuce library within a browser (HTML)

For HTML examples, it is even simpler: there is nothing to install. Each example is a single HTML file that you can open in a browser to try it. In this context, loading the Yoctopuce library is no different from any standard HTML script include tag.

Using the Yoctopuce library on older JavaScript engines

If you need to run this library on older JavaScript engines, you can use Babel³ to transpile your code and the library into older JavaScript standards. To install Babel with typical settings, simply use:

```
npm install -g babel-cli
npm install babel-preset-env
```

You would typically ask Babel to put the transpiled files in another directory, named `compat` for instance. Your files and all files of the Yoctopuce library should be transpiled, as follow:

```
babel --presets env demo.js --out-dir compat/
babel --presets env ../../lib --out-dir compat/
```

Although this approach is based on node.js toolchain, it actually works as well for transpiling JavaScript files for use in a browser. The only thing that you cannot do so easily is transpiling JavaScript code embedded directly in an HTML page. You have to use an external script file for using EcmaScript 2017 syntax with Babel.

Babel has many smart features, such as a watch mode that will automatically refresh transpiled files whenever the source file is changed, but this is beyond the scope of this note. You will find more in Babel documentation.

Backward-compatibility with the old JavaScript library

This new library is not fully backward-compatible with the old JavaScript library, because there is no way to transparently map the old blocking API to the new asynchronous API. The method names however are the same, and old synchronous code can easily be made asynchronous just by adding the proper `await` keywords before the method calls. For instance, simply replace:

```
beaconState = module.get_beacon();
```

by

³ <http://babeljs.io>

```
beaconState = await module.get_beacon();
```

Apart from a few exceptions, most XXX_async redundant methods have been removed as well, as they would have introduced confusion on the proper way of handling asynchronous behaviors. It is however very simple to get an *async* method to invoke a callback upon completion, using the returned Promise object. For instance, you can replace:

```
module.get_beacon_async(callback, myContext);
```

by

```
module.get_beacon().then(function(res) { callback(myContext, module, res); });
```

In some cases, it might be desirable to get a sensor value using a method identical to the old synchronous methods (without using Promises), even if it returns a slightly outdated cached value since I/O is not possible. For this purpose, the EcmaScript library introduce new classes called *synchronous proxies*. A synchronous proxy is an object that mirrors the most recent state of the connected class, but can be read using regular synchronous function calls. For instance, instead of writing:

```
async function logInfo(module)
{
  console.log('Name: '+await module.get_logicalName());
  console.log('Beacon: '+await module.get_beacon());
}

...
logInfo(myModule);
...
```

you can use:

```
function logInfoProxy(moduleSyncProxy)
{
  console.log('Name: '+moduleProxy.get_logicalName());
  console.log('Beacon: '+moduleProxy.get_beacon());
}

logInfoSync(await myModule.get_syncProxy());
```

You can also rewrite this last asynchronous call as:

```
myModule.get_syncProxy().then(logInfoProxy);
```

16.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a JavaScript code snippet to use the Display function.

```
// For Node.js, we use function require()
// For HTML, we would use <script src="...">
require('yoctolib-es2017/yocto_api.js');
require('yoctolib-es2017/yocto_display.js');

[...]
// Get access to your device, through the VirtualHub running locally
await YAPI.RegisterHub('127.0.0.1');
[...]

// Retrieve the object used to interact with the device
var display = YDisplay.FindDisplay("YD128X64-123456.display");

// Check that the module is online to handle hot-plug
```



```
if(await display.isOnline())
{
    // Use display.get_displayLayer()
    [...]
}
```

Let us look at these lines in more details.

yocto_api and yocto_display import

These two import provide access to functions allowing you to manage Yoctopuce modules. `yocto_api` is always needed, `yocto_display` is necessary to manage modules containing a display, such as Yocto-MaxiDisplay. Other imports can be useful in other cases, such as `YModule` which can let you enumerate any type of Yoctopuce device.

YAPI.RegisterHub

The `RegisterHub` method allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port 4444 (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running, or of a YoctoHub. If the host cannot be reached, this function will trigger an exception.

YDisplay.FindDisplay

The `FindDisplay` method allows you to find a display from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MaFonction")
display = YDisplay.FindDisplay("MonModule.display")
display = YDisplay.FindDisplay("MonModule.MaFonction")
display = YDisplay.FindDisplay("MaFonction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example, for Node.js

Open a command window (a terminal, a shell...) and go into the directory **example_nodejs/Doc-GettingStarted-Yocto-MaxiDisplay** within Yoctopuce library for JavaScript / EcmaScript 2017. In there, you will find a file named `demo.js` with the sample code below, which uses the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

If your Yocto-MaxiDisplay is not connected on the host running the browser, replace in the example the address `127.0.0.1` with the IP address of the host on which the Yocto-MaxiDisplay is connected and where you run the VirtualHub.

```
"use strict";
```

```

require('yoctolib-es2017/yocto_api.js');
require('yoctolib-es2017/yocto_display.js');

let disp, l1;
let h, w, y, x, vx, vy;

async function startDemo() {
  await YAPI.LogUnhandledPromiseRejections();
  await YAPI.DisableExceptions();

  // Setup the API to use the VirtualHub on local machine
  let errmsg = new YErrorMsg();
  if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
    console.log('Cannot contact VirtualHub on 127.0.0.1: ' + errmsg.msg);
    return;
  }

  // Select specified device, or use first available one
  let serial = process.argv[process.argv.length - 1];
  if (serial[8] !== '-') {
    // by default use any connected module suitable for the demo
    let anysensor = YDisplay.FirstDisplay();
    if (anysensor) {
      let module = await anysensor.module();
      serial = await module.get_serialNumber();
    } else {
      console.log('No matching sensor connected, check cable !');
      return;
    }
  }
  console.log('Using device ' + serial);
  disp = YDisplay.FindDisplay(serial + ".display");

  //clean up
  await disp.resetAll();

  // retrieve the display size
  w = await disp.get_displayWidth();
  h = await disp.get_displayHeight();

  // retrieve the first layer
  let l0 = await disp.get_displayLayer(0);
  // display a text in the middle of the screen
  await l0.drawText(w / 2, h / 2, l0.ALIGN_CENTER, "Hello world!");

  // visualize each corner
  await l0.moveTo(0, 5);
  await l0.lineTo(0, 0);
  await l0.lineTo(5, 0);
  await l0.moveTo(0, h - 6);
  await l0.lineTo(0, h - 1);
  await l0.lineTo(5, h - 1);
  await l0.moveTo(w - 1, h - 6);
  await l0.lineTo(w - 1, h - 1);
  await l0.lineTo(w - 6, h - 1);
  await l0.moveTo(w - 1, 5);
  await l0.lineTo(w - 1, 0);
  await l0.lineTo(w - 6, 0);

  // draw a circle in the top left corner of layer 1
  l1 = await disp.get_displayLayer(1);
  await l1.clear();
  await l1.drawCircle(h / 8, h / 8, h / 8);

  // and animate the layer
  console.log("Use Ctrl-C to stop");
  x = 0;
  y = 0;
  vx = 1;
  vy = 1;
  refresh();
}

async function refresh() {
  if (await disp.isOnline()) {
    x += vx;
    y += vy;
    if ((x < 0) || (x > w - (h / 4))) vx = -vx;
  }
}

```

```

        if ((y < 0) || (y > h - (h / 4))) vy = -vy;
        await ll.setLayerPosition(x, y, 0);
    } else {
        console.log('Module not connected');
    }
    setTimeout(refresh, 5);
}

startDemo();

```

As explained at the beginning of this chapter, you need to have Node.js v7.6 or later installed to try this example. When done, you can type the following two commands to automatically download and install the dependencies for building this example:

```
npm install
```

You can start the sample code within Node.js using the following command, replacing the [...] by the arguments that you want to pass to the demo code:

```
node demo.js [...]
```

Same example, but this time running in a browser

If you want to see how to use the library within a browser rather than with Node.js, switch to the directory **example_html/Doc-GettingStarted-Yocto-MaxiDisplay**. You will find there a single HTML file, with a JavaScript section similar to the code above, but with a few changes since it has to interact through an HTML page rather than through the JavaScript console.

```

<!DOCTYPE html>
<html>
<head>
  <meta charset="UTF-8">
  <title>Hello World</title>
  <script src="../../lib/yocto_api.js"></script>
  <script src="../../lib/yocto_display.js"></script>
</script>
  let disp, ll;
  let h, w, y, x, vx, vy;

  async function startDemo() {
    await YAPI.LogUnhandledPromiseRejections();
    await YAPI.DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
      alert('Cannot contact VirtualHub on 127.0.0.1: ' + errmsg.msg);
    }

    // Select specified device, or use first available one
    let serial = document.getElementById('serial').value;
    if (serial == '') {
      // by default use any connected module suitable for the demo
      let anydisplay = YDisplay.FirstDisplay();
      if (anydisplay) {
        let module = await anydisplay.module();
        serial = await module.get_serialNumber();
        document.getElementById('serial').value = serial;
      }
    }
    disp = YDisplay.FindDisplay(serial + ".display");

    //clean up
    await disp.resetAll();

    // retrieve the display size
    w = await disp.get_displayWidth();
    h = await disp.get_displayHeight();

    // retrieve the first layer
    let l0 = await disp.get_displayLayer(0);
    // display a text in the middle of the screen

```

```

    await l0.drawText(w / 2, h / 2, 10.ALIGN_CENTER, "Hello world!");

    // visualize each corner
    await l0.moveTo(0, 5);
    await l0.lineTo(0, 0);
    await l0.lineTo(5, 0);
    await l0.moveTo(0, h - 6);
    await l0.lineTo(0, h - 1);
    await l0.lineTo(5, h - 1);
    await l0.moveTo(w - 1, h - 6);
    await l0.lineTo(w - 1, h - 1);
    await l0.lineTo(w - 6, h - 1);
    await l0.moveTo(w - 1, 5);
    await l0.lineTo(w - 1, 0);
    await l0.lineTo(w - 6, 0);

    // draw a circle in the top left corner of layer 1
    l1 = await disp.get_displayLayer(1);
    await l1.clear();
    await l1.drawCircle(h / 8, h / 8, h / 8);

    // and animate the layer
    x = 0;
    y = 0;
    vx = 1;
    vy = 1;
    refresh();
}

async function refresh() {
    if (await disp.isOnline()) {
        x += vx;
        y += vy;
        if ((x < 0) || (x > w - (h / 4))) vx = -vx;
        if ((y < 0) || (y > h - (h / 4))) vy = -vy;
        await l1.setLayerPosition(x, y, 0);
    } else {
        document.getElementById('msg').value = 'Module not connected';
    }
    setTimeout(refresh, 5);
}

startDemo();
</script>
</head>
<body>
Module to use:      <input id='serial'><span style='color:red;border:none;' id='msg'></span><br>
</body>
</html>

```

No installation is needed to run this example, all you have to do is open the HTML file using a web browser,

16.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo(args)
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }
}

```

```
// Select the relay to use
let module = YModule.FindModule(args[0]);
if(await module.isOnline()) {
    if(args.length > 1) {
        if(args[1] == 'ON') {
            await module.set_beacon(YModule.BEACON_ON);
        } else {
            await module.set_beacon(YModule.BEACON_OFF);
        }
    }
    console.log('serial:      '+await module.get_serialNumber());
    console.log('logical name: '+await module.get_logicalName());
    console.log('luminosity:  '+await module.get_luminosity()+'%');
    console.log('beacon:      '+ (await module.get_beacon() == YModule.BEACON_ON
?'ON':'OFF'));
    console.log('upTime:      '+parseInt(await module.get_upTime()/1000)+' sec');
    console.log('USB current:  '+await module.get_usbCurrent()+' mA');
    console.log('logs:');
    console.log(await module.get_lastLogs());
} else {
    console.log("Module not connected (check identification and USB cable)\n");
}
await YAPI.FreeAPI();
}

if(process.argv.length < 2) {
    console.log("usage: node demo.js <serial or logicalname> [ ON | OFF ]");
} else {
    startDemo(process.argv.slice(2));
}
}
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo(args)
{
    await YAPI.LogUnhandledPromiseRejections();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if(await YAPI.RegisterHub('127.0.0.1', errmsg) != YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1: '+errmsg.msg);
        return;
    }

    // Select the relay to use
    let module = YModule.FindModule(args[0]);
    if(await module.isOnline()) {
        if(args.length > 1) {
            let newname = args[1];
            if (!await YAPI.CheckLogicalName(newname)) {
                console.log("Invalid name (" + newname + ")");
                process.exit(1);
            }
            await module.set_logicalName(newname);
            await module.saveToFlash();
        }
        console.log('Current name: '+await module.get_logicalName());
    } else {
    }
}
```

```

        console.log("Module not connected (check identification and USB cable)\n");
    }
    await YAPI.FreeAPI();
}

if(process.argv.length < 2) {
    console.log("usage: node demo.js <serial> [newLogicalName]");
} else {
    startDemo(process.argv.slice(2));
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.FirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

"use strict";

require('yoctolib-es2017/yocto_api.js');

async function startDemo()
{
    await YAPI.LogUnhandledPromiseRejections();
    await YAPI.DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    let errmsg = new YErrorMsg();
    if (await YAPI.RegisterHub('127.0.0.1', errmsg) !== YAPI.SUCCESS) {
        console.log('Cannot contact VirtualHub on 127.0.0.1');
        return;
    }
    refresh();
}

async function refresh()
{
    try {
        let errmsg = new YErrorMsg();
        await YAPI.UpdateDeviceList(errmsg);

        let module = YModule.FirstModule();
        while(module) {
            let line = await module.get_serialNumber();
            line += '(' + (await module.get_productName()) + ')';
            console.log(line);
            module = module.nextModule();
        }
        setTimeout(refresh, 500);
    } catch(e) {
        console.log(e);
    }
}

try {
    startDemo();
} catch(e) {
    console.log(e);
}

```

16.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

17. Using Yocto-MaxiDisplay with PHP

PHP is, like Javascript, an atypical language when interfacing with hardware is at stakes. Nevertheless, using PHP with Yoctopuce modules provides you with the opportunity to very easily create web sites which are able to interact with their physical environment, and this is not available to every web server. This technique has a direct application in home automation: a few Yoctopuce modules, a PHP server, and you can interact with your home from anywhere on the planet, as long as you have an internet connection.

PHP is one of those languages which do not allow you to directly access the hardware layers of your computer. Therefore you need to run VirtualHub on the machine on which your modules are connected.

To start your tests with PHP, you need a PHP 7.1 (or more recent) server¹, preferably locally on you machine. If you wish to use the PHP server of your internet provider, it is possible, but you will probably need to configure your ADSL router for it to accept and forward TCP request on the 4444 port.

17.1. Getting ready

Go to the Yoctopuce web site and download the following items:

- The PHP programming library²
- VirtualHub³ for Windows, macOS, or Linux, depending on your OS

Our PHP library is based on PHP 8.x. In other words, our library works perfectly with any version of PHP currently still supported. However, in order not to abandon our customers with older installations, we maintain a version compatible with PHP 7.1. which dates back to 2016.

We also offer a version of the library that follows PSR's recommendations. For simplicity's sake, this version uses the same code as the php8 version, but each class is stored in a separate file. In addition, this version uses a `Yoctopuce\YoctoAPI` namespace. These changes make our library much easier to use with autoload installations.

Note that the examples in the documentation do not use the PSR version.

¹ A couple of free PHP servers: easyPHP for Windows, MAMP for macOS.

² www.yoctopuce.com/EN/libraries.php

³ www.yoctopuce.com/EN/virtualhub.php

In the library archive, there are thus three subdirectories:

- php7
- php8
- phpPSR

Choose the right directory according to the version of the library you wish to use, unzip the files of this directory into a directory of your choice accessible to your web server, plug in your modules, launch VirtualHub, and you are ready to start testing. You do not need to install any driver.

17.2. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a PHP code snippet to use the Display function.

```
include('yocto_api.php');
include('yocto_display.php');

[...]
// Get access to your device, through the VirtualHub running locally
YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg);
[...]

// Retrieve the object used to interact with the device
$display = YDisplay::FindDisplay("YD128X64-123456.display");

// Check that the module is online to handle hot-plug
if($display->isOnline())
{
    // Use $display->get_displayLayer()
    [...]
}
```

Let's look at these lines in more details.

yocto_api.php and yocto_display.php

These two PHP includes provides access to the functions allowing you to manage Yoctopuce modules. `yocto_api.php` must always be included, `yocto_display.php` is necessary to manage modules containing a display, such as Yocto-MaxiDisplay.

YAPI::RegisterHub

The `YAPI::RegisterHub` function allows you to indicate on which machine the Yoctopuce modules are located, more precisely on which machine the VirtualHub software is running. In our case, the `127.0.0.1:4444` address indicates the local machine, port 4444 (the standard port used by Yoctopuce). You can very well modify this address, and enter the address of another machine on which the VirtualHub software is running.

YDisplay::FindDisplay

The `YDisplay::FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
$display = YDisplay::FindDisplay("YD128X64-123456.display");
$display = YDisplay::FindDisplay("YD128X64-123456.MyFunction");
$display = YDisplay::FindDisplay("MyModule.display");
$display = YDisplay::FindDisplay("MyModule.MyFunction");
$display = YDisplay::FindDisplay("MyFunction");
```

`YDisplay::FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay::FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YFindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Open your preferred text editor⁴, copy the code sample below, save it with the Yoctopuce library files in a location which is accessible to your web server, then use your preferred web browser to access this page. The code is also provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
<HTML>
<HEAD>
  <TITLE>Hello World</TITLE>
</HEAD>
<BODY>
  <FORM method='get'>
    <?php
      include('../php8/yocto_api.php');
      include('../php8/yocto_display.php');

      // Use explicit error handling rather than exceptions
      YAPI::DisableExceptions();

      // Setup the API to use the VirtualHub on local machine
      if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
        die("Cannot contact VirtualHub on 127.0.0.1");
      }

      @$serial = $_GET['serial'];
      if ($serial != '') {
        // Check if a specified module is available online
        $disp = YDisplay::FindDisplay("$serial.display");
        if (!$disp->isOnline()) {
          die("Module not connected (check serial and USB cable)");
        }
      } else {
        // or use any connected module suitable for the demo
        $disp = YDisplay::FirstDisplay();
        if(is_null($disp)) {
          die("No module connected (check USB cable)");
        }
      }
      $serial = $disp->get_module()->get_serialNumber();
      Print("Module to use: <input name='serial' value='$serial'><br>");

      $disp->resetAll();
      // retrieve the display size
      $w=$disp->get_displayWidth();
      $h=$disp->get_displayHeight();

      // retrieve the first layer
      $l0=$disp->get_displayLayer(0);
      $l0->clear();

      // display a text in the middle of the screen
      $l0->drawText($w / 2, $h / 2, YDisplayLayer::ALIGN_CENTER, "Hello world!" );

      // visualize each corner
      $l0->moveTo(0,5);      $l0->lineTo(0,0);      $l0->lineTo(5,0);
      $l0->moveTo(0,$h-6);  $l0->lineTo(0,$h-1);    $l0->lineTo(5,$h-1);
```

⁴ If you do not have a text editor, use Notepad rather than Microsoft Word.

```

$10->moveTo($w-1,$h-6);$10->lineTo($w-1,$h-1);$10->lineTo($w-6,$h-1);
$10->moveTo($w-1,5);    $10->lineTo($w-1,0);    $10->lineTo($w-6,0);
YAPI::FreeAPI();

?>
<br><input type='submit' value="Refresh">
</FORM>
</BODY>
</HTML>

```

17.3. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

<HTML>
<HEAD>
  <TITLE>Module Control</TITLE>
</HEAD>
<BODY>
  <FORM method='get'>
    <?php
      include('../..../php8/yocto_api.php');

      // Use explicit error handling rather than exceptions
      YAPI::DisableExceptions();

      // Setup the API to use the VirtualHub on local machine
      if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
        die("Cannot contact VirtualHub on 127.0.0.1 : ".$errmsg);
      }

      @$serial = $_GET['serial'];
      if ($serial != '') {
        // Check if a specified module is available online
        $module = YModule::FindModule("$serial");
        if (!$module->isOnline()) {
          die("Module not connected (check serial and USB cable)");
        }
      } else {
        // or use any connected module suitable for the demo
        $module = YModule::FirstModule();
        if($module) { // skip VirtualHub
          $module = $module->nextModule();
        }
        if(is_null($module)) {
          die("No module connected (check USB cable)");
        } else {
          $serial = $module->get_serialnumber();
        }
      }
      Print("Module to use: <input name='serial' value='$serial'><br>");

      if (isset($_GET['beacon'])) {
        if ($_GET['beacon']=='ON')
          $module->set_beacon(Y_BEACON_ON);
        else
          $module->set_beacon(Y_BEACON_OFF);
      }
      printf('serial: %s<br>', $module->get_serialNumber());
      printf('logical name: %s<br>', $module->get_logicalName());
      printf('luminosity: %s<br>', $module->get_luminosity());
      print('beacon: ');
      if($module->get_beacon() == Y_BEACON_ON) {
        printf("<input type='radio' name='beacon' value='ON' checked>ON ");
        printf("<input type='radio' name='beacon' value='OFF'>OFF<br>");
      } else {
        printf("<input type='radio' name='beacon' value='ON'>ON ");
        printf("<input type='radio' name='beacon' value='OFF' checked>OFF<br>");
      }
      printf('upTime: %s sec<br>', intval($module->get_upTime()/1000));
      printf('USB current: %smA<br>', $module->get_usbCurrent());
      printf('logs:<br><pre>%s</pre>', $module->get_lastLogs());
    </?php>
  </FORM>

```

```

YAPI::FreeAPI();
?>
<input type='submit' value='refresh'>
</FORM>
</BODY>
</HTML>

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

<HTML>
<HEAD>
<TITLE>save settings</TITLE>
<BODY>
<FORM method='get'>
<?php
    include('../php8/yocto_api.php');

    // Use explicit error handling rather than exceptions
    YAPI::DisableExceptions();

    // Setup the API to use the VirtualHub on local machine
    if(YAPI::RegisterHub('http://127.0.0.1:4444/', $errmsg) != YAPI::SUCCESS) {
        die("Cannot contact VirtualHub on 127.0.0.1");
    }

    @$serial = $_GET['serial'];
    if ($serial != '') {
        // Check if a specified module is available online
        $module = YModule::FindModule("$serial");
        if (!$module->isOnline()) {
            die("Module not connected (check serial and USB cable)");
        }
    } else {
        // or use any connected module suitable for the demo
        $module = YModule::FirstModule();
        if($module) { // skip VirtualHub
            $module = $module->nextModule();
        }
        if(is_null($module)) {
            die("No module connected (check USB cable)");
        } else {
            $serial = $module->get_serialnumber();
        }
    }
    Print("Module to use: <input name='serial' value='$serial'><br>");

    if (isset($_GET['newname'])){
        $newname = $_GET['newname'];
        if (!YCheckLogicalName($newname))
            die('Invalid name');
        $module->set_logicalName($newname);
        $module->saveToFlash();
    }
    printf("Current name: %s<br>", $module->get_logicalName());
    print("New name: <input name='newname' value='' maxlength=19><br>");
    YAPI::FreeAPI();
?>
<input type='submit'>
</FORM>
</BODY>
</HTML>

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.


```
<HTML>
<HEAD>
  <TITLE>inventory</TITLE>
</HEAD>
<BODY>
<H1>Device list</H1>
<TT>
  <?php
    include('../php8/yocto_api.php');
    YAPI::RegisterHub("http://127.0.0.1:4444/");
    $module = YModule::FirstModule();
    while (!is_null($module)) {
      printf("%s (%s)<br>\n", $module->get_serialNumber(),
        $module->get_productName());
      $module=$module->nextModule();
    }
    YAPI::FreeAPI();
  ?>
</TT>
</BODY>
</HTML>
```

17.4. HTTP callback API and NAT filters

The PHP library is able to work in a specific mode called *HTTP callback Yocto-API*. With this mode, you can control Yoctopuce devices installed behind a NAT filter, such as a DSL router for example, and this without needing to open a port. The typical application is to control Yoctopuce devices, located on a private network, from a public web site.


The NAT filter: advantages and disadvantages

A DSL router which translates network addresses (NAT) works somewhat like a private phone switchboard (a PBX): internal extensions can call each other and call the outside; but seen from the outside, there is only one official phone number, that of the switchboard itself. You cannot reach the internal extensions from the outside.

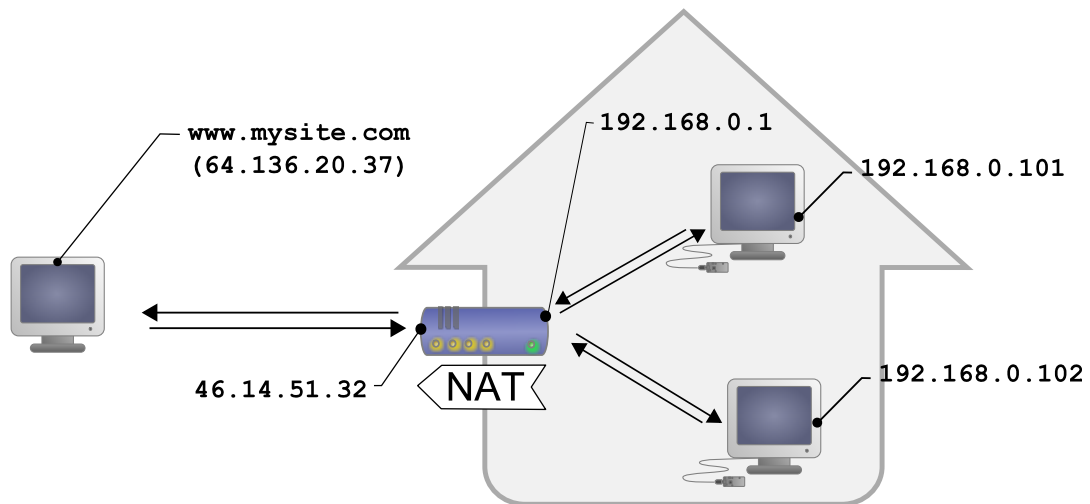


Typical DSL configuration: LAN machines are isolated from the outside by the DSL router

Transposed to the network, we have the following: appliances connected to your home automation network can communicate with one another using a local IP address (of the 192.168.xxx.yyy type), and contact Internet servers through their public address. However, seen from the outside, you have only one official IP address, assigned to the DSL router only, and you cannot reach your network appliances directly from the outside. It is rather restrictive, but it is a relatively efficient protection against intrusions.

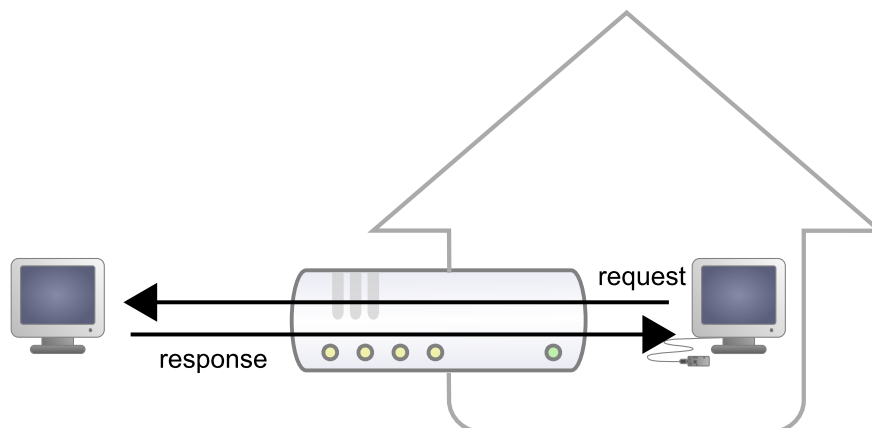

Responses from request from LAN machines are routed.

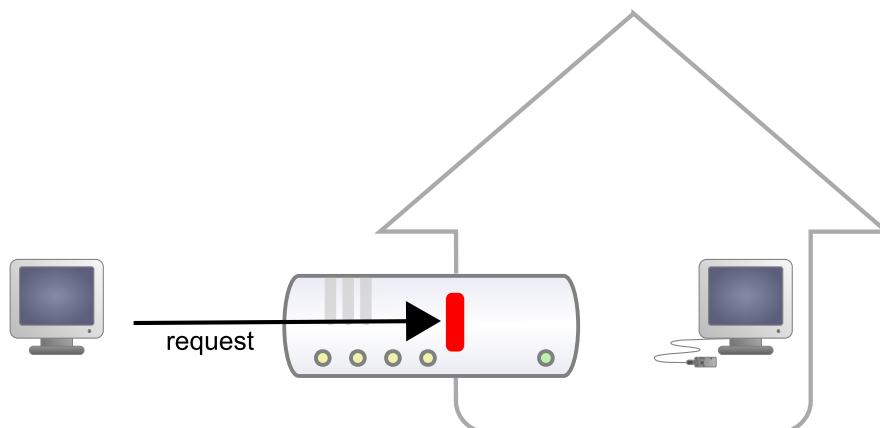


But requests from the outside are blocked.

Seeing Internet without being seen provides an enormous security advantage. However, this signifies that you cannot, a priori, set up your own web server at home to control a home automation installation from the outside. A solution to this problem, advised by numerous home automation system dealers, consists in providing outside visibility to your home automation server itself, by

adding a routing rule in the NAT configuration of the DSL router. The issue of this solution is that it exposes the home automation server to external attacks.

The HTTP callback API solves this issue without having to modify the DSL router configuration. The module control script is located on an external site, and it is the *VirtualHub* which is in charge of calling it a regular intervals.

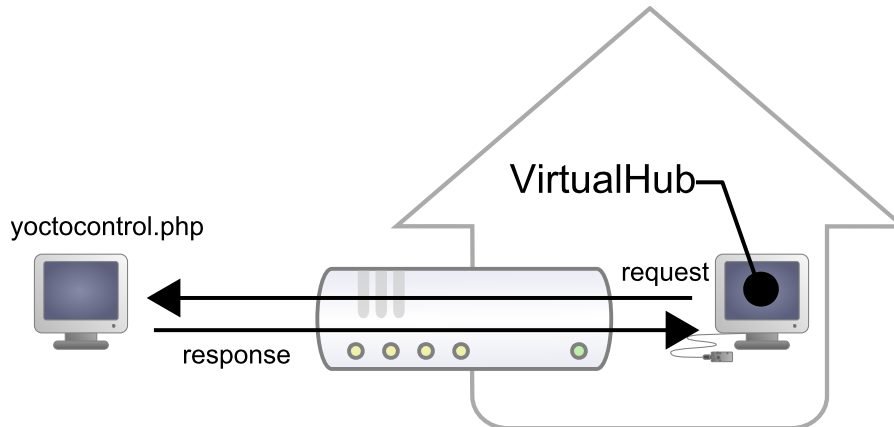


The HTTP callback API uses the *VirtualHub* which initiates the requests.

Configuration


The callback API thus uses the *VirtualHub* as a gateway. All the communications are initiated by the *VirtualHub*. They are thus outgoing communications and therefore perfectly authorized by the DSL router.

You must configure the *VirtualHub* so that it calls the PHP script on a regular basis. To do so:

1. Launch a *VirtualHub*
2. Access its interface, usually 127.0.0.1:4444
3. Click on the **configure** button of the line corresponding to the *VirtualHub* itself
4. Click on the **edit** button of the **Outgoing callbacks** section

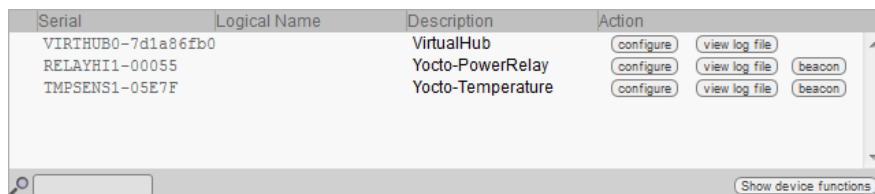

Click on the "configure" button on the first line

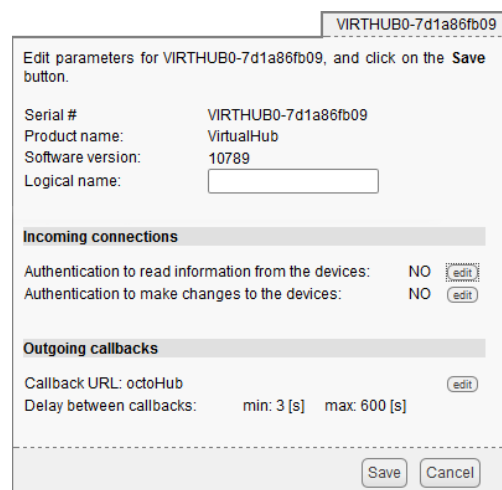

Click on the "edit" button of the "Outgoing callbacks" section

This VirtualHub can post the advertised values of all devices on a specific URL on a regular basis. If you wish to use this feature, choose the callback type follow the steps below carefully.

1. Specify the Type of callback you want to use: **Yocto-API callback**

Yoctopuce devices can be controlled through remote PHP scripts. That *Yocto-API callback* protocol is designed so it can pass through NAT filters without opening ports. See your device user manual, *PHP programming* section for more details.

2. Specify the URL to use for reporting values. *HTTPS protocol is not yet supported.*

Callback URL:

3. If your callback requires authentication, enter credentials here. Digest authentication is recommended, but Basic authentication works as well.

Username:
 Password:

4. Setup the desired frequency of notifications:

No less than seconds between two notification
 But notify after seconds in any case

5. Press on the **Test** button to check your parameters.

6. When everything works, press on the **OK** button.

And select "Yocto-API callback".

You then only need to define the URL of the PHP script and, if need be, the user name and password to access this URL. Supported authentication methods are *basic* and *digest*. The second method is safer than the first one because it does not allow transfer of the password on the network.

Usage

From the programmer standpoint, the only difference is at the level of the *yRegisterHub* function call. Instead of using an IP address, you must use the *callback* string (or *http://callback* which is equivalent).

```
include("yocto_api.php");
yRegisterHub("callback");
```

The remainder of the code stays strictly identical. On the *VirtualHub* interface, at the bottom of the configuration window for the HTTP callback API, there is a button allowing you to test the call to the PHP script.

Be aware that the PHP script controlling the modules remotely through the HTTP callback API can be called only by the *VirtualHub*. Indeed, it requires the information posted by the *VirtualHub* to function. To code a web site which controls Yoctopuce modules interactively, you must create a user interface which stores in a file or in a database the actions to be performed on the Yoctopuce modules. These actions are then read and run by the control script.

Common issues

For the HTTP callback API to work, the PHP option *allow_url_fopen* must be set. Some web site hosts do not set it by default. The problem then manifests itself with the following error:

```
error: URL file-access is disabled in the server configuration
```

To set this option, you must create, in the repertory where the control PHP script is located, an *.htaccess* file containing the following line:

```
php_flag "allow_url_fopen" "On"
```

Depending on the security policies of the host, it is sometimes impossible to authorize this option at the root of the web site, or even to install PHP scripts receiving data from a POST HTTP. In this case, place the PHP script in a subdirectory.

Limitations

This method that allows you to go through NAT filters cheaply has nevertheless a price. Communications being initiated by the *VirtualHub* at a more or less regular interval, reaction time to an event is clearly longer than if the Yoctopuce modules were driven directly. You can configure the reaction time in the specific window of the *VirtualHub*, but it is at least of a few seconds in the best case.

The *HTTP callback Yocto-API* mode is currently available in PHP, EcmaScript (Node.JS) and Java only.

17.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

18. Using Yocto-MaxiDisplay with Visual Basic .NET

VisualBasic has long been the most favored entrance path to the Microsoft world. Therefore, we had to provide our library for this language, even if the new trend is shifting to C#. We support Visual Studio 2017 and its more recent versions.

18.1. Installation

Download the Visual Basic Yoctopuce library from the Yoctopuce web site¹. There is no setup program, simply copy the content of the zip file into the directory of your choice. You mostly need the content of the `Sources` directory. The other directories contain the documentation and a few sample programs. All sample projects are Visual Basic 2010, projects, if you are using a previous version, you may have to recreate the projects structure from scratch.

18.2. Using the Yoctopuce API in a Visual Basic project

The Visual Basic.NET Yoctopuce library is composed of a DLL and of source files in Visual Basic. The DLL is not a .NET DLL, but a classic DLL, written in C, which manages the low level communications with the modules². The source files in Visual Basic manage the high level part of the API. Therefore, you need both this DLL and the .vb files of the `sources` directory to create a project managing Yoctopuce modules.

Configuring a Visual Basic project

The following indications are provided for Visual Studio Express 2010, but the process is similar for other versions. Start by creating your project. Then, on the *Solution Explorer* panel, right click on your project, and select "Add" and then "Add an existing item".

A file selection window opens. Select the `yocto_api.vb` file and the files corresponding to the functions of the Yoctopuce modules that your project is going to manage. If in doubt, select all the files.

You then have the choice between simply adding these files to your project, or to add them as links (the **Add** button is in fact a scroll-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply keeps a link on the original files. We recommend you to use links, which makes updates of the library much easier.

¹ www.yoctopuce.com/EN/libraries.php

² The sources of this DLL are available in the C++ API

Then add in the same manner the `yapi.dll` DLL, located in the `Sources/dll` directory³. Then, from the **Solution Explorer** window, right click on the DLL, select **Properties** and in the **Properties** panel, set the **Copy to output folder to always**. You are now ready to use your Yoctopuce modules from Visual Studio.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface.

18.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Visual Basic code snippet to use the Display function.

```
[...]
' Enable detection of USB devices
Dim errmsg As String
YAPI.RegisterHub("usb", errmsg)
[...]

' Retrieve the object used to interact with the device
Dim display As YDisplay
display = YDisplay.FindDisplay("YD128X64-123456.display")

' Hot-plug is easy: just check that the device is online
If (display.isOnline()) Then
    ' Use display.get_displayLayer()
    [...]
End If

[...]
```

Let's look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display")
display = YDisplay.FindDisplay("YD128X64-123456.MyFunction")
display = YDisplay.FindDisplay("MyModule.display")
display = YDisplay.FindDisplay("MyModule.MyFunction")
display = YDisplay.FindDisplay("MyFunction")
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

³ Remember to change the filter of the selection window, otherwise the DLL will not show.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YFindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch Microsoft VisualBasic and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
Module Module1

    Private Sub Usage()
        Dim execname = System.AppDomain.CurrentDomain.FriendlyName
        Console.WriteLine("Usage:")
        Console.WriteLine(execname + " <serial_number>")
        Console.WriteLine(execname + " <logical_name> ")
        Console.WriteLine(execname + " any")
        System.Threading.Thread.Sleep(2500)
    End Sub
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim target As String
    Dim disp As YDisplay
    Dim l0, l1 As YDisplayLayer
    Dim h, w, y, x, vx, vy As Integer

    If argv.Length <= 1 Then Usage()

    target = argv(1)

    REM Setup the API to use local USB devices
    If (YAPI.RegisterHub("usb", errmsg) <> YAPI_SUCCESS) Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End If

    If target = "any" Then
        disp = YDisplay.FirstDisplay()
        If disp Is Nothing Then
            Console.WriteLine("No module connected (check USB cable) ")
        End If
    End If

    Else
        disp = YDisplay.FindDisplay(target + ".display")

    End If

    If Not (disp.isOnline()) Then
        Console.WriteLine("Module not connected (check identification and USB cable)")
    End If

    REM Display clean up
    disp.resetAll()
    REM retrieve the display size
    w = disp.get_displayWidth()
    h = disp.get_displayHeight()

    REM retrieve the first layer
    l0 = disp.get_displayLayer(0)

    REM display a text in the middle of the screen
    l0.drawText(CInt(w / 2), CInt(h / 2), Y_ALIGN.CENTER, "Hello world!")

    REM visualize each corner
    l0.moveTo(0, 5)
```

```

10.lineTo(0, 0)
10.lineTo(5, 0)
10.moveTo(0, h - 6)
10.lineTo(0, h - 1)
10.lineTo(5, h - 1)
10.moveTo(w - 1, h - 6)
10.lineTo(w - 1, h - 1)
10.lineTo(w - 6, h - 1)
10.moveTo(w - 1, 5)
10.lineTo(w - 1, 0)
10.lineTo(w - 6, 0)

REM draw a circle in the top left corner of layer 1
l1 = disp.get_displayLayer(1)
l1.clear()
l1.drawCircle(CInt(h / 8), CInt(h / 8), CInt(h / 8))

REM and animate the layer
Console.WriteLine("Use Ctrl-C to stop")
x = 0
y = 0
vx = 1
vy = 1

While (disp.isOnline())
    x += vx
    y += vy
    If ((x < 0) Or (x > w - (h / 4))) Then vx = -vx
    If ((y < 0) Or (y > h - (h / 4))) Then vy = -vy
    l1.setLayerPosition(x, y, 0)
    YAPI.Sleep(5, errormsg)
End While
YAPI.FreeAPI()
End Sub

End Module

```

18.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

Imports System.IO
Imports System.Environment

Module Module1

    Sub usage()
        Console.WriteLine("usage: demo <serial or logical name> [ON/OFF]")
    End Sub

    Sub Main()
        Dim argv() As String = System.Environment.GetCommandLineArgs()
        Dim errormsg As String = ""
        Dim m As ymodule

        If (YAPI.RegisterHub("usb", errormsg) <> YAPI_SUCCESS) Then
            Console.WriteLine("RegisterHub error:" + errormsg)
        End If

        If argv.Length < 2 Then usage()

        m = YModule.FindModule(argv(1)) REM use serial or logical name
        If (m.isOnline()) Then
            If argv.Length > 2 Then
                If argv(2) = "ON" Then m.set_beacon(Y_BEACON_ON)
                If argv(2) = "OFF" Then m.set_beacon(Y_BEACON_OFF)
            End If
            Console.WriteLine("serial:      " + m.get_serialNumber())
            Console.WriteLine("logical name: " + m.get_logicalName())
        End If
    End Sub

End Module

```

```

Console.WriteLine("luminosity:  " + Str(m.get_luminosity()))
Console.WriteLine("beacon:      ")
If (m.get_beacon() = Y_BEACON_ON) Then
    Console.WriteLine("ON")
Else
    Console.WriteLine("OFF")
End If
Console.WriteLine("upTime:      " + Str(m.get_upTime() / 1000) + " sec")
Console.WriteLine("USB current:  " + Str(m.get_usbCurrent()) + " mA")
Console.WriteLine("Logs:")
Console.WriteLine(m.get_lastLogs())
Else
    Console.WriteLine(argv(1) + " not connected (check identification and USB cable)")
End If
YAPI.FreeAPI()
End Sub

End Module

```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

Module Module1

Sub usage()

    Console.WriteLine("usage: demo <serial or logical name> <new logical name>")
End Sub

Sub Main()
    Dim argv() As String = System.Environment.GetCommandLineArgs()
    Dim errmsg As String = ""
    Dim newname As String
    Dim m As YModule

    If (argv.Length <> 3) Then usage()

    REM Setup the API to use local USB devices
    If YAPI.RegisterHub("usb", errmsg) <> YAPI.SUCCESS Then
        Console.WriteLine("RegisterHub error: " + errmsg)
    End If

    m = YModule.FindModule(argv(1)) REM use serial or logical name
    If m.isOnline() Then
        newname = argv(2)
        If (Not YAPI.CheckLogicalName(newname)) Then
            Console.WriteLine("Invalid name (" + newname + ")")
        End If
        m.set_logicalName(newname)
        m.saveToFlash() REM do not forget this
        Console.WriteLine("Module: serial= " + m.get_serialNumber())
        Console.WriteLine(" / name= " + m.get_logicalName())
    Else
        Console.WriteLine("not connected (check identification and USB cable)")
    End If
    YAPI.FreeAPI()
End Sub

End Module

```

End Module

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `Nothing`. Below a short example listing the connected modules.

```
Module Module1

    Sub Main()
        Dim M As ymodule
        Dim errmsg As String = ""

        REM Setup the API to use local USB devices
        If YAPI.RegisterHub("usb", errmsg) <> YAPI_SUCCESS Then
            Console.WriteLine("RegisterHub error: " + errmsg)
        End If

        Console.WriteLine("Device list")
        M = YModule.FirstModule()
        While M IsNot Nothing
            Console.WriteLine(M.get_serialNumber() + " (" + M.get_productName() + ")")
            M = M.nextModule()
        End While
        YAPI.FreeAPI()
    End Sub

End Module
```

18.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

19. Using Yocto-MaxiDisplay with Delphi or Lazarus

Delphi is a descendent of Turbo-Pascal. Originally, Delphi was produced by Borland, Embarcadero now edits it. The strength of this language resides in its ease of use, as anyone with some notions of the Pascal language can develop a Windows application in next to no time. Its only disadvantage is to cost something¹.

Lazarus² is a free IDE based on Free-Pascal, it has nothing to envy to Delphi and is available for both Windows and Linux. The Yoctopuce Delphi library is compatible with both Windows and Linux versions of Lazarus

Delphi libraries are provided not as VCL components, but directly as source files. These files are compatible with most Delphi and Lazarus versions.³

19.1. Preparation

Go to the Yoctopuce web site and download the Yoctopuce Delphi libraries⁴. Uncompress everything in a directory of your choice.

- With Delphi, add the subdirectory *sources* in the list of directories of Delphi libraries.⁵
- With Lazarus, open your project options and add the *sources* folder to your "other unit files" path.⁶

Windows

With Windows, the Yoctopuce Delphi / Lazarus library uses two dlls *yapi.dll* (32-bit version) and *yapi64.dll* (64-bit version). All the applications that you create with Delphi or Lazarus must have access to these DLL. The simplest way to ensure this is to make sure that they are located in the same directory as the executable file of your application. You can find these dlls in the *sources/dll* folder.

¹ Actually, Borland provided free versions (for personal use) of Delphi 2006 and 2007. Look for them on the Internet, you may still be able to download them.

² www.lazarus-ide.org

³ Delphi libraries are regularly tested with Delphi 5, Delphi XE2, and the latest version of Lazarus.

⁴ www.yoctopuce.com/EN/libraries.php

⁵ Use the **Tools / Environment options** menu.

⁶ Use the Menu **Project / Project options/ Compiler options / Paths**

Linux

Under Linux, the Delphi / Lazarus library uses the following lib files:

- *libyapi-i386.so* for Intel 32-bit systems
- *libyapi-amd64.so* for Intel 64-bit systems
- *libyapi-armhf.so* for ARM 32-bit systems
- *libyapi-aarch64.so* for ARM 64-bit systems

You will find these lib files in the *sources/dll* folder. You have to make sure that

- Lazarus can find the right .so file at compilation time.
- The executable can find it at execution time.

The simplest way to ensure this is to copy all four .so files into the */usr/lib* folder. Alternatively, you can copy them next to your main source file and adjust your *LD_LIBRARY_PATH* environment variable accordingly.

19.2. About examples

To keep them simple, all the examples provided in this documentation are console applications. Obviously, the libraries work in a strictly identical way with VCL applications.

Note that most of these examples use command line parameters ⁷.

You will soon notice that the Delphi API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

19.3. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Delphi code snippet to use the Display function.

```
uses yocto_api, yocto_display;

var errmsg: string;
    display: TYDisplay;

[...]
// Enable detection of USB devices
yRegisterHub('usb', errmsg)
[...]

// Retrieve the object used to interact with the device
display = yFindDisplay("YD128X64-123456.display")

// Hot-plug is easy: just check that the device is online
if display.isOnline() then
begin
    // Use display.get_displayLayer()
    [...]
end;
[...]
```

Let's look at these lines in more details.

yocto_api and yocto_display

These two units provide access to the functions allowing you to manage Yoctopuce modules. *yocto_api* must always be used, *yocto_display* is necessary to manage modules containing a display, such as Yocto-MaxiDisplay.

⁷ See <https://www.yoctopuce.com/EN/article/about-programming-examples>

yRegisterHub

The `yRegisterHub` function initializes the Yoctopuce API and specifies where the modules should be looked for. When used with the parameter `'usb'`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

yFindDisplay

The `yFindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can also use logical names, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
display := yFindDisplay("YD128X64-123456.display");
display := yFindDisplay("YD128X64-123456.MyFunction");
display := yFindDisplay("MyModule.display");
display := yFindDisplay("MyModule.MyFunction");
display := yFindDisplay("MyFunction");
```

`yFindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `yFindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `yFindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch your Delphi environment, copy the `yapi.dll` DLL in a directory, create a new console application in the same directory, and copy-paste the piece of code below:

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
program helloworld;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  {$IFDEF UNIX}
  windows,
  {$ENDIF UNIX}
  yocto_api,
  yocto_display;

Procedure Usage();
var
  exe : string;

begin
  exe:= ExtractFileName(paramstr(0));
  WriteLn(exe+' <serial_number>');
  WriteLn(exe+' <logical_name>');
  WriteLn(exe+' any');
  sleep(2500);
  halt;
End;

var
  disp      : TYDisplay;
  l0,l1     : TYDisplayLayer;
```

```

errmsg      : string;
w,h         : integer;
x,y,vx,vy   : integer;

begin

  if (paramcount<1) then usage();

  // Setup the API to use local USB devices
  if yRegisterHub('usb', errmsg)<>YAPI_SUCCESS then
  begin
    Write('RegisterHub error: '+errmsg);
    sleep(3000);
    exit;
  end;

  // first one of the two RGB leds
  if paramstr(1)='any' then
  begin
    disp := yFirstDisplay();
    if disp=nil then
      begin
        writeln('No module connected (check USB cable)');
        sleep(3000);
        halt;
      end
    end
  else
    disp:= YFindDisplay(paramstr(1)+'.display');

  // make sure it is online
  if not(disp.isOnline()) then
  begin
    writeln('No module connected (check USB cable)');
    sleep(3000);
    halt;
  end;

  // display clean up
  disp.resetAll();

  // retrieve the display size
  w:=disp.get_displayWidth();
  h:=disp.get_displayHeight();

  // retrieve the first layer
  L0:=Disp.get_displaylayer(0);

  // display a text in the middle of the screen
  L0.drawText(w div 2, h div 2, Y_ALIGN_CENTER, 'Hello world!' );
  // visualize eah corner
  L0.moveto(0,5);L0.lineto(0,0);L0.lineto(5,0);
  L0.moveto(0,h-6);L0.lineto(0,H-1);L0.lineto(5,H-1);
  L0.moveto(w-1,h-6);L0.lineto(w-1,H-1);L0.lineto(w-6,H-1);
  L0.moveto(w-1,5);L0.lineto(w-1,0);L0.lineto(w-6,0);

  // draw a circle in the top left corner of layer 1
  L1:=Disp.get_displaylayer(1);
  L1.clear();
  L1.drawCircle(H div 8, H div 8, h div 8);

  // and animate the layer
  Writeln('Use Ctrl-C to stop');
  x:=0; y:=0; vx:=1; vy:=1;
  while (disp.isOnline()) do
  begin
    x:=x+vx;y:=y+vy;
    if (x<0) or (x>w-(h div 4)) then vx:=-vx;
    if (y<0) or (y>h-(h div 4)) then vy:=-vy;
    l1.setLayerPosition(x,y,0);
    ysleep(5,errmsg);
  end;
  yFreeAPI();

end.

```

19.4. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

program modulecontrol;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  yocto_api;

const
  serial = 'YD128X64-123456'; // use serial number or logical name

procedure refresh(module:TYmodule) ;
begin
  if (module.isOnline()) then
  begin
    Writeln('');
    Writeln('Serial      : ' + module.get_serialNumber());
    Writeln('Logical name : ' + module.get_logicalName());
    Writeln('Luminosity   : ' + intToStr(module.get_luminosity()));
    Write('Beacon     :');
    if (module.get_beacon()=Y_BEACON_ON) then Writeln('on')
    else Writeln('off');
    Writeln('uptime      : ' + intToStr(module.get_upTime() div 1000)+'s');
    Writeln('USB current : ' + intToStr(module.get_usbCurrent())+'mA');
    Writeln('Logs        : ');
    Writeln(module.get_lastlogs());
    Writeln('');
    Writeln('r : refresh / b:beacon ON / space : beacon off');
  end
  else Writeln('Module not connected (check identification and USB cable)');
end;

procedure beacon(module:TYmodule;state:integer);
begin
  module.set_beacon(state);
  refresh(module);
end;

var
  module : TYModule;
  c      : char;
  errmsg : string;

begin
  // Setup the API to use local USB devices
  if yRegisterHub('usb', errmsg)<>YAPI_SUCCESS then
  begin
    Write('RegisterHub error: '+errmsg);
    exit;
  end;

  module := yFindModule(serial);
  refresh(module);

  repeat
    read(c);
    case c of
      'r': refresh(module);
      'b': beacon(module,Y_BEACON_ON);
      ' ': beacon(module,Y_BEACON_OFF);
    end;
  until c = 'x';
  yFreeAPI();
end.

```

Each property xxx of the module can be read thanks to a method of type `get_xxxx()`, and properties which are not read-only can be modified with the help of the `set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```
program savesettings;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  yocto_api;

const
  serial = 'YD128X64-123456'; // use serial number or logical name

var
  module : TYModule;
  errmsg : string;
  newname : string;

begin
  // Setup the API to use local USB devices
  if yRegisterHub('usb', errmsg) <> YAPI_SUCCESS then
  begin
    Write('RegisterHub error: '+errmsg);
    exit;
  end;

  module := yFindModule(serial);
  if (not(module.isOnline)) then
  begin
    writeln('Module not connected (check identification and USB cable)');
    exit;
  end;

  Writeln('Current logical name : '+module.get_logicalName());
  Write('Enter new name : ');
  Readln(newname);
  if (not(yCheckLogicalName(newname))) then
  begin
    Writeln('invalid logical name');
    exit;
  end;
  module.set_logicalName(newname);
  module.saveToFlash();
  yFreeAPI();
  Writeln('logical name is now : '+module.get_logicalName());
end.
```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `nil`. Below a short example listing the connected modules.

```
program inventory;
{$APPTYPE CONSOLE}
uses
  SysUtils,
  yocto_api;
```



```

var
  module : TYModule;
  errmsg : string;

begin
  // Setup the API to use local USB devices
  if yRegisterHub('usb', errmsg) <> YAPI_SUCCESS then
  begin
    Write('RegisterHub error: '+errmsg);
    exit;
  end;

  Writeln('Device list');

  module := yFirstModule();
  while module <> nil do
  begin
    Writeln( module.get_serialNumber()+' ('+module.get_productName()+')');
    module := module.nextModule();
  end;
  yFreeAPI();
end.

```

19.5. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the

`errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

20. Using the Yocto-MaxiDisplay with Universal Windows Platform

Universal Windows Platform (UWP) is not a language per say, but a software platform created by Microsoft. This platform allows you to run a new type of applications: the universal Windows applications. These applications can work on all machines running under Windows 10. This includes computers, tablets, smart phones, XBox One, and also Windows IoT Core.

The Yoctopuce UWP library allows you to use Yoctopuce modules in a universal Windows application and is written in C# in its entirety. You can add it to a Visual Studio 2017¹ project.

20.1. Blocking and asynchronous functions

The Universal Windows Platform does not use the Win32 API but only the Windows Runtime API which is available on all the versions of Windows 10 and for any architecture. Thanks to this library, you can use UWP on all the Windows 10 versions, including Windows 10 IoT Core.

However, using the new UWP API has some consequences: the Windows Runtime API to access the USB ports is asynchronous, and therefore the Yoctopuce library must be asynchronous as well. Concretely, the asynchronous methods do not return a result directly but a `Task` or `Task<>` object and the result can be obtained later. Fortunately, the C# language, version 6, supports the `async` and `await` keywords, which simplifies using these functions enormously. You can thus use asynchronous functions in the same way as traditional functions as long as you respect the following two rules:

- The method is declared as asynchronous with the `async` keyword
- The `await` keyword is added when calling an asynchronous function

Example:

```
async Task<int> MyFunction(int val)
{
    // do some long computation
    ...

    return result;
}

int res = await MyFunction(1234);
```

¹ <https://www.visualstudio.com/vs/cordova/vs/>

Our library follows these two rules and can therefore use the `await` notation.

For you not to have to wonder whether a function is asynchronous or not, there is the following convention: **all the public methods** of the UWP library **are asynchronous**, that is that you must call them with the `await` keyword, **except**:

- `GetTickCount()`, because measuring time in an asynchronous manner does not make a lot of sense...
- `FindModule()`, `FirstModule()`, `nextModule()`,... because detecting and enumerating modules is performed as a background task on internal structures which are managed transparently. It is therefore not necessary to use blocking functions while going through the lists of modules.

20.2. Installation

Download the Yoctopuce library for Universal Windows Platform from the Yoctopuce web site². There is no installation software, simply copy the content of the zip file in a directory of your choice. You essentially need the content of the `Sources` directory. The other directories contain documentation and a few sample programs. Sample projects are Visual Studio 2017 projects. Visual Studio 2017 is available on the Microsoft web site³.

20.3. Using the Yoctopuce API in a Visual Studio project

Start by creating your project. Then, from the **Solution Explorer** panel right click on your project and select **Add** then **Existing element**.

A file chooser opens: select all the files in the library `Sources` directory.

You then have the choice between simply adding the files to your project or adding them as a link (the **Add** button is actually a drop-down menu). In the first case, Visual Studio copies the selected files into your project. In the second case, Visual Studio simply creates a link to the original files. We recommend to use links, as a potential library update is thus much easier.

The Package.appxmanifest file

By default a Universal Windows application doesn't have access rights to the USB ports. If you want to access USB devices, you must imperatively declare it in the `Package.appxmanifest` file.

Unfortunately, the edition window of this file doesn't allow this operation and you must modify the `Package.appxmanifest` file by hand. In the "Solution Explorer" panel, right click on the `Package.appxmanifest` and select "View Code".

In this XML file, we must add a `DeviceCapability` node in the `Capabilities` node. This node must have a "Name" attribute with a "humaninterfacedevice" value.

Inside this node, you must declare all the modules that can be used. Concretely, for each module, you must add a "Device" node with an "Id" attribute, which has for value a character string "vidpid:USB_VENDORID USB_DEVICE_ID". The Yoctopuce USB_VENDORID is 24e0 and you can find the USB_DEVICE_ID of each Yoctopuce device in the documentation in the "Characteristics" section. Finally, the "Device" node must contain a "Function" node with the "Type" attribute with a value of "usage:ff00 0001".

For the Yocto-MaxiDisplay, here is what you must add in the "Capabilities" node:

```
<DeviceCapability Name="humaninterfacedevice">
  <!-- Yocto-MaxiDisplay -->
  <Device Id="vidpid:24e0 0030">
    <Function Type="usage:ff00 0001" />
  </Device>
</DeviceCapability>
```

² www.yoctopuce.com/EN/libraries.php

³ <https://www.visualstudio.com/downloads/>

```
</Device>
</DeviceCapability>
```

Unfortunately, it's not possible to write a rule authorizing all Yoctopuce modules. Therefore, you must imperatively add each module that you want to use.

20.4. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a C# code snippet to use the Display function.

```
[...]
// Enable detection of USB devices
await YAPI.RegisterHub("usb");
[...]

// Retrieve the object used to interact with the device
YDisplay display = YDisplay.FindDisplay("YD128X64-123456.display");

// Hot-plug is easy: just check that the device is online
if (await display.isOnline())
{
    // Use display.get_displayLayer()
    [...]
}

[...]
```

Let us look at these lines in more details.

YAPI.RegisterHub

The `YAPI.RegisterHub` function initializes the Yoctopuce API and indicates where the modules should be looked for. The parameter is the address of the virtual hub able to see the devices. If the string "usb" is passed as parameter, the API works with modules locally connected to the machine. If the initialization does not succeed, an exception is thrown.

YDisplay.FindDisplay

The `YDisplay.FindDisplay` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named "MyModule", and for which you have given the `display` function the name "MyFunction". The following five calls are strictly equivalent, as long as "MyFunction" is defined only once.

```
display = YDisplay.FindDisplay("YD128X64-123456.display");
display = YDisplay.FindDisplay("YD128X64-123456.MaFonction");
display = YDisplay.FindDisplay("MonModule.display");
display = YDisplay.FindDisplay("MonModule.MaFonction");
display = YDisplay.FindDisplay("MaFonction");
```

`YDisplay.FindDisplay` returns an object which you can then use at will to control the display.

isOnline

The `isOnline()` method of the object returned by `YDisplay.FindDisplay` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

20.5. A real example

Launch Visual Studio and open the corresponding project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

Visual Studio projects contain numerous files, and most of them are not linked to the use of the Yoctopuce library. To simplify reading the code, we regrouped all the code that uses the library in the `Demo` class, located in the `demo.cs` file. Properties of this class correspond to the different fields displayed on the screen, and the `Run()` method contains the code which is run when the "Start" button is pushed.

In this example, you can recognize the functions explained above, but this time used with all the side materials needed to make it work nicely as a small demo.

```
using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }
        public string Target { get; set; }
        public string Message { get; set; }

        public override async Task<int> Run()
        {
            try {
                await YAPI.RegisterHub(HubURL);

                YDisplay disp;
                YDisplayLayer l0, l1;
                int h, w, y, x, vx, vy;

                // find the display according to command line parameters
                if (Target.ToLower() == "any") {
                    disp = YDisplay.FirstDisplay();
                    if (disp == null) {
                        WriteLine("No module connected (check USB cable) ");
                        return -1;
                    }
                } else {
                    disp = YDisplay.FindDisplay(Target + ".display");
                }

                if (!await disp.isOnline()) {
                    WriteLine("Module not connected (check identification and USB cable) ");
                    return -1;
                }

                //clean up
                await disp.resetAll();

                // retrieve the display size
                w = await disp.get_displayWidth();
                h = await disp.get_displayHeight();

                // retrieve the first layer
                l0 = await disp.get_displayLayer(0);

                // display a text in the middle of the screen
                await l0.drawText(w / 2, h / 2, YDisplayLayer.ALIGN.CENTER, Message);

                // visualize each corner
                await l0.moveTo(0, 5);
                await l0.lineTo(0, 0);
                await l0.lineTo(5, 0);
                await l0.moveTo(0, h - 6);
                await l0.lineTo(0, h - 1);
                await l0.lineTo(5, h - 1);
                await l0.moveTo(w - 1, h - 6);
            }
        }
    }
}
```

```

        await l0.lineTo(w - 1, h - 1);
        await l0.lineTo(w - 6, h - 1);
        await l0.moveTo(w - 1, 5);
        await l0.lineTo(w - 1, 0);
        await l0.lineTo(w - 6, 0);

        // draw a circle in the top left corner of layer 1
        l1 = await disp.get_displayLayer(1);
        await l1.clear();
        await l1.drawCircle(h / 8, h / 8, h / 8);

        // and animate the layer
        x = 0;
        y = 0;
        vx = 1;
        vy = 1;
        while (await disp.isOnline()) {
            x += vx;
            y += vy;
            if ((x < 0) || (x > w - (h / 4))) vx = -vx;
            if ((y < 0) || (y > h - (h / 4))) vy = -vy;
            await l1.setLayerPosition(x, y, 0);
            await YAPI.Sleep(5);
        }

        WriteLine("Module not connected (check identification and USB cable) ");
    } catch (YAPI_Exception ex) {
        WriteLine("error: " + ex.Message);
    }

    await YAPI.FreeAPI();
    return 0;
}
}
}

```

20.6. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```

using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }
        public string Target { get; set; }
        public bool Beacon { get; set; }

        public override async Task<int> Run()
        {
            YModule m;
            string errmsg = "";

            if (await YAPI.RegisterHub(HubURL) != YAPI.SUCCESS) {
                WriteLine("RegisterHub error: " + errmsg);
                return -1;
            }
            m = YModule.FindModule(Target + ".module"); // use serial or logical name
            if (await m.isOnline()) {
                if (Beacon) {
                    await m.set_beacon(YModule.BEACON_ON);
                } else {
                    await m.set_beacon(YModule.BEACON_OFF);
                }

                WriteLine("serial: " + await m.get_serialNumber());
            }
        }
    }
}

```

```

WriteLine("logical name: " + await m.get_logicalName());
WriteLine("luminosity: " + await m.get_luminosity());
Write("beacon: ");
if (await m.get_beacon() == YModule.BEACON_ON)
    WriteLine("ON");
else
    WriteLine("OFF");
WriteLine("upTime: " + (await m.get_upTime() / 1000) + " sec");
WriteLine("USB current: " + await m.get_usbCurrent() + " mA");
WriteLine("Logs:\r\n" + await m.get_lastLogs());
} else {
    WriteLine(Target + " not connected on" + HubURL +
        "(check identification and USB cable)");
}
await YAPI.FreeAPI();
return 0;
}
}
}

```

Each property `xxx` of the module can be read thanks to a method of type `YModule.get_xxxx()`, and properties which are not read-only can be modified with the help of the `YModule.set_xxx()` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `YModule.set_xxx()` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `YModule.saveToFlash()` method. Inversely, it is possible to force the module to forget its current settings by using the `YModule.revertFromFlash()` method. The short example below allows you to modify the logical name of a module.

```

using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }
        public string Target { get; set; }
        public string LogicalName { get; set; }

        public override async Task<int> Run()
        {
            try {
                YModule m;

                await YAPI.RegisterHub(HubURL);

                m = YModule.FindModule(Target); // use serial or logical name
                if (await m.isOnline()) {
                    if (!YAPI.CheckLogicalName(LogicalName)) {
                        WriteLine("Invalid name (" + LogicalName + ")");
                        return -1;
                    }

                    await m.set_logicalName(LogicalName);
                    await m.saveToFlash(); // do not forget this
                    Write("Module: serial= " + await m.get_serialNumber());
                    WriteLine(" / name= " + await m.get_logicalName());
                } else {
                    Write("not connected (check identification and USB cable)");
                }
            } catch (YAPI_Exception ex) {
                WriteLine("RegisterHub error: " + ex.Message);
            }
            await YAPI.FreeAPI();
            return 0;
        }
    }
}

```



```

    }
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `YModule.saveToFlash()` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `YModule.yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not null. Below a short example listing the connected modules.

```

using System;
using System.Diagnostics;
using System.Threading.Tasks;
using Windows.UI.Xaml.Controls;
using com.yoctopuce.YoctoAPI;

namespace Demo
{
    public class Demo : DemoBase
    {
        public string HubURL { get; set; }

        public override async Task<int> Run()
        {
            YModule m;
            try {
                await YAPI.RegisterHub(HubURL);

                WriteLine("Device list");
                m = YModule.FirstModule();
                while (m != null) {
                    WriteLine(await m.get_serialNumber()
                        + " (" + await m.get_productName() + ")");
                    m = m.nextModule();
                }
            } catch (YAPI_Exception ex) {
                WriteLine("Error:" + ex.Message);
            }
            await YAPI.FreeAPI();
            return 0;
        }
    }
}

```

20.7. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software.

In the Universal Windows Platform library, error handling is implemented with exceptions. You must therefore intercept and correctly handle these exceptions if you want to have a reliable project which does not crash as soon as you disconnect a module.

Library thrown exceptions are always of the `YAPI_Exception` type, so you can easily separate them from other exceptions in a `try{...} catch{...}` block.

Example:

```
try {  
    ....  
} catch (YAPI_Exception ex) {  
    Debug.WriteLine("Exception from Yoctopuce lib:" + ex.Message);  
} catch (Exception ex) {  
    Debug.WriteLine("Other exceptions :" + ex.Message);  
}
```

21. Using Yocto-MaxiDisplay with Objective-C

Objective-C is language of choice for programming on macOS, due to its integration with the Cocoa framework. Yoctopuce supports the XCode versions supported by Apple. The Yoctopuce library is ARC compatible. You can therefore implement your projects either using the traditional *retain / release* method, or using the *Automatic Reference Counting*.

Yoctopuce Objective-C libraries¹ are integrally provided as source files. A section of the low-level library is written in pure C, but you should not need to interact directly with it: everything was done to ensure the simplest possible interaction from Objective-C.

You will soon notice that the Objective-C API defines many functions which return objects. You do not need to deallocate these objects yourself, the API does it automatically at the end of the application.

In order to keep them simple, all the examples provided in this documentation are console applications. Naturally, the libraries function in a strictly identical manner if you integrate them in an application with a graphical interface. You can find on Yoctopuce blog a detailed example² with video shots showing how to integrate the library into your projects.

21.1. Control of the Display function

A few lines of code are enough to use a Yocto-MaxiDisplay. Here is the skeleton of a Objective-C code snippet to use the Display function.

```
#import "yocto_api.h"
#import "yocto_display.h"

...
NSError *error;
[YAPI RegisterHub:@"usb": &error]
...
// On récupère l'objet représentant le module (ici connecté en local sur USB)
display = [YDisplay FindDisplay:@"YD128X64-123456.display"];

// Pour gérer le hot-plug, on vérifie que le module est là
if([display isOnline])
{
    // Utiliser [display get_displayLayer]
    ...
}
```

¹ www.yoctopuce.com/EN/libraries.php

² www.yoctopuce.com/EN/article/new-objective-c-library-for-mac-os-x

Let's look at these lines in more details.

yocto_api.h and yocto_display.h

These two import files provide access to the functions allowing you to manage Yoctopuce modules. `yocto_api.h` must always be used, `yocto_display.h` is necessary to manage modules containing a display, such as Yocto-MaxiDisplay.

[YAPI RegisterHub]

The `[YAPI RegisterHub]` function initializes the Yoctopuce API and indicates where the modules should be looked for. When used with the parameter `@"usb"`, it will use the modules locally connected to the computer running the library. If the initialization does not succeed, this function returns a value different from `YAPI_SUCCESS` and `errmsg` contains the error message.

[Display FindDisplay]

The `[Display FindDisplay]` function allows you to find a display from the serial number of the module on which it resides and from its function name. You can use logical names as well, as long as you have initialized them. Let us imagine a Yocto-MaxiDisplay module with serial number `YD128X64-123456` which you have named `"MyModule"`, and for which you have given the `display` function the name `"MyFunction"`. The following five calls are strictly equivalent, as long as `"MyFunction"` is defined only once.

```
YDisplay *display = [Display FindDisplay:@"YD128X64-123456.display"];
YDisplay *display = [Display FindDisplay:@"YD128X64-123456.MyFunction"];
YDisplay *display = [Display FindDisplay:@"MyModule.display"];
YDisplay *display = [Display FindDisplay:@"MyModule.MyFunction"];
YDisplay *display = [Display FindDisplay:@"MyFunction"];
```

`[Display FindDisplay]` returns an object which you can then use at will to control the display.

isOnline

The `isOnline` method of the object returned by `[Display FindDisplay]` allows you to know if the corresponding module is present and in working order.

get_displayLayer

The `get_displayLayer()` method of the object returned by `YDisplay.FindDisplay` allows you to retrieve the object corresponding to one of the screen layers. This object implements all the graphical routines.

A real example

Launch Xcode 4.2 and open the corresponding sample project provided in the directory **Examples/Doc-GettingStarted-Yocto-MaxiDisplay** of the Yoctopuce library.

In this example, you will recognize the functions explained above, but this time used with all side materials needed to make it work nicely as a small demo.

```
#import <Foundation/Foundation.h>
#import "yocto_api.h"
#import "yocto_display.h"

static void usage(void)
{
    NSLog(@"usage: demo <serial_number> ");
    NSLog(@"          demo <logical_name>");
    NSLog(@"          demo any                (use any discovered device)");
    exit(1);
}

int main(int argc, const char * argv[])
{
    NSError *error;
    YDisplay *disp;
    YDisplayLayer *l0, *l1;
```

```

int h, w, y, x, vx, vy;
@autoreleasepool {

    // Setup the API to use local USB devices
    if([YAPI RegisterHub:@"usb": &error] != YAPI_SUCCESS) {
        NSLog(@"RegisterHub error: %@", [error localizedDescription]);
        usage();
        return 1;
    }
    if(argc < 2) {
        disp = [YDisplay FirstDisplay];
        if(disp == nil) {
            NSLog(@"No module connected (check USB cable)");
            usage();
            return 1;
        }
    } else {
        NSString *target = [NSString stringWithUTF8String:argv[1]];

        disp = [YDisplay FindDisplay:target];
        if(![disp isOnline]) {
            NSLog(@"Module not connected (check identification and USB cable)");
            usage();
            return 1;
        }
    }

    // clear screen (and all layers)
    [disp resetAll];
    // retrieve the display size
    w = [disp get_displayWidth];
    h = [disp get_displayHeight];

    // retrieve the first layer
    l0 = [disp get_displayLayer:0];

    // display a text in the middle of the screen
    [l0 drawText:w / 2 :h / 2 :Y_ALIGN_CENTER :@"Hello world!"];

    // visualize each corner
    [l0 moveTo:0 :5];
    [l0 lineTo:0 :0];
    [l0 lineTo:5 :0];
    [l0 moveTo:0 :h - 6];
    [l0 lineTo:0 :h - 1];
    [l0 lineTo:5 :h - 1];
    [l0 moveTo:w - 1 :h - 6];
    [l0 lineTo:w - 1 :h - 1];
    [l0 lineTo:w - 6 :h - 1];
    [l0 moveTo:w - 1 :5];
    [l0 lineTo:w - 1 :0];
    [l0 lineTo:w - 6 :0];

    // draw a circle in the top left corner of layer 1
    l1 = [disp get_displayLayer:1];
    [l1 clear];
    [l1 drawCircle:h / 8 :h / 8 :h / 8];

    // and animate the layer
    NSLog(@"Use Ctrl-C to stop");
    x = 0;
    y = 0;
    vx = 1;
    vy = 1;
    while ([disp isOnline]) {
        x += vx;
        y += vy;
        if ((x < 0) || (x > w - (h / 4))) vx = -vx;
        if ((y < 0) || (y > h - (h / 4))) vy = -vy;
        [l1 setLayerPosition:x :y :0];
        [YAPI Sleep:5 :&error];
    }
    [YAPI FreeAPI];
}

return 0;
}

```

21.2. Control of the module part

Each module can be controlled in a similar manner, you can find below a simple sample program displaying the main parameters of the module and enabling you to activate the localization beacon.

```
#import <Foundation/Foundation.h>
#import "yocto_api.h"

static void usage(const char *exe)
{
    NSLog(@"usage: %s <serial or logical name> [ON/OFF]\n", exe);
    exit(1);
}

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb": &error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@", [error localizedDescription]);
            return 1;
        }
        if(argc < 2)
            usage(argv[0]);
        NSString *serial_or_name = [NSString stringWithUTF8String:argv[1]];
        // use serial or logical name
        YModule *module = [YModule FindModule:serial_or_name];
        if ([module isOnline]) {
            if (argc > 2) {
                if (strcmp(argv[2], "ON") == 0)
                    [module setBeacon:Y_BEACON_ON];
                else
                    [module setBeacon:Y_BEACON_OFF];
            }
            NSLog(@"serial:      %@\n", [module serialNumber]);
            NSLog(@"logical name: %@\n", [module logicalName]);
            NSLog(@"luminosity:   %d\n", [module luminosity]);
            NSLog(@"beacon:      ");
            if ([module beacon] == Y_BEACON_ON)
                NSLog(@"ON\n");
            else
                NSLog(@"OFF\n");
            NSLog(@"upTime:      %ld sec\n", [module upTime] / 1000);
            NSLog(@"USB current: %d mA\n", [module usbCurrent]);
            NSLog(@"logs:       %@\n", [module get_lastLogs]);
        } else {
            NSLog(@"%@ not connected (check identification and USB cable)\n",
                serial_or_name);
        }
        [YAPI FreeAPI];
    }
    return 0;
}
```

Each property `xxx` of the module can be read thanks to a method of type `get_xxxx`, and properties which are not read-only can be modified with the help of the `set_xxx` method. For more details regarding the used functions, refer to the API chapters.

Changing the module settings

When you want to modify the settings of a module, you only need to call the corresponding `set_xxx` function. However, this modification is performed only in the random access memory (RAM) of the module: if the module is restarted, the modifications are lost. To memorize them persistently, it is necessary to ask the module to save its current configuration in its permanent memory. To do so, use the `saveToFlash` method. Inversely, it is possible to force the module to forget its current settings by using the `revertFromFlash` method. The short example below allows you to modify the logical name of a module.

```

#import <Foundation/Foundation.h>
#import "yocto_api.h"

static void usage(const char *exe)
{
    NSLog(@"usage: %s <serial> <newLogicalName>\n", exe);
    exit(1);
}

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb" :&error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@", [error localizedDescription]);
            return 1;
        }

        if(argc < 2)
            usage(argv[0]);

        NSString *serial_or_name = [NSString stringWithUTF8String:argv[1]];
        // use serial or logical name
        YModule *module = [YModule FindModule:serial_or_name];

        if (module.isOnline) {
            if (argc >= 3) {
                NSString *newname = [NSString stringWithUTF8String:argv[2]];
                if (![YAPI CheckLogicalName:newname]) {
                    NSLog(@"Invalid name (%@)\n", newname);
                    usage(argv[0]);
                }
                module.logicalName = newname;
                [module saveToFlash];
            }
            NSLog(@"Current name: %@\n", module.logicalName);
        } else {
            NSLog(@"%% not connected (check identification and USB cable)\n",
                serial_or_name);
        }
        [YAPI FreeAPI];
    }
    return 0;
}

```

Warning: the number of write cycles of the nonvolatile memory of the module is limited. When this limit is reached, nothing guaranties that the saving process is performed correctly. This limit, linked to the technology employed by the module micro-processor, is located at about 100000 cycles. In short, you can use the `saveToFlash` function only 100000 times in the life of the module. Make sure you do not call this function within a loop.

Listing the modules

Obtaining the list of the connected modules is performed with the `yFirstModule()` function which returns the first module found. Then, you only need to call the `nextModule()` function of this object to find the following modules, and this as long as the returned value is not `NULL`. Below a short example listing the connected modules.

```

#import <Foundation/Foundation.h>
#import "yocto_api.h"

int main (int argc, const char * argv[])
{
    NSError *error;

    @autoreleasepool {
        // Setup the API to use local USB devices
        if([YAPI RegisterHub:@"usb" :&error] != YAPI_SUCCESS) {
            NSLog(@"RegisterHub error: %@\n", [error localizedDescription]);
            return 1;
        }
    }
}

```

```

NSLog(@"Device list:\n");

YModule *module = [YModule FirstModule];
while (module != nil) {
    NSLog(@"%@ %@", module.serialNumber, module.productName);
    module = [module nextModule];
}
[YAPI FreeAPI];
}
return 0;
}

```

21.3. Error handling

When you implement a program which must interact with USB modules, you cannot disregard error handling. Inevitably, there will be a time when a user will have unplugged the device, either before running the software, or even while the software is running. The Yoctopuce library is designed to help you support this kind of behavior, but your code must nevertheless be conceived to interpret in the best possible way the errors indicated by the library.

The simplest way to work around the problem is the one used in the short examples provided in this chapter: before accessing a module, check that it is online with the `isOnline` function, and then hope that it will stay so during the fraction of a second necessary for the following code lines to run. This method is not perfect, but it can be sufficient in some cases. You must however be aware that you cannot completely exclude an error which would occur after the call to `isOnline` and which could crash the software. The only way to prevent this is to implement one of the two error handling techniques described below.

The method recommended by most programming languages for unpredictable error handling is the use of exceptions. By default, it is the behavior of the Yoctopuce library. If an error happens while you try to access a module, the library throws an exception. In this case, there are three possibilities:

- If your code catches the exception and handles it, everything goes well.
- If your program is running in debug mode, you can relatively easily determine where the problem happened and view the explanatory message linked to the exception.
- Otherwise... the exception makes your program crash, bang!

As this latest situation is not the most desirable, the Yoctopuce library offers another possibility for error handling, allowing you to create a robust program without needing to catch exceptions at every line of code. You simply need to call the `YAPI.DisableExceptions()` function to commute the library to a mode where exceptions for all the functions are systematically replaced by specific return values, which can be tested by the caller when necessary. For each function, the name of each return value in case of error is systematically documented in the library reference. The name always follows the same logic: a `get_state()` method returns a `ClassName.STATE_INVALID` value, a `get_currentValue` method returns a `ClassName.CURRENTVALUE_INVALID` value, and so on. In any case, the returned value is of the expected type and is not a null pointer which would risk crashing your program. At worst, if you display the value without testing it, it will be outside the expected bounds for the returned value. In the case of functions which do not normally return information, the return value is `YAPI_SUCCESS` if everything went well, and a different error code in case of failure.

When you work without exceptions, you can obtain an error code and an error message explaining the source of the error. You can request them from the object which returned the error, calling the `errType()` and `errMessage()` methods. Their returned values contain the same information as in the exceptions when they are active.

22. Using with unsupported languages

Yoctopuce modules can be driven from most common programming languages. New languages are regularly added, depending on the interest expressed by Yoctopuce product users. Nevertheless, some languages are not, and will never be, supported by Yoctopuce. There can be several reasons for this: compilers which are not available anymore, unadapted environments, and so on.

However, there are alternative methods to access Yoctopuce modules from an unsupported programming language.

22.1. Command line

The easiest method to drive Yoctopuce modules from an unsupported programming language is to use the command line API through system calls. The command line API is in fact made of a group of small executables which are easy to call. Their output is also easy to analyze. As most programming languages allow you to make system calls, the issue is solved with a few lines of code.


However, if the command line API is the easiest solution, it is neither the fastest nor the most efficient. For each call, the executable must initialize its own API and make an inventory of USB connected modules. This requires about one second per call.

22.2. .NET Assembly

A .NET Assembly enables you to share a set of pre-compiled classes to offer a service, by stating entry points which can be used by third-party applications. In our case, it's the whole Yoctopuce library which is available in the .NET Assembly, so that it can be used in any environment which supports .NET Assembly dynamic loading.

The Yoctopuce library as a .NET Assembly does not contain only the standard C# Yoctopuce library, as this would not have allowed an optimal use in all environments. Indeed, we cannot expect host applications to necessarily offer a thread system or a callback system, although they are very useful to manage plug-and-play events and sensors with a high refresh rate. Likewise, we cannot expect from external applications a transparent behavior in cases where a function call in Assembly creates a delay because of network communications.

Therefore, we added to it an additional layer, called *.NET Proxy* library. This additional layer offers an interface very similar to the standard library but somewhat simplified, as it internally manages all the callback mechanisms. Instead, this library offers mirror objects, called *Proxys*, which publish through *Properties* the main attributes of the Yoctopuce functions such as the current measure, configuration parameters, the state, and so on.

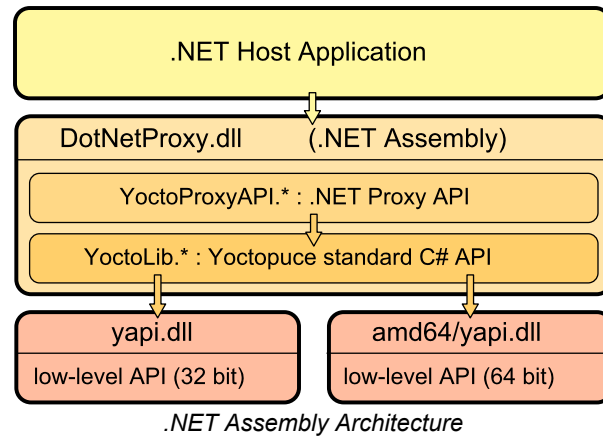

The callback mechanism automatically updates the properties of the *Proxys* objects, without the host application needing to care for it. The later can thus, at any time and without any risk of latency, display the value of all properties of Yoctopuce Proxy objects.

Pay attention to the fact that the `yapi.dll` low-level communication library is **not** included in the .NET Assembly. You must therefore keep it together with `DotNetProxyLibrary.dll`. The 32 bit version must be located in the same directory as `DotNetProxyLibrary.dll`, while the 64 bit version must be in a subdirectory `amd64`.

Example of use with MATLAB

Here is how to load our Proxy .NET Assembly in MATLAB and how to read the value of the first sensor connected by USB found on the machine:

```

NET.addAssembly("C:/Yoctopuce/DotNetProxyLibrary.dll");
import YoctoProxyAPI.*

errmsg = YAPIProxy.RegisterHub("usb");
sensor = YSensorProxy.FindSensor("");
measure = sprintf('%0.3f %s', sensor.CurrentValue, sensor.Unit);

```

Example of use in PowerShell

PowerShell commands are a little stranger, but we can recognize the same structure:

```

Add-Type -Path "C:/Yoctopuce/DotNetProxyLibrary.dll"

$errmsg = [YoctoProxyAPI.YAPIProxy]::RegisterHub("usb")
$sensor = [YoctoProxyAPI.YSensorProxy]::FindSensor("")
$measure = "{0:n3} {1}" -f $sensor.CurrentValue, $sensor.Unit

```

Specificities of the .NET Proxy library

With regards to classic Yoctopuce libraries, the following differences in particular should be noted:

No FirstModule/nextModule method

To obtain an object referring to the first found module, we call `YModuleProxy.FindModule("")`. If there is no connected module, this method returns an object with its `module.IsOnline` property set to `False`. As soon as a module is connected, the property changes to `True` and the module hardware identifier is updated.

To list modules, you can call the `module.GetSimilarFunctions()` method which returns an array of character strings containing the identifiers of all the modules which were found.

No callback function

Callback functions are implemented internally and they update the object properties. You can therefore simply poll the properties, without significant performance penalties. Be aware that if you

use one of the function that disables callbacks, the automatic refresh of object properties may not work anymore.

A new method `YAPIProxy.GetLog` makes it possible to retrieve low-level debug logs without using callbacks.

Enumerated types

In order to maximize compatibility with host applications, the .NET Proxy library does not use true .NET enumerated types, but simple integers. For each enumerated type, the library includes public constants named according to the possible values. Contrarily to standard Yoctopuce libraries, numeric values always start from 1, as the value 0 is reserved to return an invalid value, for instance when the device is disconnected.

Invalid numeric results

For all numeric results, rather than using an arbitrary constant, the invalid value returned in case of error is *NaN*. You should therefore use function *isNaN()* to detect this value.

Using .NET Assembly without the Proxy library

If for a reason or another you do not want to use the Proxy library, and if your environment allows it, you can use the standard C# API as it is located in the Assembly, under the `YoctoLib` namespace. Beware however not to mix both types of use: either you go through the Proxy library, or you use the `YoctoLib` version directly, but not both!

Compatibility

For the LabVIEW Yoctopuce library to work correctly with your Yoctopuce modules, these modules need to have firmware 37120, or higher.

In order to be compatible with as many versions of Windows as possible, including Windows XP, the *DotNetProxyLibrary.dll* library is compiled in .NET 3.5, which is available by default on all the Windows versions since XP. As of today, we have never met any non-Windows environment able to load a .NET Assembly, so we only ship the low-level communication dll for Windows together with the assembly.

22.3. VirtualHub and HTTP GET

VirtualHub is available on almost all current platforms. It is generally used as a gateway to provide access to Yoctopuce modules from languages which prevent direct access to hardware layers of a computer (JavaScript, PHP, Java, ...).

In fact, VirtualHub is a small web server able to route HTTP requests to Yoctopuce modules. This means that if you can make an HTTP request from your programming language, you can drive Yoctopuce modules, even if this language is not officially supported.

REST interface

At a low level, the modules are driven through a REST API. Thus, to control a module, you only need to perform appropriate requests on the *VirtualHub*. By default, the VirtualHub HTTP port is 4444.

An important advantage of this technique is that preliminary tests are very easy to implement. You only need a VirtualHub and a simple web browser. If you copy the following URL in your preferred browser, while VirtualHub is running, you obtain the list of the connected modules.

```
http://127.0.0.1:4444/api/services/whitePages.txt
```

Note that the result is displayed as text, but if you request *whitePages.xml*, you obtain an XML result. Likewise, *whitePages.json* allows you to obtain a JSON result. The *html* extension even allows you to display a rough interface where you can modify values in real time. The whole REST API is available in these different formats.

Driving a module through the REST interface

Each Yoctopuce module has its own REST interface, available in several variants. Let us imagine a Yocto-MaxiDisplay with the *YD128X64-12345* serial number and the *myModule* logical name. The following URL allows you to know the state of the module.

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/module.txt
```

You can naturally also use the module logical name rather than its serial number.

```
http://127.0.0.1:4444/byName/myModule/api/module.txt
```

To retrieve the value of a module property, simply add the name of the property below *module*. For example, if you want to know the signposting led luminosity, send the following request:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/module/luminosity
```

To change the value of a property, modify the corresponding attribute. Thus, to modify the luminosity, send the following request:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/module?luminosity=100
```

Driving the module functions through the REST interface

The module functions can be manipulated in the same way. To know the state of the display function, build the following URL:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/display.txt
```

Note that if you can use logical names for the modules instead of their serial number, you cannot use logical names for functions. Only hardware names are authorized to access functions.

You can retrieve a module function attribute in a way rather similar to that used with the modules. For example:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/display/logicalName
```

Rather logically, attributes can be modified in the same manner.

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/api/display?logicalName=myFunction
```

You can find the list of available attributes for your Yocto-MaxiDisplay at the beginning of the *Programming* chapter.

Accessing Yoctopuce data logger through the REST interface

This section only applies to devices with a built-in data logger.

The preview of all recorded data streams can be retrieved in JSON format using the following URL:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/dataLogger.json
```

Individual measures for any given stream can be obtained by appending the desired function identifier as well as start time of the stream:

```
http://127.0.0.1:4444/bySerial/YD128X64-12345/dataLogger.json?id=display&utc=1389801080
```

22.4. Using dynamic libraries

The low level Yoctopuce API is available under several formats of dynamic libraries written in C. The sources are available with the C++ API. If you use one of these low level libraries, you do not need VirtualHub anymore.

Filename	Platform
libyapi.dylib	Max OS X
libyapi-amd64.so	Linux Intel (64 bits)
libyapi-armel.so	Linux ARM EL (32 bits)
libyapi-armhf.so	Linux ARM HL (32 bits)
libyapi-aarch64.so	Linux ARM (64 bits)
libyapi-i386.so	Linux Intel (32 bits)
yapi64.dll	Windows (64 bits)
yapi.dll	Windows (32 bits)

These dynamic libraries contain all the functions necessary to completely rebuild the whole high level API in any language able to integrate these libraries. This chapter nevertheless restrains itself to describing basic use of the modules.

Driving a module

The three essential functions of the low level API are the following:

```
int yapiInitAPI(int connection_type, char *errmsg);
int yapiUpdateDeviceList(int forceupdate, char *errmsg);
int yapiHTTPRequest(char *device, char *request, char* buffer, int buffsize, int *fullsize,
char *errmsg);
```

The *yapiInitAPI* function initializes the API and must be called once at the beginning of the program. For a USB type connection, the *connection_type* parameter takes value 1. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The *yapiUpdateDeviceList* manages the inventory of connected Yoctopuce modules. It must be called at least once. To manage hot plug and detect potential newly connected modules, this function must be called at regular intervals. The *forceupdate* parameter must take value 1 to force a hardware scan. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

Finally, the *yapiHTTPRequest* function sends HTTP requests to the module REST API. The *device* parameter contains the serial number or the logical name of the module which you want to reach. The *request* parameter contains the full HTTP request (including terminal line breaks). *buffer* points to a character buffer long enough to contain the answer. *buffsize* is the size of the buffer. *fullsize* is a pointer to an integer to which will be assigned the actual size of the answer. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The format of the requests is the same as the one described in the *VirtualHub et HTTP GET* section. All the character strings used by the API are strings made of 8-bit characters: Unicode and UTF8 are not supported.

The result returned in the buffer variable respects the HTTP protocol. It therefore includes an HTTP header. This header ends with two empty lines, that is a sequence of four ASCII characters 13, 10, 13, 10.

Here is a sample program written in pascal using the *yapi.dll* DLL to read and then update the luminosity of a module.

```
// Dll functions import
function yapiInitAPI(mode:integer;
```

```

errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiInitAPI';
function yapiUpdateDeviceList(force:integer;errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiUpdateDeviceList';
function yapiHTTPRequest(device:pansichar,url:pansichar; buffer:pansichar;
buffsize:integer;var fullsize:integer;
errmsg : pansichar):integer;cdecl;
external 'yapi.dll' name 'yapiHTTPRequest';

var
errmsgBuffer : array [0..256] of ansichar;
dataBuffer : array [0..1024] of ansichar;
errmsg,data : pansichar;
fullsize,p : integer;

const
serial = 'YD128X64-12345';
getValue = 'GET /api/module/luminosity HTTP/1.1'#13#10#13#10;
setValue = 'GET /api/module?luminosity=100 HTTP/1.1'#13#10#13#10;

begin
errmsg := @errmsgBuffer;
data := @dataBuffer;
// API initialization
if(yapiInitAPI(1,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// forces a device inventory
if( yapiUpdateDeviceList(1,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// requests the module luminosity
if (yapiHTTPRequest(serial,getValue,data,sizeof(dataBuffer),fullsize,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

// searches for the HTTP header end
p := pos(#13#10#13#10,data);

// displays the response minus the HTTP header
writeln(copy(data,p+4,length(data)-p-3));

// changes the luminosity
if (yapiHTTPRequest(serial,setValue,data,sizeof(dataBuffer),fullsize,errmsg)<0) then
begin
writeln(errmsg);
halt;
end;

end.

```

Module inventory

To perform an inventory of Yoctopuce modules, you need two functions from the dynamic library:

```

int yapiGetAllDevices(int *buffer,int maxsize,int *neededsize,char *errmsg);
int yapiGetDeviceInfo(int devdesc,yDeviceSt *infos, char *errmsg);

```

The *yapiGetAllDevices* function retrieves the list of all connected modules as a list of handles. *buffer* points to a 32-bit integer array which contains the returned handles. *maxsize* is the size in bytes of the buffer. To *neededsize* is assigned the necessary size to store all the handles. From this, you can deduce either the number of connected modules or that the input buffer is too small. The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message. This pointer can also point to *null*. The function returns a negative integer in case of error, zero otherwise.

The *yapiGetDeviceInfo* function retrieves the information related to a module from its handle. *devdesc* is a 32-bit integer representing the module and which was obtained through *yapiGetAllDevices*. *infos* points to a data structure in which the result is stored. This data structure has the following format:

Name	Type	Size (bytes)	Description
vendorid	int	4	Yoctopuce USB ID
deviceid	int	4	Module USB ID
devrelease	int	4	Module version
nbinbterfaces	int	4	Number of USB interfaces used by the module
manufacturer	char[]	20	Yoctopuce (null terminated)
productname	char[]	28	Model (null terminated)
serial	char[]	20	Serial number (null terminated)
logicalname	char[]	20	Logical name (null terminated)
firmware	char[]	22	Firmware version (null terminated)
beacon	byte	1	Beacon state (0/1)

The *errmsg* parameter must point to a 255 character buffer to retrieve a potential error message.

Here is a sample program written in pascal using the *yapi.dll* DLL to list the connected modules.

```
// device description structure
type yDeviceSt = packed record
  vendorid      : word;
  deviceid      : word;
  devrelease    : word;
  nbinbterfaces : word;
  manufacturer  : array [0..19] of ansichar;
  productname   : array [0..27] of ansichar;
  serial        : array [0..19] of ansichar;
  logicalname    : array [0..19] of ansichar;
  firmware      : array [0..21] of ansichar;
  beacon        : byte;
end;

// Dll function import
function yapiInitAPI(mode:integer;
  errmsg : pansichar):integer;cdecl;
  external 'yapi.dll' name 'yapiInitAPI';

function yapiUpdateDeviceList(force:integer;errmsg : pansichar):integer;cdecl;
  external 'yapi.dll' name 'yapiUpdateDeviceList';

function yapiGetAllDevices( buffer:pointer;
  maxsize:integer;
  var neededsize:integer;
  errmsg : pansichar):integer; cdecl;
  external 'yapi.dll' name 'yapiGetAllDevices';

function apiGetDeviceInfo(d:integer; var infos:yDeviceSt;
  errmsg : pansichar):integer; cdecl;
  external 'yapi.dll' name 'yapiGetDeviceInfo';

var
  errmsgBuffer : array [0..256] of ansichar;
  dataBuffer    : array [0..127] of integer; // max of 128 USB devices
  errmsg,data   : pansichar;
  neededsize,i  : integer;
  devinfos      : yDeviceSt;

begin
  errmsg := @errmsgBuffer;

  // API initialization
  if(yapiInitAPI(1,errmsg)<0) then
  begin
    writeln(errmsg);
    halt;
  end;
```

```
// forces a device inventory
if( yapiUpdateDeviceList(1,errmsg)<0) then
begin
    writeln(errmsg);
    halt;
end;

// loads all device handles into dataBuffer
if yapiGetAllDevices(@dataBuffer,sizeof(dataBuffer),neededsize,errmsg)<0 then
begin
    writeln(errmsg);
    halt;
end;

// gets device info from each handle
for i:=0 to neededsize div sizeof(integer)-1 do
begin
    if (apiGetDeviceInfo(dataBuffer[i], devinfos, errmsg)<0) then
    begin
        writeln(errmsg);
        halt;
    end;
    writeln(pansichar(@devinfos.serial)+' ('+pansichar(@devinfos.productname)+' '));
end;

end.
```

VB6 and yapi.dll

Each entry point from the yapi.dll is duplicated. You will find one regular C-decl version and one Visual Basic 6 compatible version, prefixed with *vb6_*.

22.5. Porting the high level library

As all the sources of the Yoctopuce API are fully provided, you can very well port the whole API in the language of your choice. Note, however, that a large portion of the API source code is automatically generated.

Therefore, it is not necessary for you to port the complete API. You only need to port the *yocto_api* file and one file corresponding to a function, for example *yocto_relay*. After a little additional work, Yoctopuce is then able to generate all other files. Therefore, we highly recommend that you contact Yoctopuce support before undertaking to port the Yoctopuce library in another language. Collaborative work is advantageous to both parties.

23. Advanced programming

The preceding chapters have introduced, in each available language, the basic programming functions which can be used with your Yocto-MaxiDisplay module. This chapter presents in a more generic manner a more advanced use of your module. Examples are provided in the language which is the most popular among Yoctopuce customers, that is C#. Nevertheless, you can find complete examples illustrating the concepts presented here in the programming libraries of each language.

To remain as concise as possible, examples provided in this chapter do not perform any error handling. Do not copy them "as is" in a production application.

23.1. Event programming

The methods to manage Yoctopuce modules which we presented to you in preceding chapters were polling functions, consisting in permanently asking the API if something had changed. While easy to understand, this programming technique is not the most efficient, nor the most reactive. Therefore, the Yoctopuce programming API also provides an event programming model. This technique consists in asking the API to signal by itself the important changes as soon as they are detected. Each time a key parameter is modified, the API calls a callback function which you have defined in advance.

Detecting module arrival and departure

Hot-plug management is important when you work with USB modules because, sooner or later, you will have to connect or disconnect a module when your application is running. The API is designed to manage module unexpected arrival or departure in a transparent way. But your application must take this into account if it wants to avoid pretending to use a disconnected module.

Event programming is particularly useful to detect module connection/disconnection. Indeed, it is simpler to be told of new connections rather than to have to permanently list the connected modules to deduce which ones just arrived and which ones left. To be warned as soon as a module is connected, you need three pieces of code.

The callback

The callback is the function which is called each time a new Yoctopuce module is connected. It takes as parameter the relevant module.

```
static void deviceArrival(YModule m)
{
    Console.WriteLine("New module : " + m.get_serialNumber());
}
```

Initialization

You must then tell the API that it must call the callback when a new module is connected.

```
YAPI.RegisterDeviceArrivalCallback(deviceArrival);
```

Note that if modules are already connected when the callback is registered, the callback is called for each of the already connected modules.

Triggering callbacks

A classis issue of callback programming is that these callbacks can be triggered at any time, including at times when the main program is not ready to receive them. This can have undesired side effects, such as dead-locks and other race conditions. Therefore, in the Yoctopuce API, module arrival/departure callbacks are called only when the `UpdateDeviceList()` function is running. You only need to call `UpdateDeviceList()` at regular intervals from a timer or from a specific thread to precisely control when the calls to these callbacks happen:

```
// waiting loop managing callbacks
while (true)
{
    // module arrival / departure callback
    YAPI.UpdateDeviceList(ref errmsg);
    // non active waiting time managing other callbacks
    YAPI.Sleep(500, ref errmsg);
}
```

In a similar way, it is possible to have a callback when a module is disconnected. You can find a complete example implemented in your favorite programming language in the *Examples/Prog-EventBased* directory of the corresponding library.

Be aware that in most programming languages, callbacks must be global procedures, and not methods. If you wish for the callback to call the method of an object, define your callback as a global procedure which then calls your method.

24. High-level API Reference

This chapter summarizes the high-level API functions to drive your Yocto-MaxiDisplay. Syntax and exact type names may vary from one language to another, but, unless otherwise stated, all the functions are available in every language. For detailed information regarding the types of arguments and return values for a given language, refer to the definition file for this language (`yocto_api.*` as well as the other `yocto_*` files that define the function interfaces).

For languages which support exceptions, all of these functions throw exceptions in case of error by default, rather than returning the documented error value for each function. This is by design, to facilitate debugging. It is however possible to disable the use of exceptions using the `yDisableExceptions()` function, in case you prefer to work with functions that return error values.

This chapter does not repeat the programming concepts described earlier, in order to stay as concise as possible. In case of doubt, do not hesitate to go back to the chapter describing in details all configurable attributes.

24.1. Class YAPI

General functions

These general functions should be used to initialize and configure the Yoctopuce library. In most cases, a simple call to function `yRegisterHub()` should be enough. The module-specific functions `yFind...()` or `yFirst...()` should then be used to retrieve an object that provides interaction with the module.

In order to use the functions described here, you should include:

java	<code>import com.yoctopuce.YoctoAPI.YAPI;</code>
dnp	<code>import YoctoProxyAPI.YAPIProxy</code>
cp	<code>#include "yocto_api_proxy.h"</code>
mL	<code>import YoctoProxyAPI.YAPIProxy"</code>
js	<code><script type='text/javascript' src='yocto_api.js'></script></code>
cpp	<code>#include "yocto_api.h"</code>
m	<code>#import "yocto_api.h"</code>
pas	<code>uses yocto_api;</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>
php	<code>require_once('yocto_api.php');</code>
ts	<code>in HTML: import { YAPI, YErrorMsg, YModule, YSensor } from '../dist/esm/yocto_api_browser.js';</code> <code>in Node.js: import { YAPI, YErrorMsg, YModule, YSensor } from 'yoctolib-cjs/yocto_api_nodejs.js';</code>
es	<code>in HTML: <script src="../lib/yocto_api.js"></script></code> <code>in node.js: require('yoctolib-es2017/yocto_api.js');</code>
vi	<code>YModule.vi</code>

Global functions

YAPI.AddUdevRule(**force**)

Adds a UDEV rule which authorizes all users to access Yoctopuce modules connected to the USB ports.

cpp m pas vb cs java uwp py php ts es

YAPI.CheckLogicalName(**name**)

Checks if a given string is valid as logical name for a module or a function.

cpp m pas vb cs java uwp py php ts es

YAPI.ClearHTTPCallbackCacheDir(**removeFiles**)

Disables the HTTP callback cache.

java php

YAPI.DisableExceptions()

Disables the use of exceptions to report runtime errors.

cpp m pas vb cs uwp py php ts es

YAPI.EnableExceptions()

Re-enables the use of exceptions for runtime error handling.

cpp m pas vb cs uwp py php ts es

YAPI.EnableUSBHost(**osContext**)

This function is used only on Android.

java

YAPI.FreeAPI()

Waits for all pending communications with Yoctopuce devices to be completed then frees dynamically allocated resources used by the Yoctopuce library.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.GetAPIVersion()

Returns the version identifier for the Yoctopuce library in use.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.GetCacheValidity()

Returns the validity period of the data loaded by the library.

cpp m pas vb cs java uwp py php ts es

YAPI.GetDeviceListValidity()

Returns the delay between each forced enumeration of the used YoctoHubs.

cpp m pas vb cs java uwp py php ts es

YAPI.GetDllArchitecture()

Returns the system architecture for the Yoctopuce communication library in use.

dnp

YAPI.GetDllPath()

Returns the paths of the DLLs for the Yoctopuce library in use.

dnp

YAPI.GetLog(lastLogLine)

Retrieves Yoctopuce low-level library diagnostic logs.

dnp

YAPI.GetNetworkTimeout()

Returns the network connection delay for `yRegisterHub()` and `yUpdateDeviceList()`.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.GetTickCount()

Returns the current value of a monotone millisecond-based time counter.

cpp m pas vb cs java uwp py php ts es

YAPI.HandleEvents(errmsg)

Maintains the device-to-library communication channel.

cpp m pas vb cs java uwp py php ts es

YAPI.InitAPI(mode, errmsg)

Initializes the Yoctopuce programming library explicitly.

cpp m pas vb cs java uwp py php ts es

YAPI.PreregisterHub(url, errmsg)

Fault-tolerant alternative to `yRegisterHub()`.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.RegisterDeviceArrivalCallback(arrivalCallback)

Register a callback function, to be called each time a device is plugged.

cpp m pas vb cs java uwp py php ts es

YAPI.RegisterDeviceRemovalCallback(*removalCallback*)

Register a callback function, to be called each time a device is unplugged.

cpp m pas vb cs java uwp py php ts es

YAPI.RegisterHub(*url*, *errmsg*)

Setup the Yoctopuce library to use modules connected on a given machine.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.RegisterHubDiscoveryCallback(*hubDiscoveryCallback*)

Register a callback function, to be called each time an Network Hub send an SSDP message.

cpp m pas vb cs java uwp py ts es

YAPI.RegisterHubWebsocketCallback(*ws*, *errmsg*, *authpwd*)

Variant to `yRegisterHub()` used to initialize Yoctopuce API on an existing Websocket session, as happens for incoming WebSocket callbacks.

YAPI.RegisterLogFunction(*logfun*)

Registers a log callback function.

cpp m pas vb cs java uwp py ts es

YAPI.SelectArchitecture(*arch*)

Select the architecture or the library to be loaded to access to USB.

py

YAPI.SetCacheValidity(*cacheValidityMs*)

Change the validity period of the data loaded by the library.

cpp m pas vb cs java uwp py php ts es

YAPI.SetDelegate(*object*)

(Objective-C only) Register an object that must follow the protocol `YDeviceHotPlug`.

m

YAPI.SetDeviceListValidity(*deviceListValidity*)

Modifies the delay between each forced enumeration of the used YoctoHubs.

cpp m pas vb cs java uwp py php ts es

YAPI.SetHTTPCallbackCacheDir(*directory*)

Enables the HTTP callback cache.

java php

YAPI.SetNetworkTimeout(*networkMsTimeout*)

Modifies the network connection delay for `yRegisterHub()` and `yUpdateDeviceList()`.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.SetTimeout(*callback*, *ms_timeout*, *args*)

Invoke the specified callback function after a given timeout.

ts es

YAPI.SetUSBPacketAckMs(*pktAckDelay*)

Enables the acknowledge of every USB packet received by the Yoctopuce library.

java

YAPI.Sleep(*ms_duration*, *errmsg*)

Pauses the execution flow for a specified duration.

cpp m pas vb cs java uwp py php ts es

YAPI.TestHub(url, mtimeout, errmsg)

Test if the hub is reachable.

cpp m pas vb cs java uwp py php ts es dnp

YAPI.TriggerHubDiscovery(errmsg)

Force a hub discovery, if a callback as been registered with `yRegisterHubDiscoveryCallback` it will be called for each net work hub that will respond to the discovery.

cpp m pas vb cs java uwp py ts es

YAPI.UnregisterHub(url)

Setup the Yoctopuce library to no more use modules connected on a previously registered machine with `RegisterHub`.

cpp m pas vb cs java uwp py php ts es

YAPI.UpdateDeviceList(errmsg)

Triggers a (re)detection of connected Yoctopuce modules.

cpp m pas vb cs java uwp py php ts es

YAPI.UpdateDeviceList_async(callback, context)

Triggers a (re)detection of connected Yoctopuce modules.

24.2. Class YModule

Global parameters control interface for all Yoctopuce devices

The YModule class can be used with all Yoctopuce USB devices. It can be used to control the module global parameters, and to enumerate the functions provided by each module.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_api.js'></script></code>
cpp	<code>#include "yocto_api.h"</code>
m	<code>#import "yocto_api.h"</code>
pas	<code>uses yocto_api;</code>
vb	<code>yocto_api.vb</code>
cs	<code>yocto_api.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YModule;</code>
py	<code>from yocto_api import *</code>
php	<code>require_once('yocto_api.php');</code>
ts	<code>in HTML: import { YAPI, YErrorMsg, YModule, YSensor } from '../dist/esm/yocto_api_browser.js'; in Node.js: import { YAPI, YErrorMsg, YModule, YSensor } from 'yoctolib-cjs/yocto_api_nodejs.js';</code>
es	<code>in HTML: <script src="../lib/yocto_api.js"></script> in node.js: require('yoctolib-es2017/yocto_api.js');</code>
dnf	<code>import YoctoProxyAPI.YModuleProxy</code>
cp	<code>#include "yocto_module_proxy.h"</code>
vi	<code>YModule.vi</code>
ml	<code>import YoctoProxyAPI.YModuleProxy</code>

Global functions

YModule.FindModule(func)

Allows you to find a module from its serial number or from its logical name.

cpp m pas vb cs java uwp py php ts es dnf

YModule.FindModuleInContext(yctx, func)

Retrieves a module for a given identifier in a YAPI context.

java uwp ts es

YModule.FirstModule()

Starts the enumeration of modules currently accessible.

cpp m pas vb cs java uwp py php ts es

YModule properties

module→Beacon [writable]

State of the localization beacon.

dnf

module→FirmwareRelease [read-only]

Version of the firmware embedded in the module.

dnf

module→FunctionId [read-only]

Retrieves the hardware identifier of the *n*th function on the module.

dnp

module→HardwareId [read-only]

Unique hardware identifier of the module.

dnp

module→IsOnline [read-only]

Checks if the module is currently reachable.

dnp

module→LogicalName [writable]

Logical name of the module.

dnp

module→Luminosity [writable]

Luminosity of the module informative LEDs (from 0 to 100).

dnp

module→ProductId [read-only]

USB device identifier of the module.

dnp

module→ProductName [read-only]

Commercial name of the module, as set by the factory.

dnp

module→ProductRelease [read-only]

Release number of the module hardware, preprogrammed at the factory.

dnp

module→SerialNumber [read-only]

Serial number of the module, as set by the factory.

dnp

YModule methods**module→addFileToHTTPCallback(filename)**

Adds a file to the uploaded data at the next HTTP callback.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→checkFirmware(path, onlynew)

Tests whether the byn file is valid for this module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→clearCache()

Invalidates the cache.

cpp m pas vb cs java py php ts es

module→describe()

Returns a descriptive text that identifies the module.

cpp m pas vb cs java py php ts es

module→download(pathname)

Downloads the specified built-in file and returns a binary buffer with its content.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→**functionBaseType**(**functionIndex**)

Retrieves the base type of the n th function on the module.

cpp pas vb cs java py php ts es

module→**functionCount**()

Returns the number of functions (beside the "module" interface) available on the module.

cpp m pas vb cs java py php ts es

module→**functionId**(**functionIndex**)

Retrieves the hardware identifier of the n th function on the module.

cpp m pas vb cs java py php ts es

module→**functionName**(**functionIndex**)

Retrieves the logical name of the n th function on the module.

cpp m pas vb cs java py php ts es

module→**functionType**(**functionIndex**)

Retrieves the type of the n th function on the module.

cpp pas vb cs java py php ts es

module→**functionValue**(**functionIndex**)

Retrieves the advertised value of the n th function on the module.

cpp m pas vb cs java py php ts es

module→**get_allSettings**()

Returns all the settings and uploaded files of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→**get_beacon**()

Returns the state of the localization beacon.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→**get_errorMessage**()

Returns the error message of the latest error with this module object.

cpp m pas vb cs java py php ts es

module→**get_errorType**()

Returns the numerical error code of the latest error with this module object.

cpp m pas vb cs java py php ts es

module→**get_firmwareRelease**()

Returns the version of the firmware embedded in the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→**get_functionIds**(**funType**)

Retrieve all hardware identifier that match the type passed in argument.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→**get_hardwareId**()

Returns the unique hardware identifier of the module.

cpp m vb cs java py php ts es dnp pas uwp cmd

module→**get_icon2d**()

Returns the icon of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_lastLogs()

Returns a string with last logs of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_logicalName()

Returns the logical name of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_luminosity()

Returns the luminosity of the module informative LEDs (from 0 to 100).

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_parentHub()

Returns the serial number of the YoctoHub on which this module is connected.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_persistentSettings()

Returns the current state of persistent module settings.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_productId()

Returns the USB device identifier of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_productName()

Returns the commercial name of the module, as set by the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_productRelease()

Returns the release number of the module hardware, preprogrammed at the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_rebootCountdown()

Returns the remaining number of seconds before the module restarts, or zero when no reboot has been scheduled.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_subDevices()

Returns a list of all the modules that are plugged into the current module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_upTime()

Returns the number of milliseconds spent since the module was powered on.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_url()

Returns the URL used to access the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_usbCurrent()

Returns the current consumed by the module on the USB bus, in milli-amps.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp m pas vb cs java py php ts es

module→get_userVar()

Returns the value previously stored in this attribute.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→hasFunction(funcId)

Tests if the device includes a specific function.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→isOnline()

Checks if the module is currently reachable, without raising any error.

cpp m pas vb cs java py php ts es dnp

module→isOnline_async(callback, context)

Checks if the module is currently reachable, without raising any error.

module→load(msValidity)

Preloads the module cache with a specified validity duration.

cpp m pas vb cs java py php ts es

module→load_async(msValidity, callback, context)

Preloads the module cache with a specified validity duration (asynchronous version).

module→log(text)

Adds a text message to the device logs.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→nextModule()

Continues the module enumeration started using `yFirstModule()`.

cpp m pas vb cs java uwp py php ts es

module→reboot(secBeforeReboot)

Schedules a simple module reboot after the given number of seconds.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→registerBeaconCallback(callback)

Register a callback function, to be called when the localization beacon of the module has been changed.

cpp m pas vb cs java uwp py php ts es

module→registerConfigChangeCallback(callback)

Register a callback function, to be called when a persistent settings in a device configuration has been changed (e.g.

cpp m pas vb cs java uwp py php ts es

module→registerLogCallback(callback)

Registers a device log callback function.

cpp m pas vb cs java uwp py php ts es

module→revertFromFlash()

Reloads the settings stored in the nonvolatile memory, as when the module is powered on.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→saveToFlash()

Saves current settings in the nonvolatile memory of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_allSettings(settings)

Restores all the settings of the device.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_allSettingsAndFiles(settings)

Restores all the settings and uploaded files to the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_beacon(newval)

Turns on or off the module localization beacon.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_logicalName(newval)

Changes the logical name of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_luminosity(newval)

Changes the luminosity of the module informative leds.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp m pas vb cs java py php ts es

module→set_userVar(newval)

Stores a 32 bit value in the device RAM.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→triggerConfigChangeCallback()

Triggers a configuration change callback, to check if they are supported or not.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→triggerFirmwareUpdate(secBeforeReboot)

Schedules a module reboot into special firmware update mode.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→updateFirmware(path)

Prepares a firmware update of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→updateFirmwareEx(path, force)

Prepares a firmware update of the module.

cpp m pas vb cs java uwp py php ts es dnp cmd

module→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

[ts](#) [es](#)

24.3. Class YDisplay

Display control interface, available for instance in the Yocto-Display, the Yocto-MaxiDisplay, the Yocto-MaxiDisplay-G or the Yocto-MiniDisplay

The YDisplay class allows to drive Yoctopuce displays. Yoctopuce display interface has been designed to easily show information and images. The device provides built-in multi-layer rendering. Layers can be drawn offline, individually, and freely moved on the display. It can also replay recorded sequences (animations).

In order to draw on the screen, you should use the `display.get_displayLayer` method to retrieve the layer(s) on which you want to draw, and then use methods defined in YDisplayLayer to draw on the layers.

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_display.js'></script></code>
cpp	<code>#include "yocto_display.h"</code>
m	<code>#import "yocto_display.h"</code>
pas	<code>uses yocto_display;</code>
vb	<code>yocto_display.vb</code>
cs	<code>yocto_display.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDisplay;</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YDisplay;</code>
py	<code>from yocto_display import *</code>
php	<code>require_once('yocto_display.php');</code>
ts	<code>in HTML: import { YDisplay } from '../dist/esm/yocto_display.js'; in Node.js: import { YDisplay } from 'yoctolib-cjs/yocto_display.js';</code>
es	<code>in HTML: <script src='../lib/yocto_display.js'></script> in node.js: require('yoctolib-es2017/yocto_display.js');</code>
dnf	<code>import YoctoProxyAPI.YDisplayProxy</code>
cp	<code>#include "yocto_display_proxy.h"</code>
vi	<code>YDisplay.vi</code>
ml	<code>import YoctoProxyAPI.YDisplayProxy</code>

Global functions

YDisplay.FindDisplay(func)

Retrieves a display for a given identifier.

cpp m pas vb cs java uwp py php ts es dnf

YDisplay.FindDisplayInContext(yctx, func)

Retrieves a display for a given identifier in a YAPI context.

java uwp ts es

YDisplay.FirstDisplay()

Starts the enumeration of displays currently accessible.

cpp m pas vb cs java uwp py php ts es

YDisplay.FirstDisplayInContext(yctx)

Starts the enumeration of displays currently accessible.

java uwp ts es

YDisplay.GetSimilarFunctions()

Enumerates all functions of type Display available on the devices currently reachable by the library, and returns their unique hardware ID.

dnf

YDisplay properties

display→AdvertisedValue *[read-only]*

Short string representing the current state of the function.

dnf

display→Brightness *[writable]*

Luminosity of the module informative LEDs (from 0 to 100).

dnf

display→DisplayHeight *[read-only]*

Display height, in pixels.

dnf

display→DisplayType *[read-only]*

Display type: monochrome, gray levels or full color.

dnf

display→DisplayWidth *[read-only]*

Display width, in pixels.

dnf

display→FriendlyName *[read-only]*

Global identifier of the function in the format MODULE_NAME . FUNCTION_NAME.

dnf

display→FunctionId *[read-only]*

Hardware identifier of the display, without reference to the module.

dnf

display→HardwareId *[read-only]*

Unique hardware identifier of the function in the form SERIAL . FUNCTIONID.

dnf

display→IsOnline *[read-only]*

Checks if the function is currently reachable.

dnf

display→LayerCount *[read-only]*

Number of available layers to draw on.

dnf

display→LayerHeight *[read-only]*

Height of the layers to draw on, in pixels.

dnf

display→LayerWidth *[read-only]*

Width of the layers to draw on, in pixels.

dnf

display→LogicalName *[writable]*

Logical name of the function.

dnf

display→Orientation [writable]

Currently selected display orientation.

dnf

display→SerialNumber [read-only]

Serial number of the module, as set by the factory.

dnf

display→StartupSeq [writable]

Name of the sequence to play when the displayed is powered on.

dnf

YDisplay methods

display→clearCache()

Invalidates the cache.

cpp m pas vb cs java py php ts es

display→copyLayerContent(srcLayerId, dstLayerId)

Copies the whole content of a layer to another layer.

cpp m pas vb cs java uwp py php ts es dnf cmd

display→describe()

Returns a short text that describes unambiguously the instance of the display in the form TYPE(NAME)=SERIAL.FUNCTIONID.

cpp m pas vb cs java py php ts es

display→fade(brightness, duration)

Smoothly changes the brightness of the screen to produce a fade-in or fade-out effect.

cpp m pas vb cs java uwp py php ts es dnf cmd

display→get_advertisedValue()

Returns the current value of the display (no more than 6 characters).

cpp m pas vb cs java uwp py php ts es dnf cmd

display→get_brightness()

Returns the luminosity of the module informative LEDs (from 0 to 100).

cpp m pas vb cs java uwp py php ts es dnf cmd

display→get_displayHeight()

Returns the display height, in pixels.

cpp m pas vb cs java uwp py php ts es dnf cmd

display→get_displayLayer(layerId)

Returns a YDisplayLayer object that can be used to draw on the specified layer.

cpp m pas vb cs java uwp py php ts es dnf

display→get_displayType()

Returns the display type: monochrome, gray levels or full color.

cpp m pas vb cs java uwp py php ts es dnf cmd

display→get_displayWidth()

Returns the display width, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_enabled()

Returns true if the screen is powered, false otherwise.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_errorMessage()

Returns the error message of the latest error with the display.

cpp m pas vb cs java py php ts es

display→get_errorType()

Returns the numerical error code of the latest error with the display.

cpp m pas vb cs java py php ts es

display→get_friendlyName()

Returns a global identifier of the display in the format `MODULE_NAME . FUNCTION_NAME`.

cpp m cs java py php ts es dnp

display→get_functionDescriptor()

Returns a unique identifier of type `YFUN_DESCR` corresponding to the function.

cpp m pas vb cs java py php ts es

display→get_functionId()

Returns the hardware identifier of the display, without reference to the module.

cpp m vb cs java py php ts es dnp

display→get_hardwareId()

Returns the unique hardware identifier of the display in the form `SERIAL . FUNCTIONID`.

cpp m vb cs java py php ts es dnp

display→get_layerCount()

Returns the number of available layers to draw on.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_layerHeight()

Returns the height of the layers to draw on, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_layerWidth()

Returns the width of the layers to draw on, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_logicalName()

Returns the logical name of the display.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_module()

Gets the `YModule` object for the device on which the function is located.

cpp m pas vb cs java py php ts es dnp

display→get_module_async(callback, context)

Gets the `YModule` object for the device on which the function is located (asynchronous version).

display→get_orientation()

Returns the currently selected display orientation.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_startupSeq()

Returns the name of the sequence to play when the displayed is powered on.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp m pas vb cs java py php ts es

display→isOnline()

Checks if the display is currently reachable, without raising any error.

cpp m pas vb cs java py php ts es dnp

display→isOnline_async(callback, context)

Checks if the display is currently reachable, without raising any error (asynchronous version).

display→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→load(msValidity)

Preloads the display cache with a specified validity duration.

cpp m pas vb cs java py php ts es

display→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp m pas vb cs java uwp py php ts es dnp

display→load_async(msValidity, callback, context)

Preloads the display cache with a specified validity duration (asynchronous version).

display→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→newSequence()

Starts to record all display commands into a sequence, for later replay.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→nextDisplay()

Continues the enumeration of displays started using `yFirstDisplay()`.

cpp m pas vb cs java uwp py php ts es

display→pauseSequence(delay_ms)

Waits for a specified delay (in milliseconds) before playing next commands in current sequence.

cpp m pas vb cs java uwp py php ts es dnp cmd

display→playSequence(sequenceName)

Replays a display sequence previously recorded using `newSequence()` and `saveSequence()`.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→registerValueCallback(callback)`

Registers the callback function that is invoked on every change of advertised value.

cpp m pas vb cs java uwp py php ts es

`display→resetAll()`

Clears the display screen and resets all display layers to their default state.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→saveSequence(sequenceName)`

Stops recording display commands and saves the sequence into the specified file on the display internal memory.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_brightness(newval)`

Changes the brightness of the display.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_enabled(newval)`

Changes the power state of the display.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_logicalName(newval)`

Changes the logical name of the display.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_orientation(newval)`

Changes the display orientation.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_startupSeq(newval)`

Changes the name of the sequence to play when the displayed is powered on.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→set_userData(data)`

Stores a user context provided as argument in the `userData` attribute of the function.

cpp m pas vb cs java py php ts es

`display→stopSequence()`

Stops immediately any ongoing sequence replay.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→swapLayerContent(layerIdA, layerIdB)`

Swaps the whole content of two layers.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→unmuteValueCallbacks()`

Re-enables the propagation of every new advertised value to the parent hub.

cpp m pas vb cs java uwp py php ts es dnp cmd

`display→upload(pathname, content)`

Uploads an arbitrary file (for instance a GIF file) to the display, to the specified full path name.

[cpp](#) [m](#) [pas](#) [vb](#) [cs](#) [java](#) [uwp](#) [py](#) [php](#) [ts](#) [es](#) [dnp](#) [cmd](#)**display→wait_async(callback, context)**

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

[ts](#) [es](#)

24.4. Class YDisplayLayer

Interface for drawing into display layers, obtained by calling `display.get_displayLayer`.

Each `DisplayLayer` represents an image layer containing objects to display (bitmaps, text, etc.). The content is displayed only when the layer is active on the screen (and not masked by other overlapping layers).

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_display.js'></script></code>
cpp	<code>#include "yocto_display.h"</code>
m	<code>#import "yocto_display.h"</code>
pas	<code>uses yocto_display;</code>
vb	<code>yocto_display.vb</code>
cs	<code>yocto_display.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YDisplayLayer;</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YDisplayLayer;</code>
py	<code>from yocto_display import *</code>
php	<code>require_once('yocto_display.php');</code>
ts	<code>in HTML: import { YDisplayLayer } from '../dist/esm/yocto_display.js'; in Node.js: import { YDisplayLayer } from 'yoctolib-cjs/yocto_display.js';</code>
es	<code>in HTML: <script src="../lib/yocto_display.js"></script> in node.js: require('yoctolib-es2017/yocto_display.js');</code>
dnp	<code>import YoctoProxyAPI.YDisplayLayerProxy</code>
cp	<code>#include "yocto_display_proxy.h"</code>
ml	<code>import YoctoProxyAPI.YDisplayLayerProxy</code>

YDisplayLayer methods

`displaylayer→clear()`

Erases the whole content of the layer (makes it fully transparent).

cpp m pas vb cs java uwp py php ts es dnp cmd

`displaylayer→clearConsole()`

Blanks the console area within console margins, and resets the console pointer to the upper left corner of the console.

cpp m pas vb cs java uwp py php ts es dnp cmd

`displaylayer→consoleOut(text)`

Outputs a message in the console area, and advances the console pointer accordingly.

cpp m pas vb cs java uwp py php ts es dnp cmd

`displaylayer→drawBar(x1, y1, x2, y2)`

Draws a filled rectangular bar at a specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

`displaylayer→drawBitmap(x, y, w, bitmap, bgcol)`

Draws a bitmap at the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

`displaylayer→drawCircle(x, y, r)`

Draws an empty circle at a specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→drawDisc(x, y, r)

Draws a filled disc at a given position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→drawImage(x, y, imagename)

Draws a GIF image at the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→drawPixel(x, y)

Draws a single pixel at the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→drawRect(x1, y1, x2, y2)

Draws an empty rectangle at a specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→drawText(x, y, anchor, text)

Draws a text string at the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→get_display()

Gets parent YDisplay.

cpp m pas vb cs java uwp py php ts es dnp

displaylayer→get_displayHeight()

Returns the display height, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→get_displayWidth()

Returns the display width, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→get_layerHeight()

Returns the height of the layers to draw on, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→get_layerWidth()

Returns the width of the layers to draw on, in pixels.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→hide()

Hides the layer.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→lineTo(x, y)

Draws a line from current drawing pointer position to the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→moveTo(x, y)

Moves the drawing pointer of this layer to the specified position.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→reset()

Reverts the layer to its initial state (fully transparent, default settings).

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→selectColorPen(color)

Selects the pen color for all subsequent drawing functions, including text drawing.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→selectEraser()

Selects an eraser instead of a pen for all subsequent drawing functions, except for bitmap copy functions.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→selectFont(fontname)

Selects a font to use for the next text drawing functions, by providing the name of the font file.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→selectGrayPen(graylevel)

Selects the pen gray level for all subsequent drawing functions, including text drawing.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→setAntialiasingMode(mode)

Enables or disables anti-aliasing for drawing oblique lines and circles.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→setConsoleBackground(bgcol)

Sets up the background color used by the `clearConsole` function and by the console scrolling feature.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→setConsoleMargins(x1, y1, x2, y2)

Sets up display margins for the `consoleOut` function.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→setConsoleWordWrap(wordwrap)

Sets up the wrapping behavior used by the `consoleOut` function.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→setLayerPosition(x, y, scrollTime)

Sets the position of the layer relative to the display upper left corner.

cpp m pas vb cs java uwp py php ts es dnp cmd

displaylayer→unhide()

Shows the layer.

cpp m pas vb cs java uwp py php ts es dnp cmd

24.5. Class YAnButton

Analog input control interface, available for instance in the Yocto-Buzzer, the Yocto-Knob, the Yocto-MaxiBuzzer or the Yocto-MaxiDisplay

The YAnButton class provide access to basic resistive inputs. Such inputs can be used to measure the state of a simple button as well as to read an analog potentiometer (variable resistance). This can be use for instance with a continuous rotating knob, a throttle grip or a joystick. The module is capable to calibrate itself on min and max values, in order to compute a calibrated value that varies proportionally with the potentiometer position, regardless of its total resistance.

In order to use the functions described here, you should include:

es	in HTML: <code><script src="../../lib/yocto_anbutton.js"></script></code> in node.js: <code>require('yoctolib-es2017/yocto_anbutton.js');</code>
js	<code><script type='text/javascript' src='yocto_anbutton.js'></script></code>
cpp	<code>#include "yocto_anbutton.h"</code>
m	<code>#import "yocto_anbutton.h"</code>
pas	<code>uses yocto_anbutton;</code>
vb	<code>yocto_anbutton.vb</code>
cs	<code>yocto_anbutton.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YAnButton;</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YAnButton;</code>
py	<code>from yocto_anbutton import *</code>
php	<code>require_once('yocto_anbutton.php');</code>
ts	in HTML: <code>import { YAnButton } from '../../dist/esm/yocto_anbutton.js';</code> in Node.js: <code>import { YAnButton } from 'yoctolib-cjs/yocto_anbutton.js';</code>
dnf	<code>import YoctoProxyAPI.YAnButtonProxy</code>
cp	<code>#include "yocto_anbutton_proxy.h"</code>
vi	<code>YAnButton.vi</code>
ml	<code>import YoctoProxyAPI.YAnButtonProxy</code>

Global functions

YAnButton.FindAnButton(func)

Retrieves an analog input for a given identifier.

cpp m pas vb cs java uwp py php ts es dnf

YAnButton.FindAnButtonInContext(yctx, func)

Retrieves an analog input for a given identifier in a YAPI context.

java uwp ts es

YAnButton.FirstAnButton()

Starts the enumeration of analog inputs currently accessible.

cpp m pas vb cs java uwp py php ts es

YAnButton.FirstAnButtonInContext(yctx)

Starts the enumeration of analog inputs currently accessible.

java uwp ts es

YAnButton.GetSimilarFunctions()

Enumerates all functions of type AnButton available on the devices currently reachable by the library, and returns their unique hardware ID.

dnp

YAnBut ton properties**anbutton→AdvertisedValue [read-only]**

Short string representing the current state of the function.

dnp

anbutton→AnalogCalibration [writable]

Tells if a calibration process is currently ongoing.

dnp

anbutton→CalibratedValue [read-only]

Current calibrated input value (between 0 and 1000, included).

dnp

anbutton→CalibrationMax [writable]

Maximal value measured during the calibration (between 0 and 4095, included).

dnp

anbutton→CalibrationMin [writable]

Minimal value measured during the calibration (between 0 and 4095, included).

dnp

anbutton→FriendlyName [read-only]

Global identifier of the function in the format `MODULE_NAME . FUNCTION_NAME`.

dnp

anbutton→FunctionId [read-only]

Hardware identifier of the analog input, without reference to the module.

dnp

anbutton→HardwareId [read-only]

Unique hardware identifier of the function in the form `SERIAL . FUNCTIONID`.

dnp

anbutton→InputType [writable]

Decoding method applied to the input (analog or multiplexed binary switches).

dnp

anbutton→IsOnline [read-only]

Checks if the function is currently reachable.

dnp

anbutton→IsPressed [read-only]

True if the input (considered as binary) is active (closed contact), and false otherwise.

dnp

anbutton→LogicalName [writable]

Logical name of the function.

dnp

anbutton→Sensitivity [writable]

Sensibility for the input (between 1 and 1000) for triggering user callbacks.

dnp

anbutton→SerialNumber *[read-only]*

Serial number of the module, as set by the factory.

dnp

YAnButton methods**anbutton→clearCache()**

Invalidates the cache.

cpp m pas vb cs java py php ts es

anbutton→describe()

Returns a short text that describes unambiguously the instance of the analog input in the form TYPE(NAME)=SERIAL.FUNCTIONID.

cpp m pas vb cs java py php ts es

anbutton→get_advertisedValue()

Returns the current value of the analog input (no more than 6 characters).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_analogCalibration()

Tells if a calibration process is currently ongoing.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_calibratedValue()

Returns the current calibrated input value (between 0 and 1000, included).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_calibrationMax()

Returns the maximal value measured during the calibration (between 0 and 4095, included).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_calibrationMin()

Returns the minimal value measured during the calibration (between 0 and 4095, included).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_errorMessage()

Returns the error message of the latest error with the analog input.

cpp m pas vb cs java py php ts es

anbutton→get_errorType()

Returns the numerical error code of the latest error with the analog input.

cpp m pas vb cs java py php ts es

anbutton→get_friendlyName()

Returns a global identifier of the analog input in the format MODULE_NAME.FUNCTION_NAME.

cpp m cs java py php ts es dnp

anbutton→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

cpp m pas vb cs java py php ts es

anbutton→get_functionId()

Returns the hardware identifier of the analog input, without reference to the module.

cpp m vb cs java py php ts es dnp

anbutton→get_hardwareId()

Returns the unique hardware identifier of the analog input in the form **SERIAL . FUNCTIONID**.

cpp m vb cs java py php ts es dnp

anbutton→get_inputType()

Returns the decoding method applied to the input (analog or multiplexed binary switches).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_isPressed()

Returns true if the input (considered as binary) is active (closed contact), and false otherwise.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_lastTimePressed()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was pressed (the input contact transitioned from open to closed).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_lastTimeReleased()

Returns the number of elapsed milliseconds between the module power on and the last time the input button was released (the input contact transitioned from closed to open).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_logicalName()

Returns the logical name of the analog input.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_module()

Gets the **YModule** object for the device on which the function is located.

cpp m pas vb cs java py php ts es dnp

anbutton→get_module_async(callback, context)

Gets the **YModule** object for the device on which the function is located (asynchronous version).

anbutton→get_pulseCounter()

Returns the pulse counter value.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_pulseTimer()

Returns the timer of the pulses counter (ms).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_rawValue()

Returns the current measured input value as-is (between 0 and 4095, included).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_sensitivity()

Returns the sensibility for the input (between 1 and 1000) for triggering user callbacks.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp m pas vb cs java py php ts es

anbutton→isOnline()

Checks if the analog input is currently reachable, without raising any error.

cpp m pas vb cs java py php ts es dnp

anbutton→isOnline_async(callback, context)

Checks if the analog input is currently reachable, without raising any error (asynchronous version).

anbutton→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→load(msValidity)

Preloads the analog input cache with a specified validity duration.

cpp m pas vb cs java py php ts es

anbutton→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp m pas vb cs java uwp py php ts es dnp

anbutton→load_async(msValidity, callback, context)

Preloads the analog input cache with a specified validity duration (asynchronous version).

anbutton→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→nextAnButton()

Continues the enumeration of analog inputs started using `yFirstAnButton()`.

cpp m pas vb cs java uwp py php ts es

anbutton→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp m pas vb cs java uwp py php ts es

anbutton→resetCounter()

Returns the pulse counter value as well as its timer.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_analogCalibration(newval)

Starts or stops the calibration process.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_calibrationMax(newval)

Changes the maximal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_calibrationMin(newval)

Changes the minimal calibration value for the input (between 0 and 4095, included), without actually starting the automated calibration.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_inputType(newval)

Changes the decoding method applied to the input (analog or multiplexed binary switches).

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_logicalName(newval)

Changes the logical name of the analog input.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_sensitivity(newval)

Changes the sensibility for the input (between 1 and 1000) for triggering user callbacks.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp m pas vb cs java py php ts es

anbutton→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

cpp m pas vb cs java uwp py php ts es dnp cmd

anbutton→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

ts es

24.6. Class YFiles

Filesystem control interface, available for instance in the Yocto-Color-V2, the Yocto-SPI, the YoctoHub-Ethernet or the YoctoHub-GSM-4G

The YFiles class is used to access the filesystem embedded on some Yoctopuce devices. This filesystem makes it possible for instance to design a custom web UI (for networked devices) or to add fonts (on display devices).

In order to use the functions described here, you should include:

js	<code><script type='text/javascript' src='yocto_files.js'></script></code>
cpp	<code>#include "yocto_files.h"</code>
m	<code>#import "yocto_files.h"</code>
pas	<code>uses yocto_files;</code>
vb	<code>yocto_files.vb</code>
cs	<code>yocto_files.cs</code>
java	<code>import com.yoctopuce.YoctoAPI.YFiles;</code>
uwp	<code>import com.yoctopuce.YoctoAPI.YFiles;</code>
py	<code>from yocto_files import *</code>
php	<code>require_once('yocto_files.php');</code>
ts	<code>in HTML: import { YFiles } from '../dist/esm/yocto_files.js'; in Node.js: import { YFiles } from 'yoctolib-cjs/yocto_files.js';</code>
es	<code>in HTML: <script src="../../lib/yocto_files.js"></script> in node.js: require('yoctolib-es2017/yocto_files.js');</code>
dnp	<code>import YoctoProxyAPI.YFilesProxy</code>
cp	<code>#include "yocto_files_proxy.h"</code>
vi	<code>YFiles.vi</code>
ml	<code>import YoctoProxyAPI.YFilesProxy</code>

Global functions

YFiles.FindFiles(func)

Retrieves a filesystem for a given identifier.

cpp m pas vb cs java uwp py php ts es dnp

YFiles.FindFilesInContext(yctx, func)

Retrieves a filesystem for a given identifier in a YAPI context.

java uwp ts es

YFiles.FirstFiles()

Starts the enumeration of filesystems currently accessible.

cpp m pas vb cs java uwp py php ts es

YFiles.FirstFilesInContext(yctx)

Starts the enumeration of filesystems currently accessible.

java uwp ts es

YFiles.GetSimilarFunctions()

Enumerates all functions of type Files available on the devices currently reachable by the library, and returns their unique hardware ID.

dnp

YFiles properties

files→AdvertisedValue [read-only]

Short string representing the current state of the function.

dnf

files→FilesCount [read-only]

Number of files currently loaded in the filesystem.

dnf

files→FriendlyName [read-only]

Global identifier of the function in the format `MODULE_NAME . FUNCTION_NAME`.

dnf

files→FunctionId [read-only]

Hardware identifier of the filesystem, without reference to the module.

dnf

files→HardwareId [read-only]

Unique hardware identifier of the function in the form `SERIAL . FUNCTIONID`.

dnf

files→IsOnline [read-only]

Checks if the function is currently reachable.

dnf

files→LogicalName [writable]

Logical name of the function.

dnf

files→SerialNumber [read-only]

Serial number of the module, as set by the factory.

dnf

YFiles methods

files→clearCache()

Invalidates the cache.

cpp m pas vb cs java py php ts es

files→describe()

Returns a short text that describes unambiguously the instance of the filesystem in the form `TYPE (NAME)=SERIAL . FUNCTIONID`.

cpp m pas vb cs java py php ts es

files→download(pathname)

Downloads the requested file and returns a binary buffer with its content.

cpp m pas vb cs java uwp py php ts es dnf cmd

files→download_async(pathname, callback, context)

Downloads the requested file and returns a binary buffer with its content.

files→fileExist(filename)

Test if a file exist on the filesystem of the module.

cpp m pas vb cs java uwp py php ts es dnf cmd

files→format_fs()

Reinitialize the filesystem to its clean, unfragmented, empty state.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_advertisedValue()

Returns the current value of the filesystem (no more than 6 characters).

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_errorMessage()

Returns the error message of the latest error with the filesystem.

cpp m pas vb cs java py php ts es

files→get_errorType()

Returns the numerical error code of the latest error with the filesystem.

cpp m pas vb cs java py php ts es

files→get_filesCount()

Returns the number of files currently loaded in the filesystem.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_freeSpace()

Returns the free space for uploading new files to the filesystem, in bytes.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_friendlyName()

Returns a global identifier of the filesystem in the format **MODULE_NAME . FUNCTION_NAME**.

cpp m cs java py php ts es dnp

files→get_functionDescriptor()

Returns a unique identifier of type YFUN_DESCR corresponding to the function.

cpp m pas vb cs java py php ts es

files→get_functionId()

Returns the hardware identifier of the filesystem, without reference to the module.

cpp m vb cs java py php ts es dnp

files→get_hardwareId()

Returns the unique hardware identifier of the filesystem in the form **SERIAL . FUNCTIONID**.

cpp m vb cs java py php ts es dnp

files→get_list(pattern)

Returns a list of YFileRecord objects that describe files currently loaded in the filesystem.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_logicalName()

Returns the logical name of the filesystem.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_module()

Gets the YModule object for the device on which the function is located.

cpp m pas vb cs java py php ts es dnp

files→get_module_async(callback, context)

Gets the YModule object for the device on which the function is located (asynchronous version).

files→get_serialNumber()

Returns the serial number of the module, as set by the factory.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→get_userData()

Returns the value of the userData attribute, as previously stored using method `set_userData`.

cpp m pas vb cs java py php ts es

files→isOnline()

Checks if the filesystem is currently reachable, without raising any error.

cpp m pas vb cs java py php ts es dnp

files→isOnline_async(callback, context)

Checks if the filesystem is currently reachable, without raising any error (asynchronous version).

files→isReadOnly()

Indicates whether changes to the function are prohibited or allowed.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→load(msValidity)

Preloads the filesystem cache with a specified validity duration.

cpp m pas vb cs java py php ts es

files→loadAttribute(attrName)

Returns the current value of a single function attribute, as a text string, as quickly as possible but without using the cached value.

cpp m pas vb cs java uwp py php ts es dnp

files→load_async(msValidity, callback, context)

Preloads the filesystem cache with a specified validity duration (asynchronous version).

files→muteValueCallbacks()

Disables the propagation of every new advertised value to the parent hub.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→nextFiles()

Continues the enumeration of filesystems started using `yFirstFiles()`.

cpp m pas vb cs java uwp py php ts es

files→registerValueCallback(callback)

Registers the callback function that is invoked on every change of advertised value.

cpp m pas vb cs java uwp py php ts es

files→remove(pathname)

Deletes a file, given by its full path name, from the filesystem.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→set_logicalName(newval)

Changes the logical name of the filesystem.

cpp m pas vb cs java uwp py php ts es dnp cmd

files→set_userData(data)

Stores a user context provided as argument in the userData attribute of the function.

cpp m pas vb cs java py php ts es

files→unmuteValueCallbacks()

Re-enables the propagation of every new advertised value to the parent hub.

`cpp` `m` `pas` `vb` `cs` `java` `uwp` `py` `php` `ts` `es` `dnp` `cmd`

files→upload(pathname, content)

Uploads a file to the filesystem, to the specified full path name.

`cpp` `m` `pas` `vb` `cs` `java` `uwp` `py` `php` `ts` `es` `dnp` `cmd`

files→wait_async(callback, context)

Waits for all pending asynchronous commands on the module to complete, and invoke the user-provided callback function.

`ts` `es`

25. Troubleshooting

25.1. Where to start?

If it is the first time that you use a Yoctopuce module and you do not really know where to start, have a look at the Yoctopuce blog. There is a section dedicated to beginners ¹.

25.2. Programming examples don't seem to work

Most of Yoctopuce API programming examples are command line programs and require some parameters to work properly. You have to start them from your operating system command prompt, or configure your IDE to run them with the proper parameters. ².

25.3. Linux and USB

To work correctly under Linux, the library needs to have write access to all the Yoctopuce USB peripherals. However, by default under Linux, USB privileges of the non-root users are limited to read access. To avoid having to run the library as root, you need to create a new *udev* rule to authorize one or several users to have write access to the Yoctopuce peripherals.

To add a new *udev* rule to your installation, you must add a file with a name following the "`##-arbitraryName.rules`" format, in the `/etc/udev/rules.d` directory. When the system is starting, *udev* reads all the files with a `".rules"` extension in this directory, respecting the alphabetical order (for example, the `"51-custom.rules"` file is interpreted AFTER the `"50-udev-default.rules"` file).

The `"50-udev-default"` file contains the system default *udev* rules. To modify the default behavior, you therefore need to create a file with a name that starts with a number larger than 50, that will override the system default rules. Note that to add a rule, you need a root access on the system.

In the `udev_conf` directory of the VirtualHub for Linux³ archive, there are two rule examples which you can use as a basis.

¹ see: http://www.yoctopuce.com/EN/blog_by_categories/for-the-beginners

² see: <http://www.yoctopuce.com/EN/article/about-programming-examples>

³ <http://www.yoctopuce.com/FR/virtualhub.php>

Example 1: 51-yoctopuce.rules

This rule provides all the users with read and write access to the Yoctopuce USB devices. Access rights for all other devices are not modified. If this scenario suits you, you only need to copy the "51-yoctopuce_all.rules" file into the "/etc/udev/rules.d" directory and to restart your system.

```
# udev rules to allow write access to all users
# for Yoctopuce USB devices
SUBSYSTEM=="usb", ATTR{idVendor}=="24e0", MODE="0666"
```

Example 2: 51-yoctopuce_group.rules

This rule authorizes the "yoctogroup" group to have read and write access to Yoctopuce USB peripherals. Access rights for all other peripherals are not modified. If this scenario suits you, you only need to copy the "51-yoctopuce_group.rules" file into the "/etc/udev/rules.d" directory and restart your system.

```
# udev rules to allow write access to all users of "yoctogroup"
# for Yoctopuce USB devices
SUBSYSTEM=="usb", ATTR{idVendor}=="24e0", MODE="0664", GROUP="yoctogroup"
```

25.4. ARM Platforms: HF and EL

There are two main flavors of executable on ARM: HF (Hard Float) binaries, and EL (EABI Little Endian) binaries. These two families are not compatible at all. The compatibility of a given ARM platform with one of these two families depends on the hardware and on the OS build. ArmHL and ArmEL compatibility problems are quite difficult to detect. Most of the time, the OS itself is unable to make a difference between an HF and an EL executable and will return meaningless messages when you try to use the wrong type of binary.

All pre-compiled Yoctopuce binaries are provided in both formats, as two separate ArmHF et ArmEL executables. If you do not know what family your ARM platform belongs to, just try one executable from each family.

25.5. Powered module but invisible for the OS

If your Yocto-MaxiDisplay is connected by USB, if its blue led is on, but if the operating system cannot see the module, check that you are using a true USB cable with data wires, and not a charging cable. Charging cables have only power wires.

25.6. Another process named xxx is already using yAPI

If when initializing the Yoctopuce API, you obtain the *"Another process named xxx is already using yAPI"* error message, it means that another application is already using Yoctopuce USB modules. On a single machine only one process can access Yoctopuce modules by USB at a time. You can easily work around this limitation by using VirtualHub and the network mode ⁴.

25.7. Disconnections, erratic behavior

If your Yocto-MaxiDisplay behaves erratically and/or disconnects itself from the USB bus without apparent reason, check that it is correctly powered. Avoid cables with a length above 2 meters. If needed, insert a powered USB hub ^{5 6}.

⁴ see: <http://www.yoctopuce.com/EN/article/error-message-another-process-is-already-using-yapi>

⁵ see: <http://www.yoctopuce.com/EN/article/usb-cables-size-matters>

⁶ see: <http://www.yoctopuce.com/EN/article/how-many-usb-devices-can-you-connect>

25.8. After a failed firmware update, the device stopped working

If a firmware update of your Yocto-MaxiDisplay fails, it is possible that the module is no longer working. If this is the case, plug in your module while holding down the Yocto-Button. The Yocto-LED should light up brightly and remain steady. Release the button. Your Yocto-MaxiDisplay should then appear at the bottom of the VirtualHub user interface as a module waiting to be flashed. This operation also reverts the module to its factory configuration.

25.9. Registering VirtualHub disconnects another instance

If, when performing a call to `RegisterHub()` with a VirtualHub address, another previously registered VirtualHub disconnects, make sure the machine running these VirtualHubs do not have the same *Hostname*. Same *Hostname* can happen very easily when the operating system is installed from a monolithic image, Raspberry Pi are the best example. The Yoctopuce API uses serial numbers to communicate with devices and VirtualHub serial numbers are created on the fly based the *hostname* of the machine running VirtualHub.

25.10. Dropped commands

If, after sending a bunch of commands to a Yoctopuce device, you are under the impression that the last ones have been ignored, a typical example is a quick and dirty program meant to configure a device, make sure you used a `YAPI.FreeAPI()` at the end of the program. Commands are sent to Yoctopuce modules asynchronously thanks to a background thread. When the main program terminates, that thread is killed no matter if some command are left to be sent. However `API.FreeAPI()` waits until there is no more command to send before freeing the API resources and returning.

25.11. Damaged device

Yoctopuce strives to reduce the production of electronic waste. If you believe that your Yocto-MaxiDisplay is not working anymore, start by contacting Yoctopuce support by e-mail to diagnose the failure. Even if you know that the device was damaged by mistake, Yoctopuce engineers might be able to repair it, and thus avoid creating electronic waste.



Waste Electrical and Electronic Equipment (WEEE) If you really want to get rid of your Yocto-MaxiDisplay, do not throw it away in a trash bin but bring it to your local WEEE recycling point. In this way, it will be disposed properly by a specialized WEEE recycling center.




26. Characteristics

You can find below a summary of the main technical characteristics of your Yocto-MaxiDisplay module.

Product ID	YD128X64
Hardware release [†]	
Display area	57 x 29.5 mm
USB connector	micro-B
Width	58 mm
Length	66 mm
Weight	23 g
Resolution	128 x 64 px
Protection class, according to IEC 61140	class III
Normal operating temperature	5...40 °C
Extended operating temperature [‡]	-25...70 °C
RoHS compliance	RoHS III (2011/65/UE+2015/863)
USB Vendor ID	0x24E0
USB Device ID	0x0030
Suggested enclosure	YoctoBox-MaxiDisplay
Harmonized tariff code	9032.9000
Made in	Switzerland

[†] These specifications are for the current hardware revision. Specifications for earlier revisions may differ.

[‡] The extended temperature range is defined based on components specifications and has been tested during a limited duration (1h). When using the device in harsh environments for a long period of time, we strongly advise to run extensive tests before going to production.

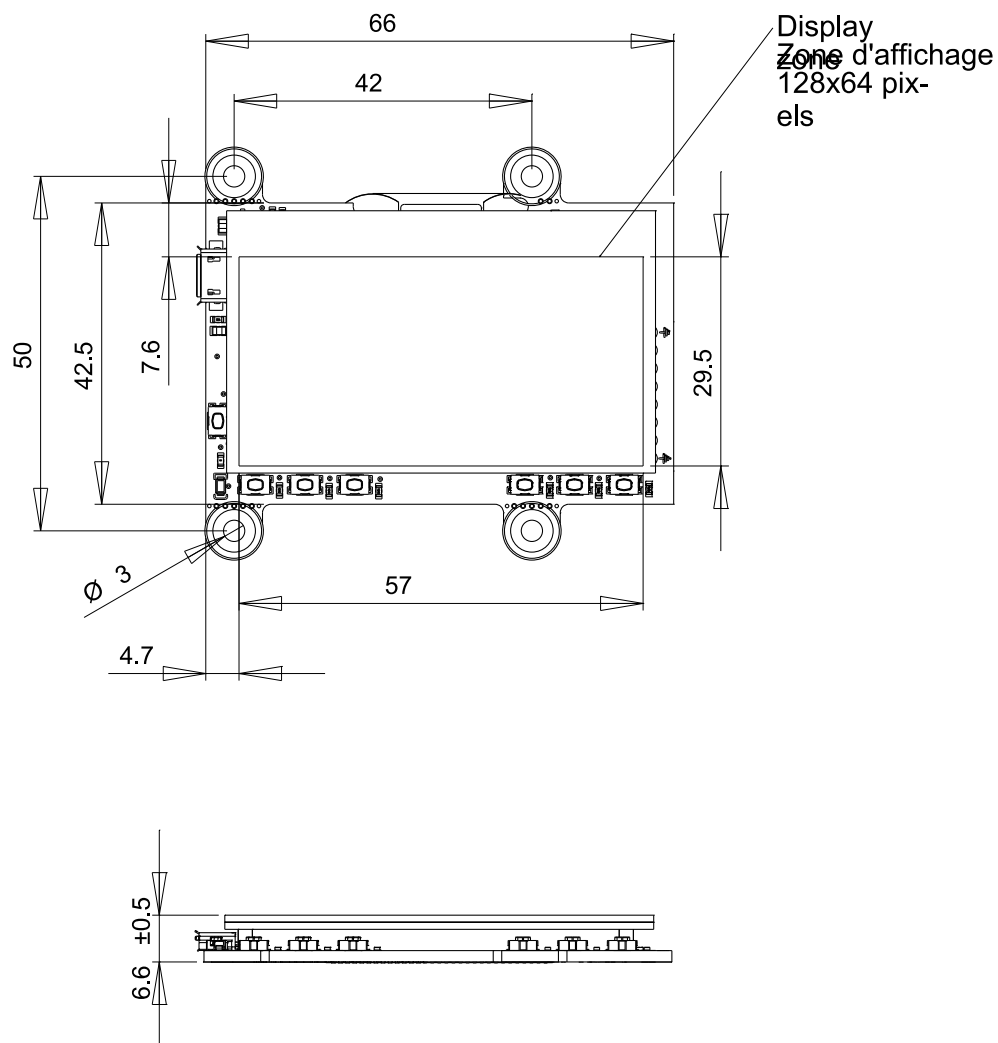

All dimensions are in mm
Toutes les dimensions sont en mm

Yocto-MaxiDisplay

A4

Scale
1:1
Echelle